




Example of a 188PE pulse

Example of a 158PE pulse

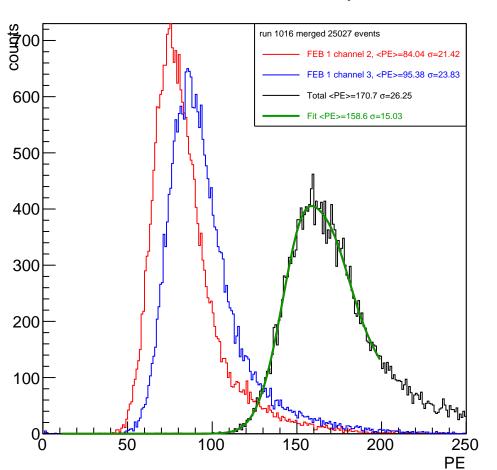


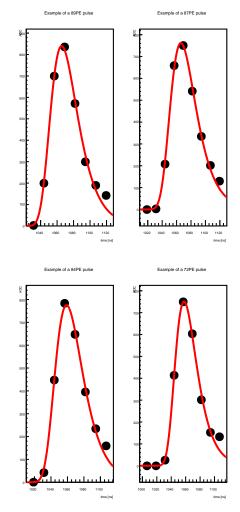


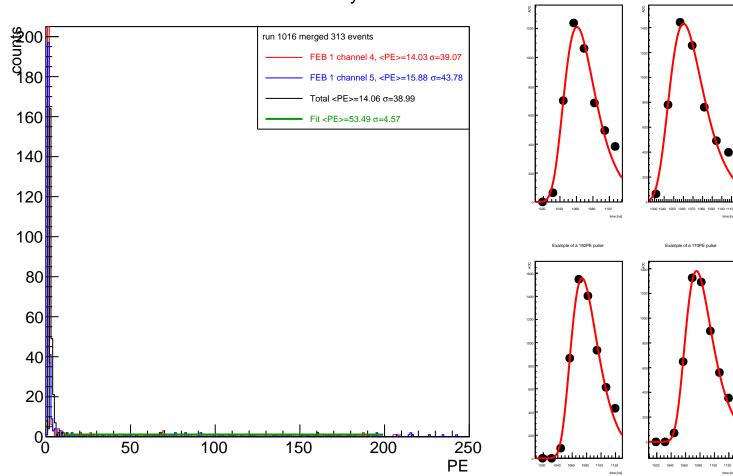



Example of a 151PE pulse


Example of a 167PE pulse

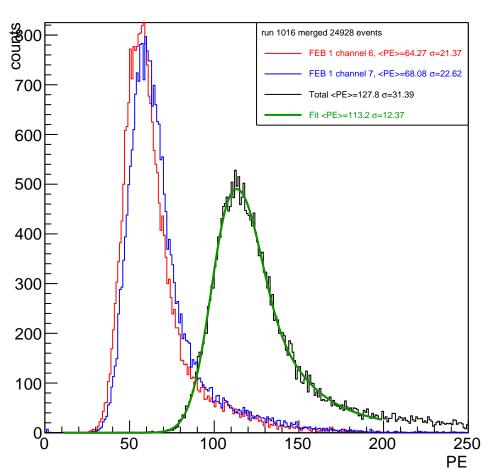


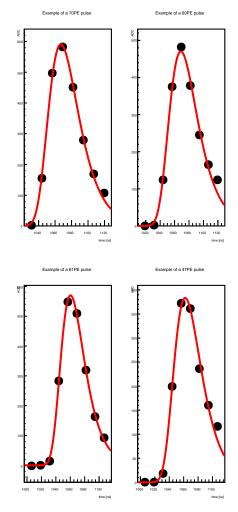


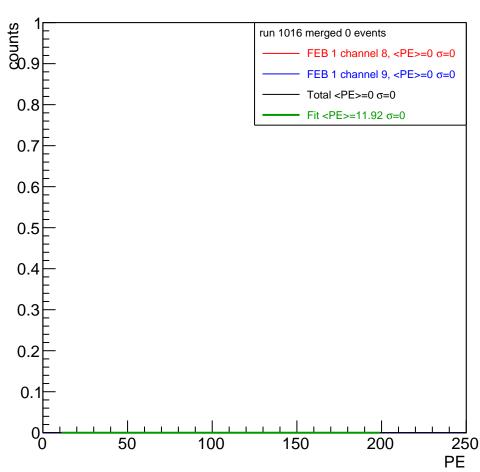


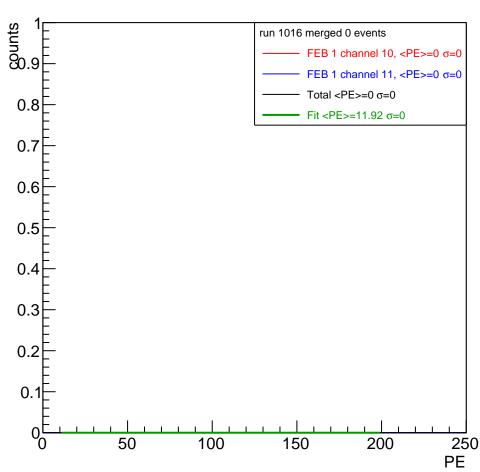


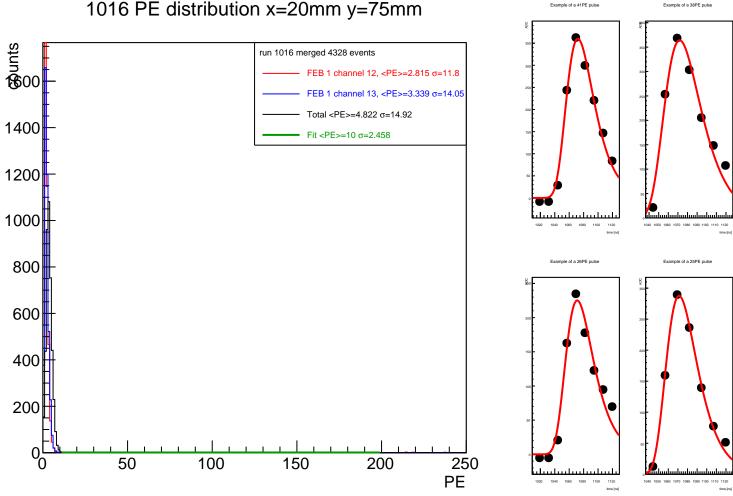

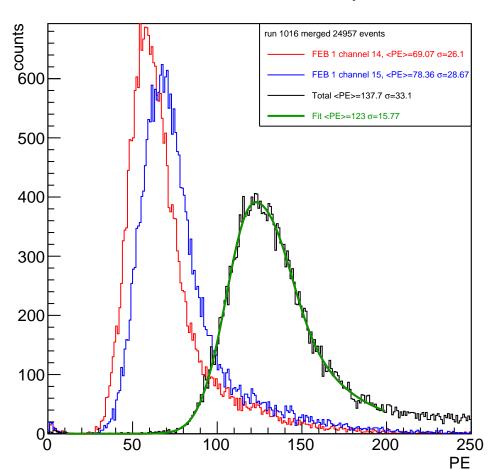

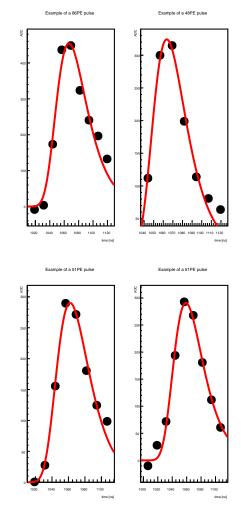


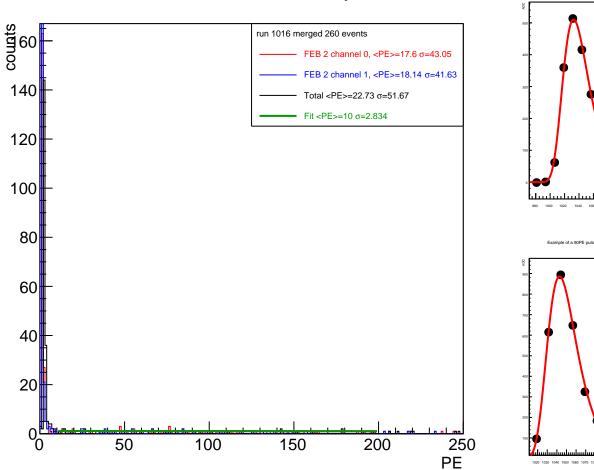

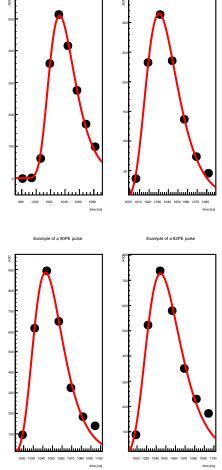


Example of a 33PE pulse

Example of a 61PE pulse

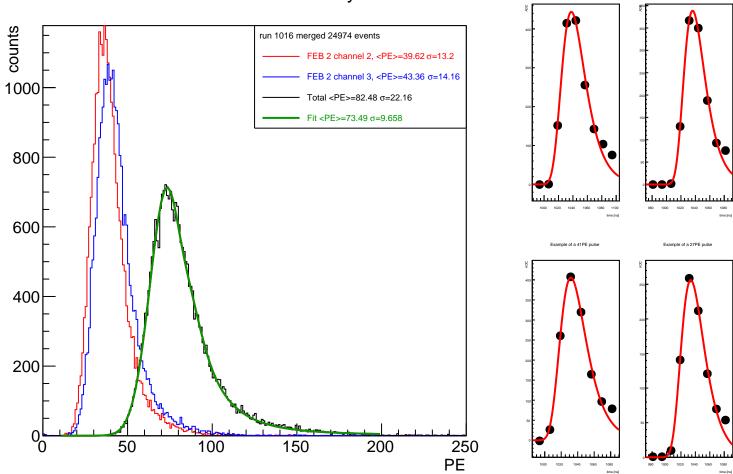


Example of a 47PE pulse

Example of a 37PE pulse

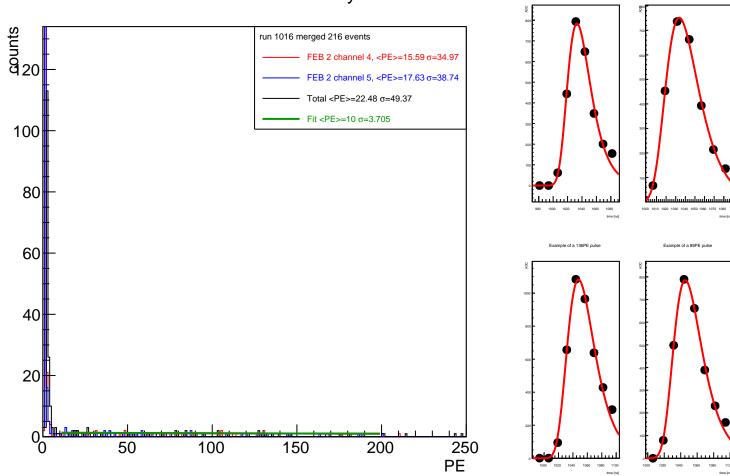


Example of a 83PE pulse

Example of a 84PE pulse

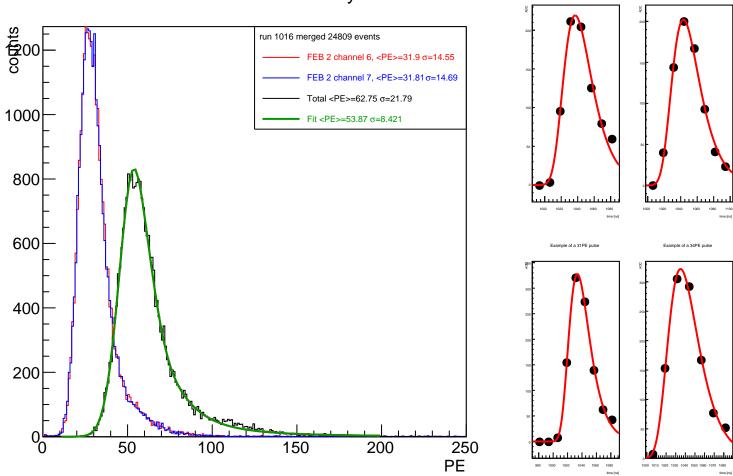


Example of a 25PE pulse

Example of a 23PE pulse

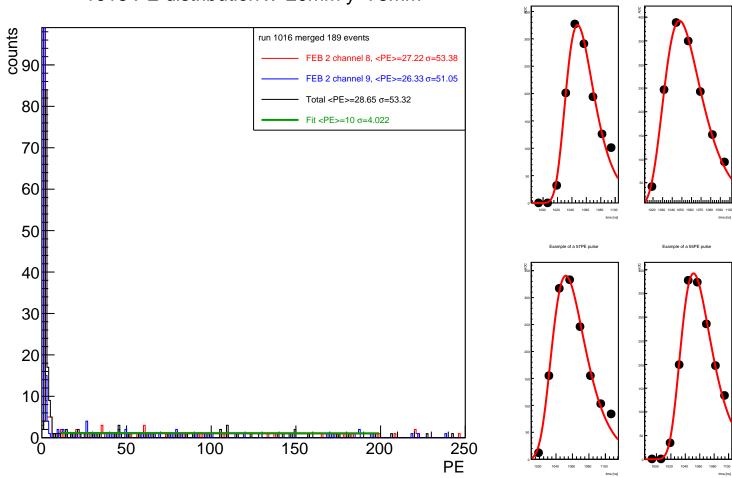


Example of a 53PE pulse

Example of a 50PE pulse

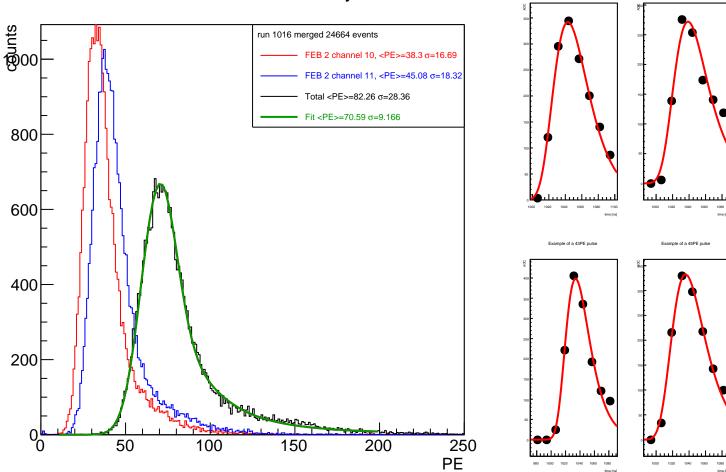


Example of a 47PE pulse

Example of a 37PE pulse

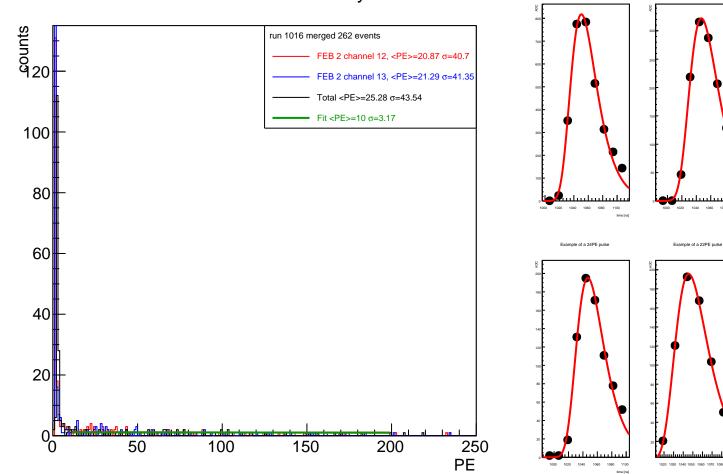

Example of a 96PE pulse

Example of a 42PE pulse

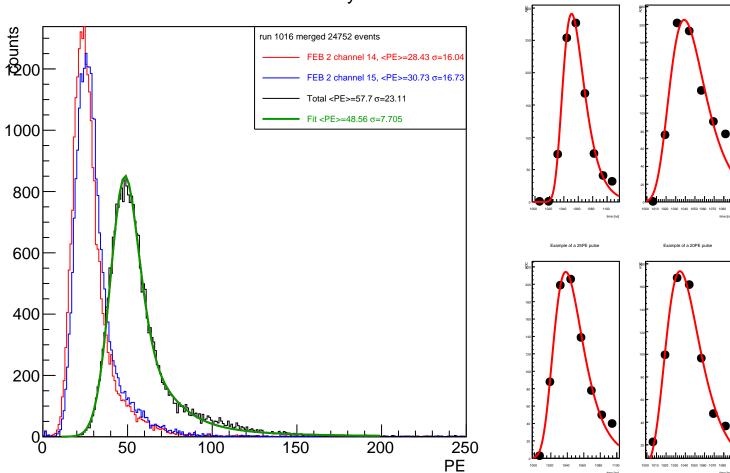

Example of a 28PE pulse

Example of a 25PE pulse