





Example of a 132PE pulse


Example of a 101PE pulse

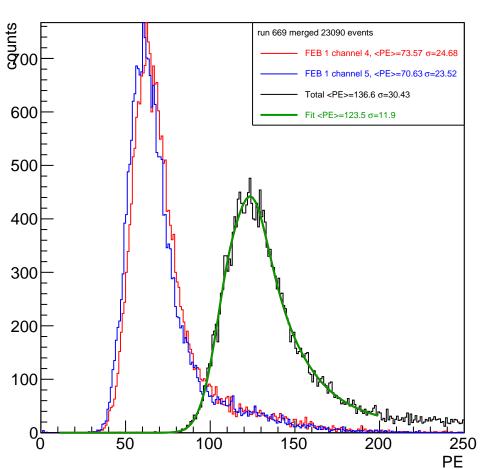


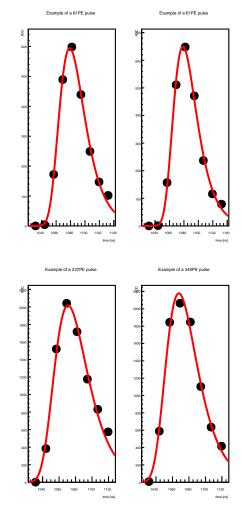


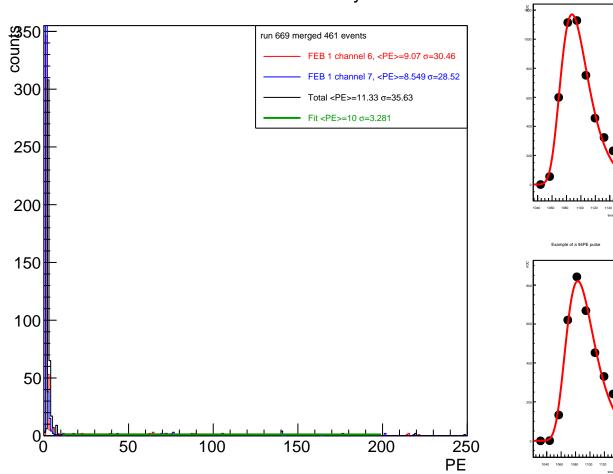

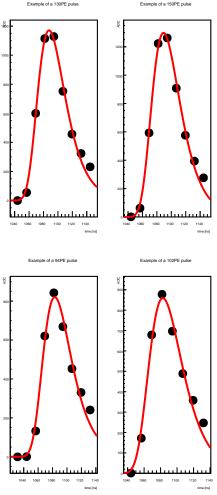

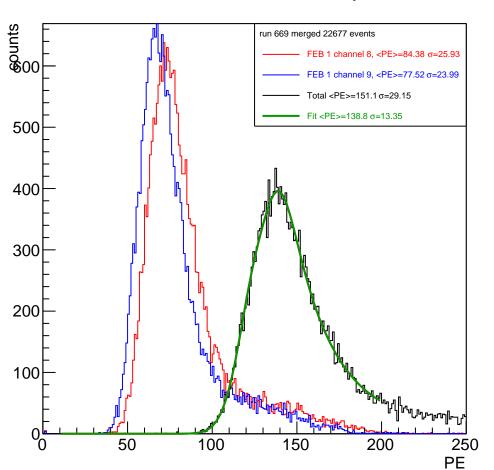


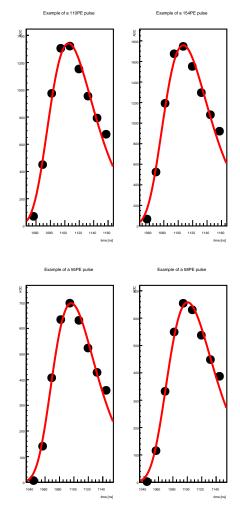


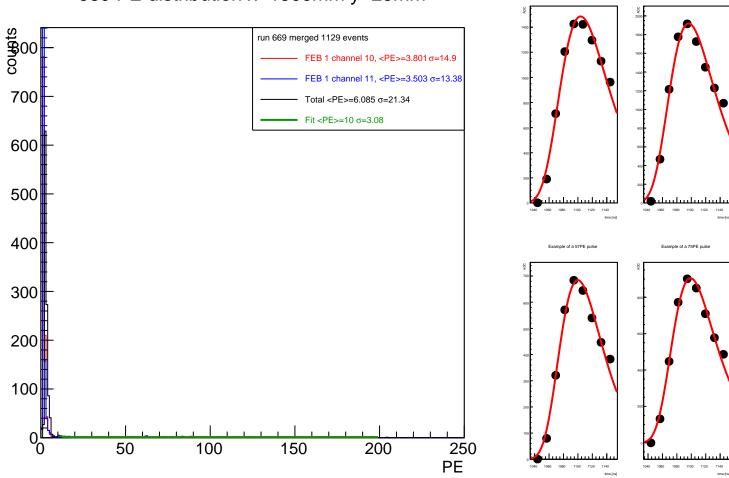


Example of a 138PE pulse

Example of a 168PE pulse

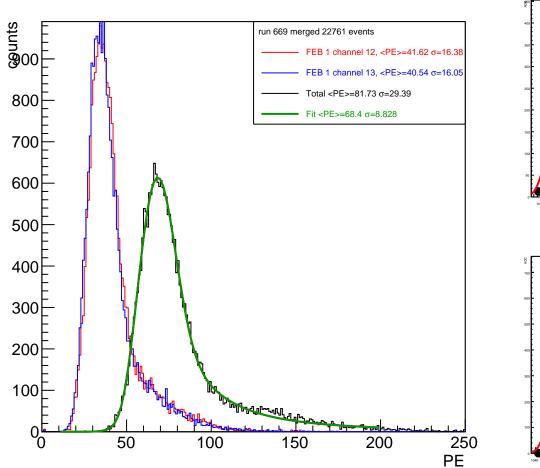


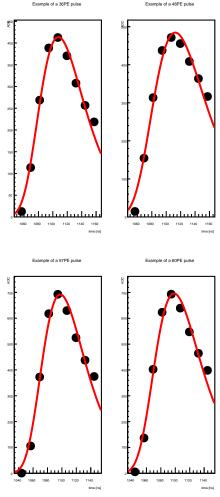


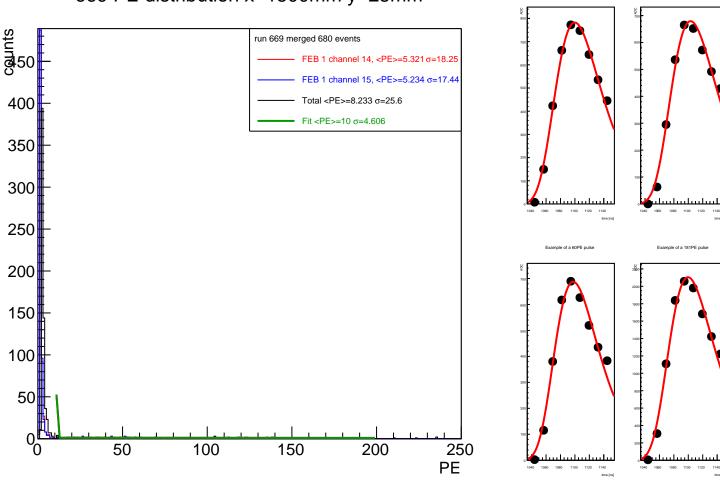


Example of a 71PE pulse

Example of a 59PE pulse

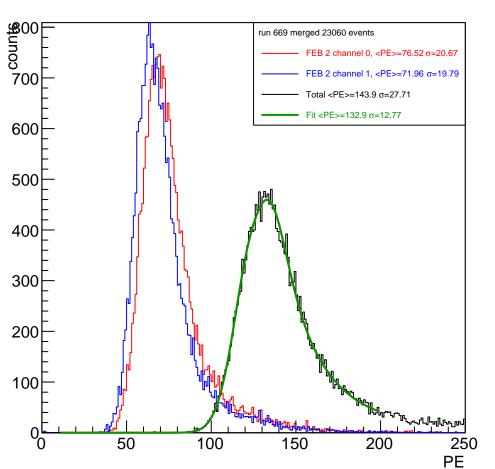


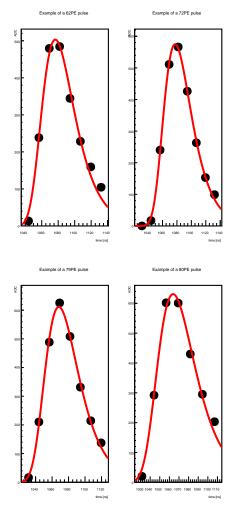


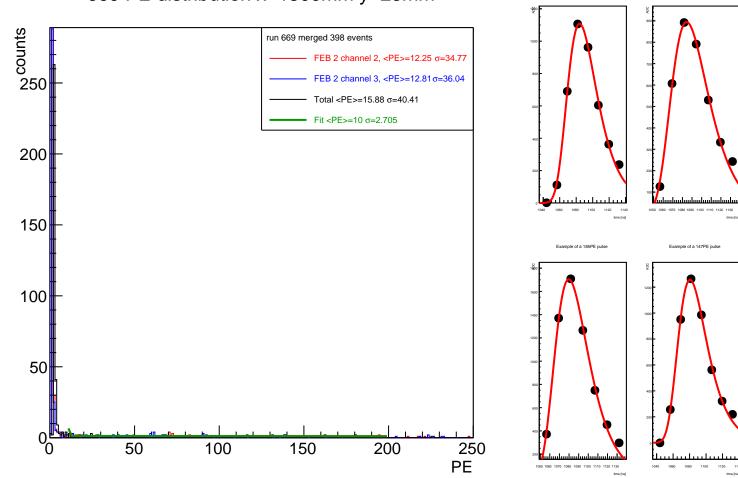


Example of a 123PE pulse

Example of a 117PE pulse

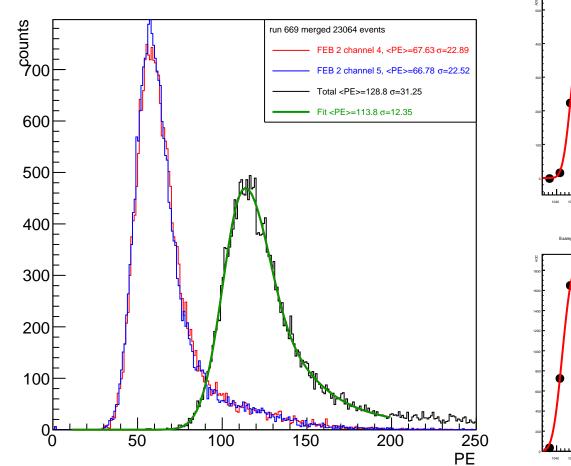


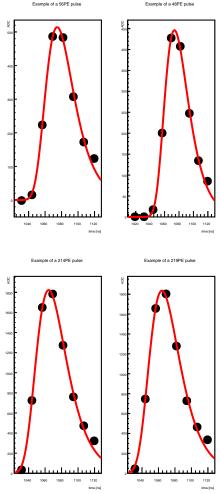


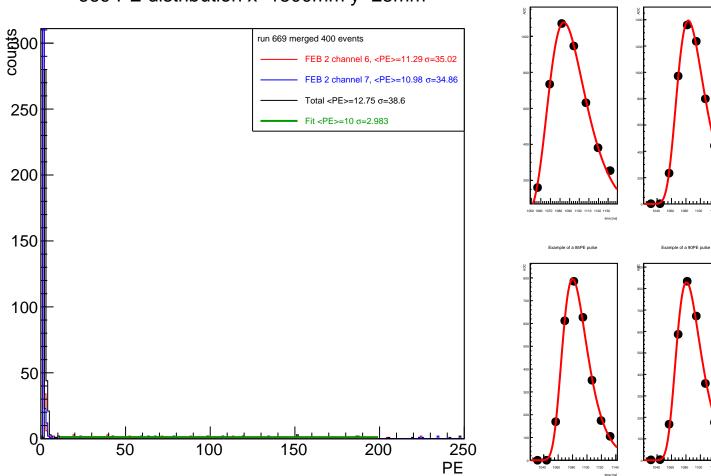


Example of a 129PE pulse

Example of a 167PE pulse

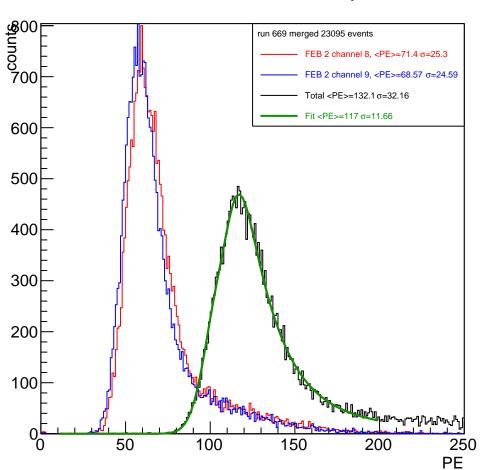


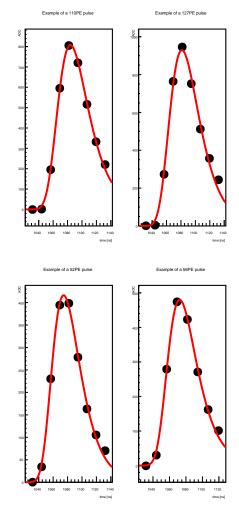


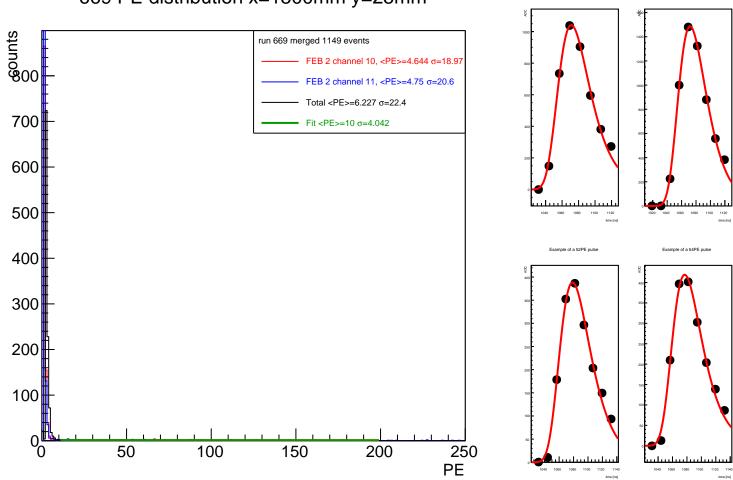


Example of a 127PE pulse

Example of a 181PE pulse

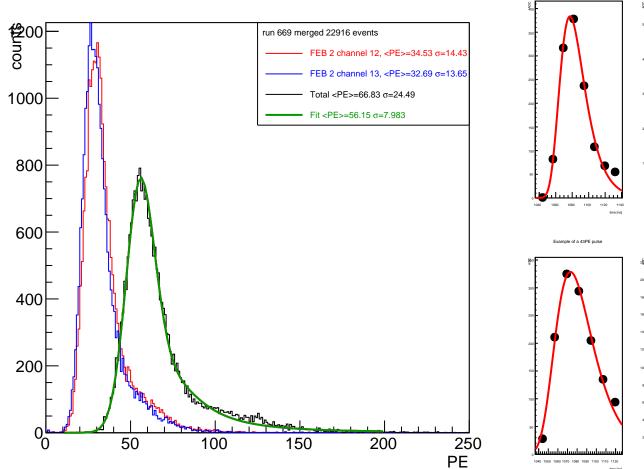

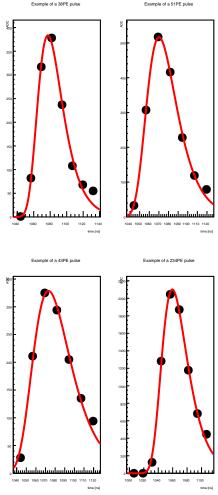

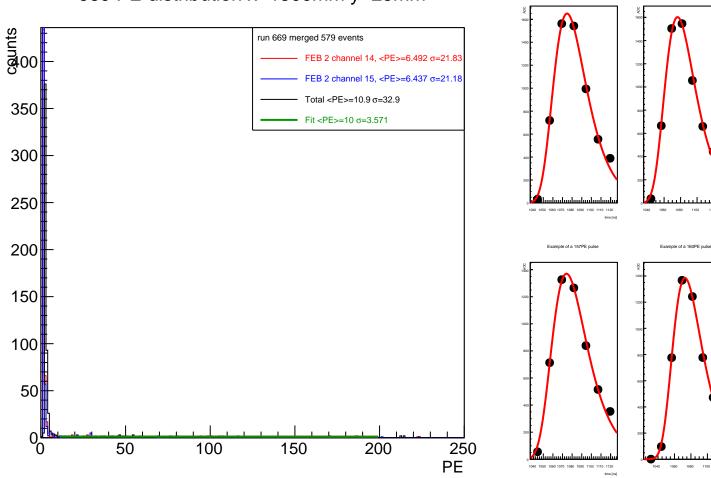

Example of a 178PE pulse

Example of a 193PE pulse