




Example of a 66PE pulse

Example of a 55PE pulse

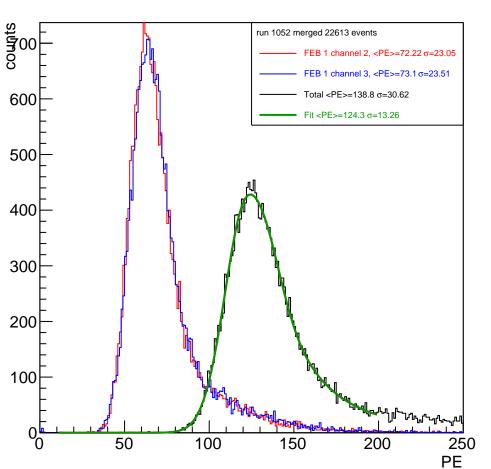


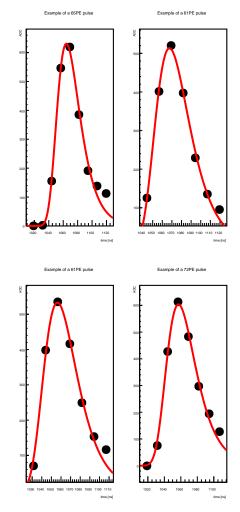


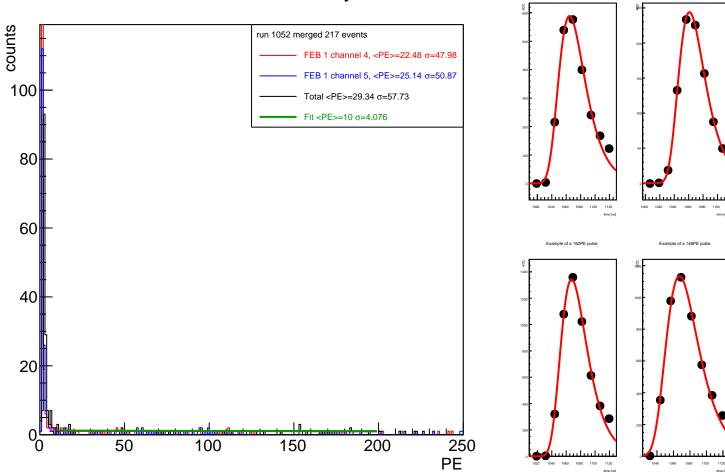

Example of a 71PE pulse


Example of a 30PE pulse

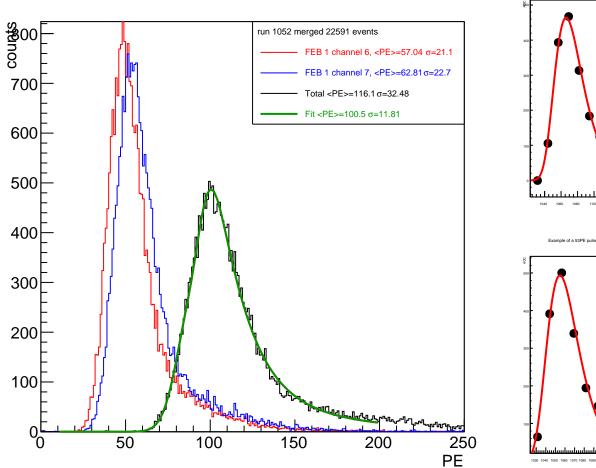


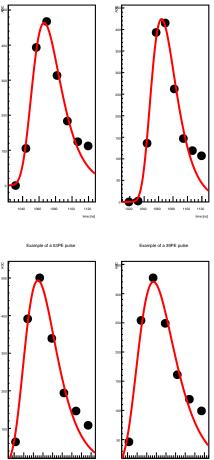


Example of a 47PE pulse

Example of a 51PE pulse

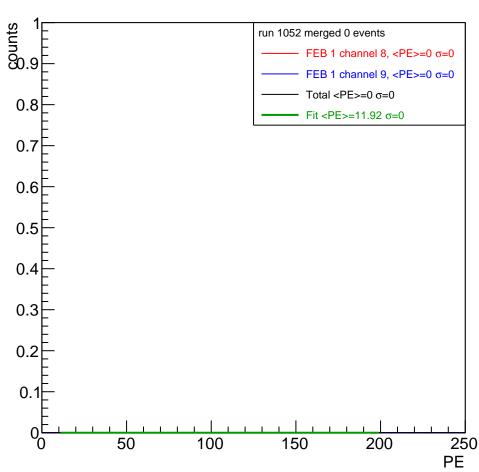


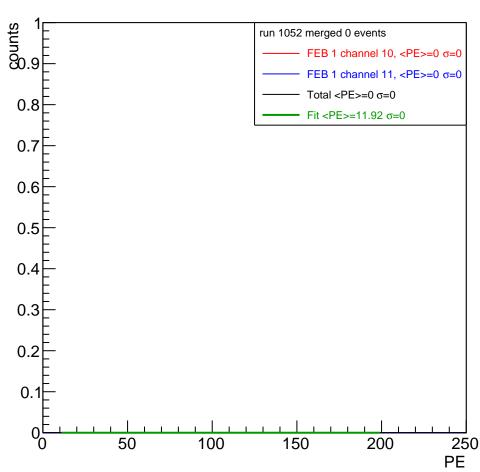


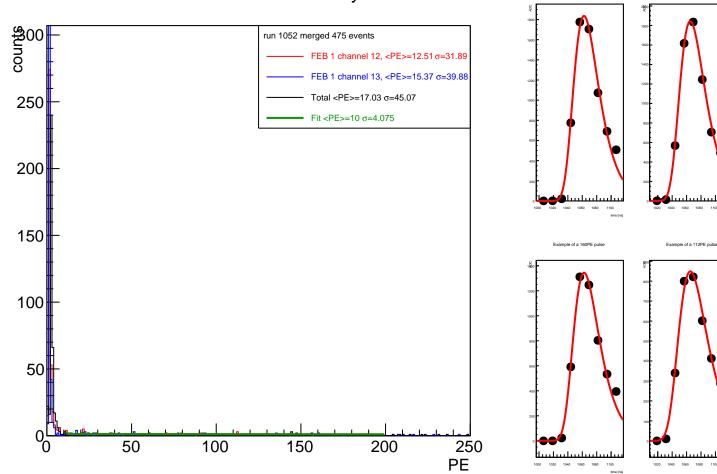


Example of a 213PE pulse

Example of a 215PE pulse

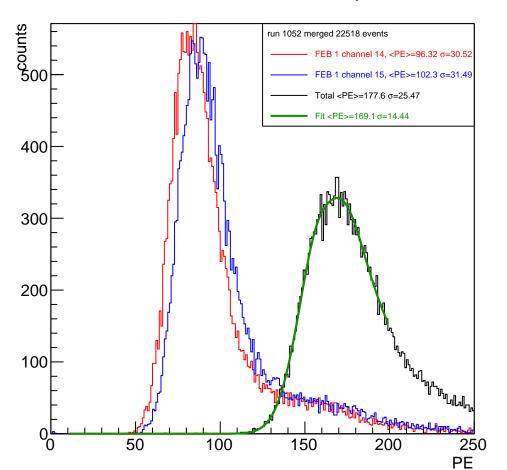


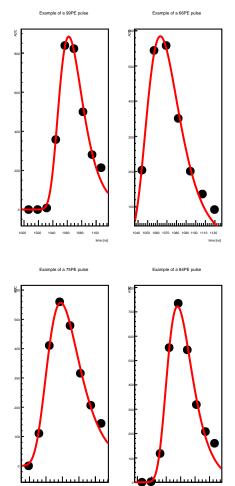


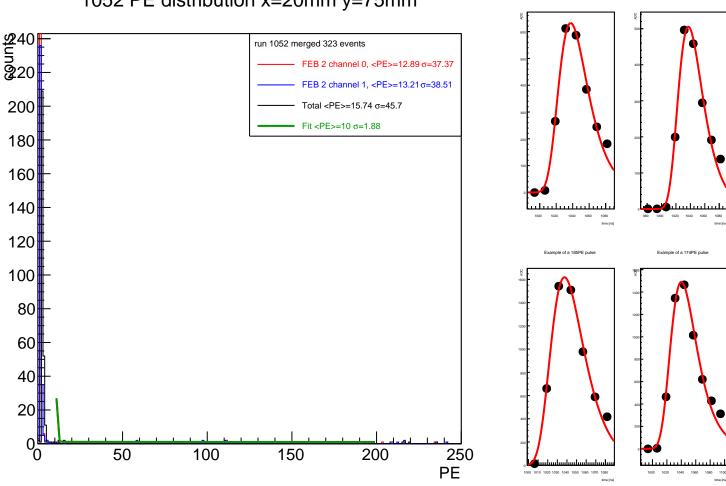


Example of a 74PE pulse

Example of a 56PE pulse

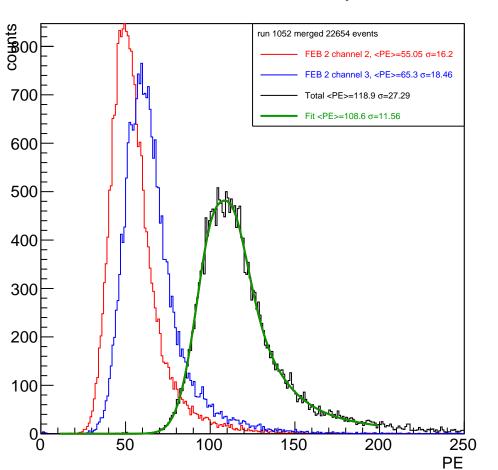


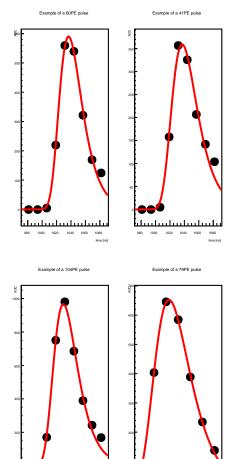

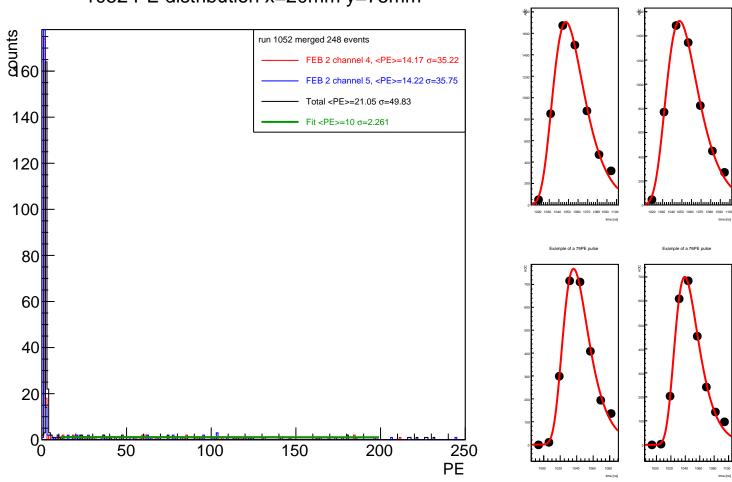


Example of a 184PE pulse

Example of a 167PE pulse

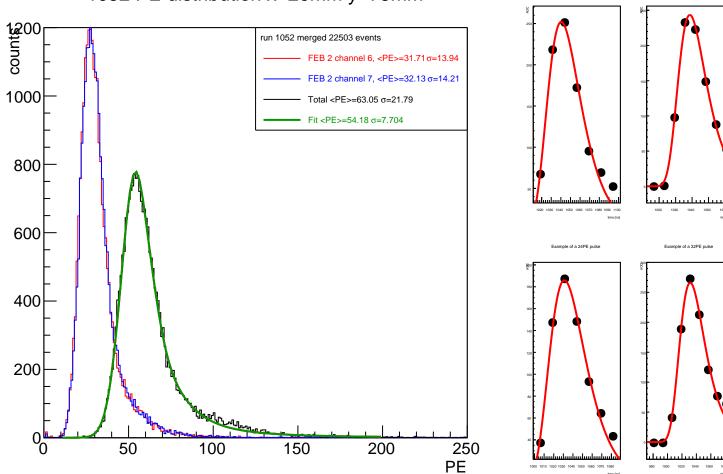


Example of a 30PE pulse

Example of a 28PE pulse

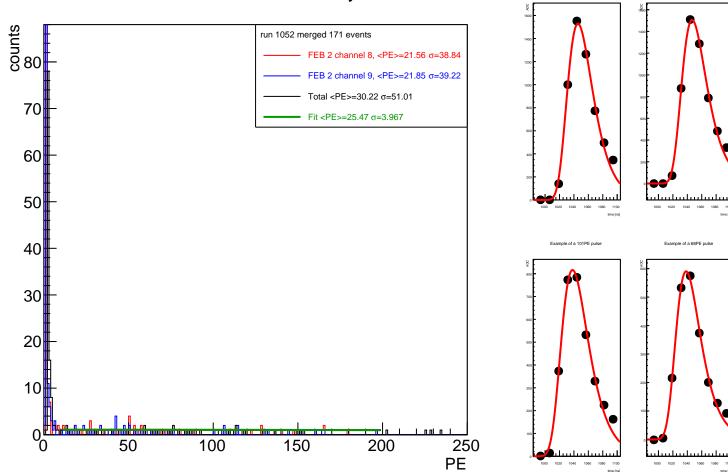


Example of a 177PE pulse

Example of a 174PE pulse

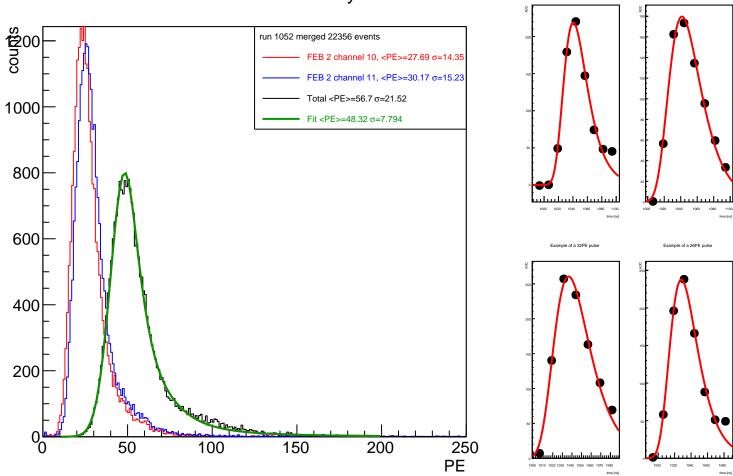

Example of a 23PE pulse

Example of a 23PE pulse

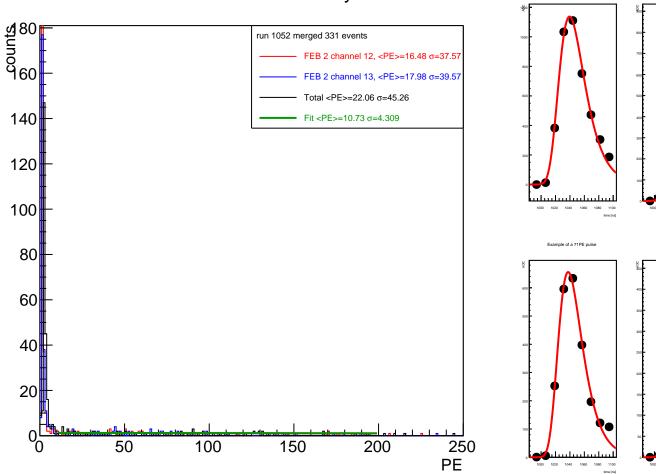

Example of a 132PE pulse

Example of a 98PE pulse

Example of a 50PE pulse

