




Example of a 132PE pulse

Example of a 126PE pulse

Example of a 210PE pulse

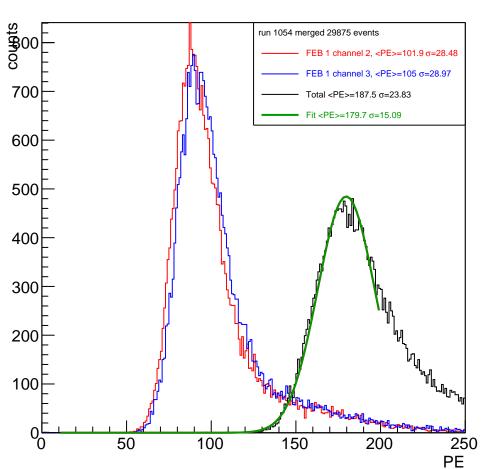


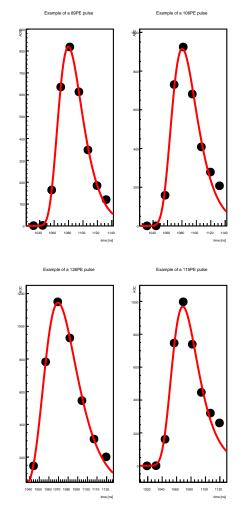


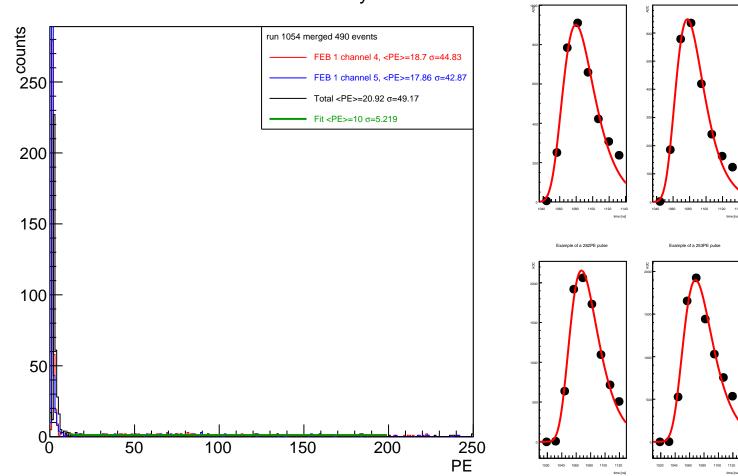



Example of a 114PE pulse


Example of a 72PE pulse

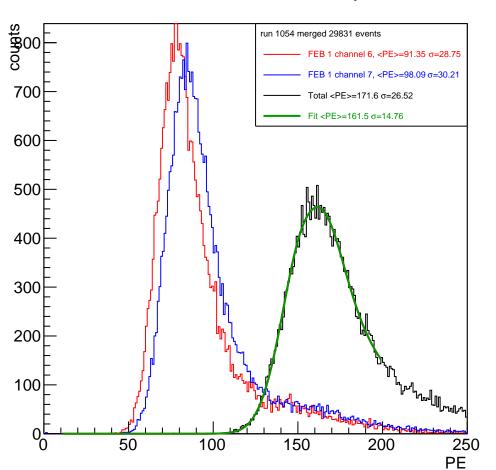


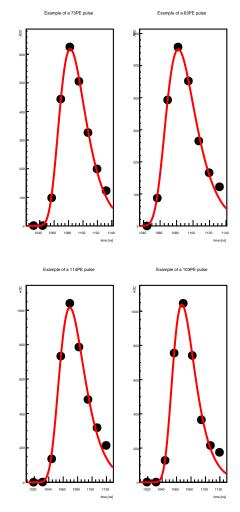


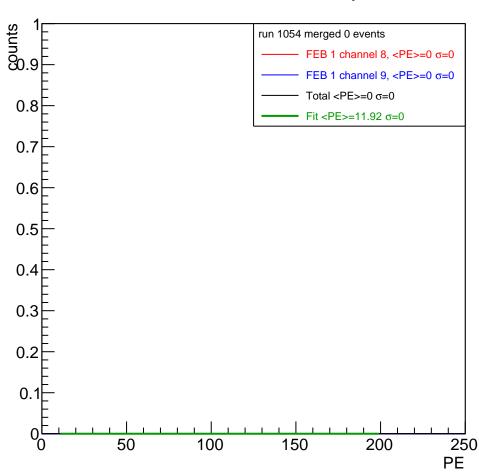

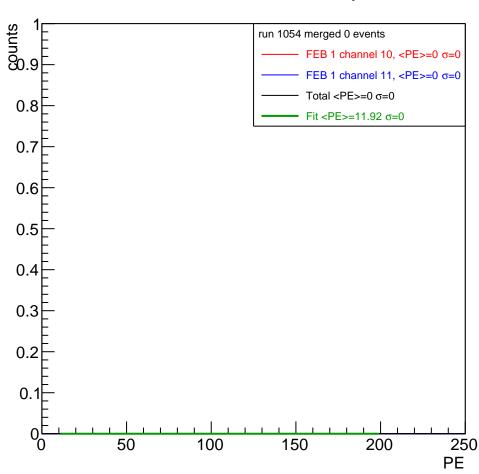

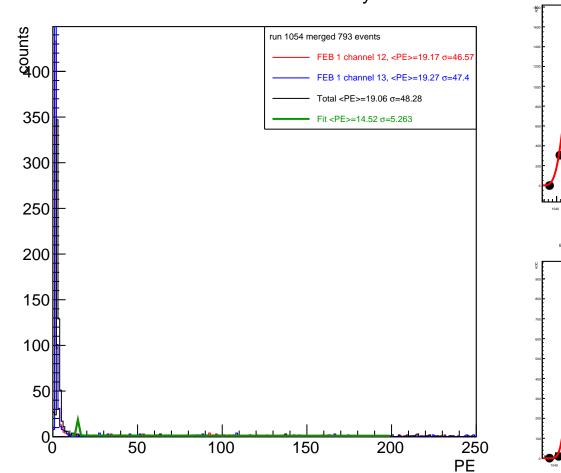


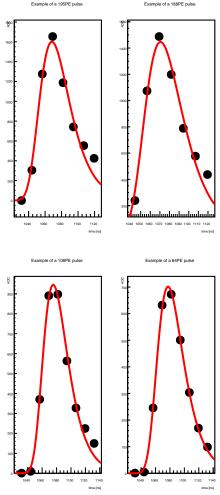

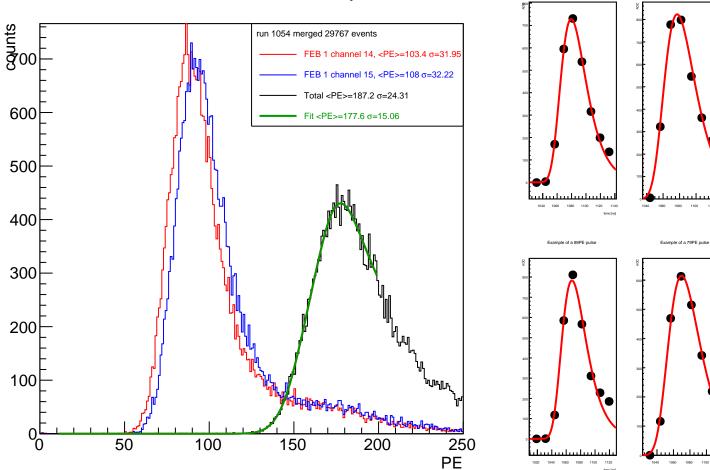


Example of a 87PE pulse

Example of a 104PE pulse

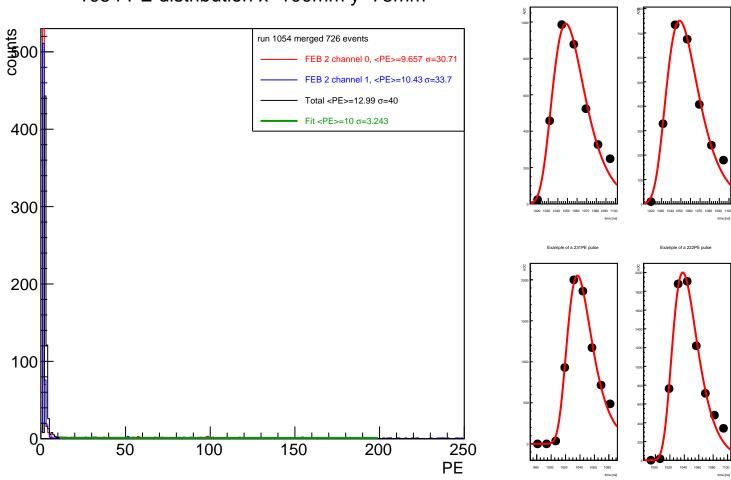


Example of a 109PE pulse


Example of a 80PE pulse

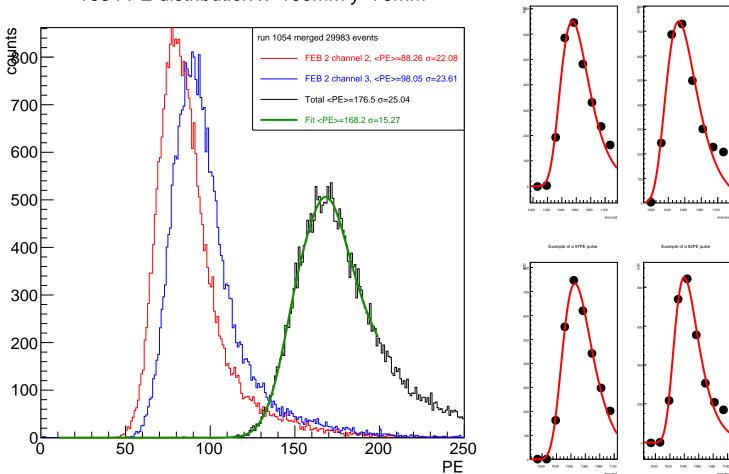

Example of a 83PE pulse


Example of a 89PE pulse

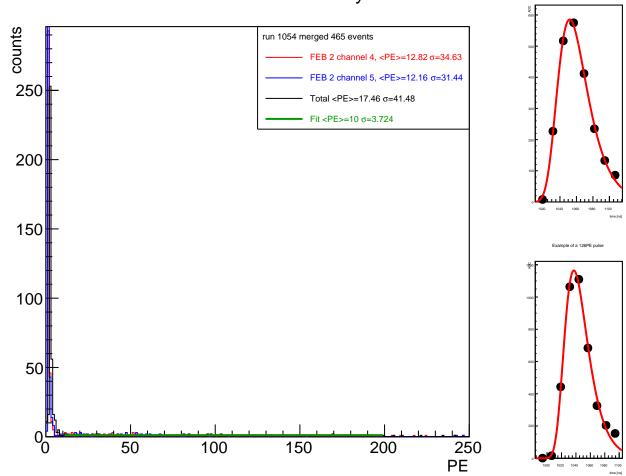


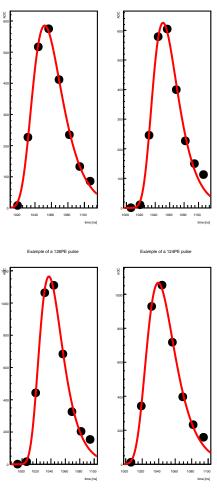



Example of a 75PE pulse


Example of a 70PE pulse

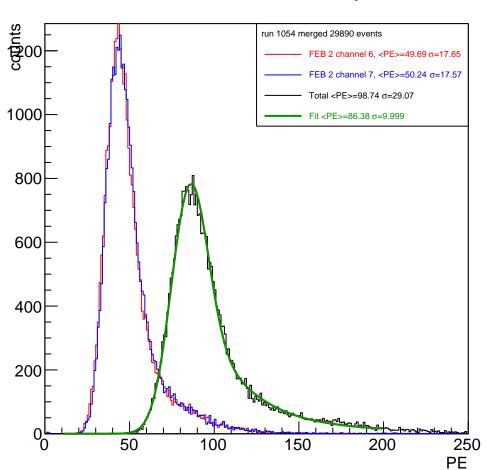


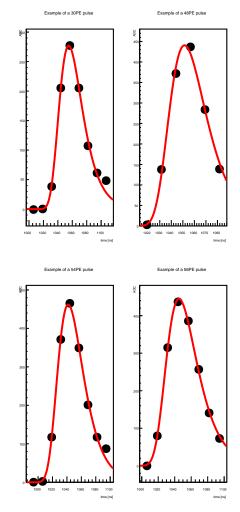


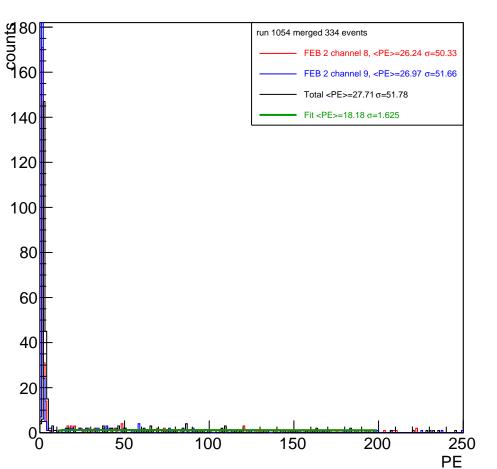

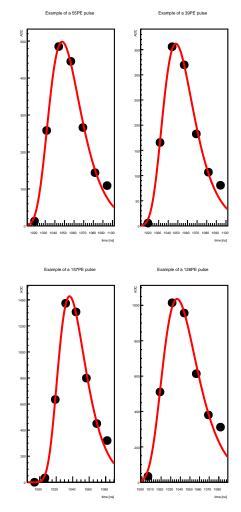

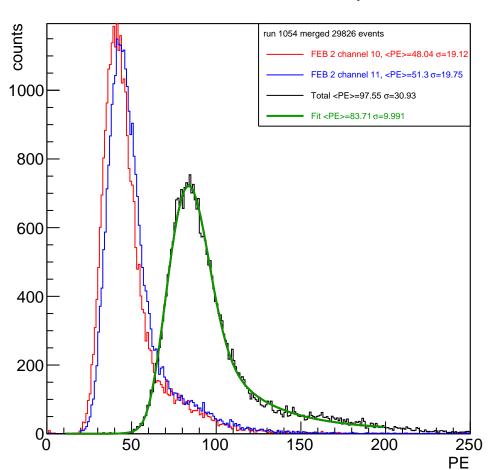

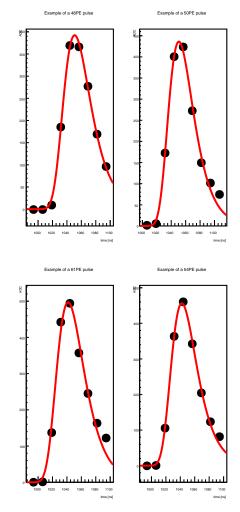

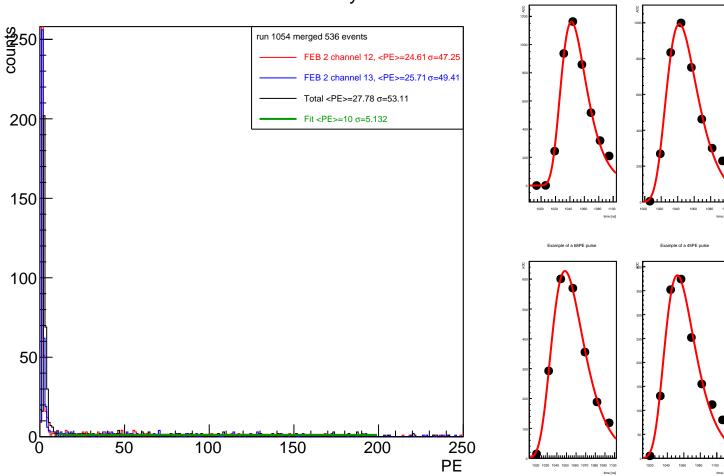

Example of a 133PE pulse

Example of a 120PE pulse

