



Example of a 243PE pulse

Example of a 222PE pulse

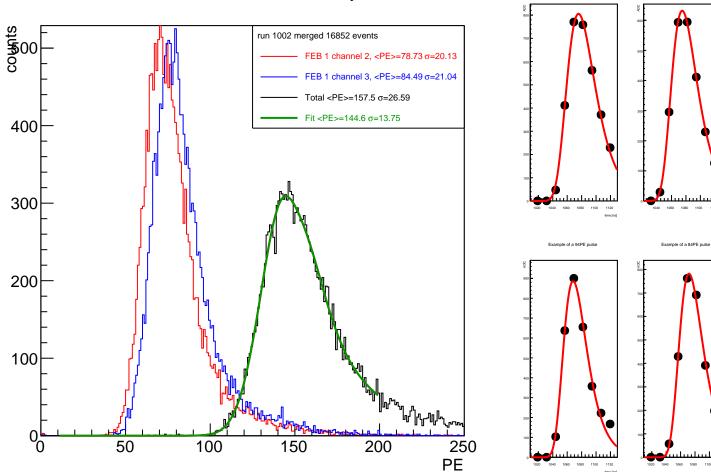


Example of a 104PE pulse

Example of a 74PE pulse

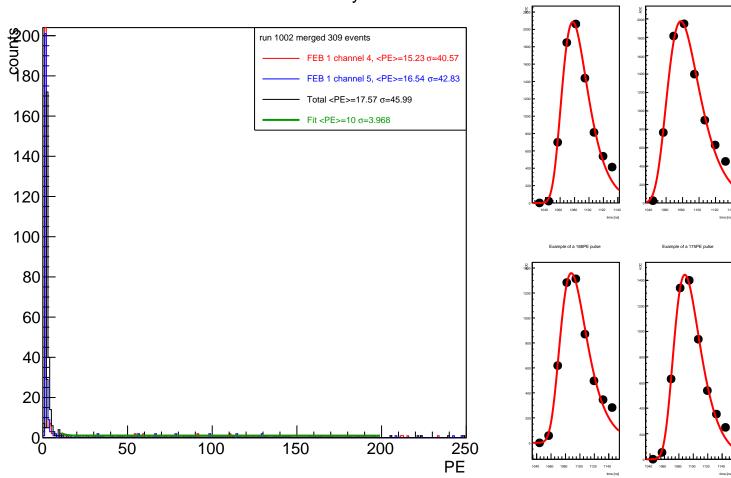


Example of a 251PE pulse


Example of a 256PE pulse

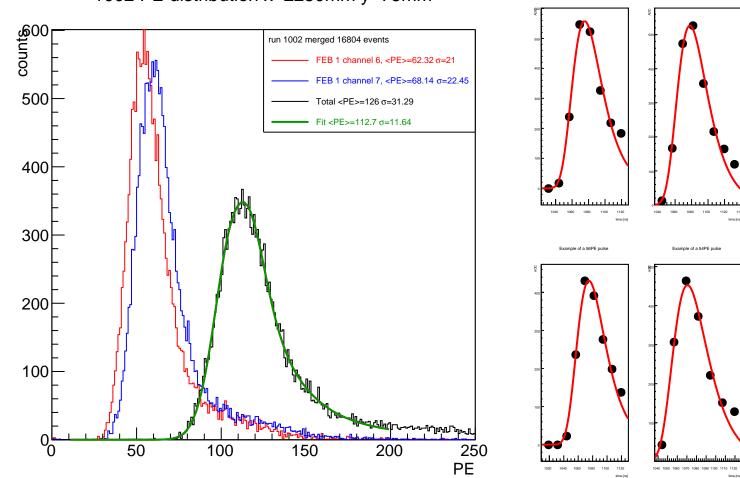


Example of a 66PE pulse

Example of a 64PE pulse

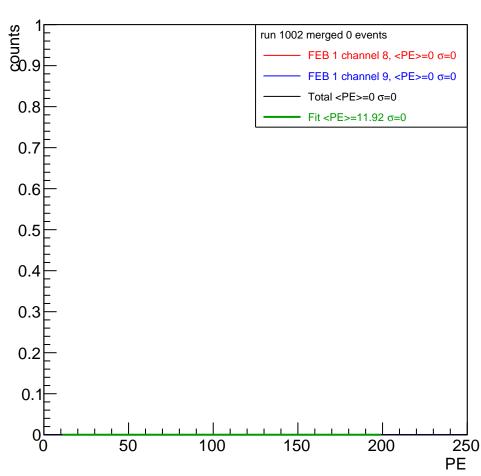


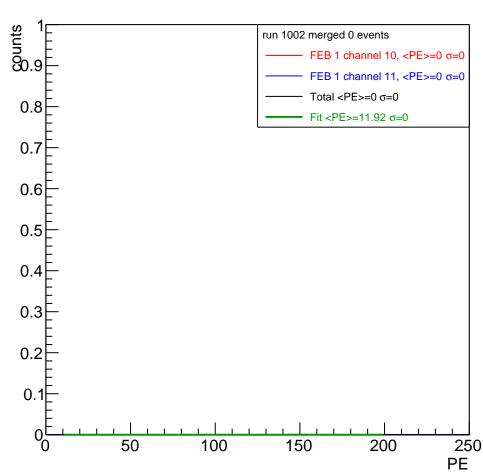


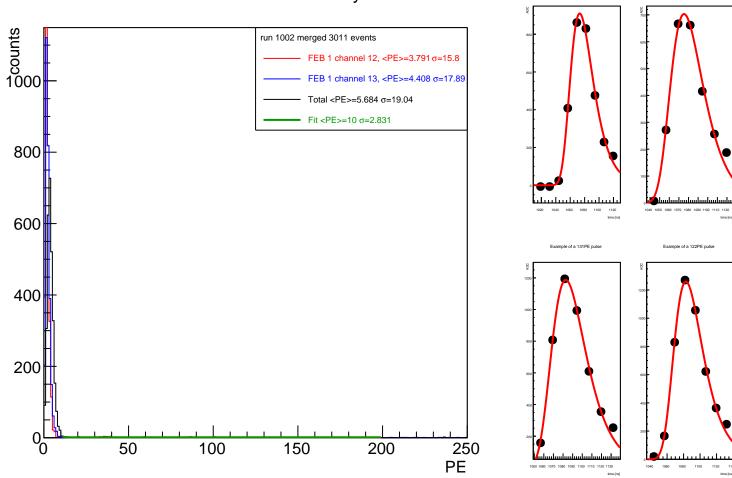



Example of a 89PE pulse

Example of a 67PE pulse

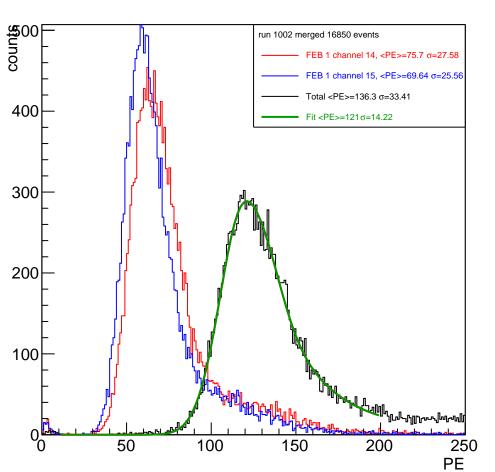

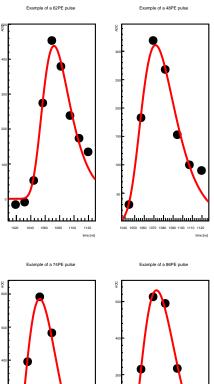


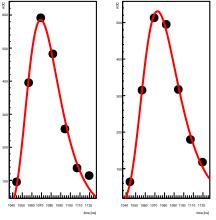

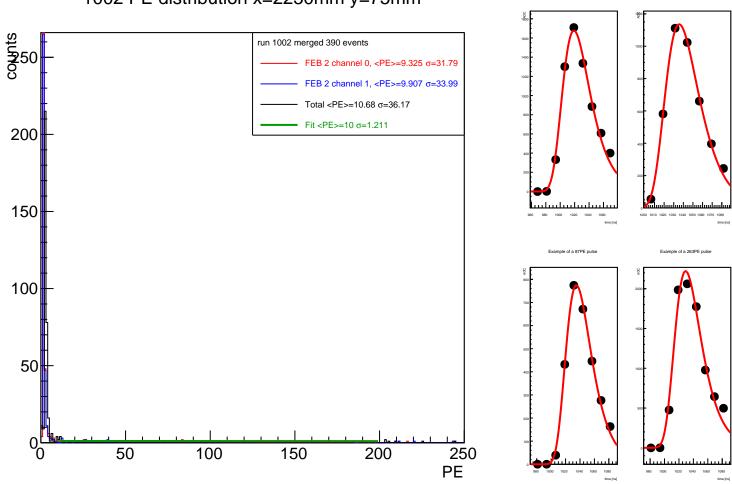


Example of a 204PE pulse

Example of a 129PE pulse

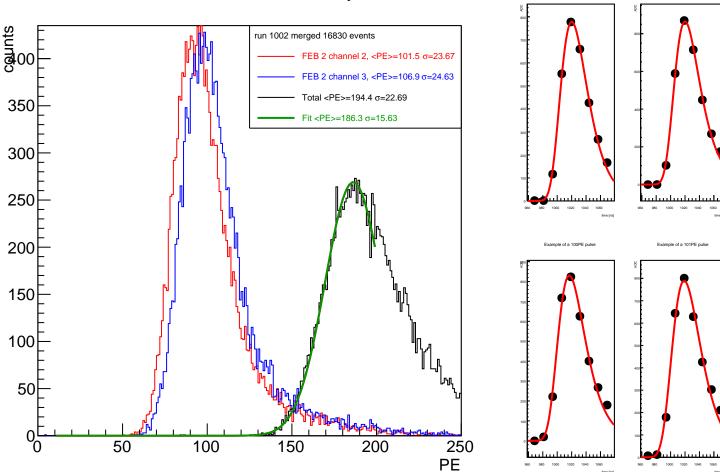


Example of a 93PE pulse

Example of a 99PE pulse

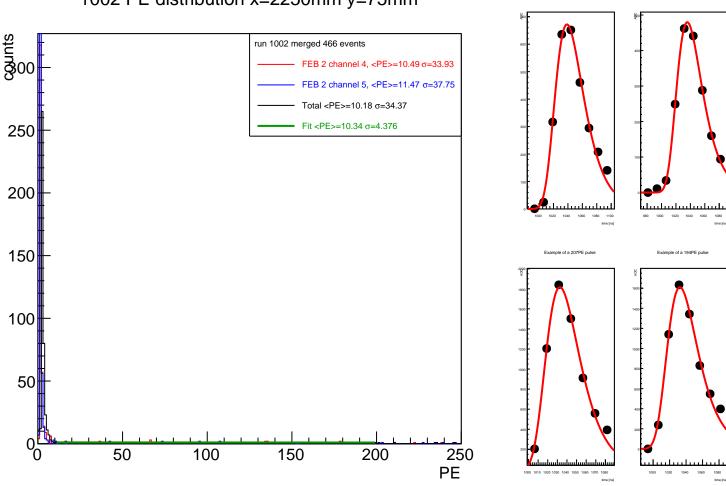


Example of a 86PE pulse

Example of a 55PE pulse

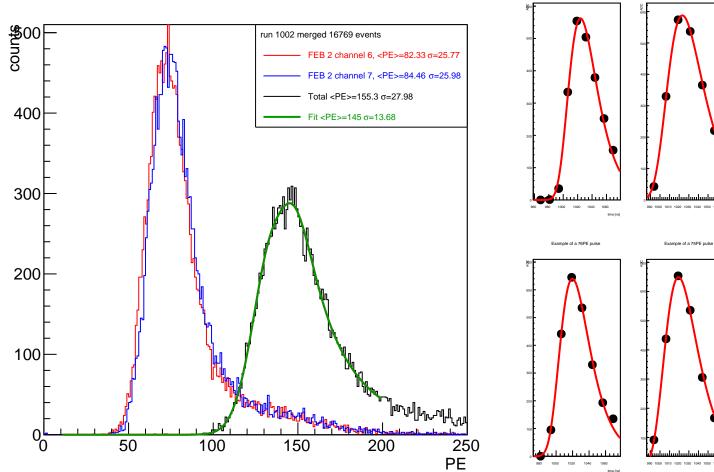


Example of a 73PE pulse

Example of a 73PE pulse

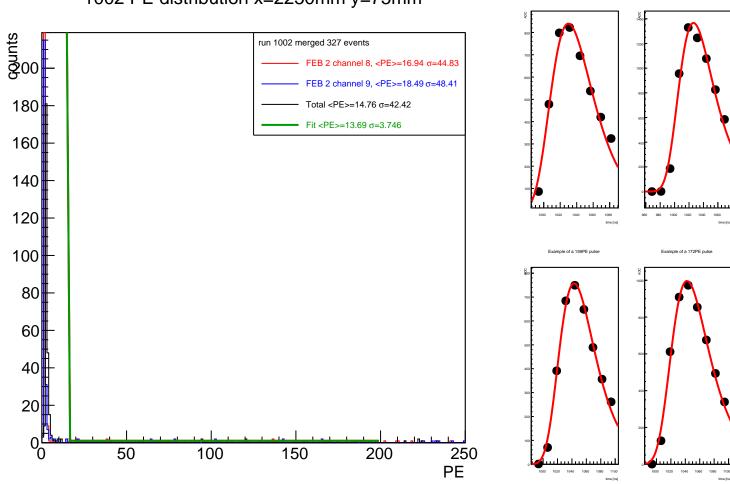


Example of a 182PE pulse

Example of a 219PE pulse

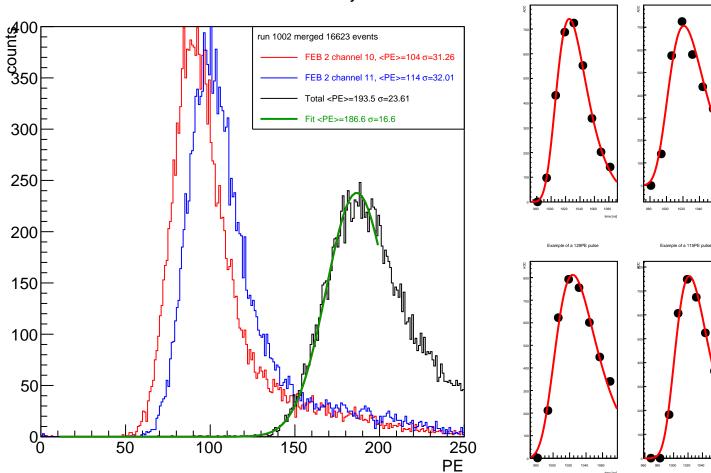


Example of a 101PE pulse

Example of a 103PE pulse

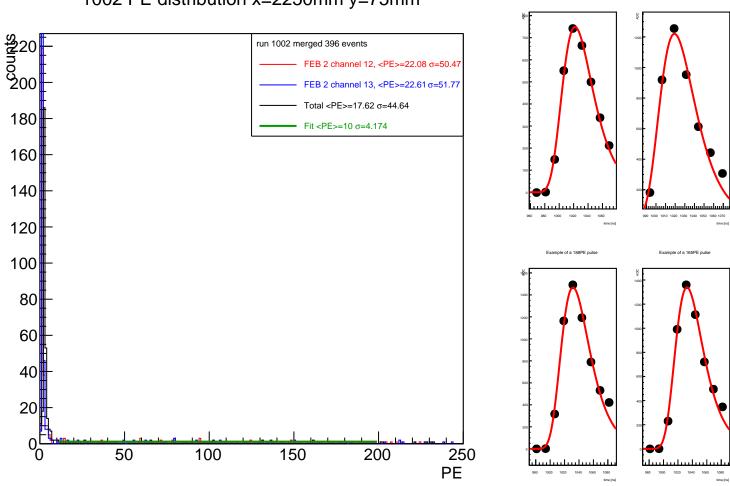

Example of a 104PE pulse

Example of a 145PE pulse

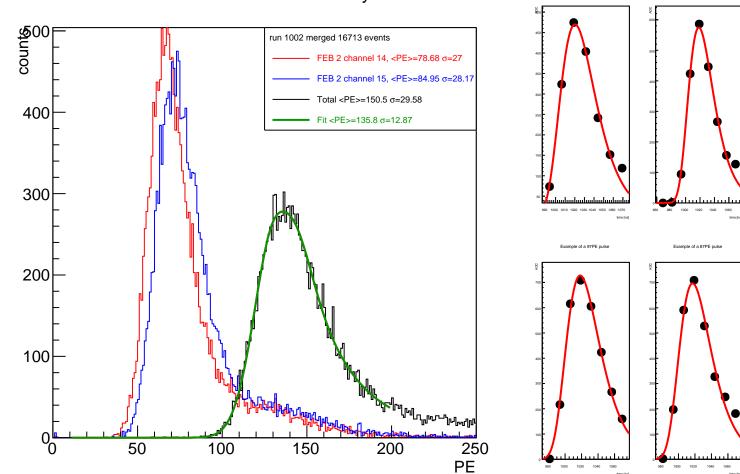

Example of a 57PE pulse

Example of a 65PE pulse