



Example of a 85PE pulse

Example of a 111PE pulse

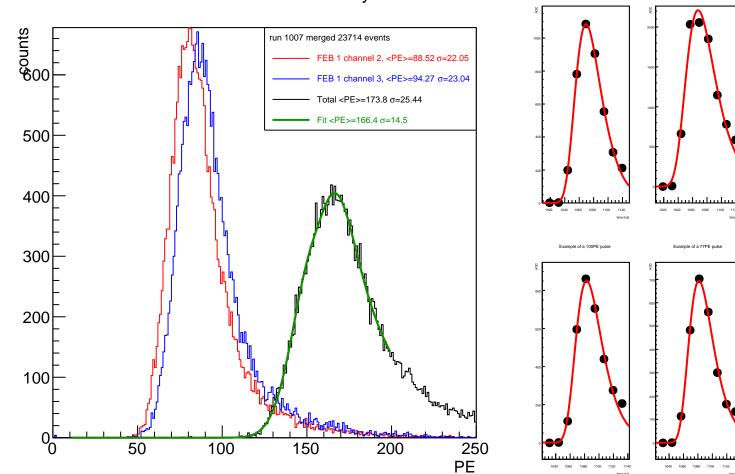


Example of a 128PE pulse


Example of a 294PE pulse

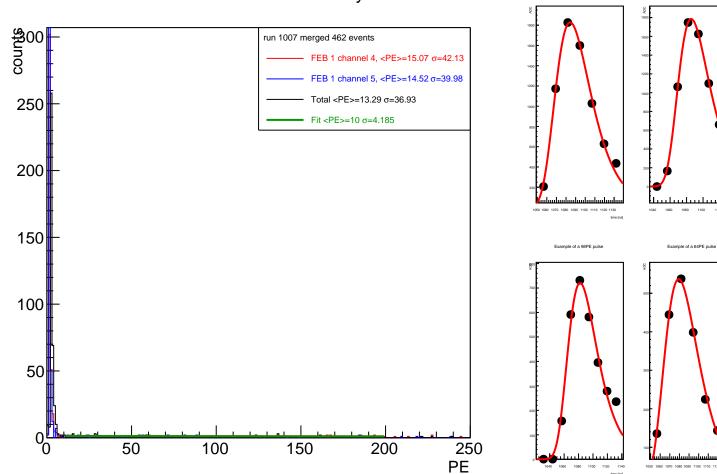



Example of a 227PE pulse


Example of a 225PE pulse

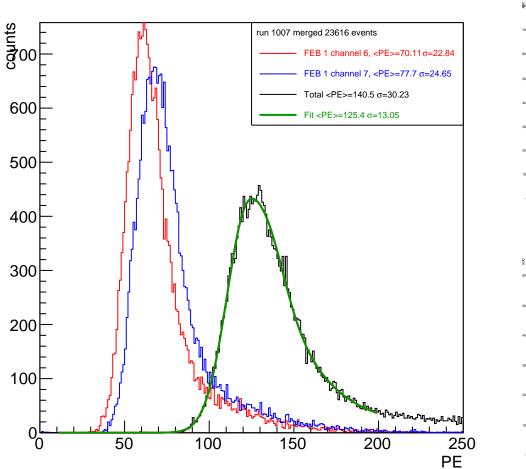

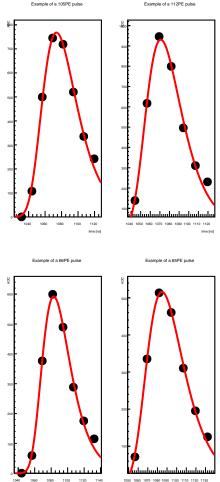

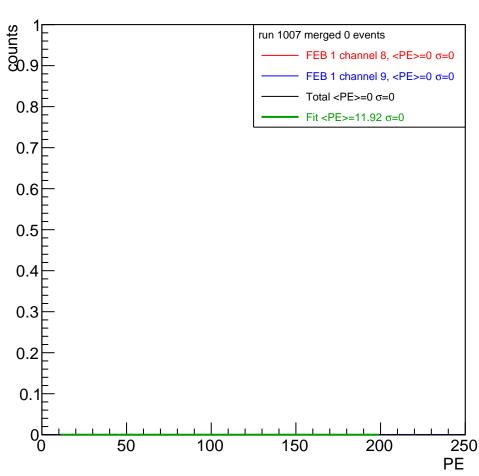


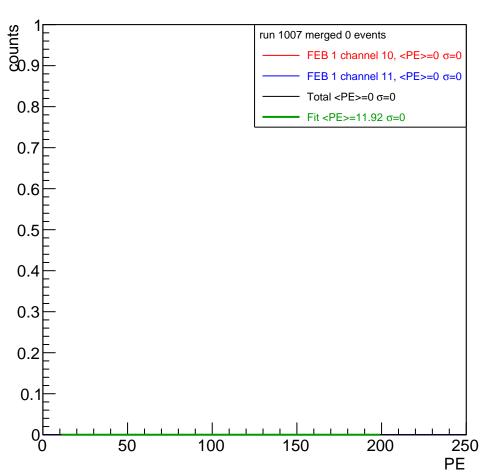

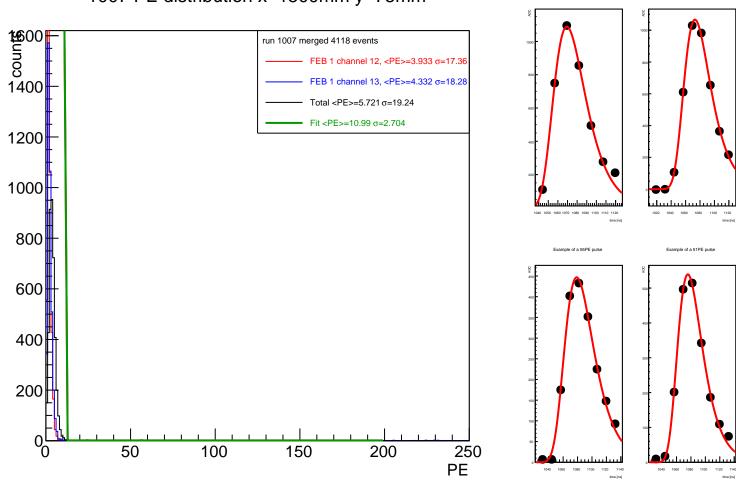


Example of a 111PE pulse


Example of a 108PE pulse

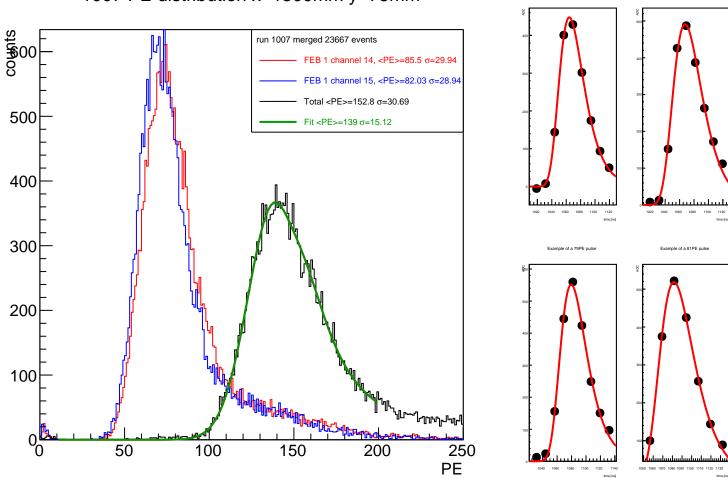



Example of a 60PE pulse


Example of a 86PE pulse

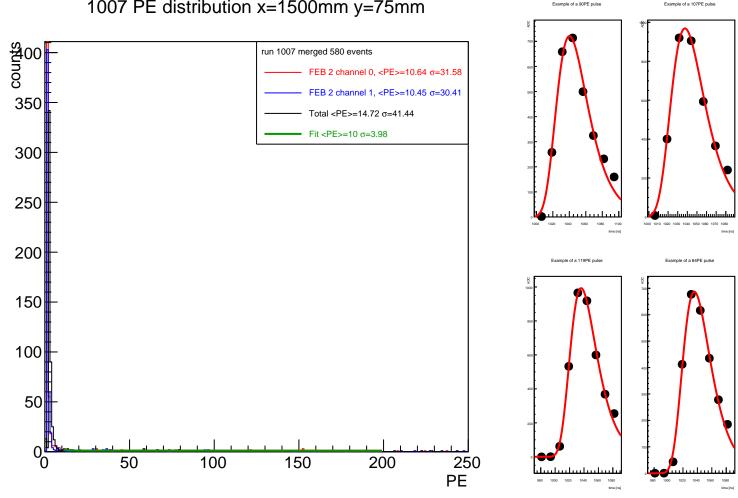


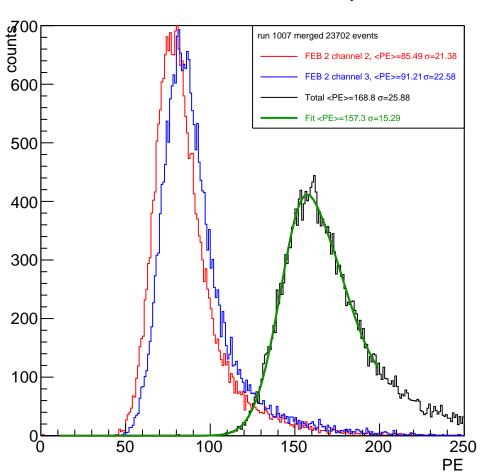


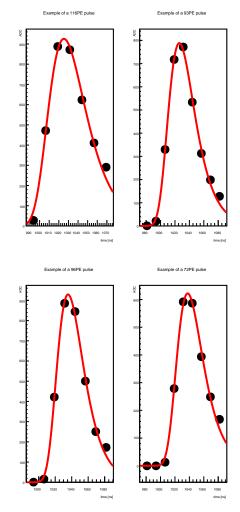

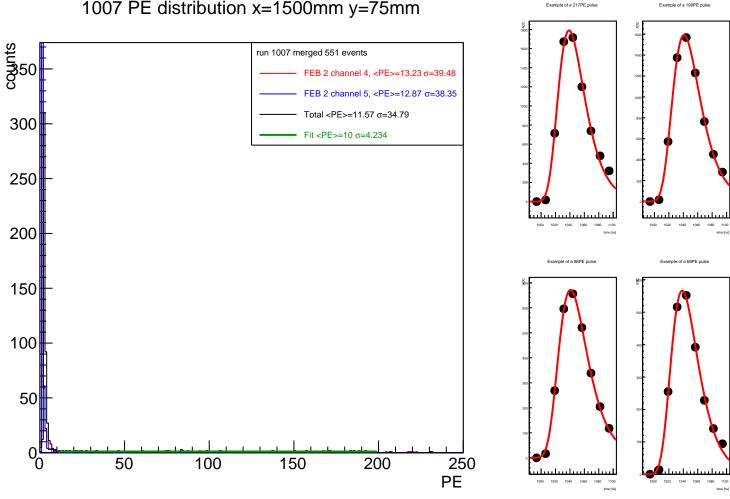

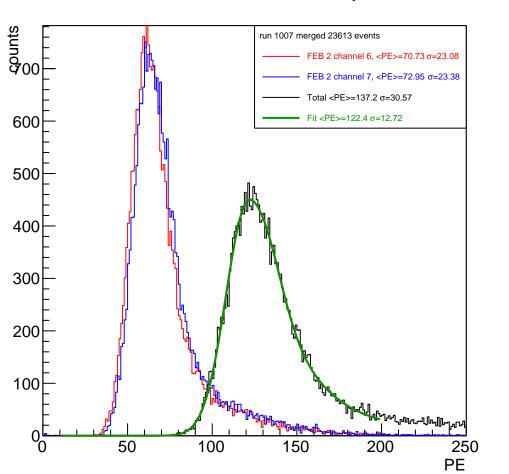


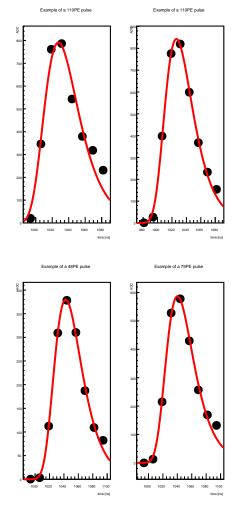

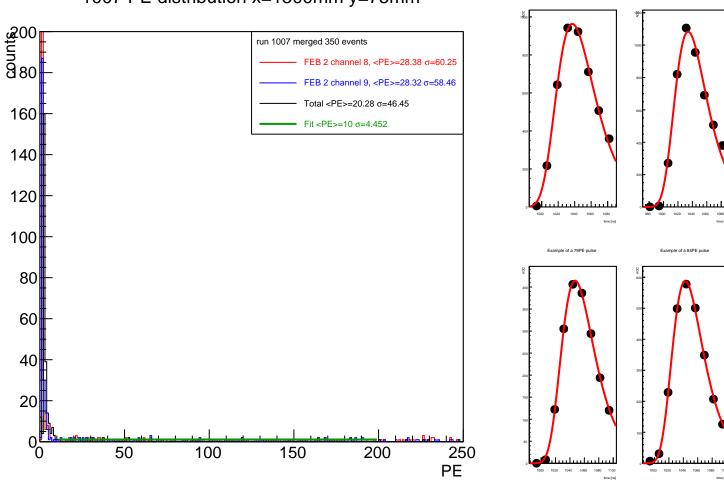


Example of a 188PE pulse

Example of a 160PE pulse

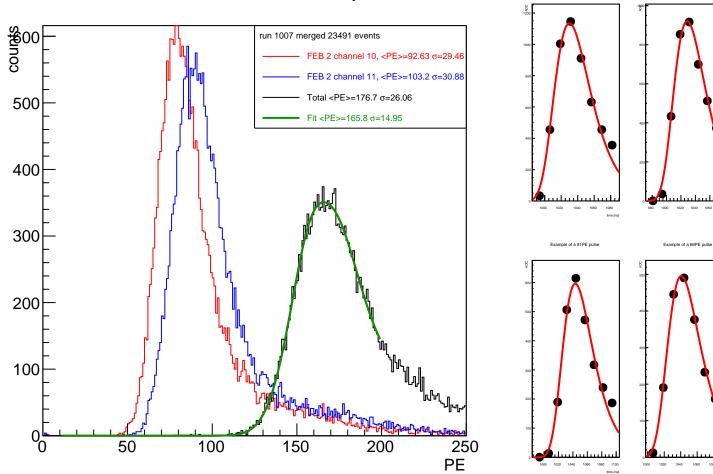


Example of a 162PE pulse

Example of a 135PE pulse

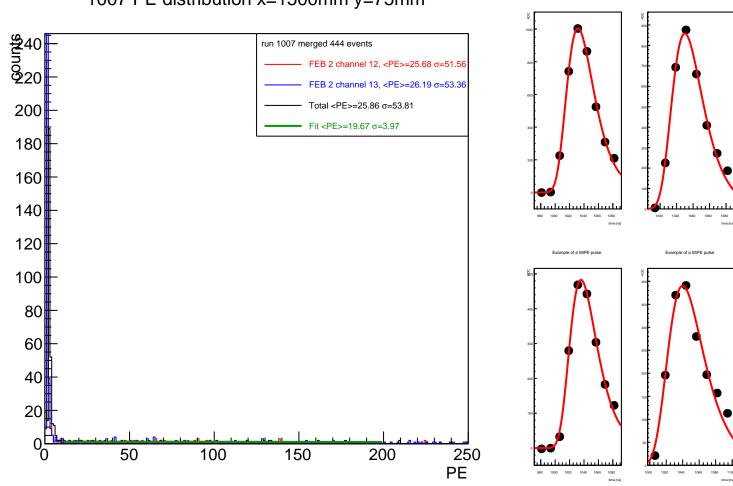

Example of a 123PE pulse

Example of a 104PE pulse

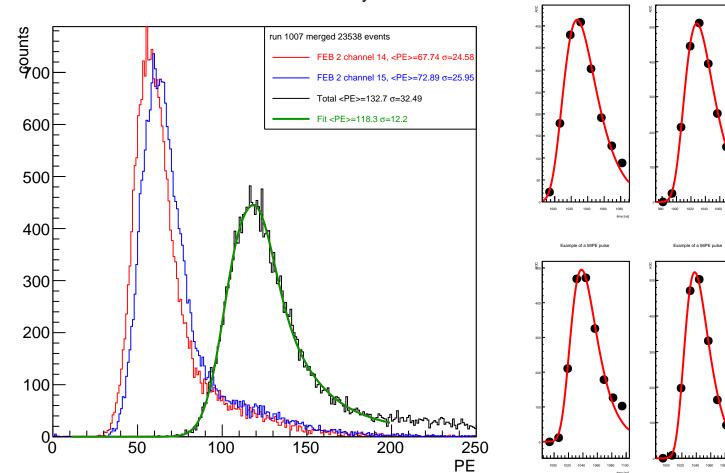

Example of a 54PE pulse

Example of a 66PE pulse