




Example of a 153PE pulse

Example of a 115PE pulse

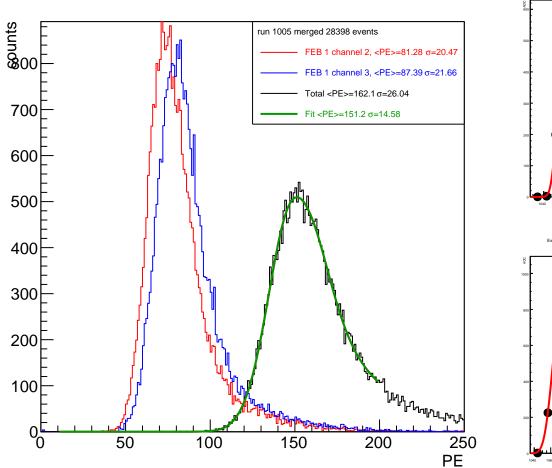


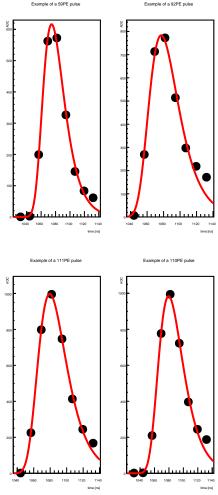


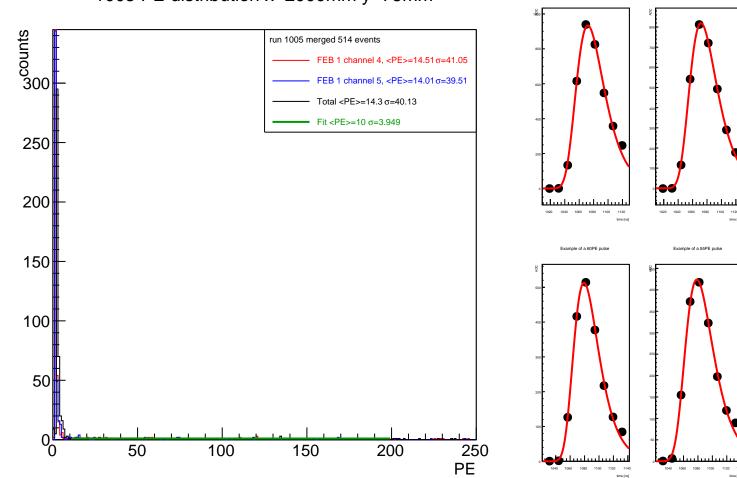



Example of a 122PE pulse


Example of a 104PE pulse

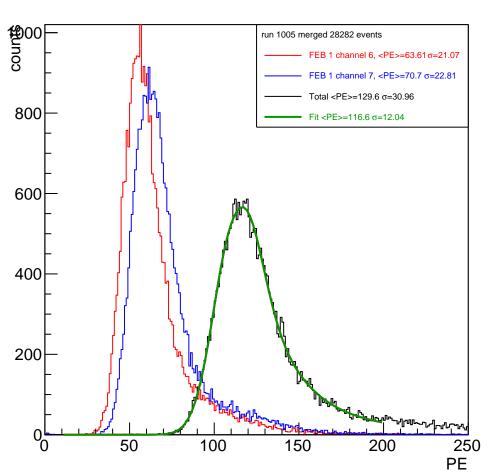

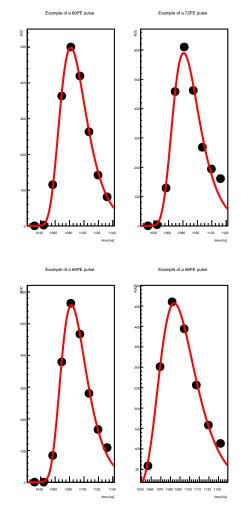

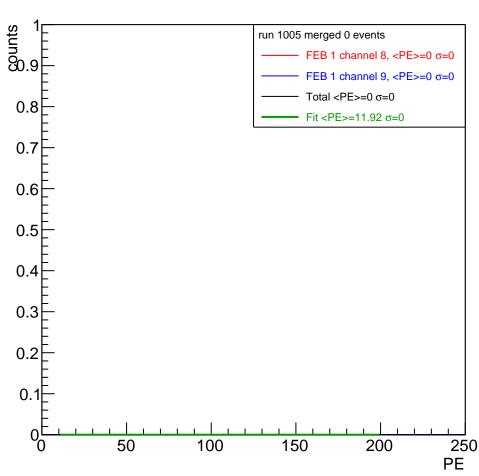


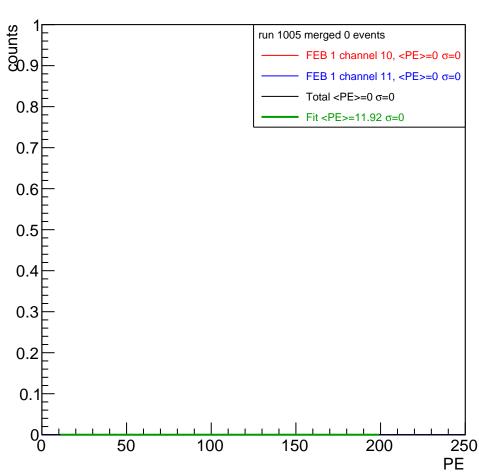

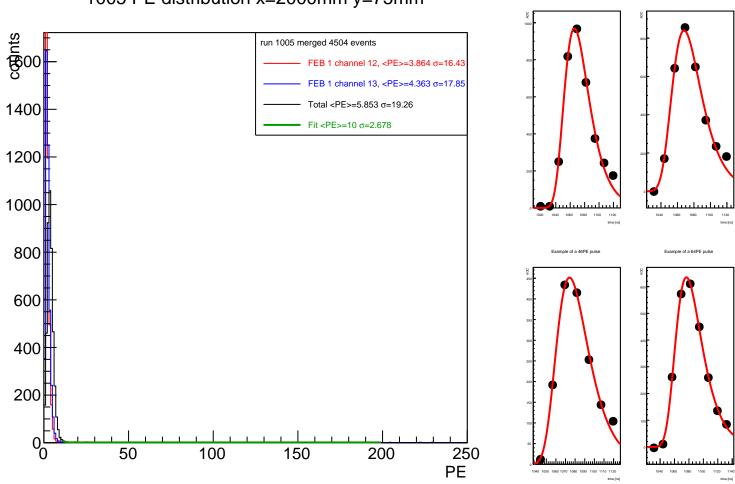


Example of a 103PE pulse

Example of a 83PE pulse

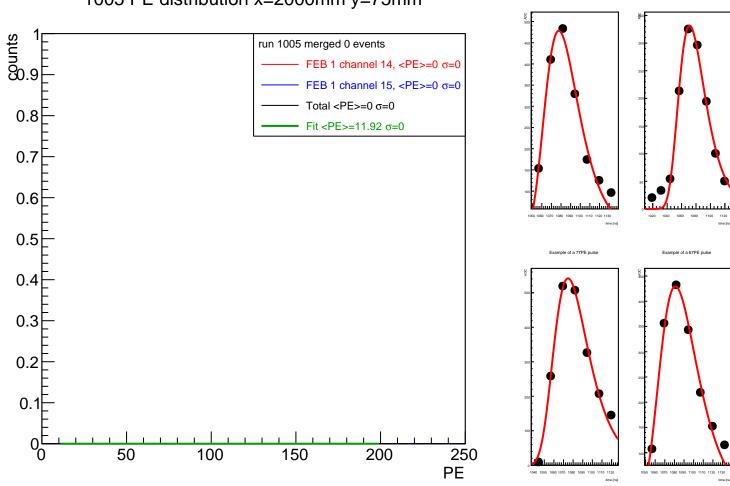


Example of a 66PE pulse


Example of a 48PE pulse

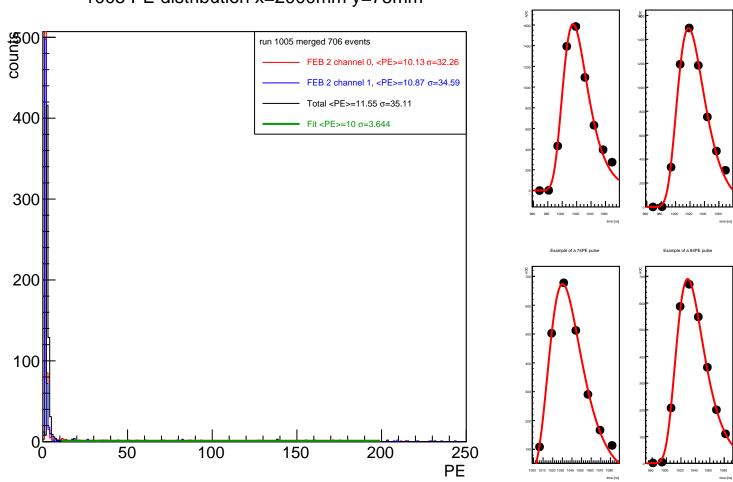


Example of a 180PE pulse

Example of a 177PE pulse

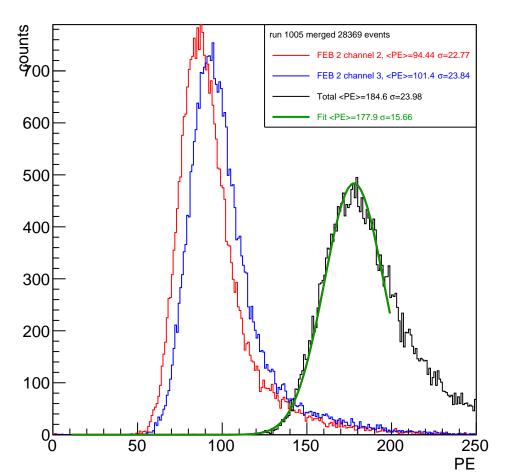


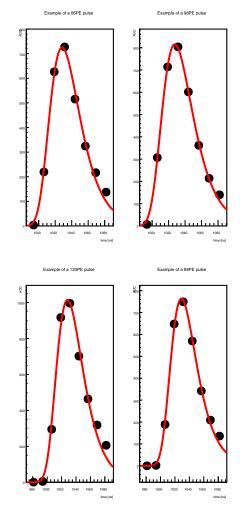

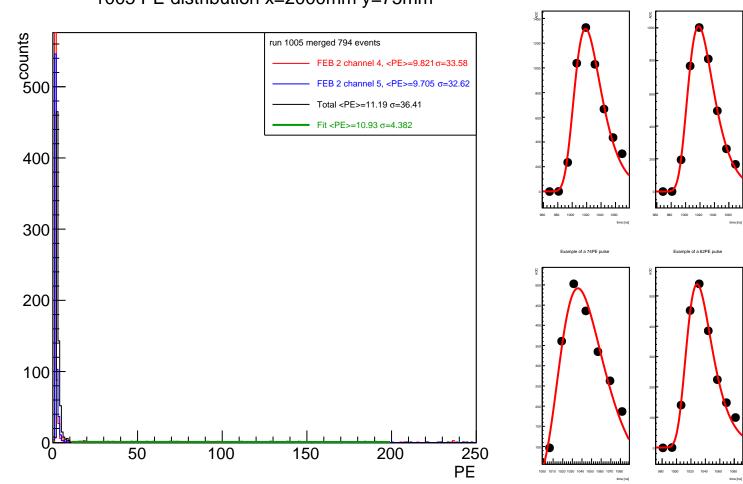


Example of a 160PE pulse

Example of a 116PE pulse

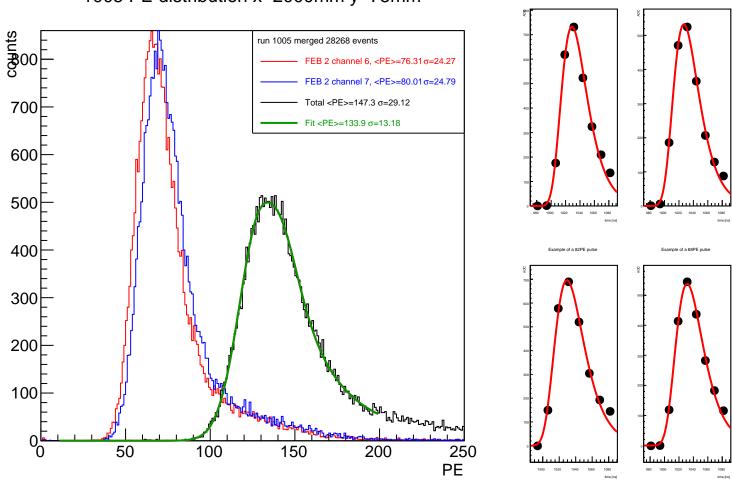


Example of a 86PE pulse

Example of a 63PE pulse

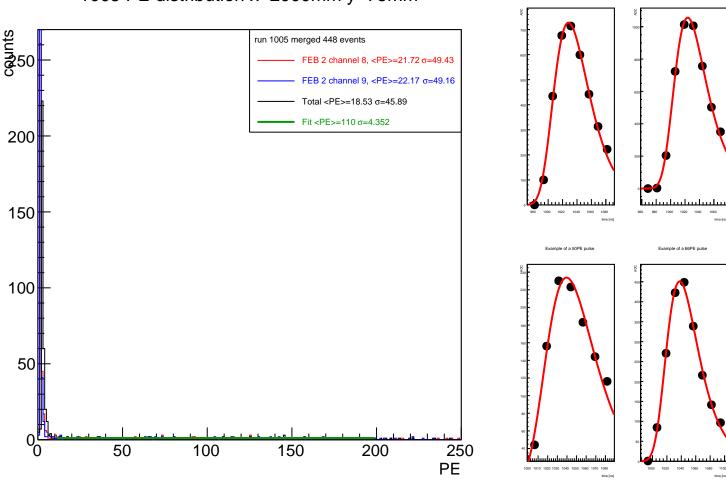


Example of a 150PE pulse

Example of a 156PE pulse

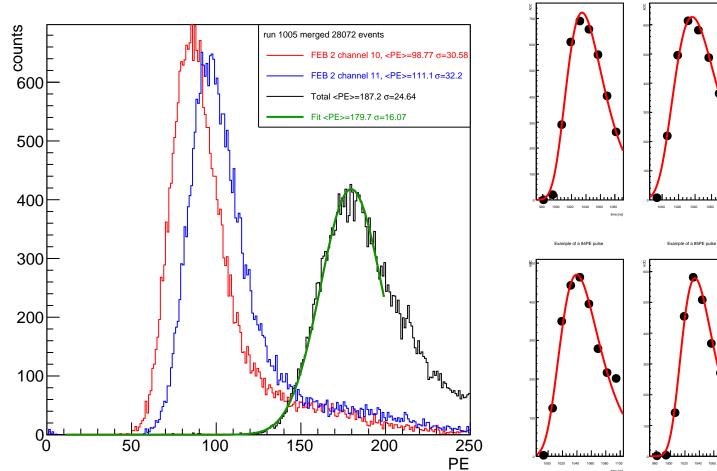

Example of a 121PE pulse

Example of a 109PE pulse

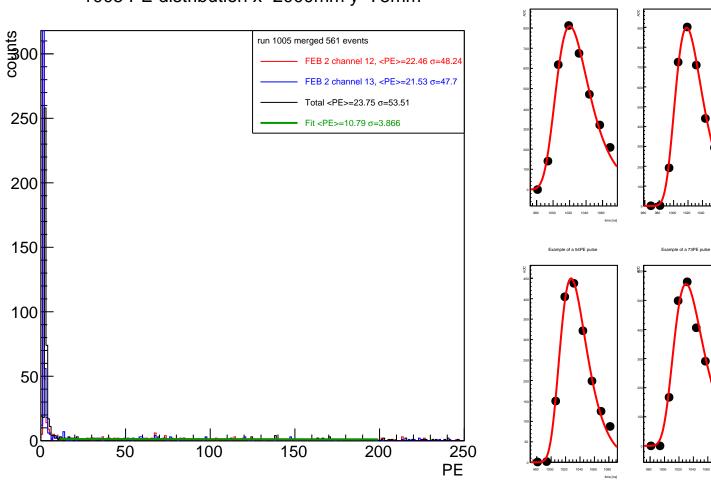

Example of a 104PE pulse

Example of a 109PE pulse

