



Example of a 68PE pulse

Example of a 77PE pulse

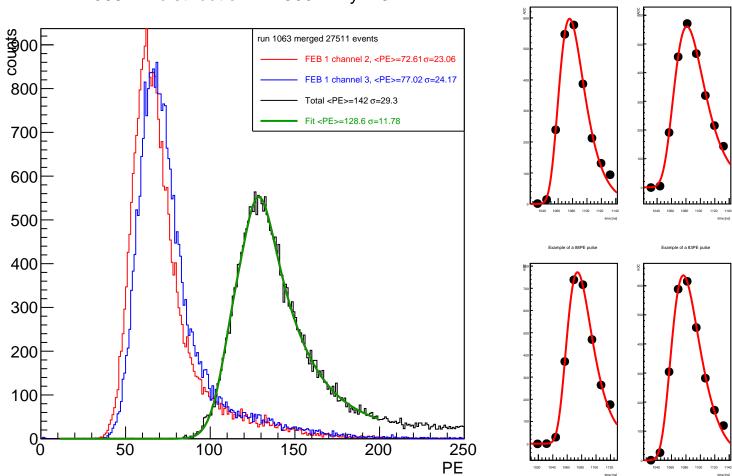


Example of a 68PE pulse


Example of a 79PE pulse

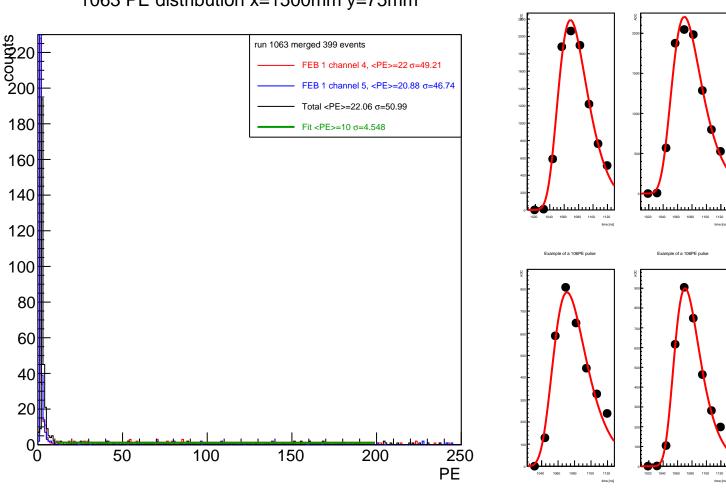



Example of a 299PE pulse


Example of a 300PE pulse

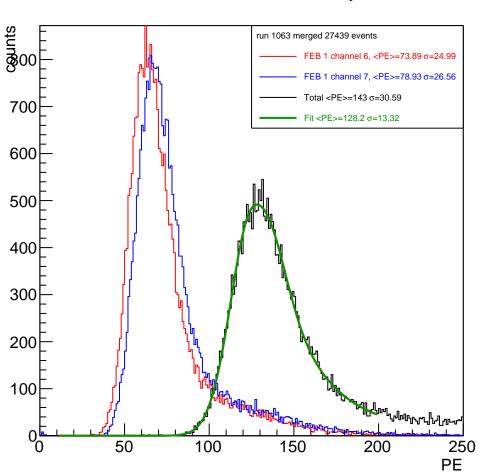

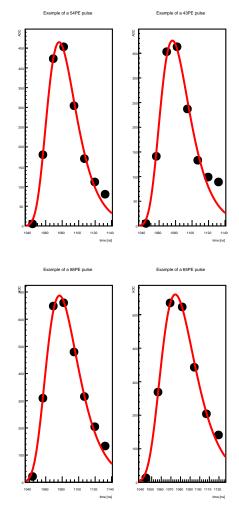

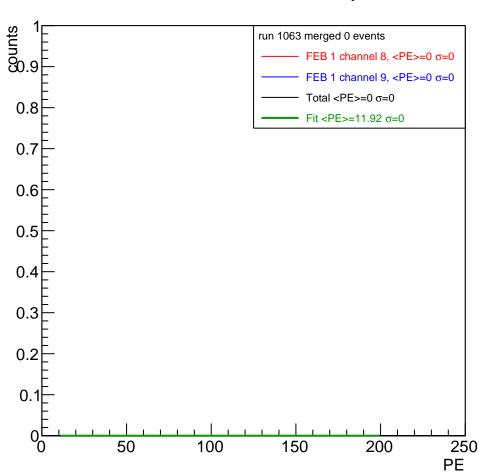


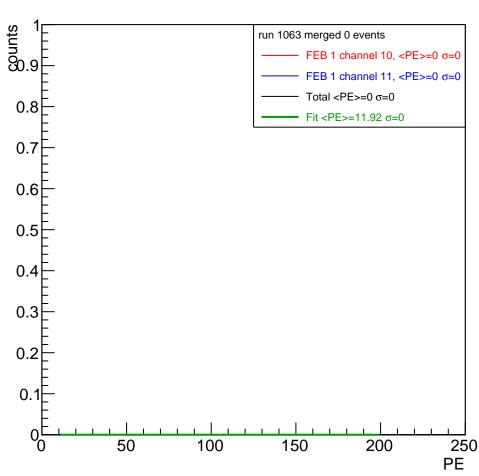


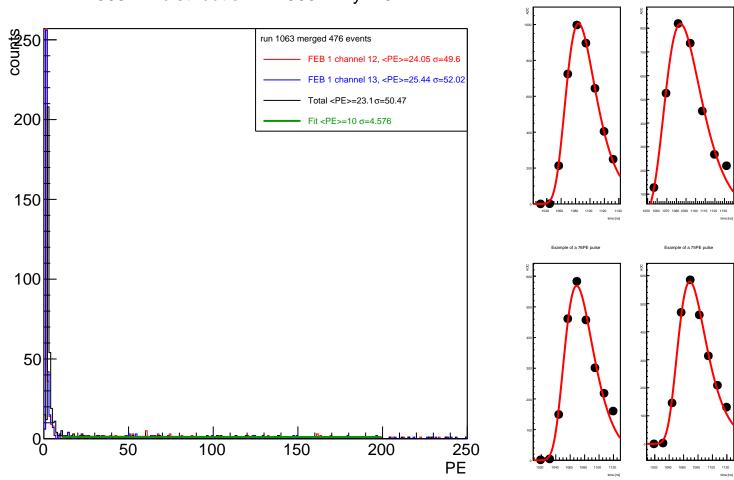

Example of a 138PE pulse


Example of a 102PE pulse

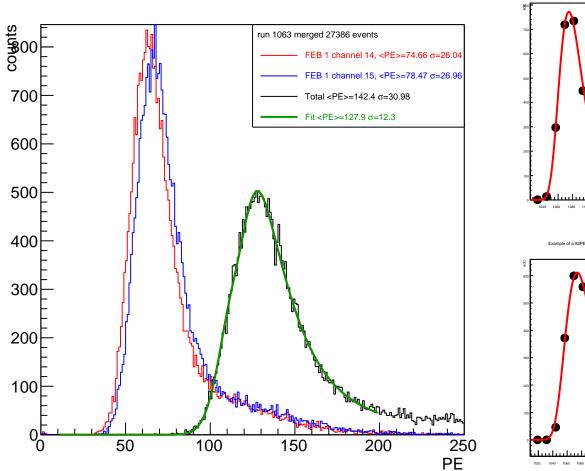

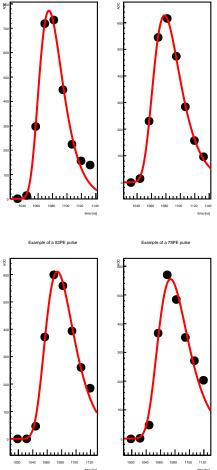


Example of a 79PE pulse


Example of a 86PE pulse

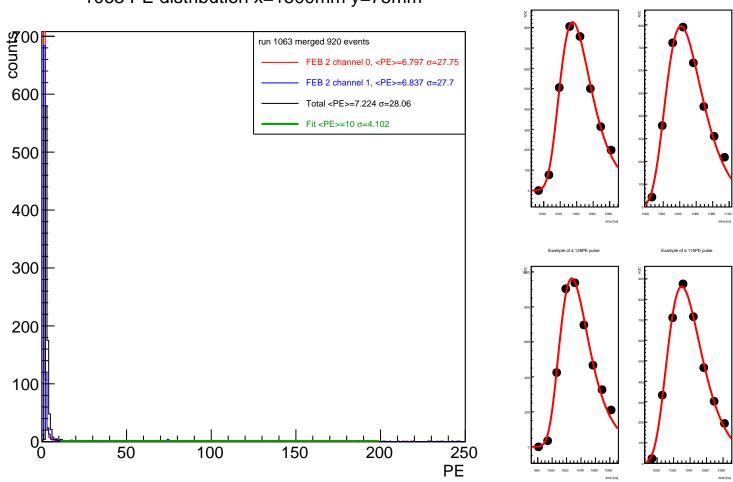


Example of a 103PE pulse

Example of a 113PE pulse

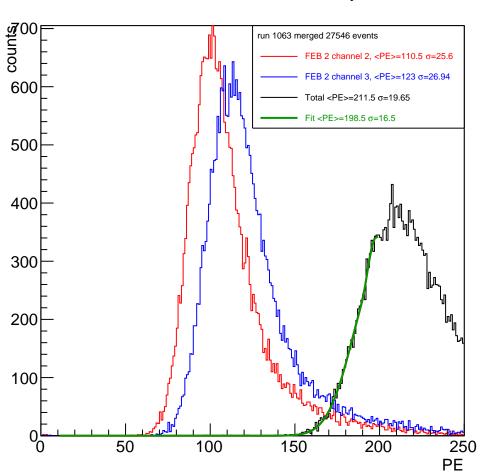


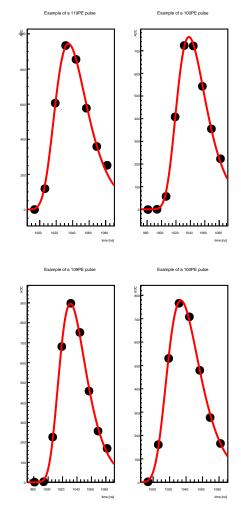


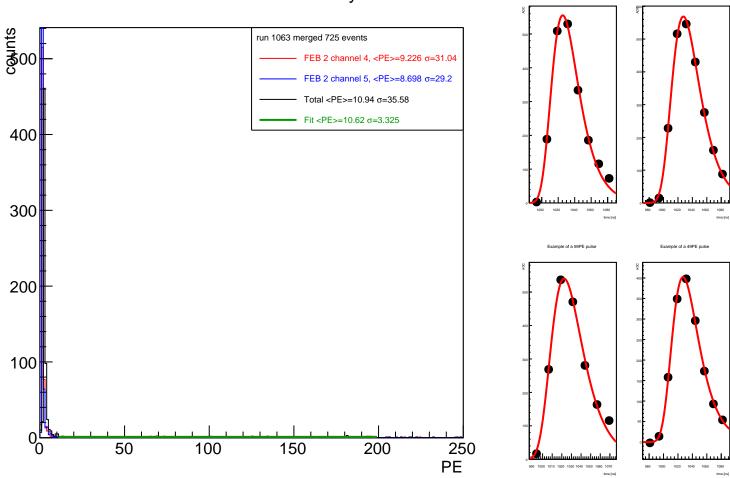


Example of a 61PE pulse

Example of a 73PE pulse

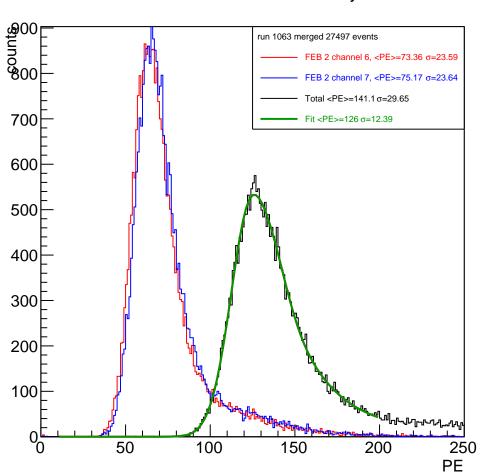


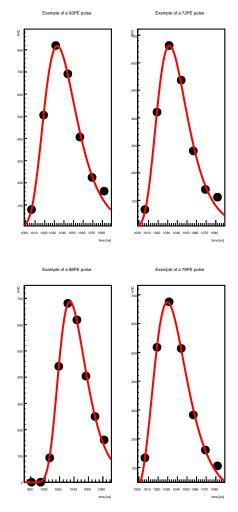


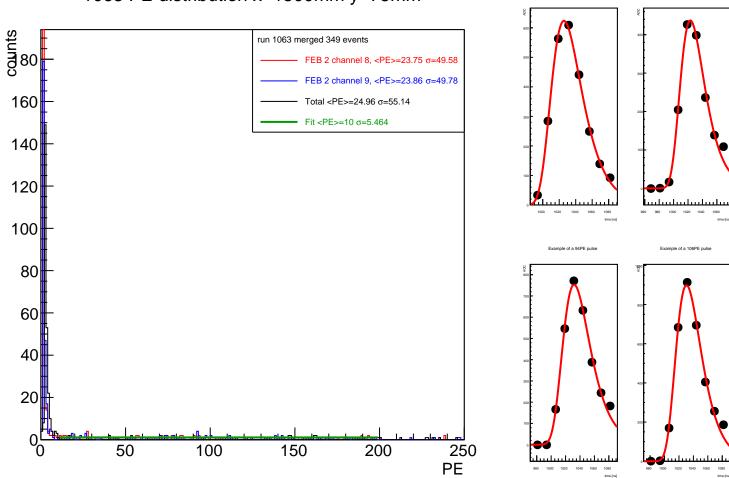

Example of a 77PE pulse


Example of a 49PE pulse

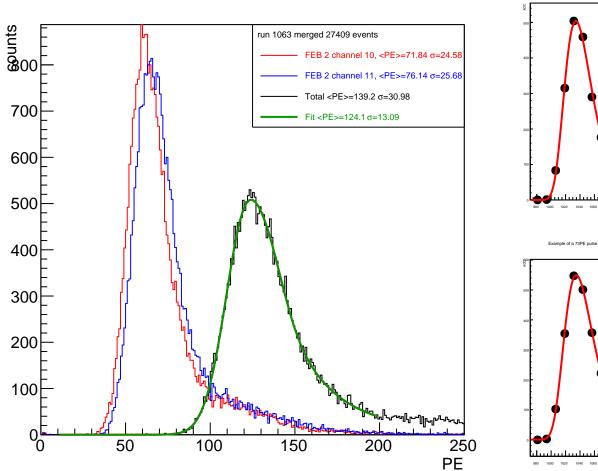

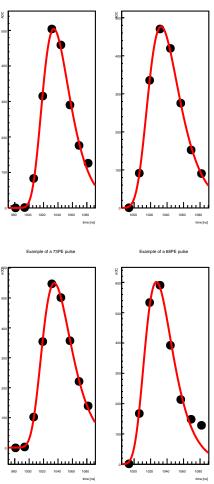


Example of a 60PE pulse

Example of a 63PE pulse

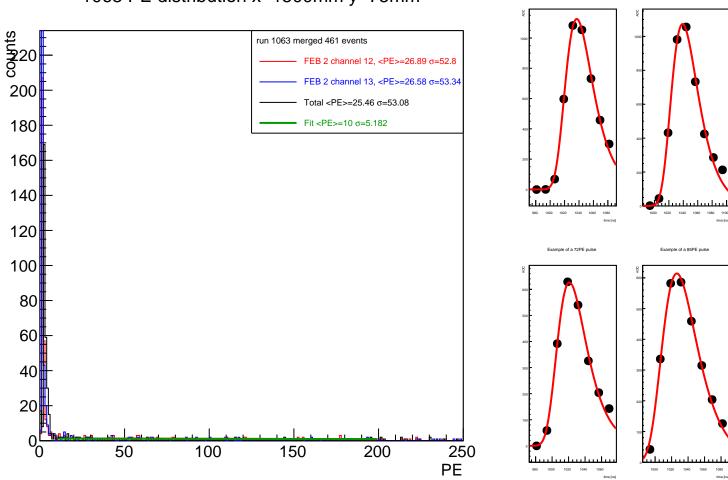

Example of a 139PE pulse

Example of a 129PE pulse

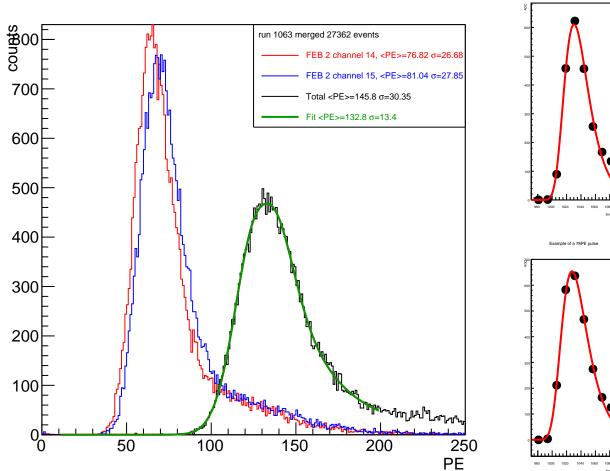

Example of a 68PE pulse

Example of a 78PE pulse

Example of a 50PE pulse