



Example of a 107PE pulse


Example of a 89PE pulse

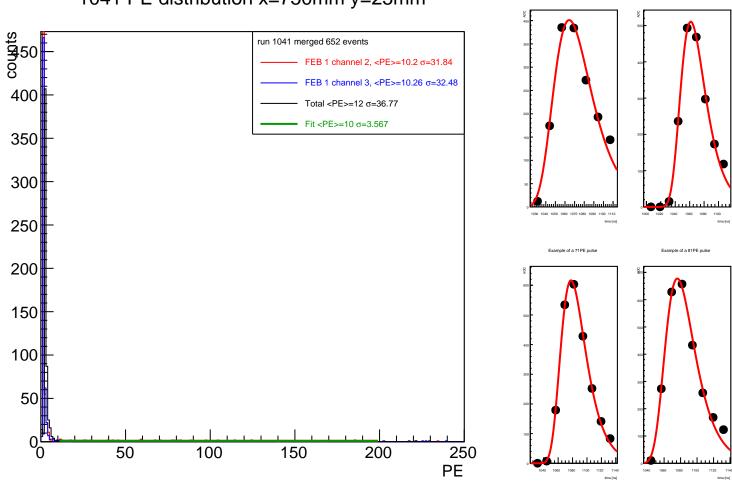


Example of a 52PE pulse

Example of a 59PE pulse

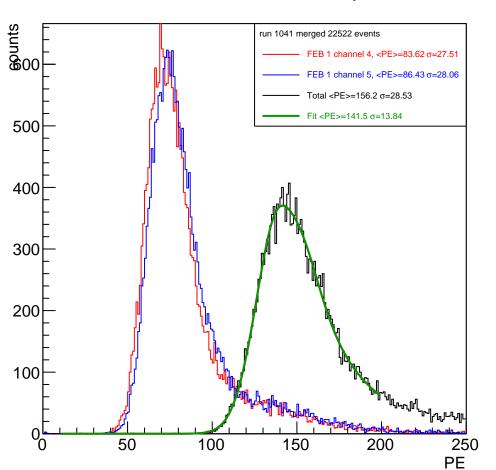


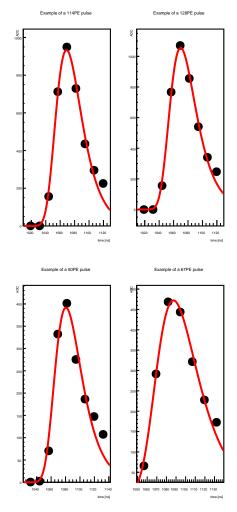


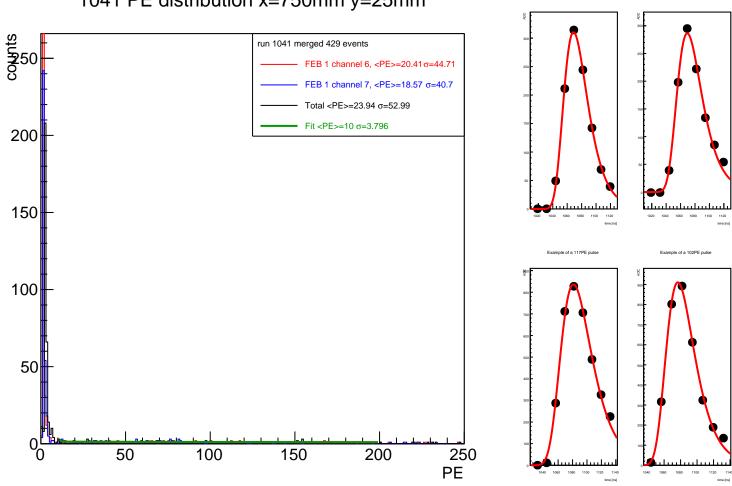



Example of a 33PE pulse


Example of a 32PE pulse

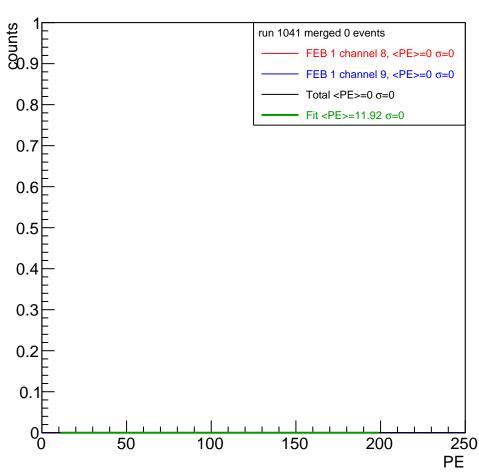

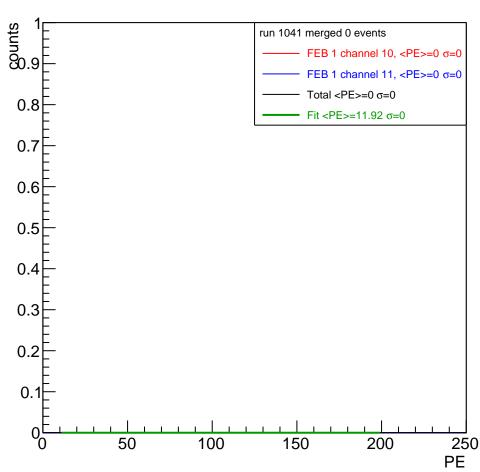

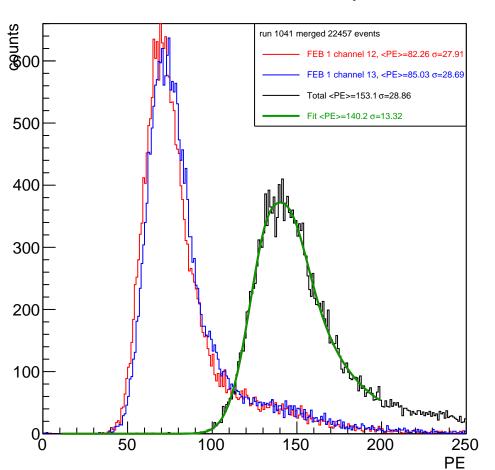

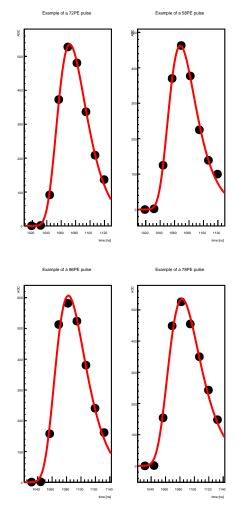


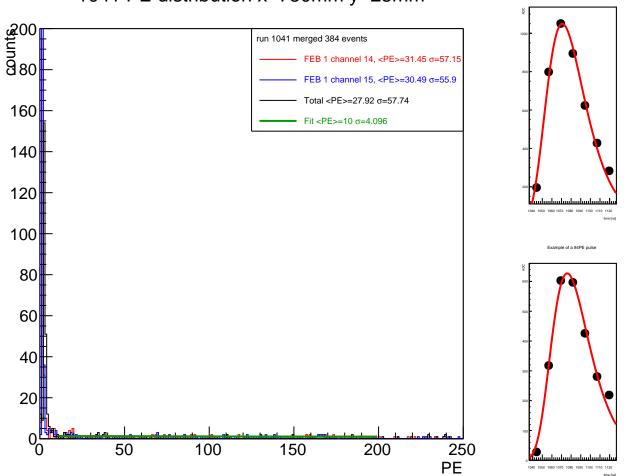



Example of a 144PE pulse

Example of a 141PE pulse

Example of a 86PE pulse

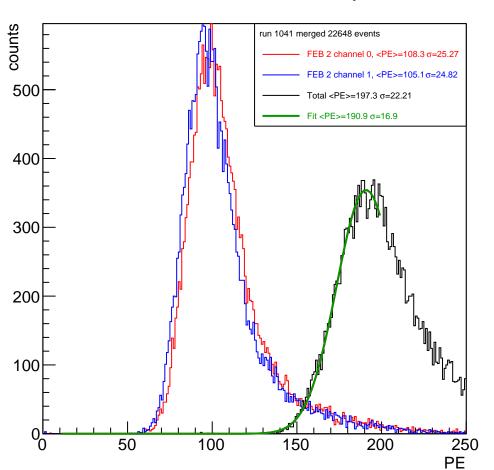


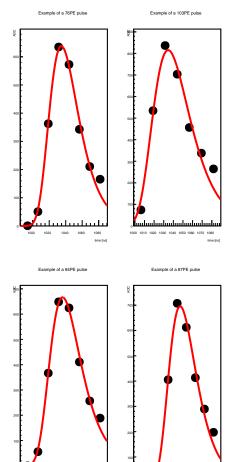


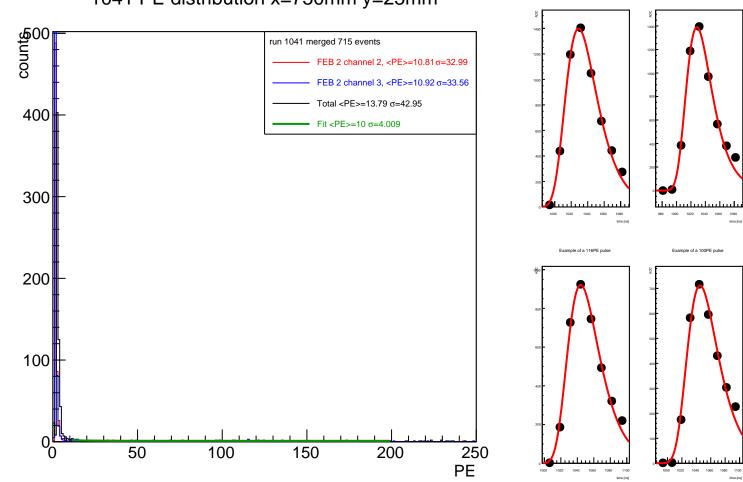



Example of a 175PE pulse

Example of a 162PE pulse

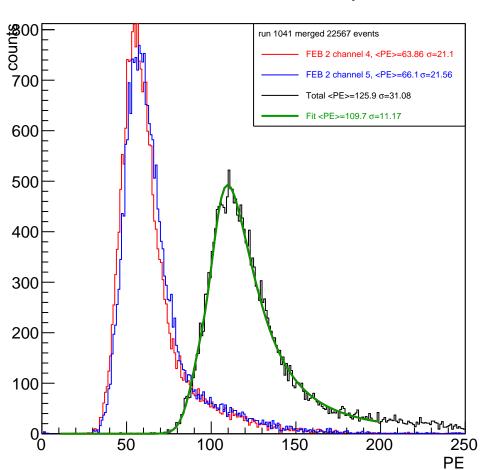

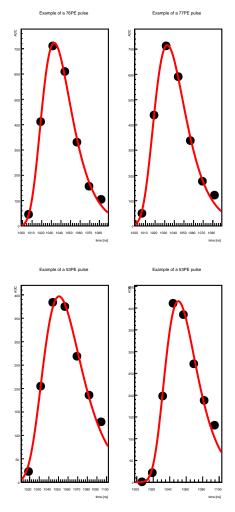


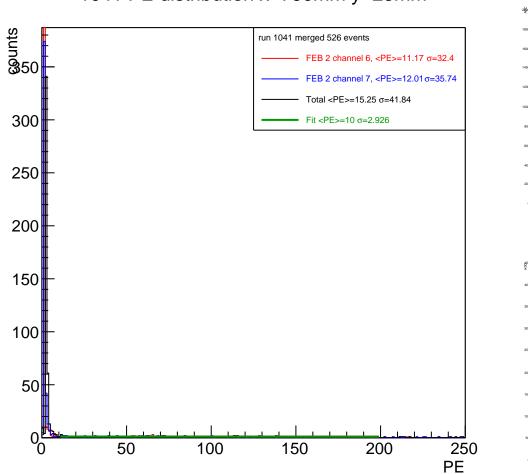


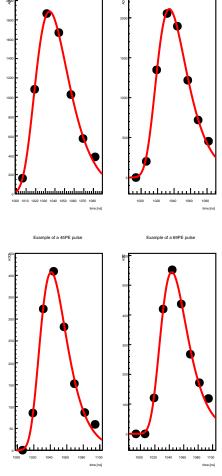


Example of a 266PE pulse

Example of a 225PE pulse

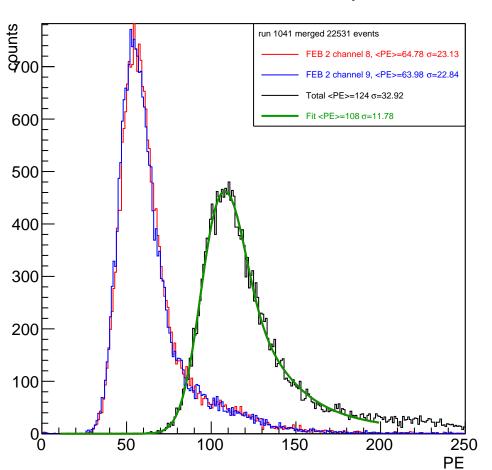

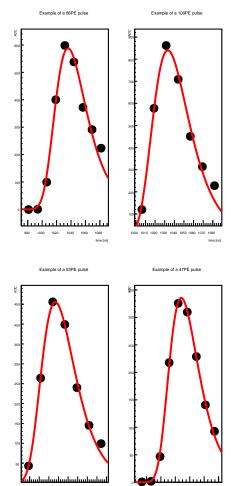

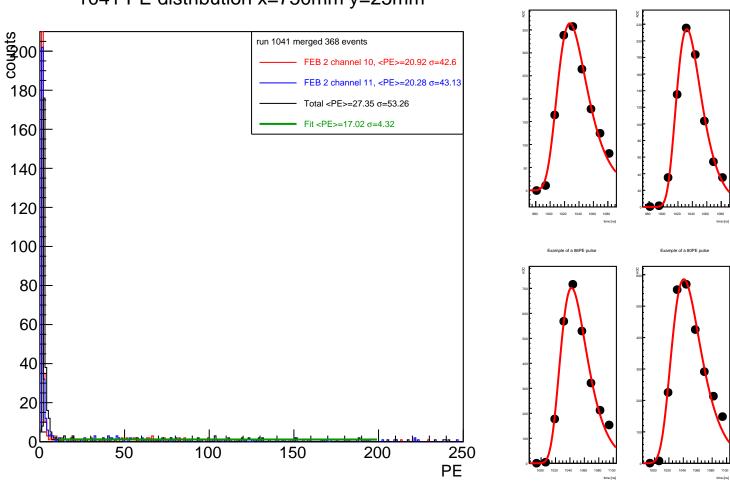

Example of a 50PE pulse

Example of a 25PE pulse

