



Example of a 182PE pulse

Example of a 189PE pulse

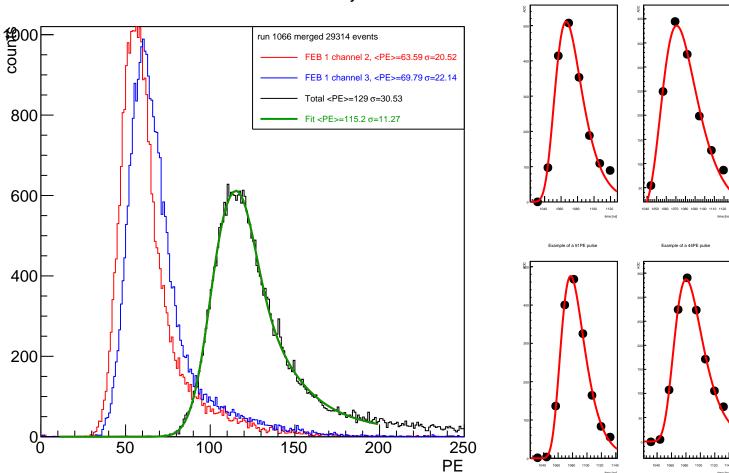


Example of a 55PE pulse


Example of a 46PE pulse

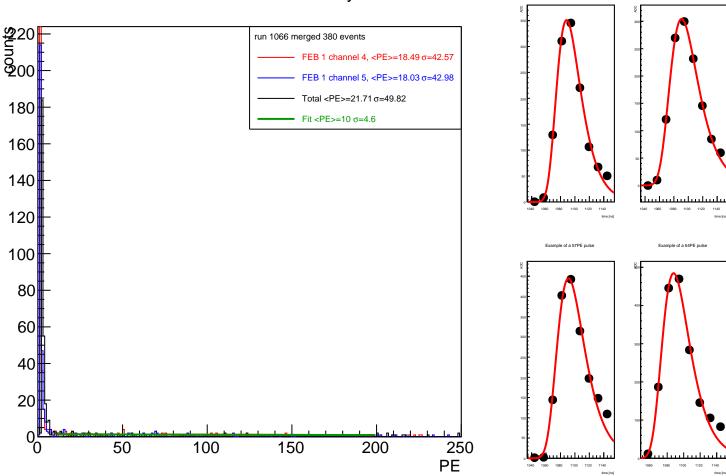

Example of a 40PE pulse


Example of a 39PE pulse

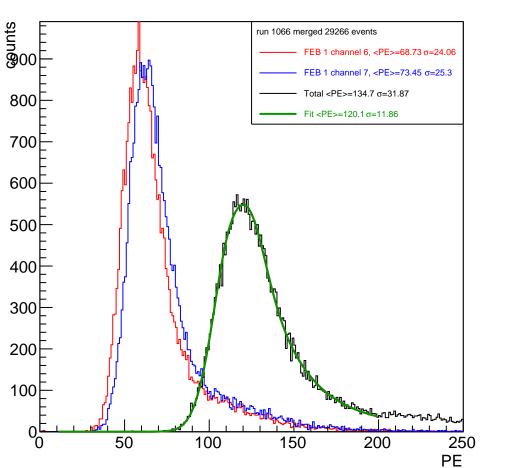


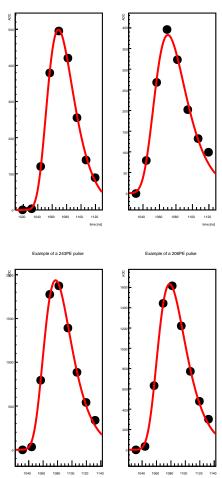


Example of a 48PE pulse

Example of a 61PE pulse

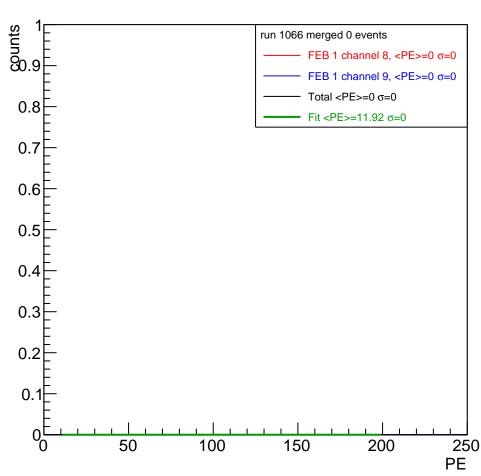


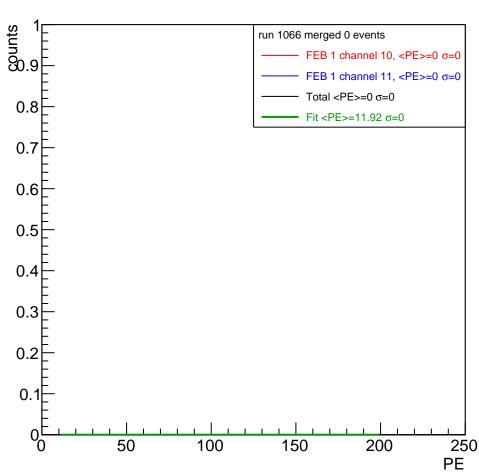

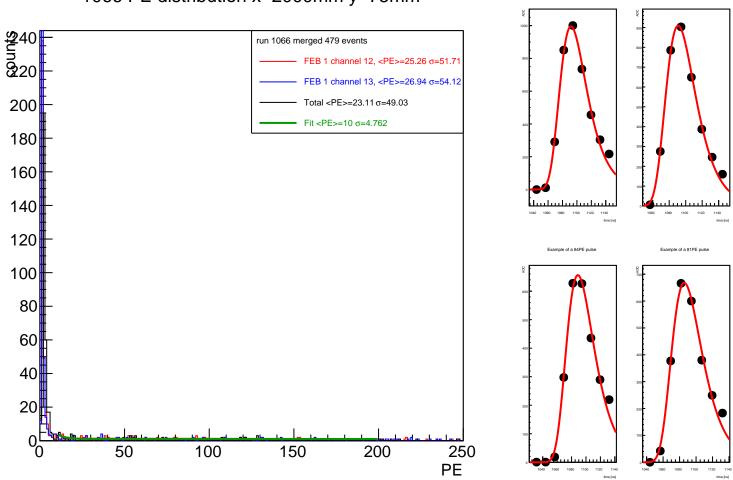


Example of a 124PE pulse


Example of a 109PE pulse

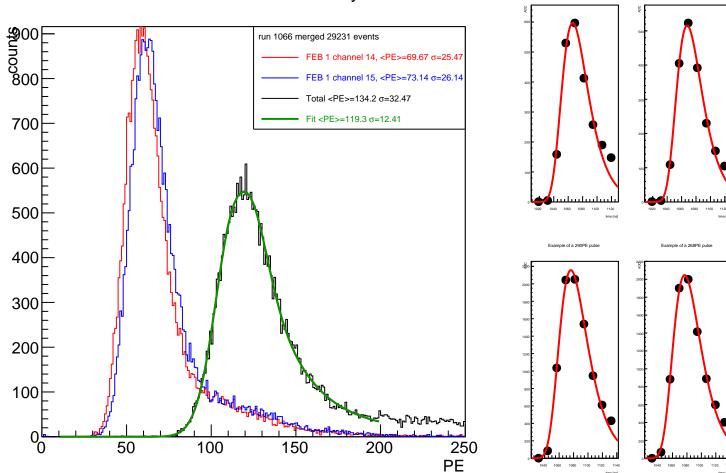

Example of a 75PE pulse


Example of a 62PE pulse

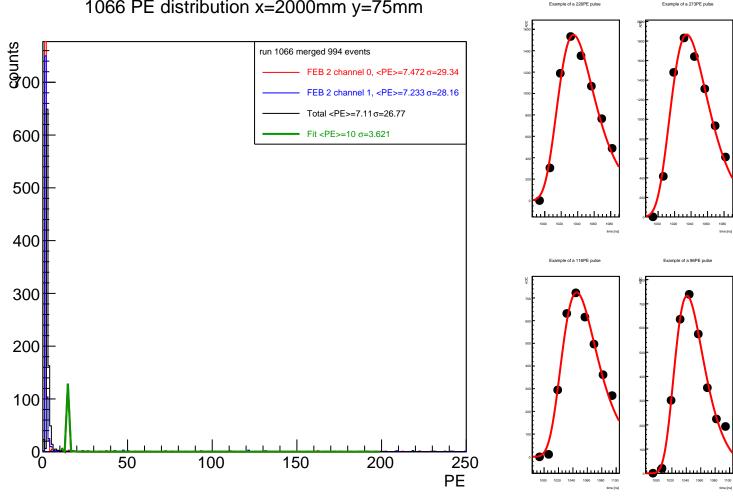

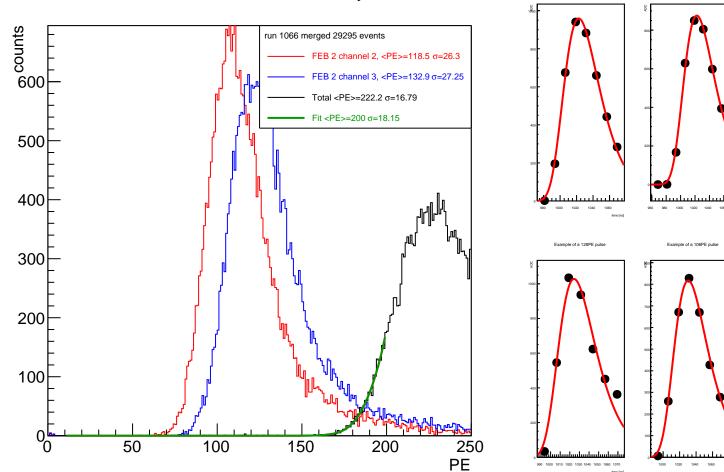


Example of a 134PE pulse

Example of a 121PE pulse

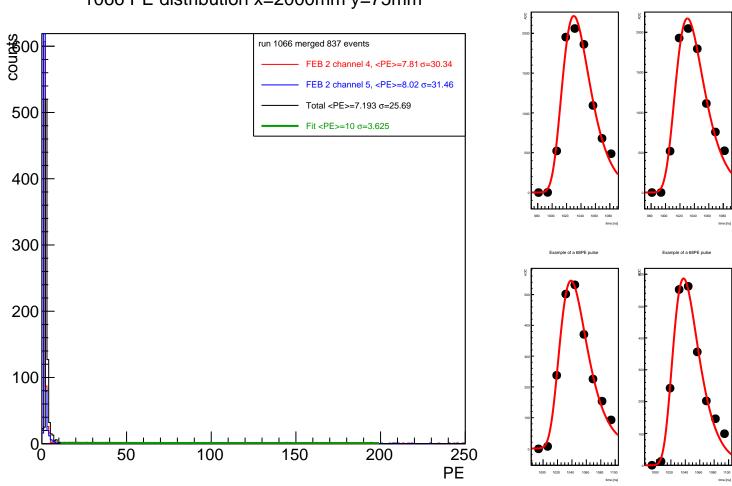


Example of a 281PE pulse

Example of a 282PE pulse

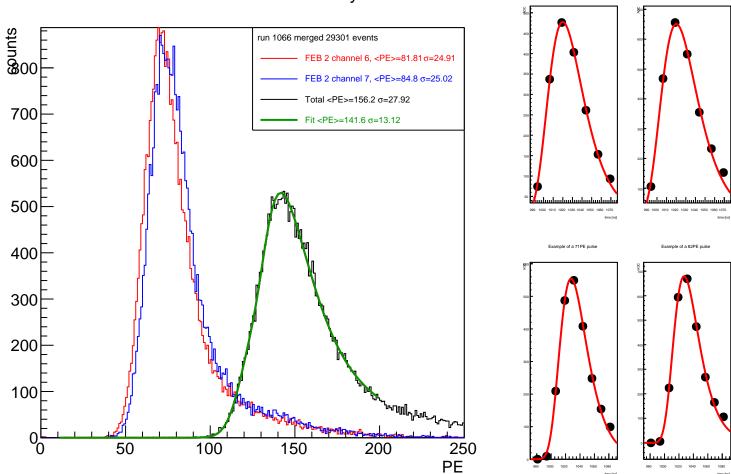


Example of a 59PE pulse

Example of a 85PE pulse

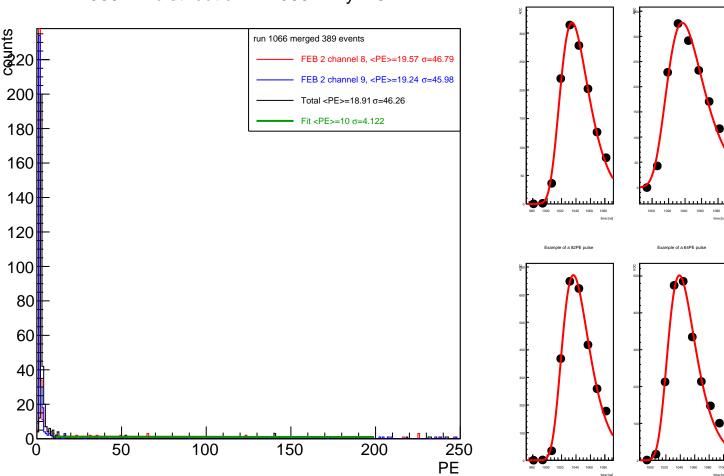

Example of a 41PE pulse


Example of a 49PE pulse

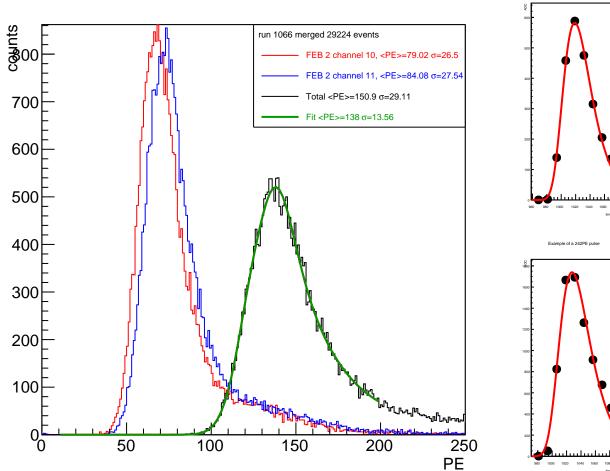

Example of a 74PE pulse

Example of a 61PE pulse


Example of a 207PE pulse

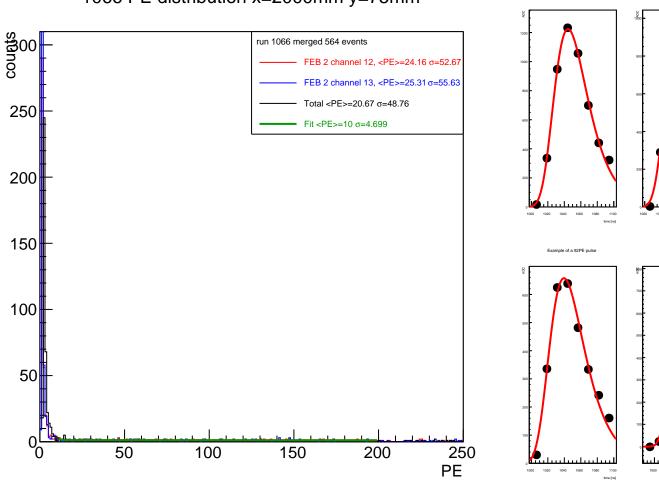

Example of a 164PE pulse

Example of a 123PE pulse

Example of a 95PE pulse

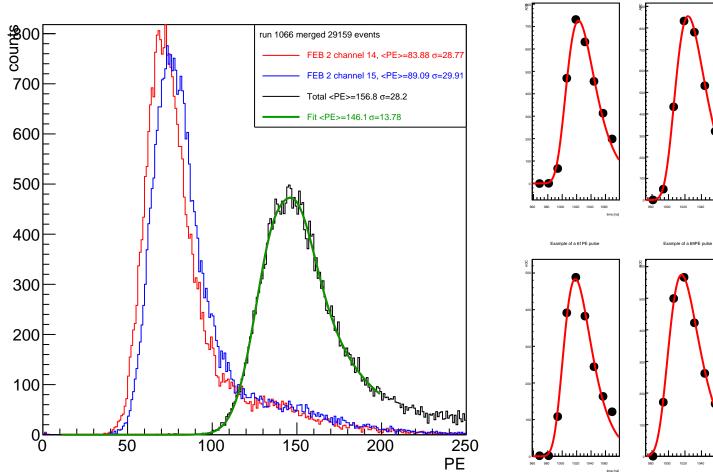

Example of a 94PE pulse

Example of a 101PE pulse