



Example of a 68PE pulse

Example of a 53PE pulse

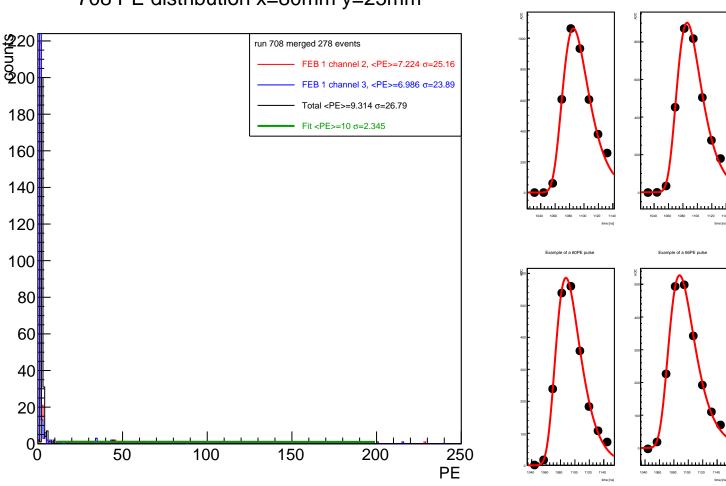


Example of a 117PE pulse


Example of a 91PE pulse

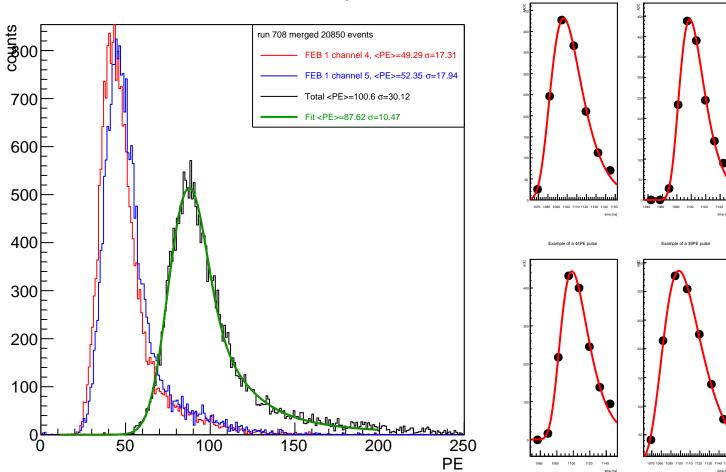

Example of a 41PE pulse

Example of a 45PE pulse

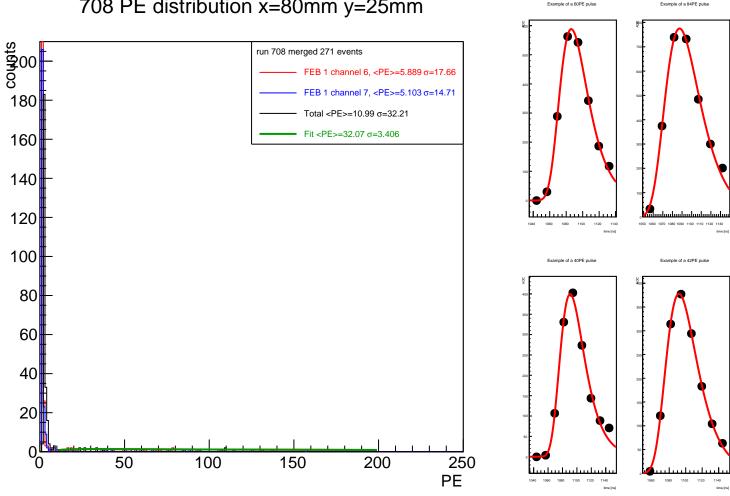


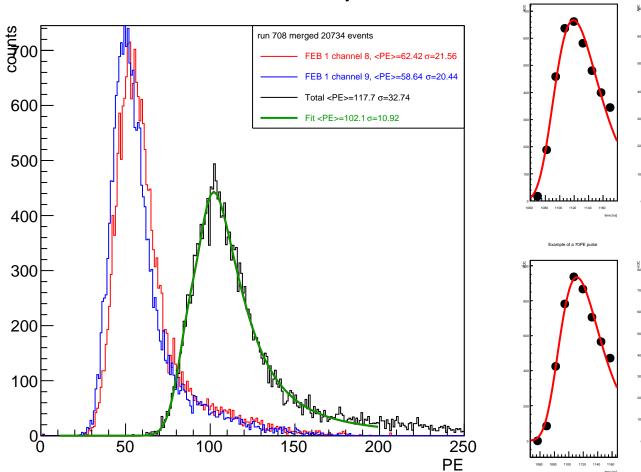


Example of a 55PE pulse

Example of a 52PE pulse


Example of a 60PE pulse

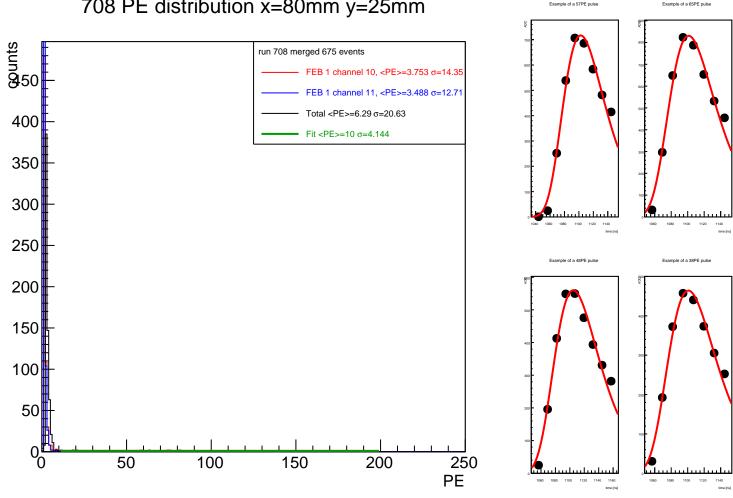

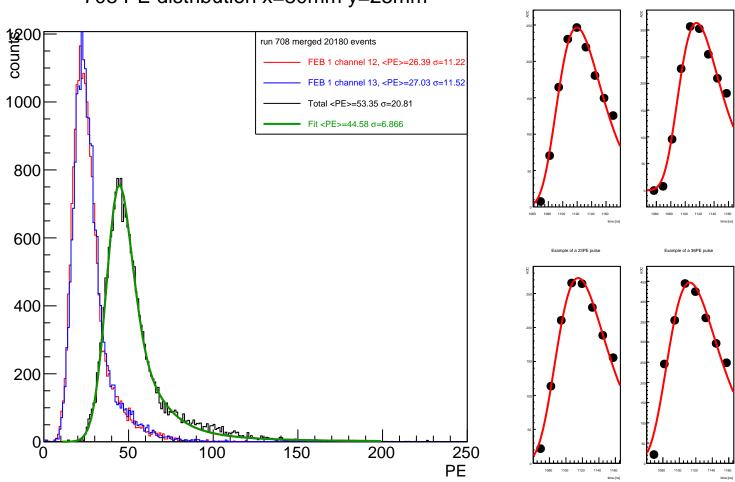


Example of a 22PE pulse


Example of a 24PE pulse

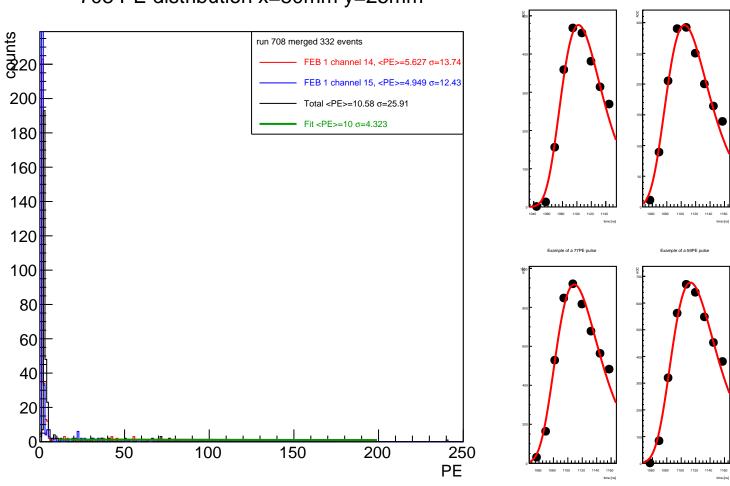


Example of a 39PE pulse

Example of a 25PE pulse

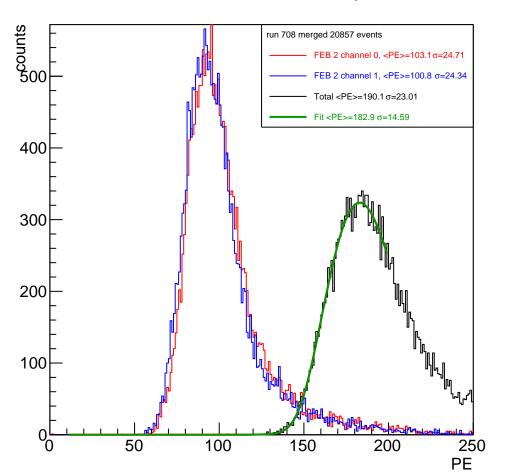


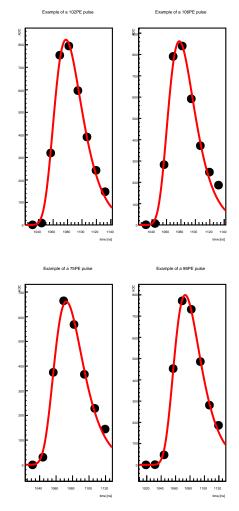

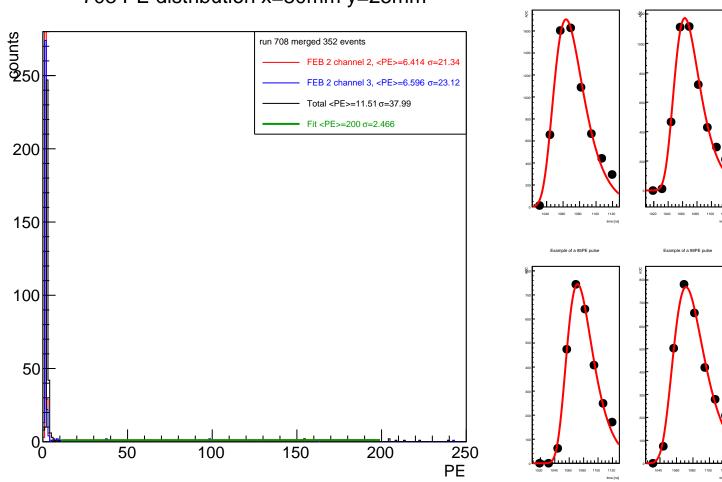


Example of a 194PE pulse

Example of a 142PE pulse

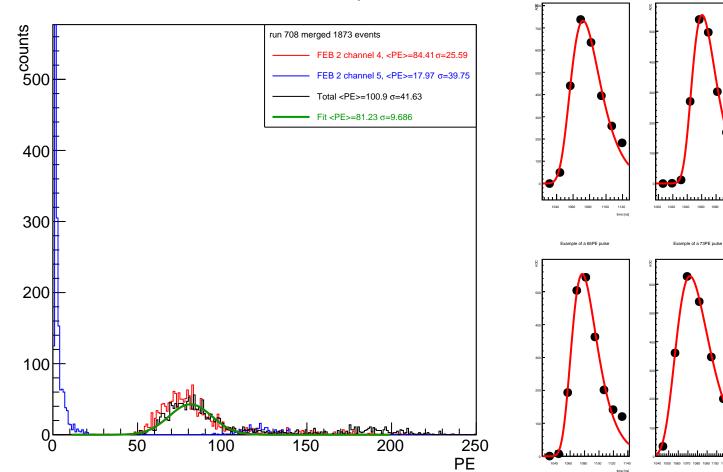


Example of a 87PE pulse


Example of a 62PE pulse

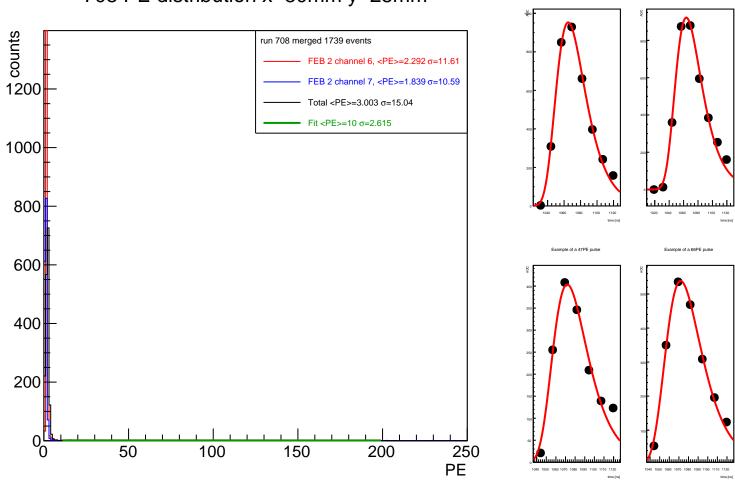


Example of a 111PE pulse

Example of a 110PE pulse

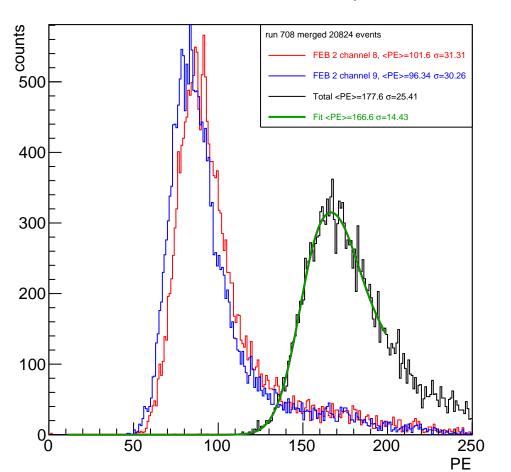


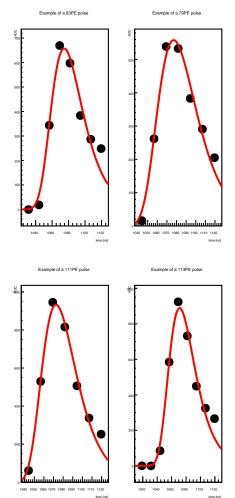


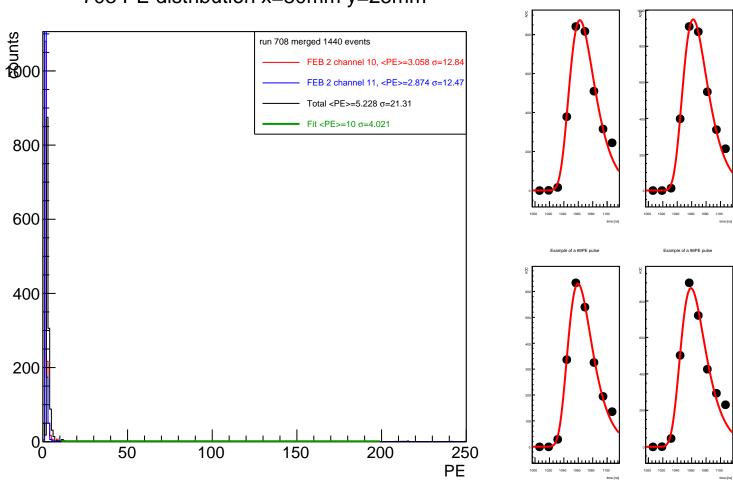


Example of a 99PE pulse

Example of a 104PE pulse

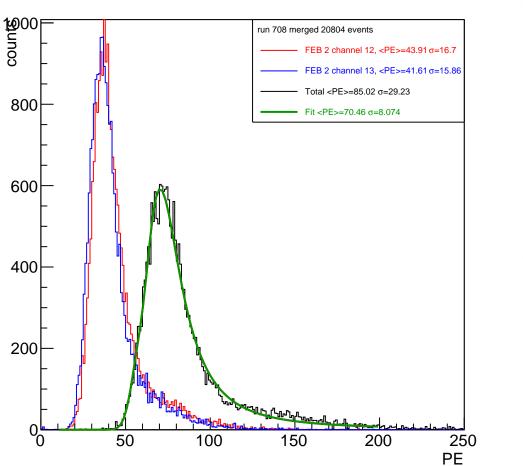

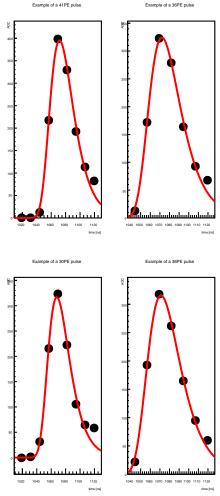

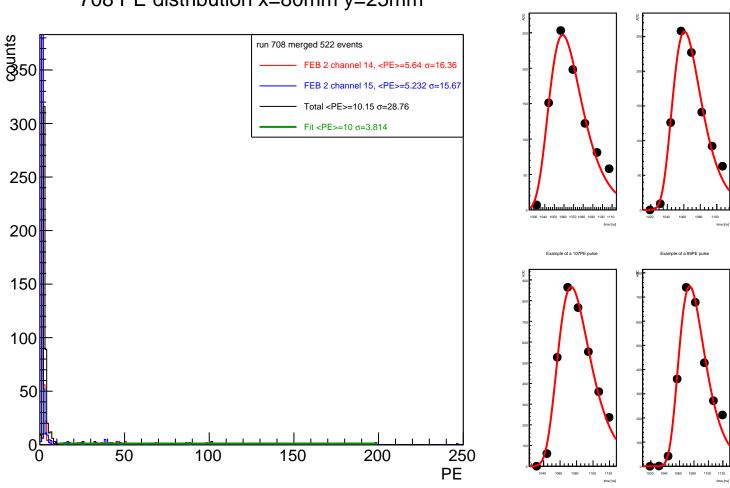

Example of a 27PE pulse

Example of a 30PE pulse