





Example of a 54PE pulse

Example of a 81PE pulse

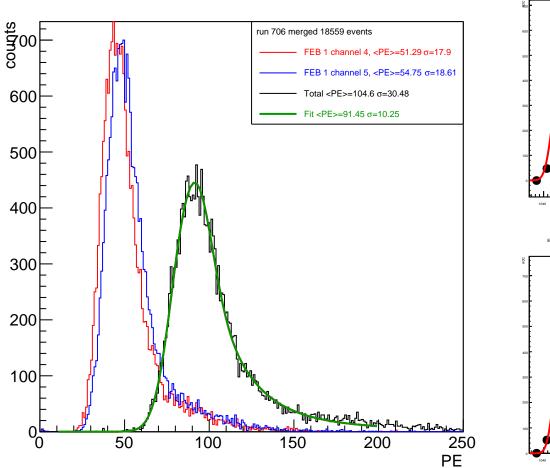

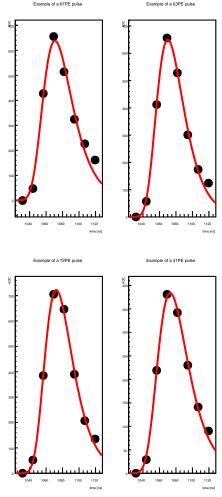


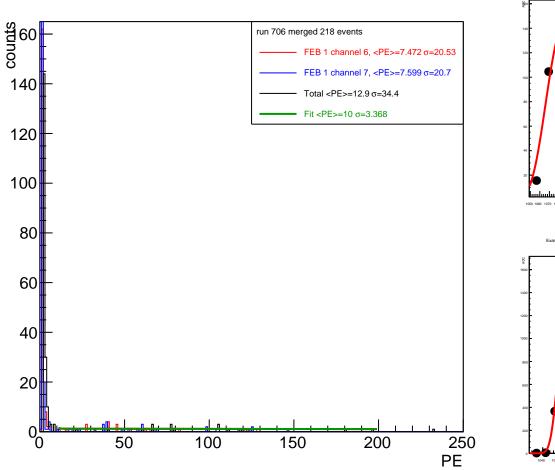


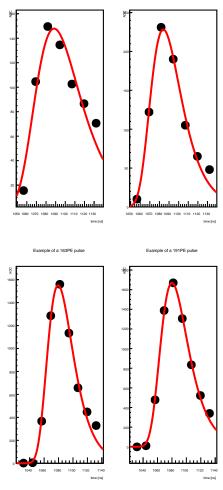


Example of a 22PE pulse

Example of a 21PE pulse

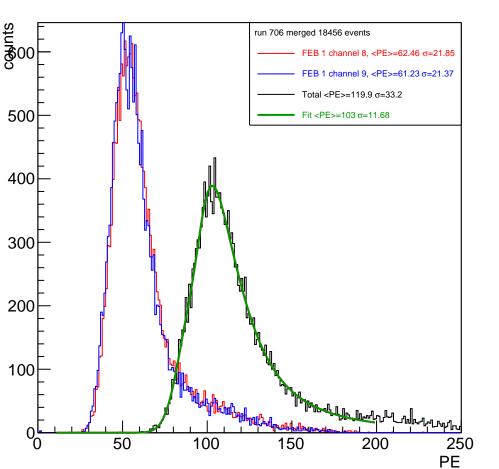


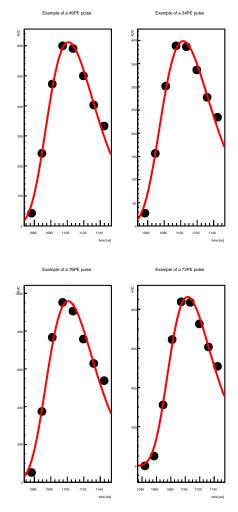

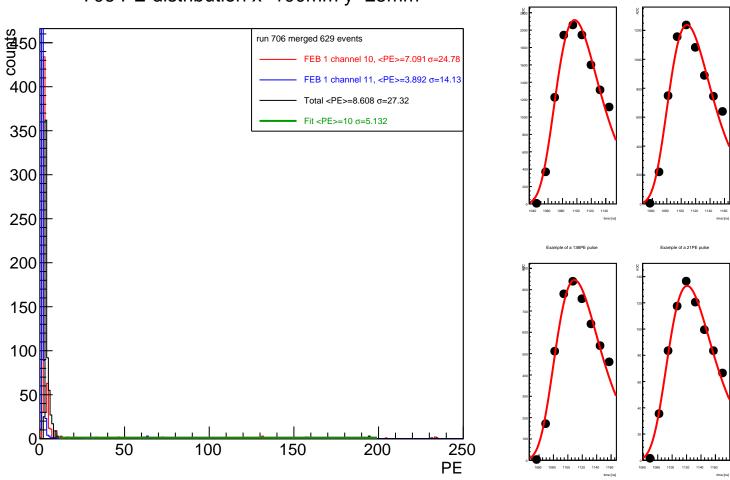


Example of a 332PE pulse


Example of a 100PE pulse

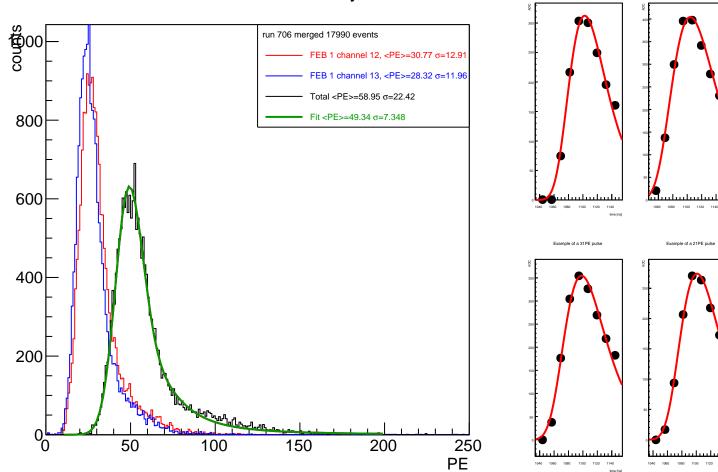



Example of a 24PE pulse

Example of a 37PE pulse

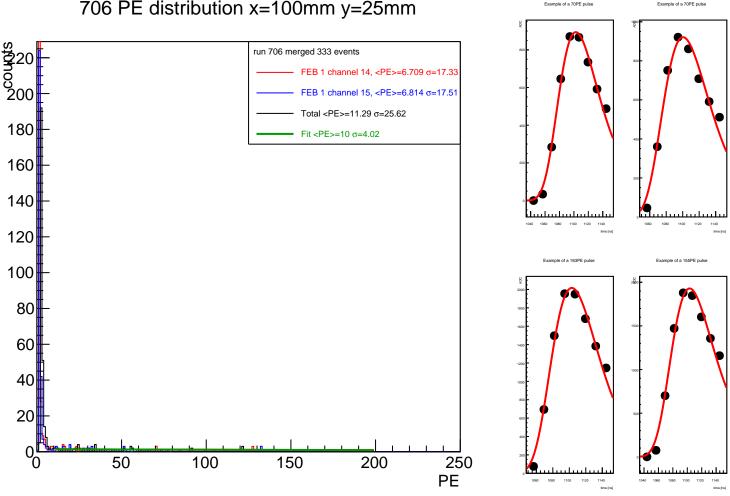

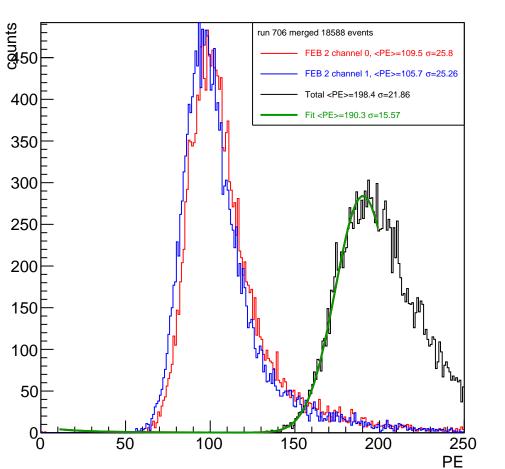


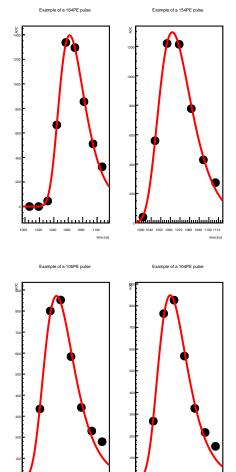


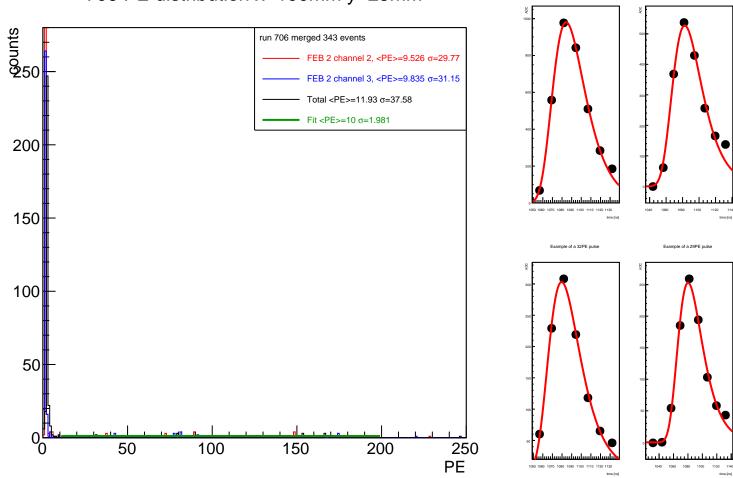


Example of a 106PE pulse

Example of a 65PE pulse

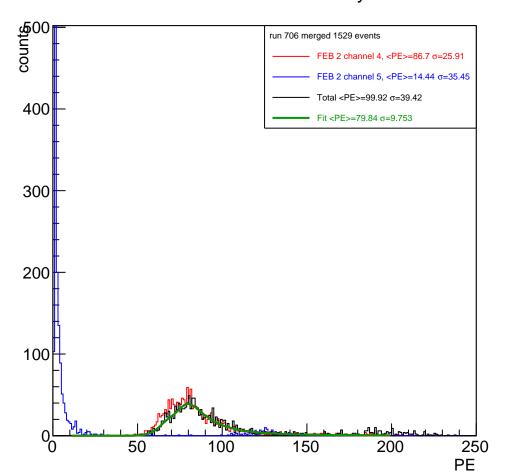


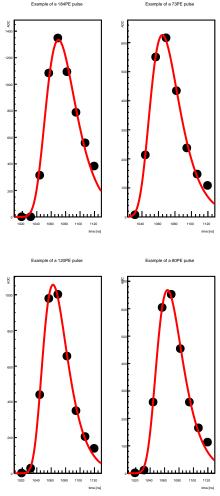


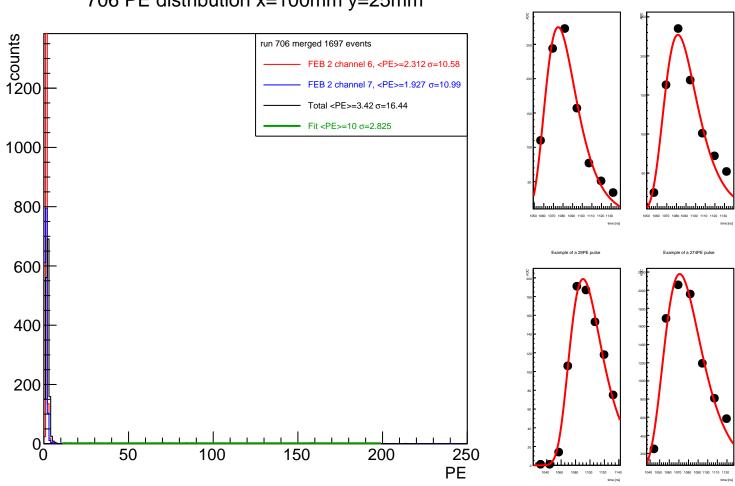


Example of a 30PE pulse

Example of a 25PE pulse

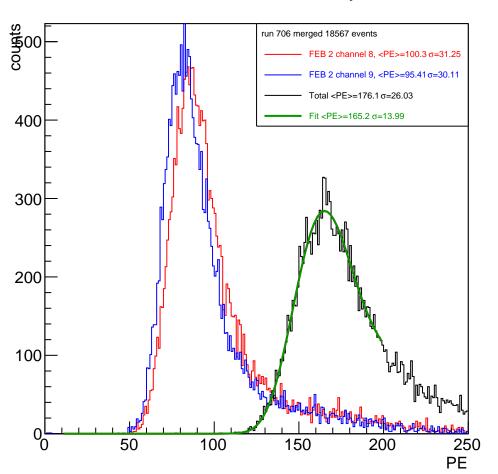


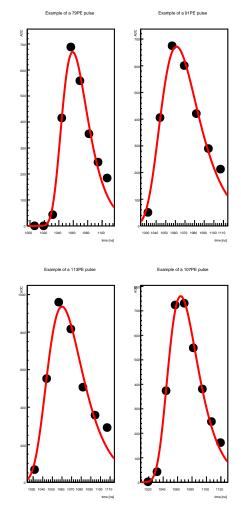


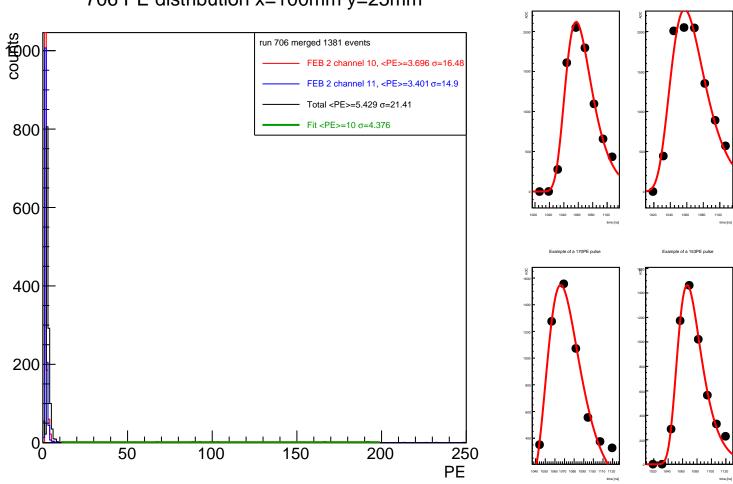


Example of a 253PE pulse

Example of a 299PE pulse

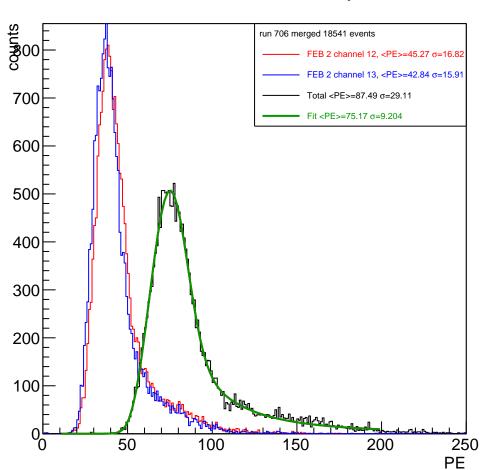

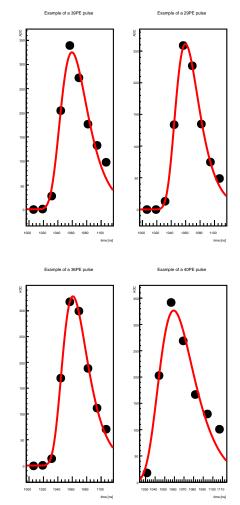

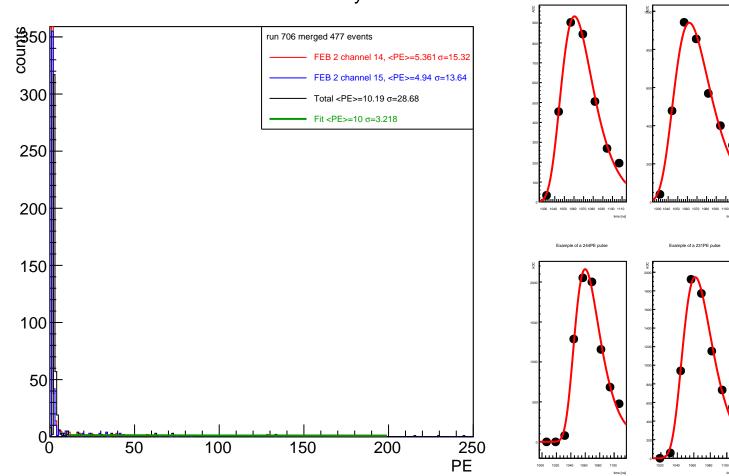

Example of a 100PE pulse

Example of a 117PE pulse