



Example of a 184PE pulse

Example of a 184PE pulse

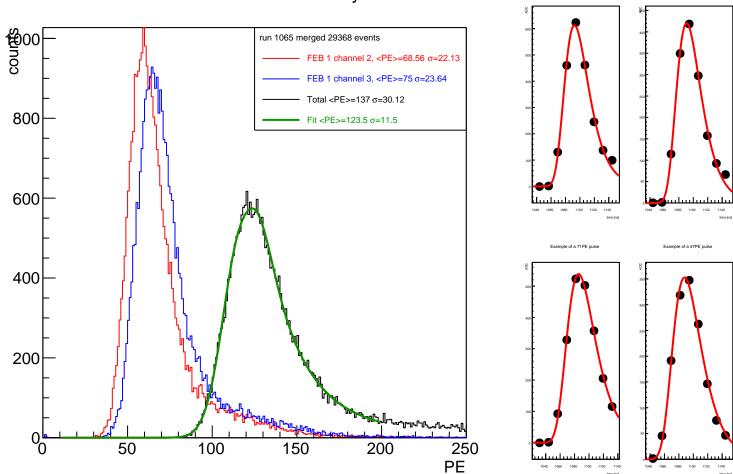


Example of a 69PE pulse

Example of a 48PE pulse

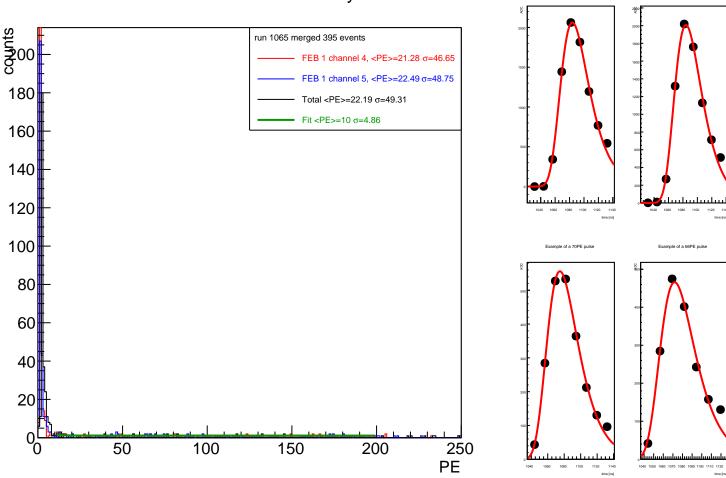


Example of a 271PE pulse


Example of a 251PE pulse

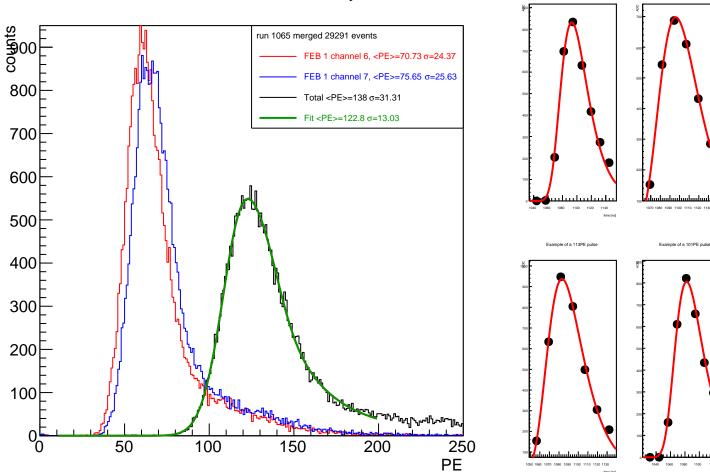


Example of a 102PE pulse

Example of a 94PE pulse

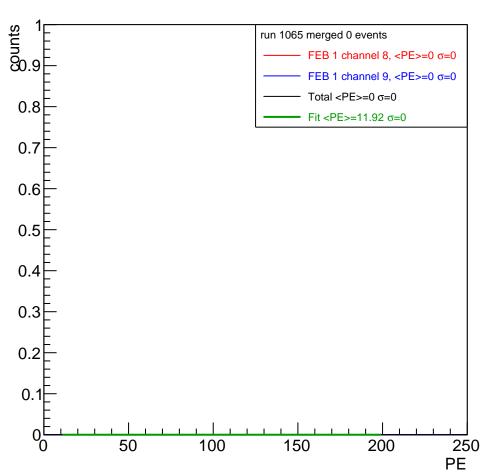


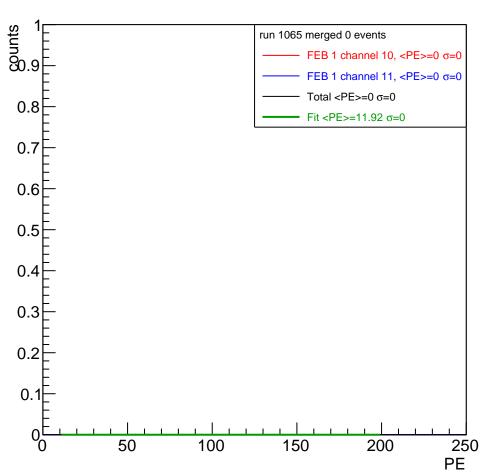


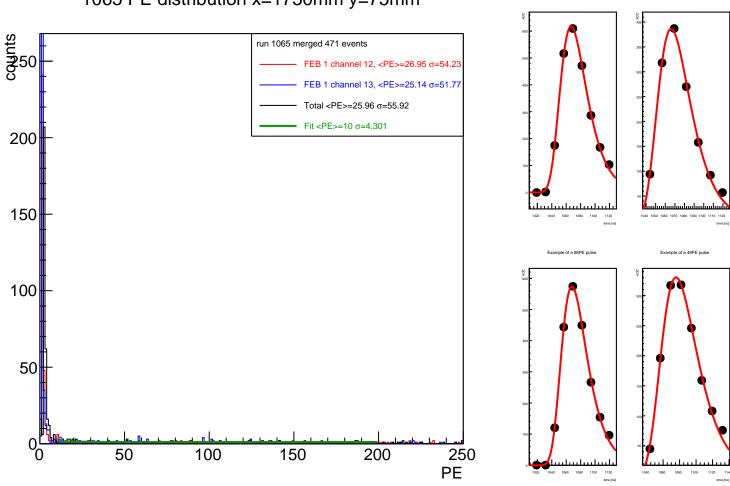


Example of a 75PE pulse

Example of a 43PE pulse

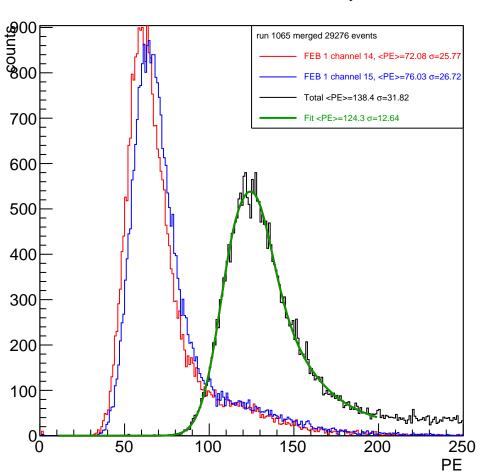


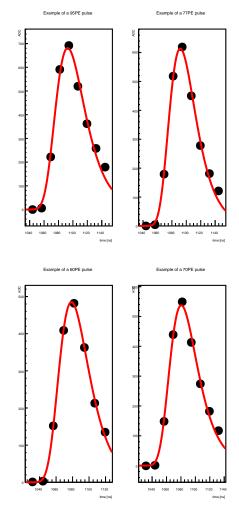

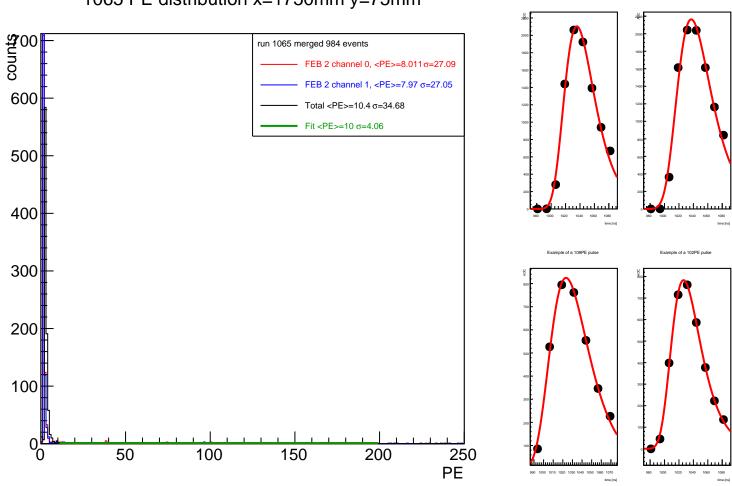


Example of a 290PE pulse

Example of a 325PE pulse

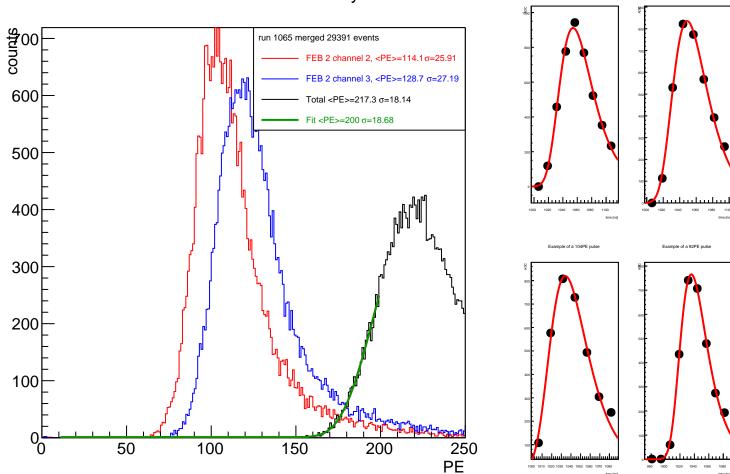


Example of a 136PE pulse

Example of a 113PE pulse

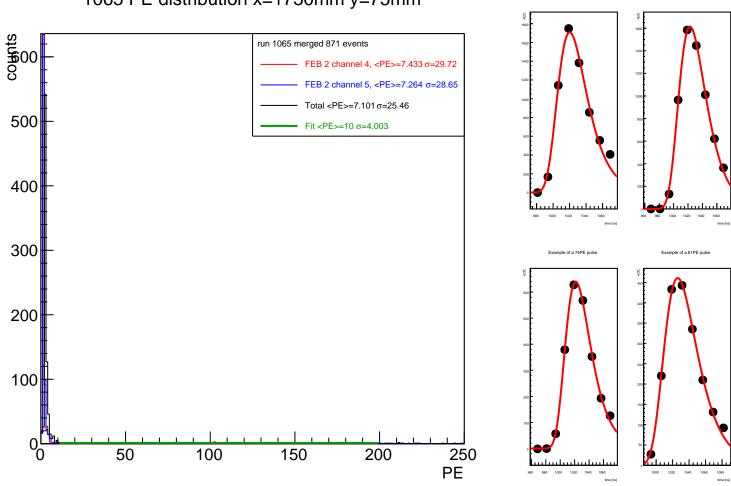

Example of a 200PE pulse


Example of a 201PE pulse

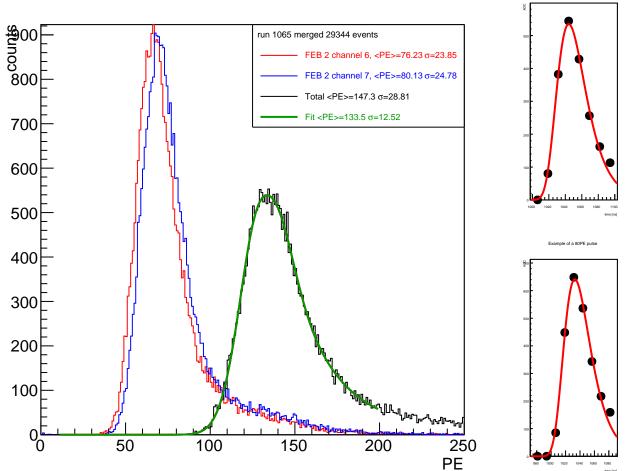

Example of a 64PE pulse


Example of a 62PE pulse


Example of a 60PE pulse

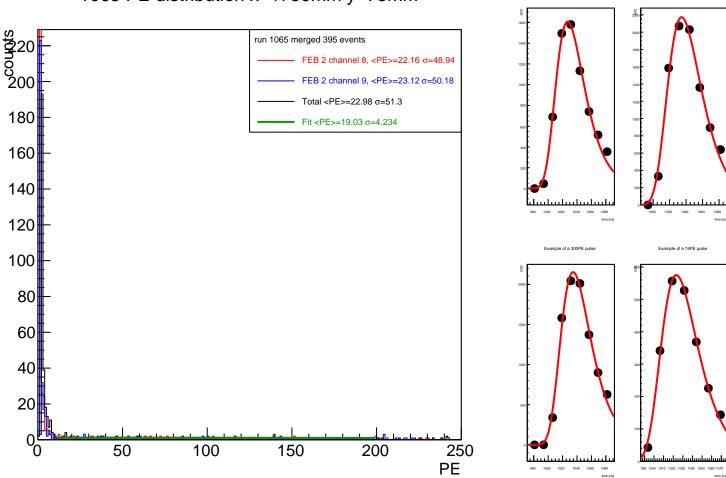


Example of a 213PE pulse

Example of a 295PE pulse

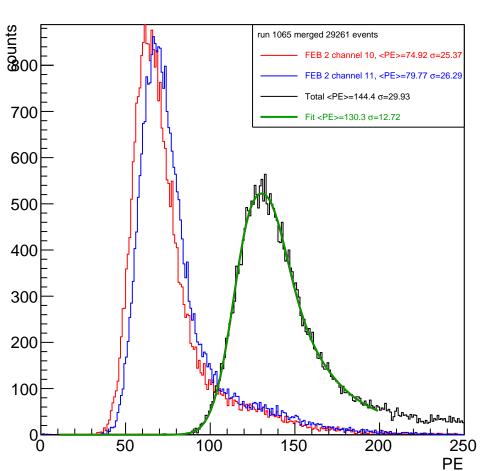


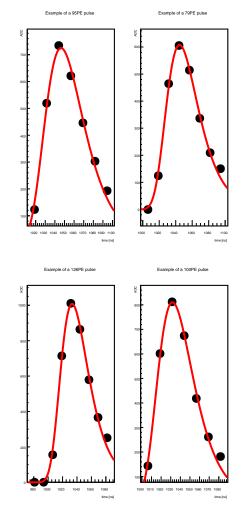

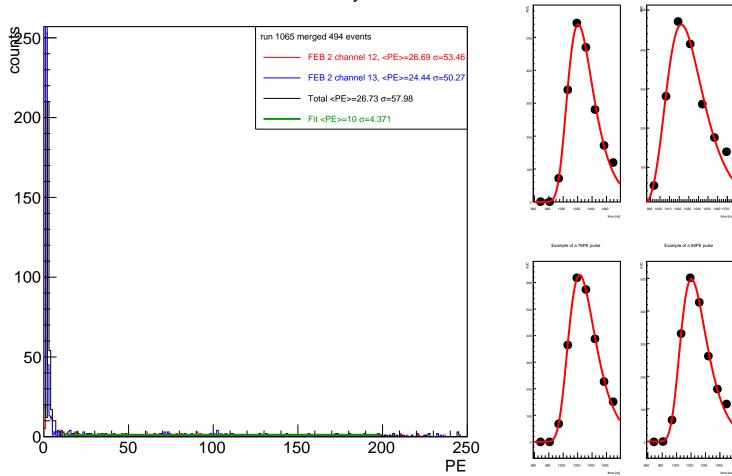

Example of a 63PE pulse

Example of a 57PE pulse

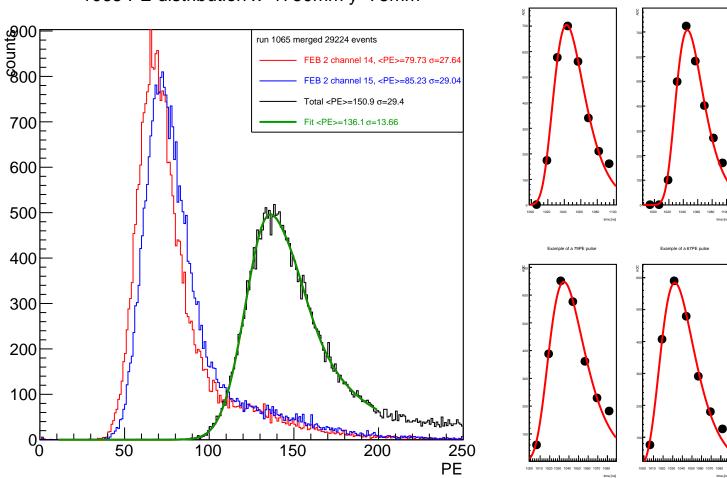

Example of a 87PE pulse

Example of a 87PE pulse