


Example of a 57PE pulse


Example of a 67PE pulse

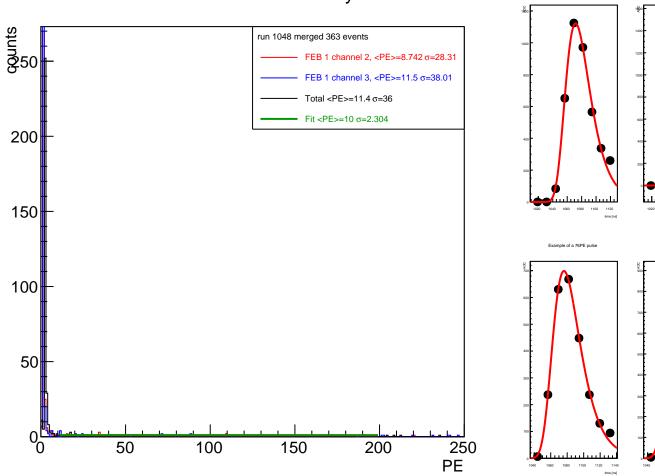



Example of a 125PE pulse

Example of a 161PE pulse

Example of a 93PE pulse

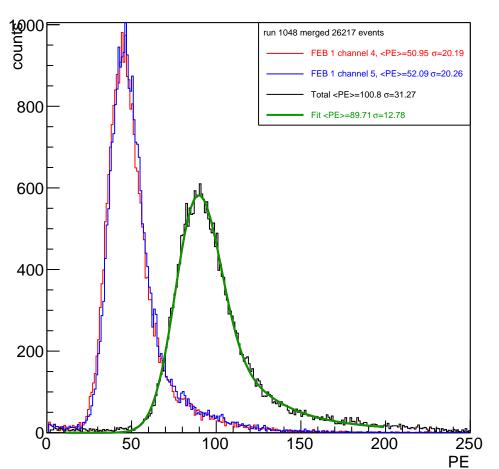


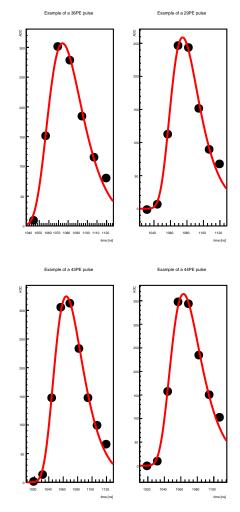


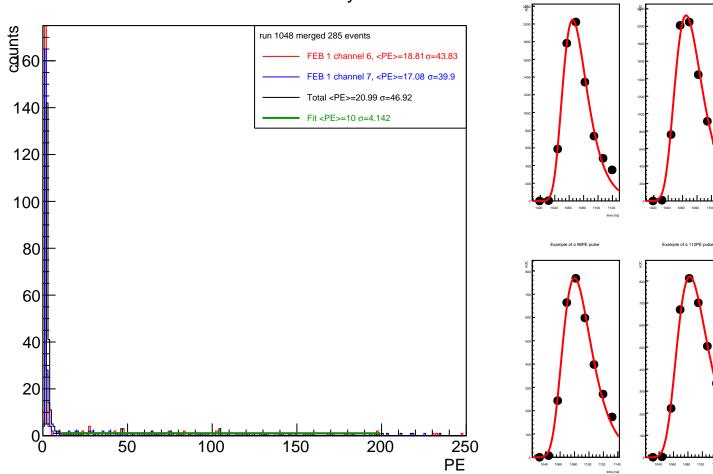



Example of a 221PE pulse


Example of a 256PE pulse

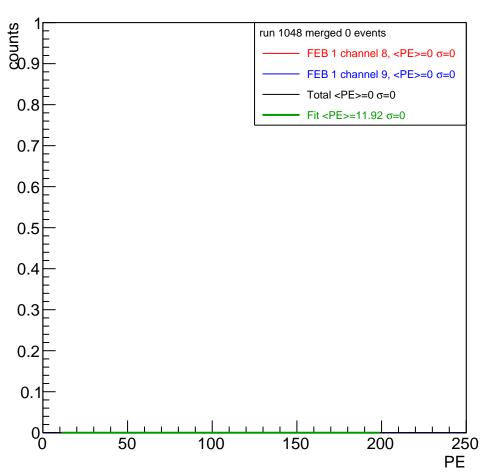

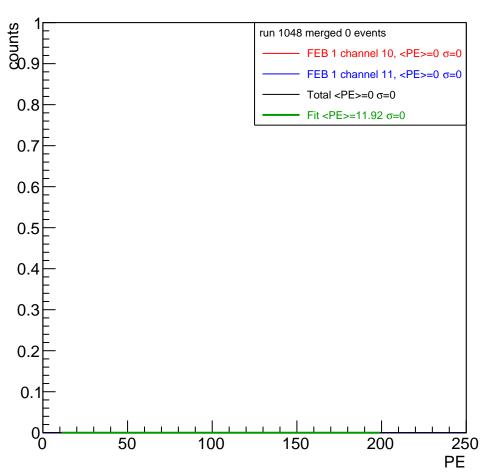

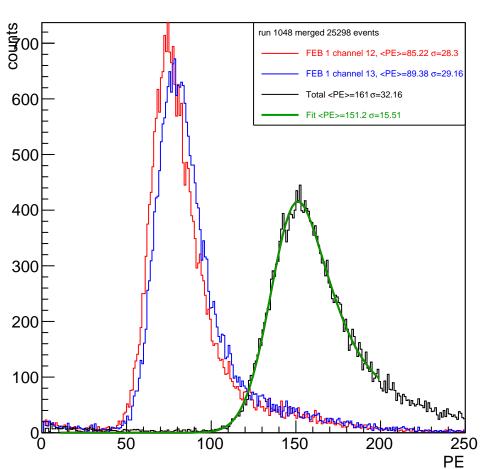


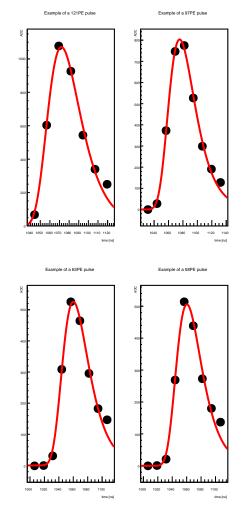

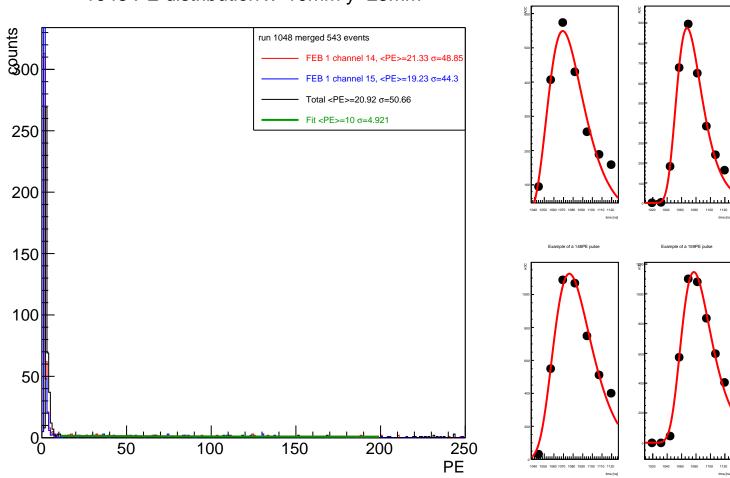


Example of a 67PE pulse

Example of a 102PE pulse

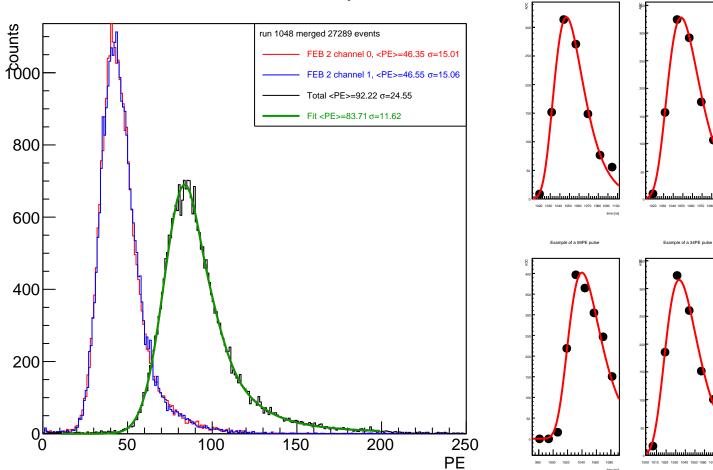


Example of a 32PE pulse

Example of a 35PE pulse

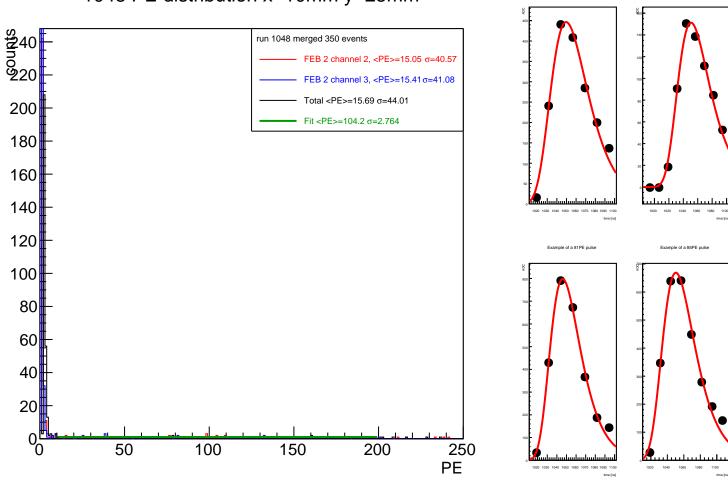


Example of a 56PE pulse

Example of a 22PE pulse

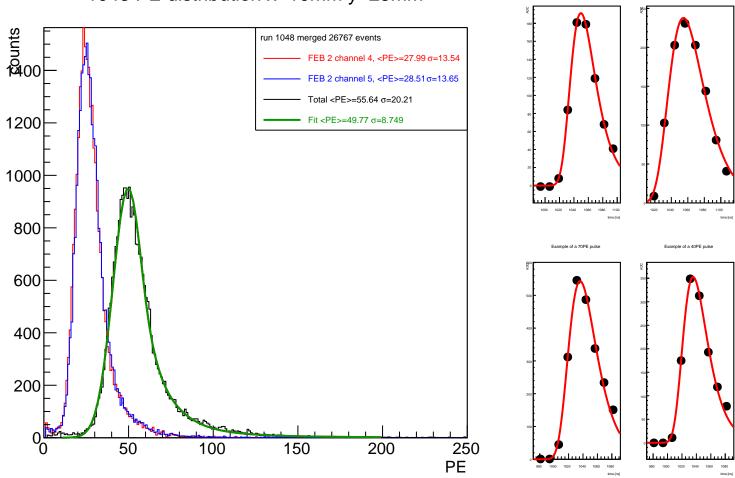


Example of a 22PE pulse

Example of a 34PE pulse

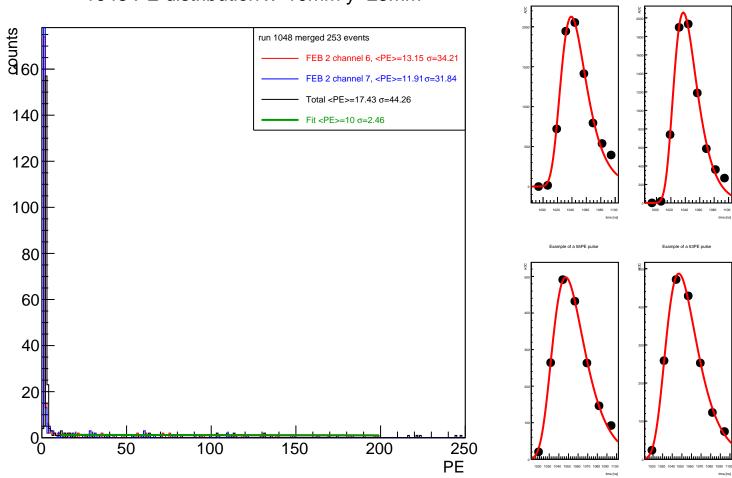


Example of a 249PE pulse


Example of a 223PE pulse

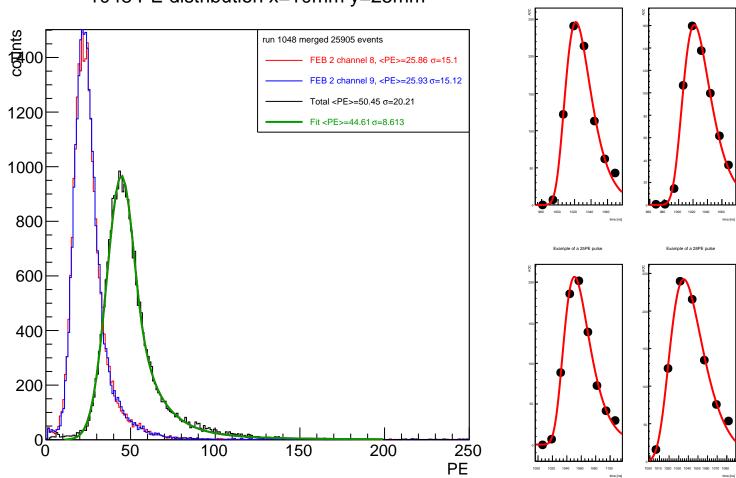

Example of a 25PE pulse


Example of a 20PE pulse

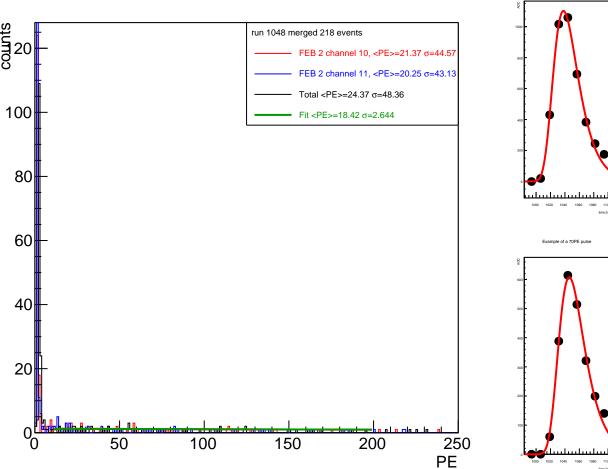

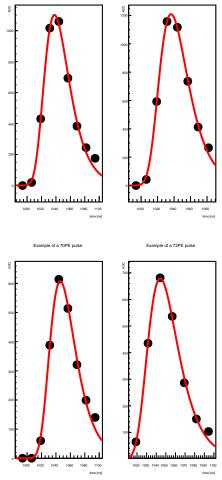


Example of a 142PE pulse

Example of a 124PE pulse

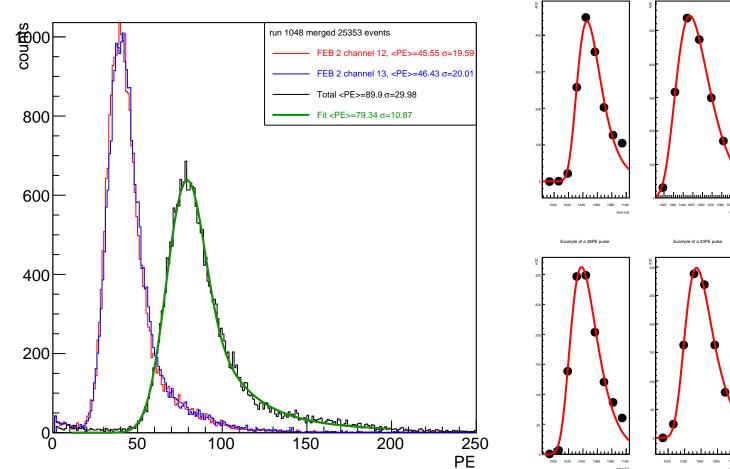

Example of a 47PE pulse

Example of a 61PE pulse

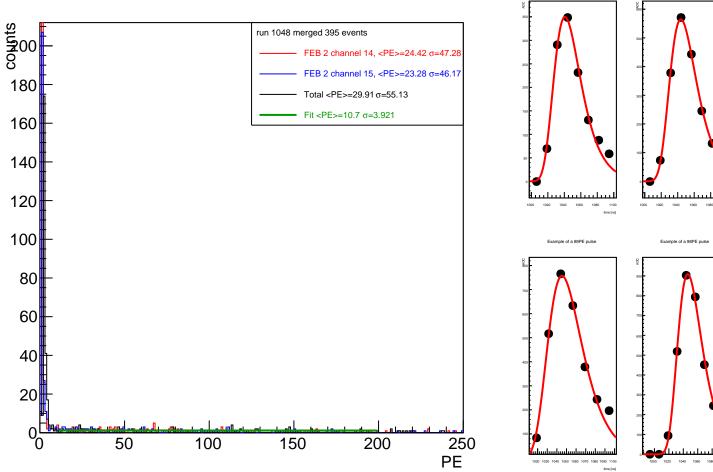

Example of a 37PE pulse

Example of a 59PE pulse