



Example of a 93PE pulse


Example of a 103PE pulse

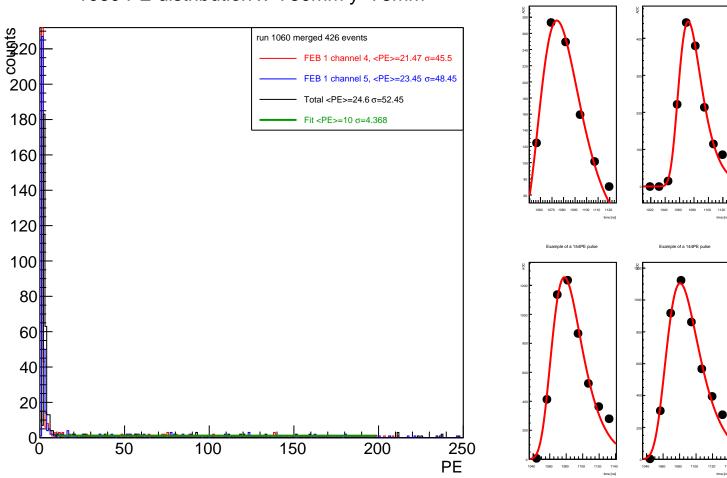



Example of a 32PE pulse


Example of a 47PE pulse

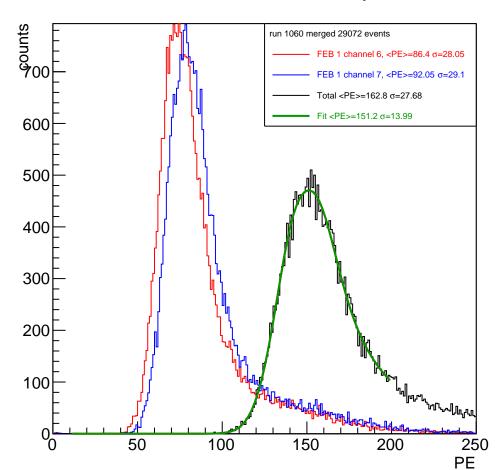


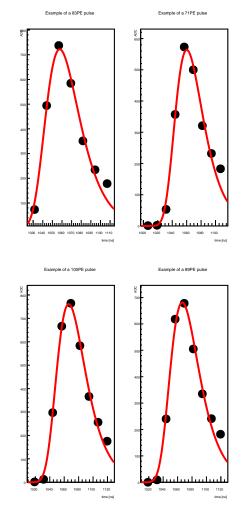


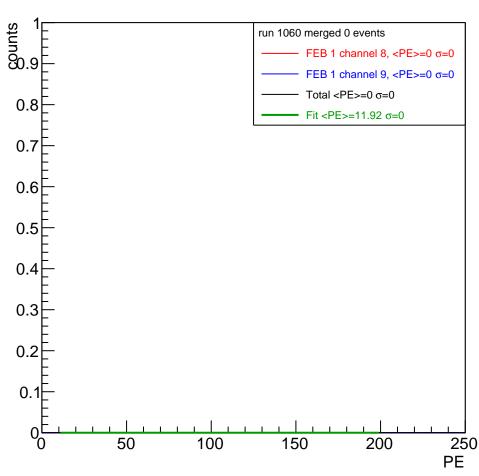


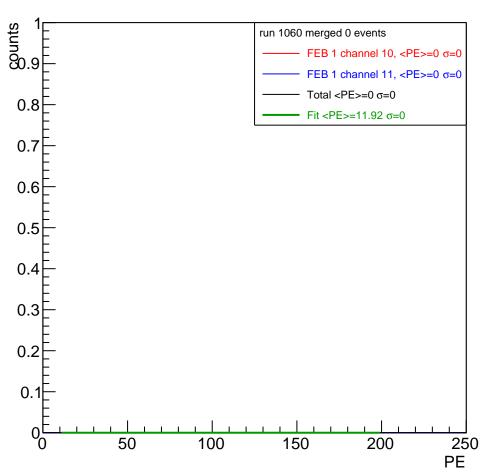


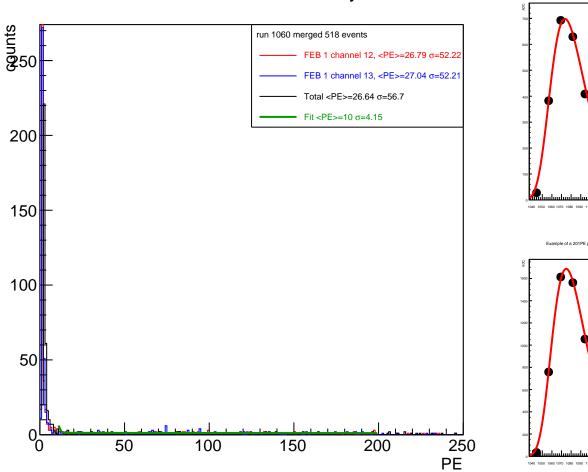

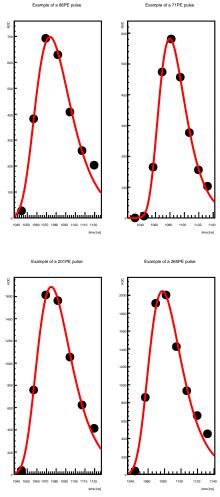

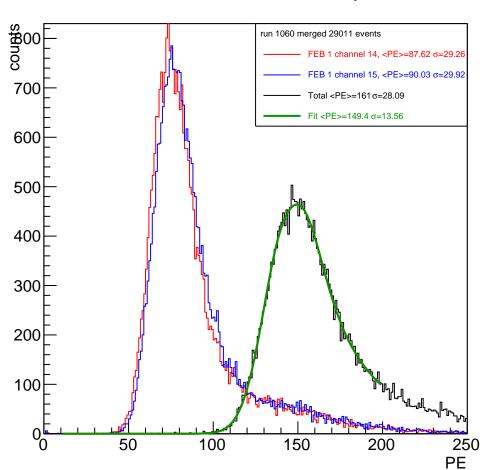


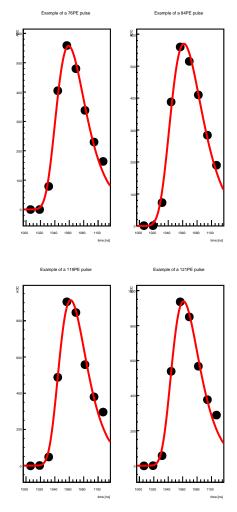


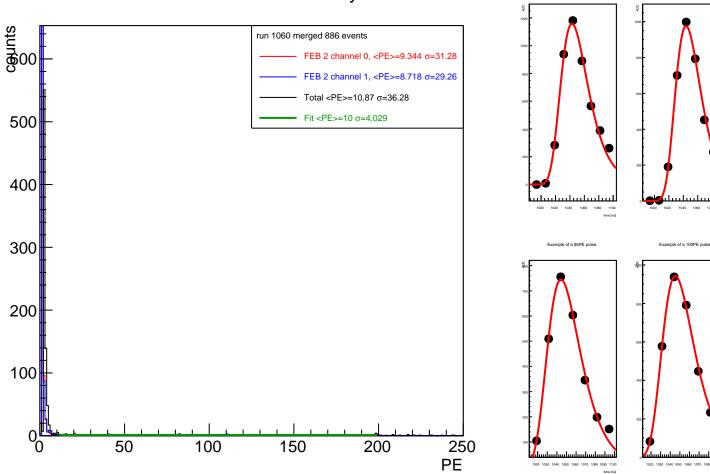

Example of a 145PE pulse


Example of a 112PE pulse

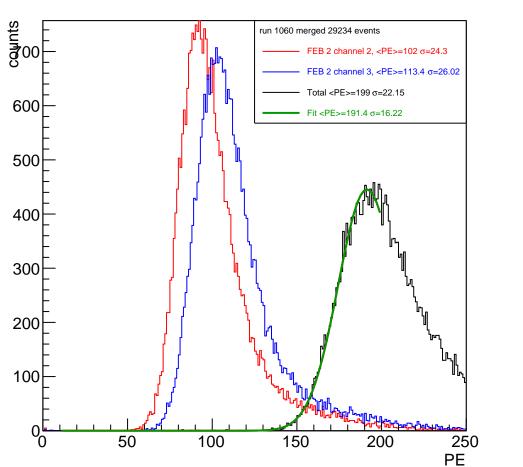


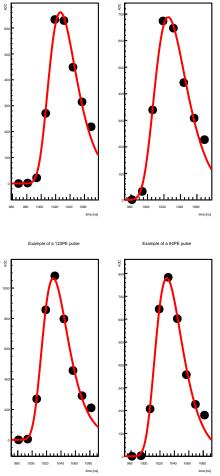



Example of a 86PE pulse


Example of a 82PE pulse

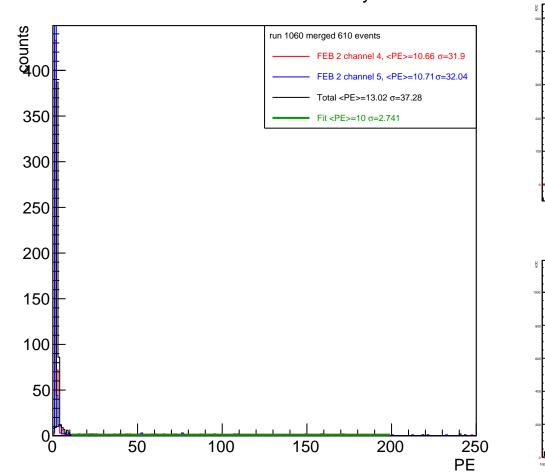

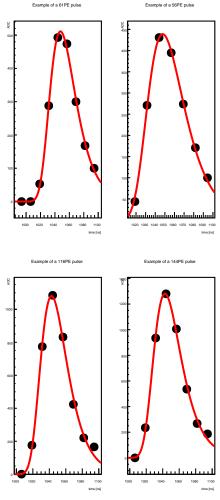

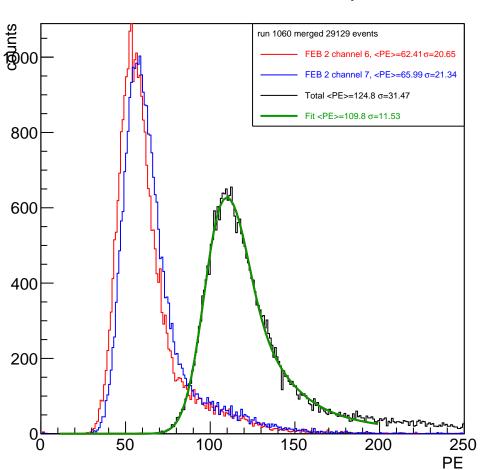


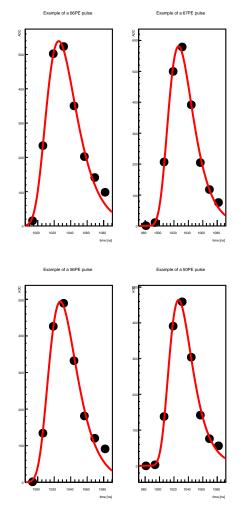


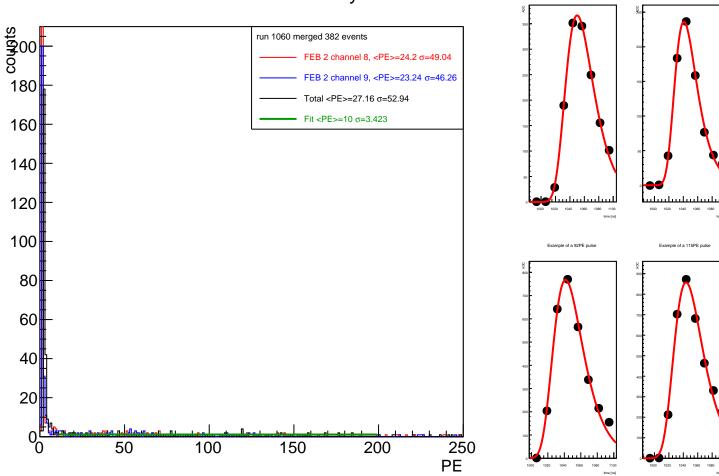


Example of a 48PE pulse

Example of a 24PE pulse

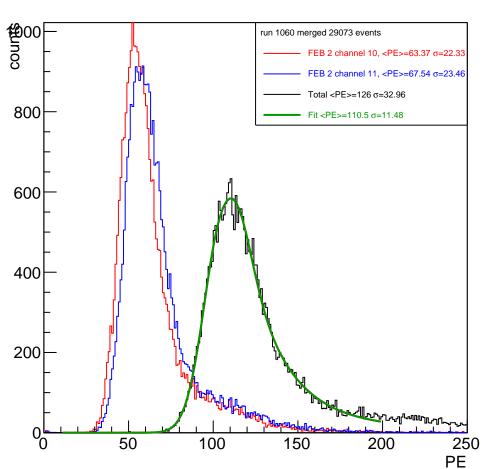

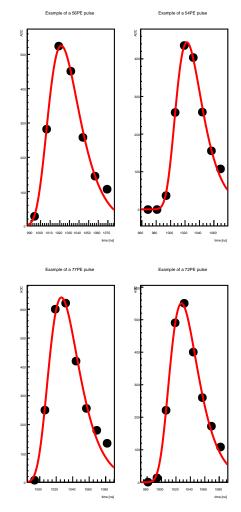

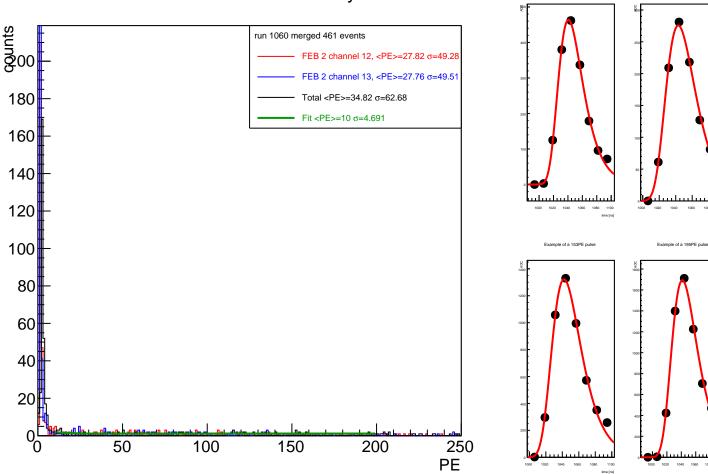

Example of a 52PE pulse

Example of a 32PE pulse

