



Example of a 45PE pulse

Example of a 22PE pulse

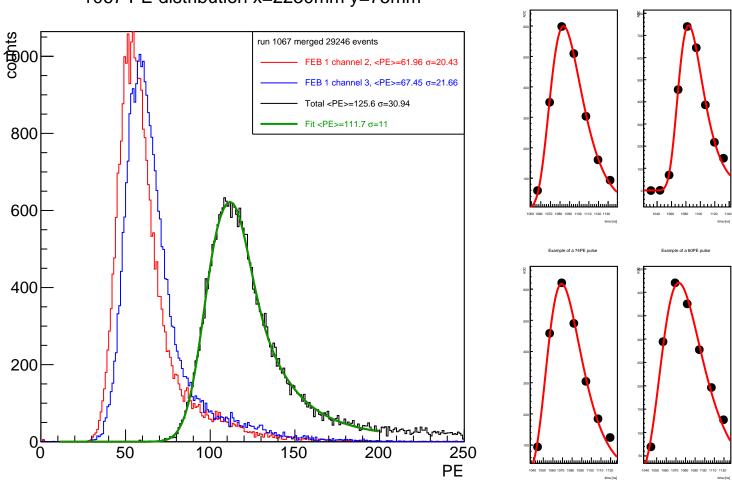


Example of a 67PE pulse


Example of a 86PE pulse

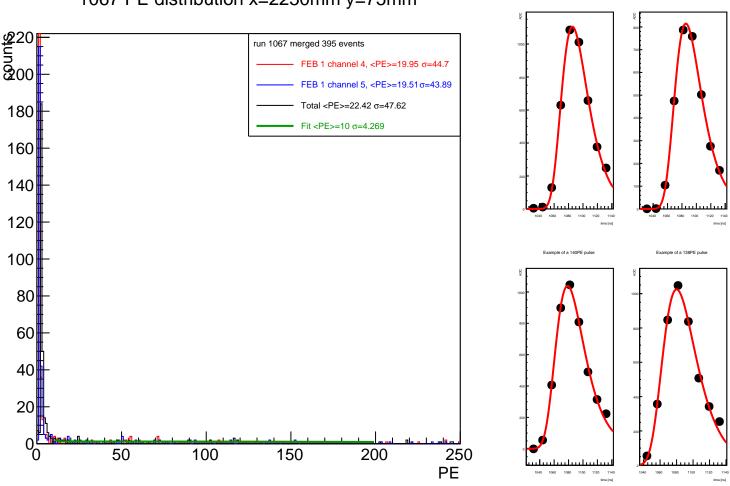



Example of a 137PE pulse


Example of a 101PE pulse

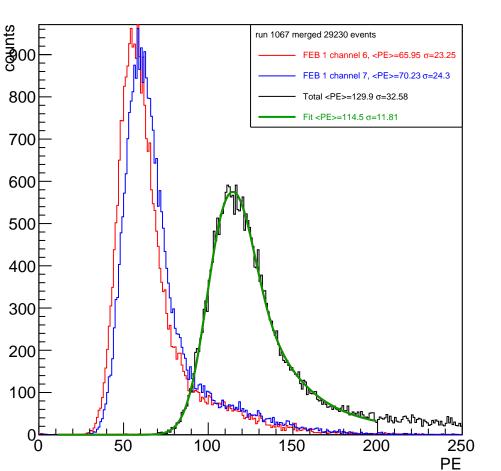


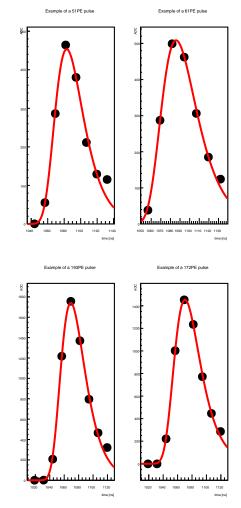

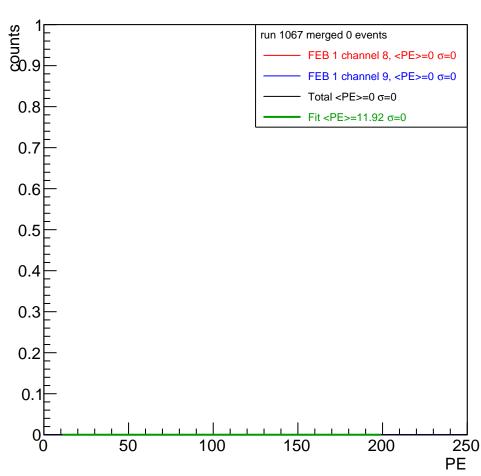

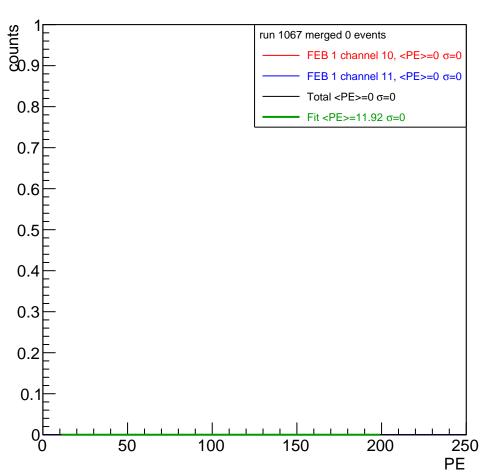


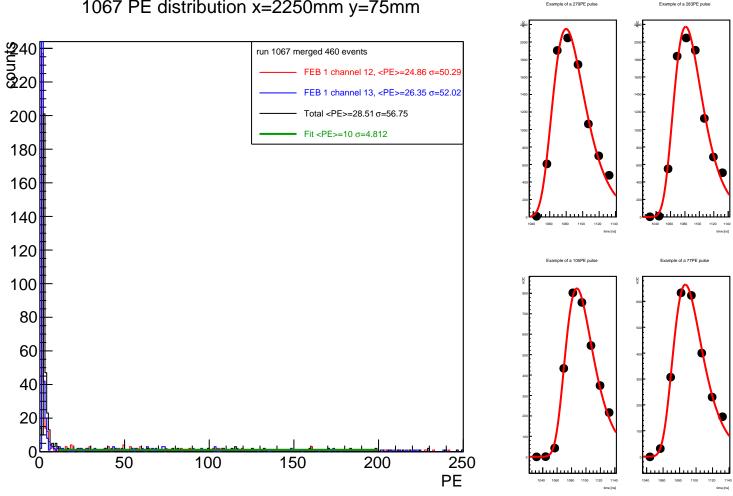

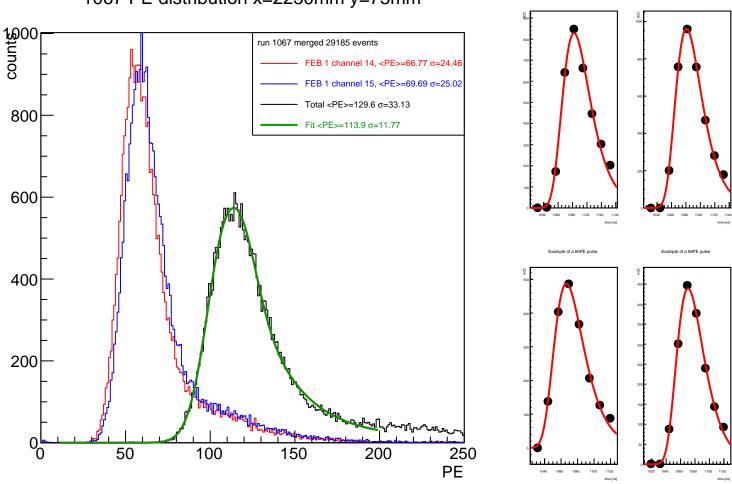


Example of a 110PE pulse

Example of a 119PE pulse

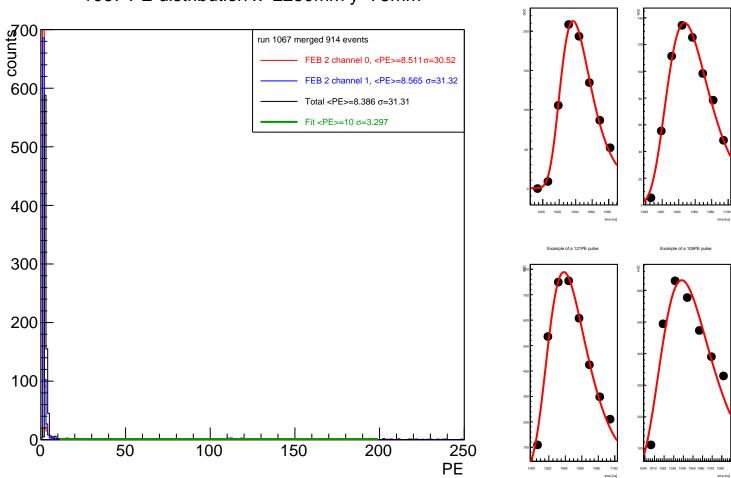


Example of a 26PE pulse

Example of a 22PE pulse

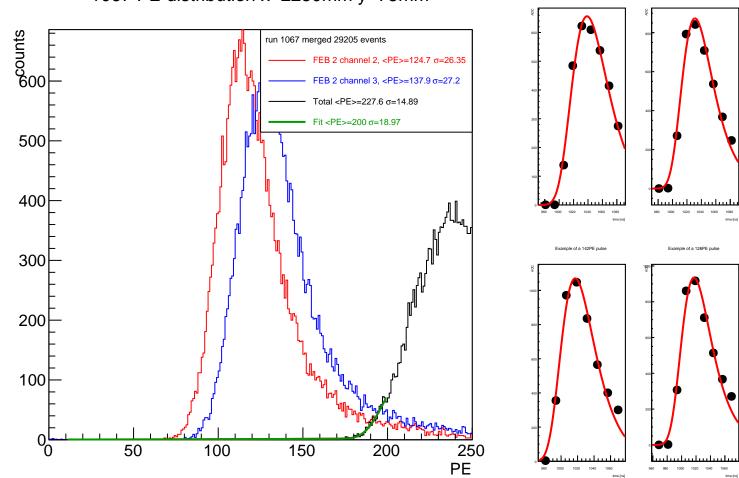


Example of a 108PE pulse

Example of a 122PE pulse

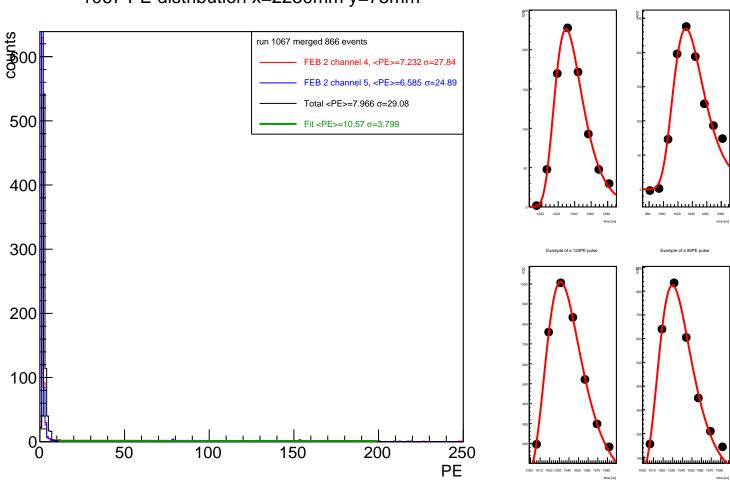


Example of a 25PE pulse

Example of a 33PE pulse

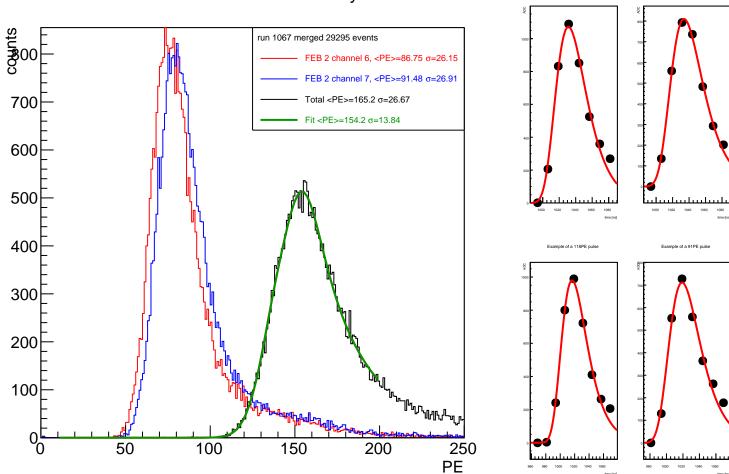


Example of a 136PE pulse

Example of a 107PE pulse

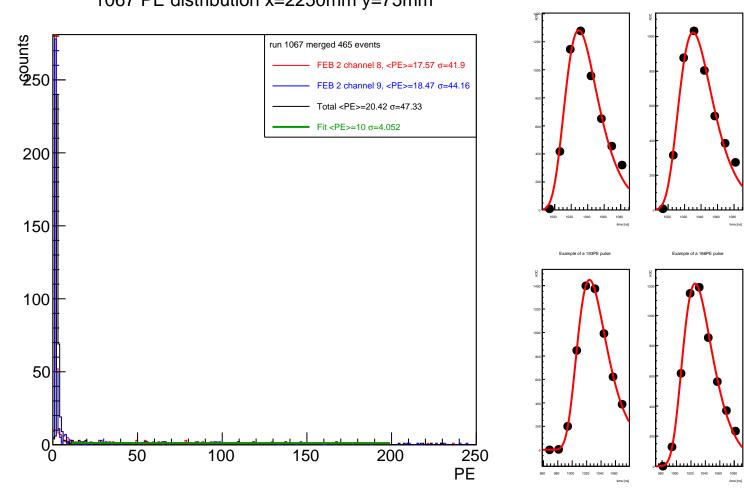


Example of a 168PE pulse

Example of a 140PE pulse

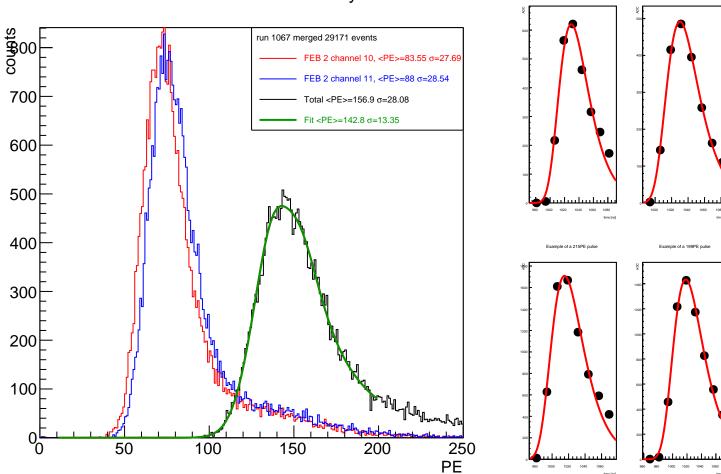

Example of a 83PE pulse

Example of a 64PE pulse

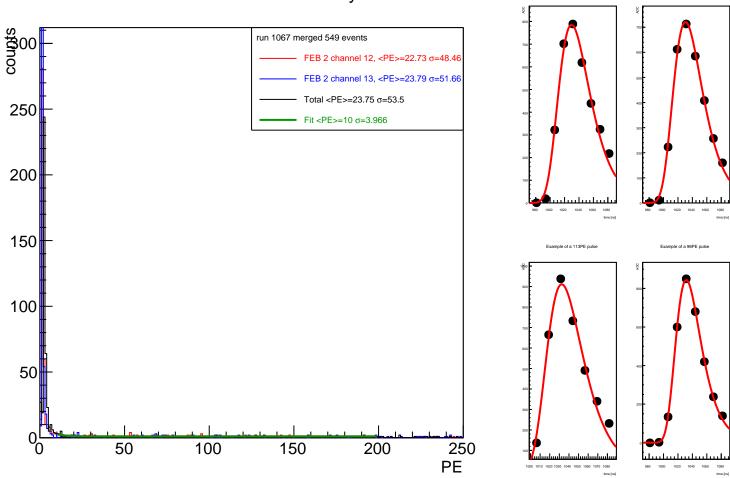

Example of a 112PE pulse

Example of a 95PE pulse

