



Example of a 38PE pulse

Example of a 28PE pulse

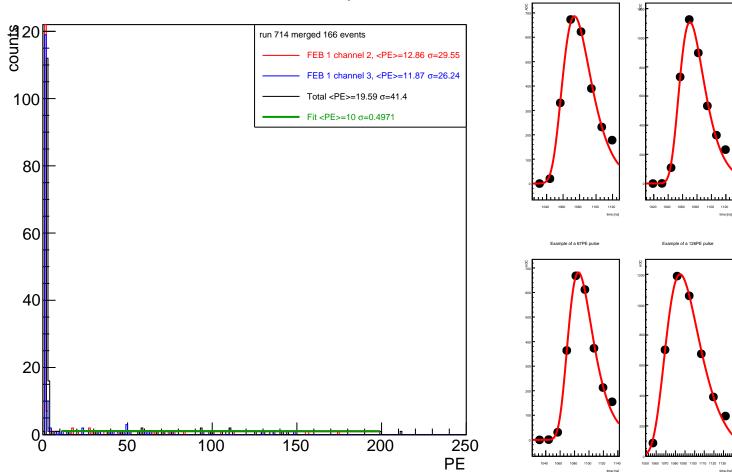


Example of a 68PE pulse

Example of a 112PE pulse

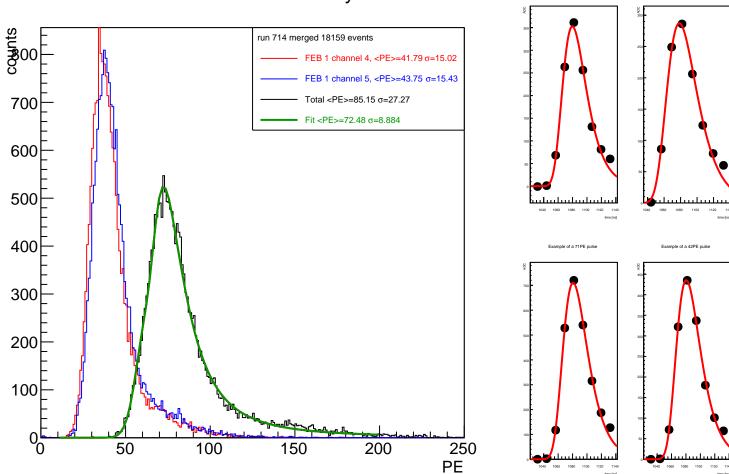


Example of a 34PE pulse

Example of a 31PE pulse

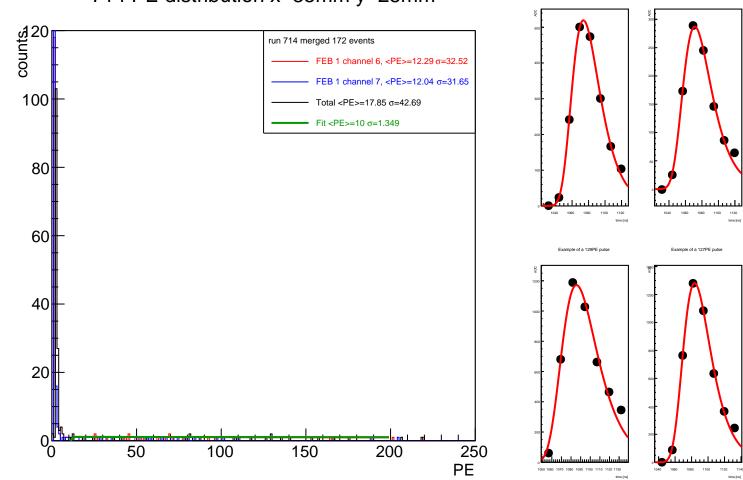


Example of a 52PE pulse


Example of a 29PE pulse

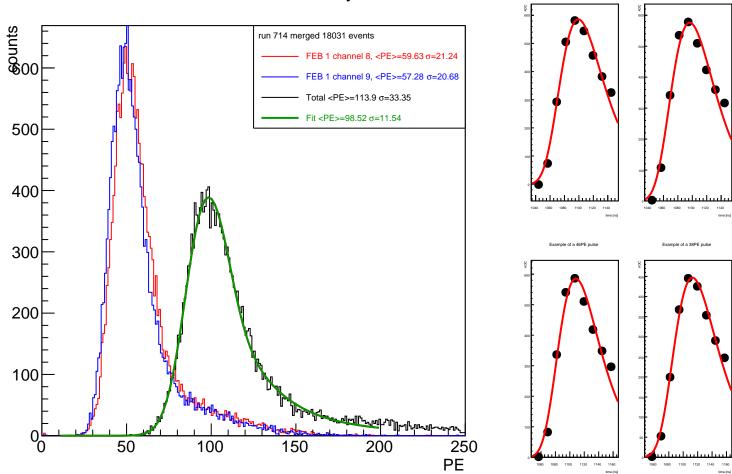

Example of a 48PE pulse


Example of a 49PE pulse

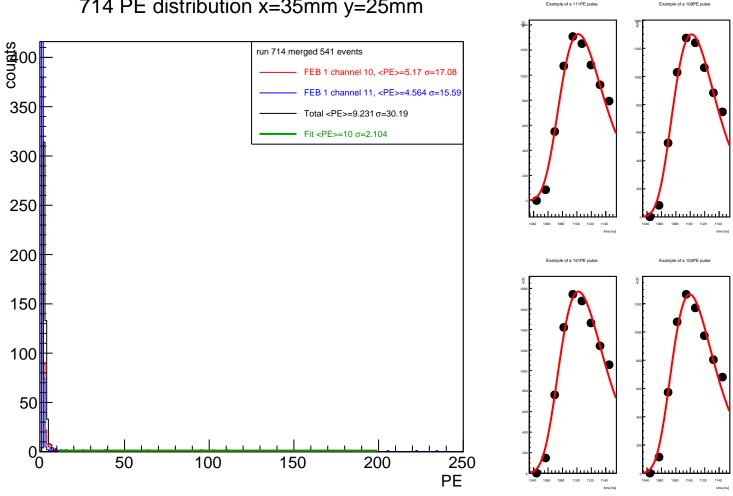


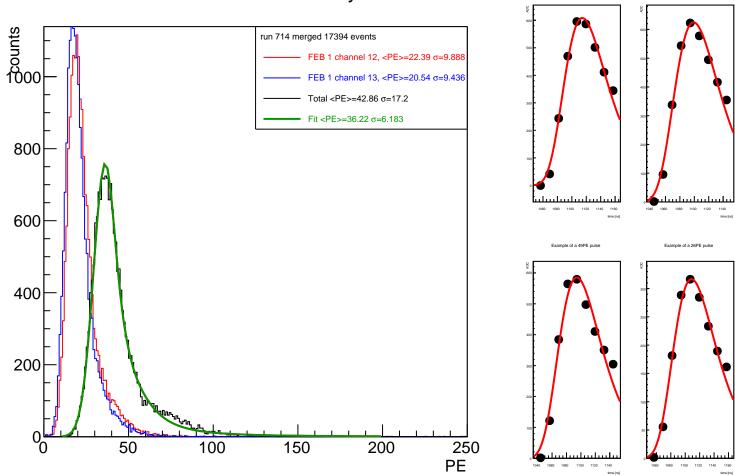

Example of a 50PE pulse

Example of a 53PE pulse

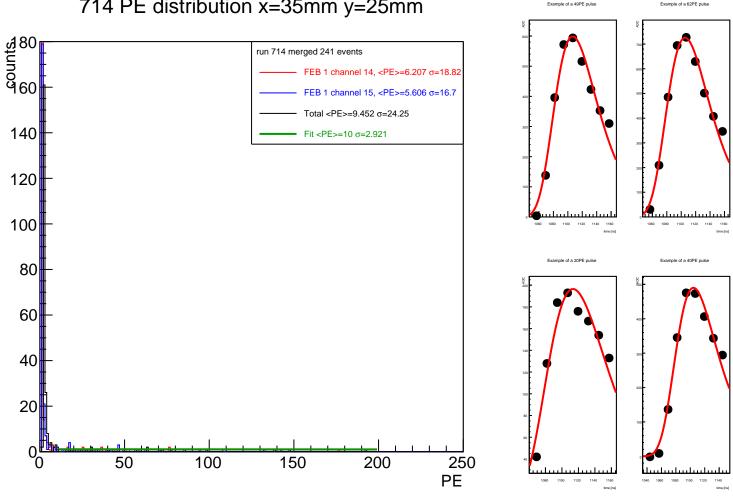


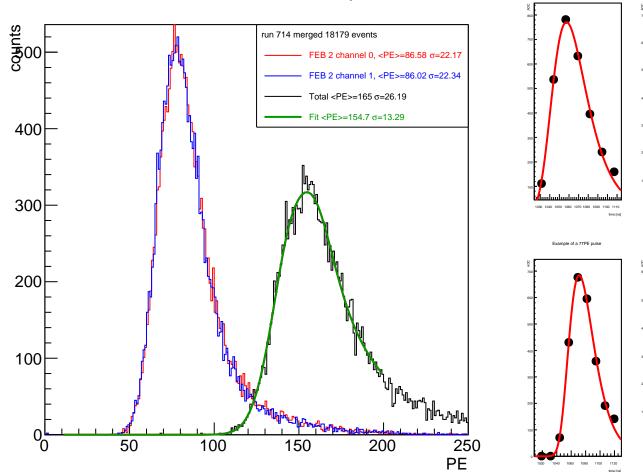

Example of a 89PE pulse


Example of a 84PE pulse

Example of a 68PE pulse

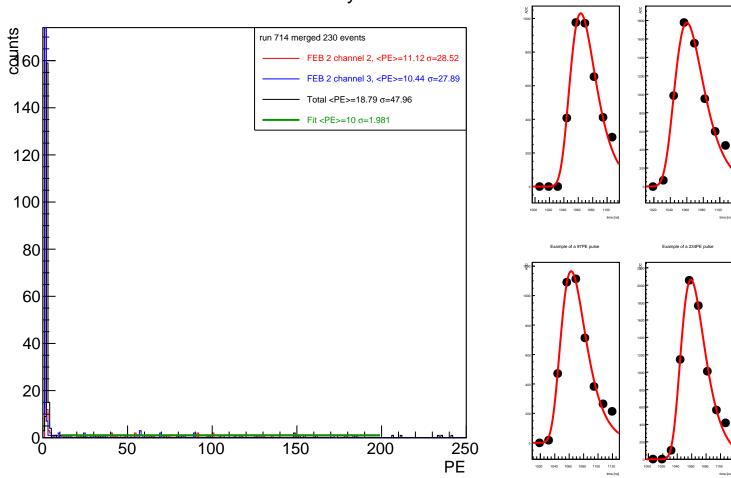


Example of a 88PE pulse

Example of a 213PE pulse

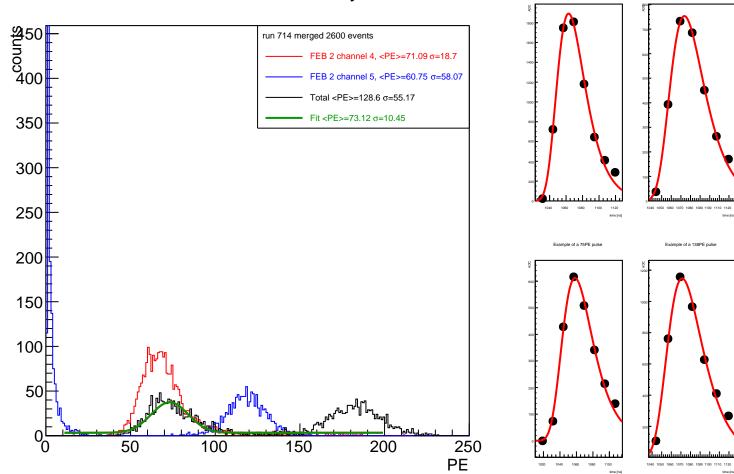


Example of a 213PE pulse

Example of a 88PE pulse

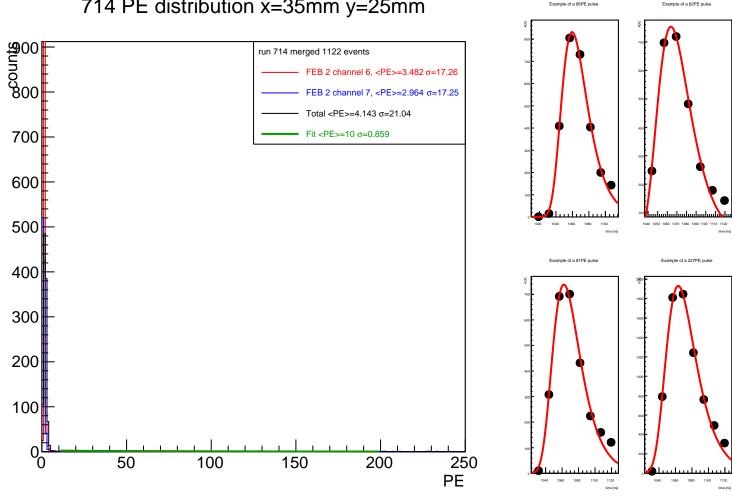


714 PE distribution x=35mm y=25mm

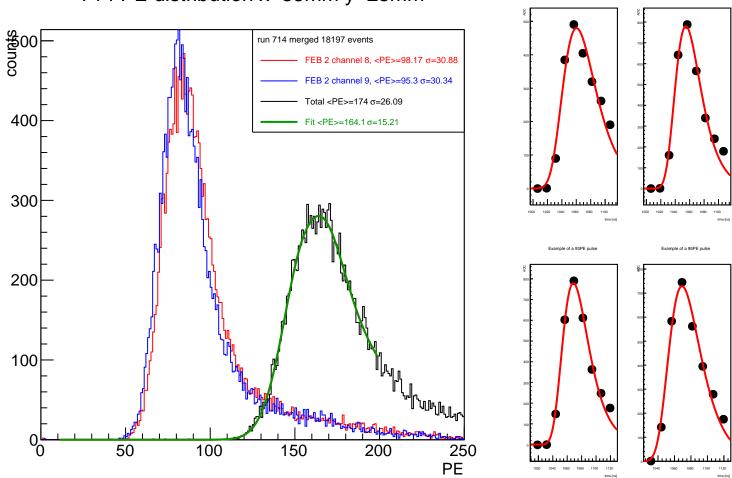


Example of a 73PE pulse

Example of a 93PE pulse

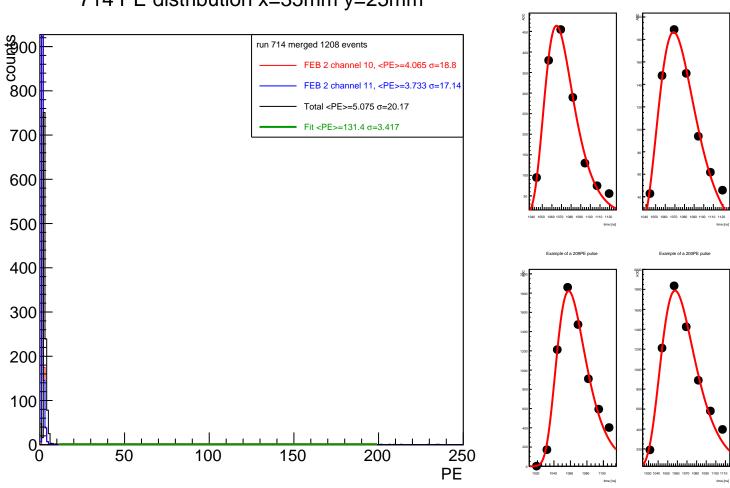


Example of a 45PE pulse

Example of a 23PE pulse

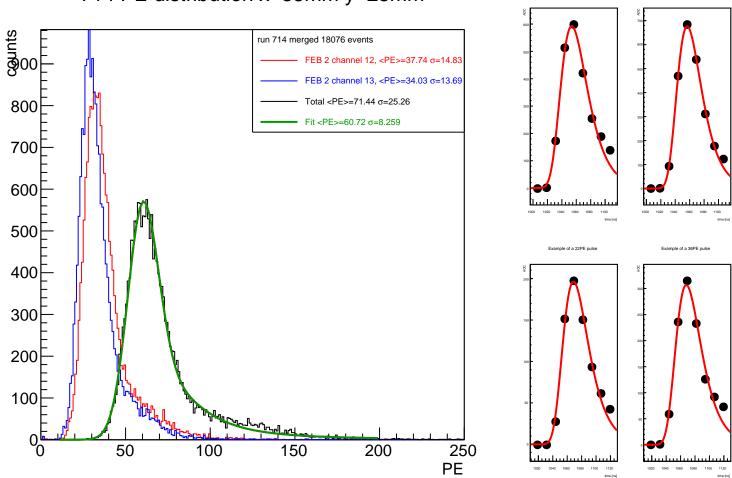

Example of a 70PE pulse

Example of a 76PE pulse

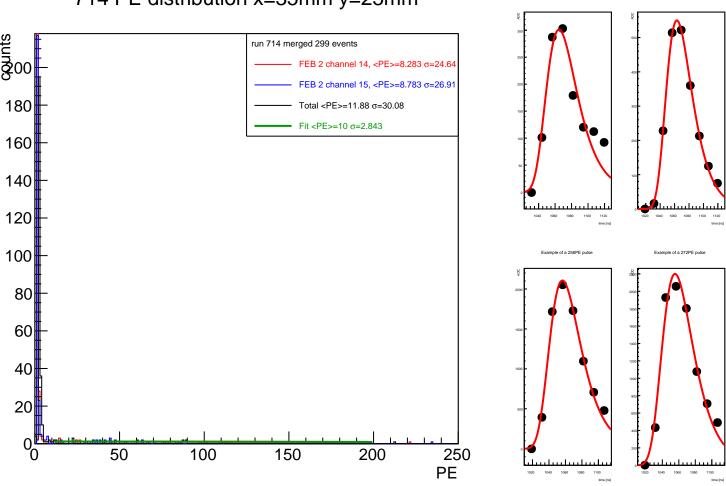

Example of a 36PE pulse

Example of a 65PE pulse