



Example of a 76PE pulse


Example of a 91PE pulse

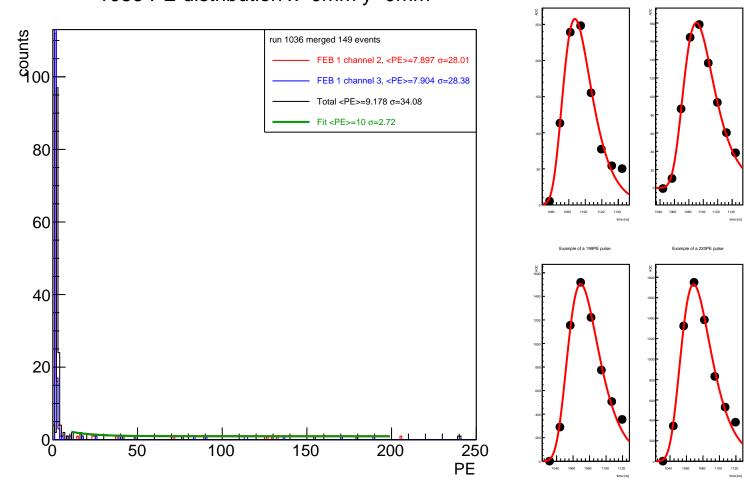


Example of a 31PE pulse

Example of a 26PE pulse

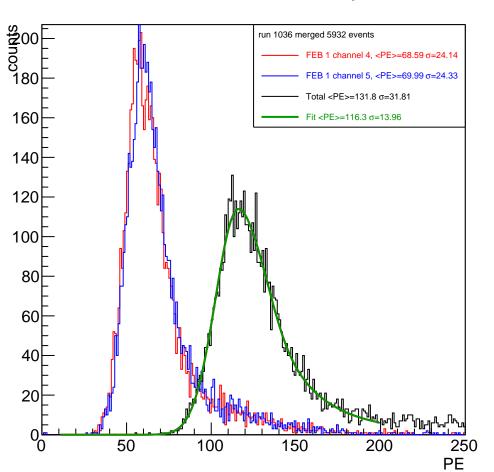


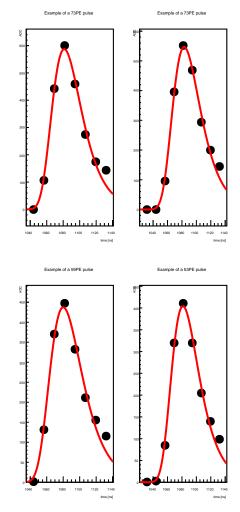


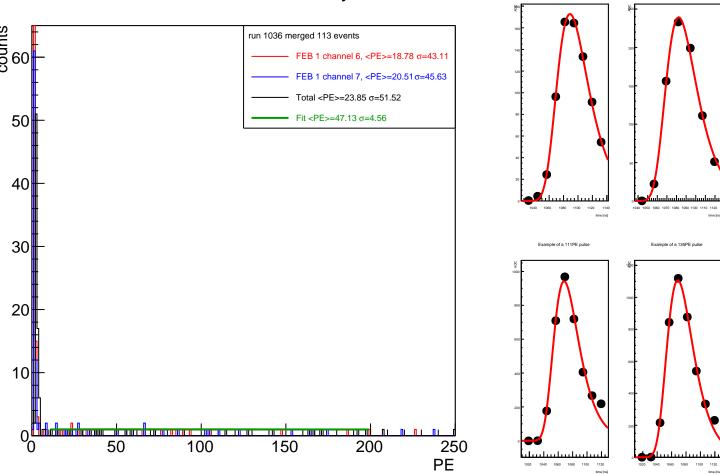



Example of a 25PE pulse


Example of a 26PE pulse

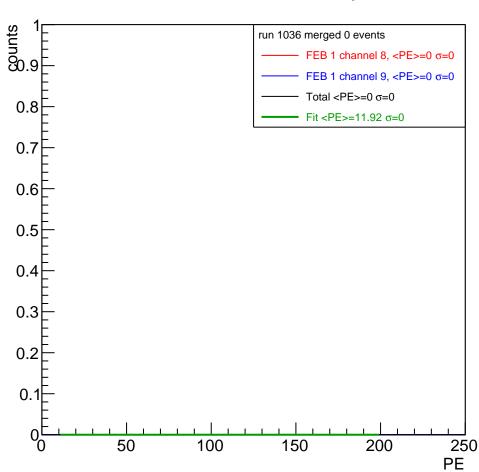


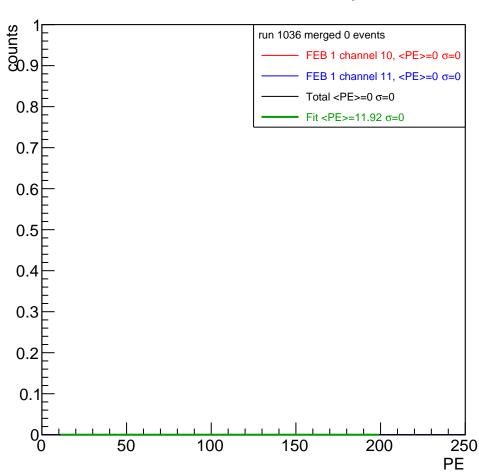


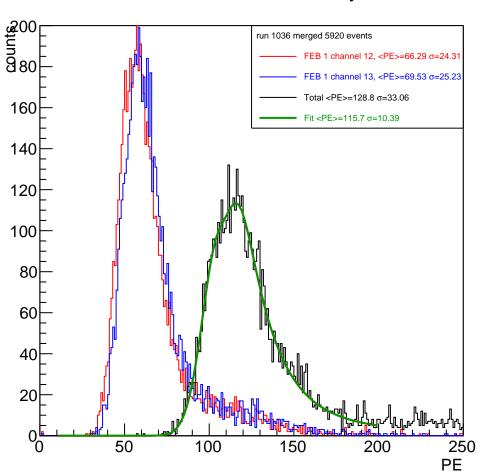


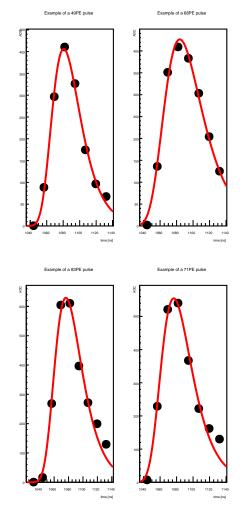


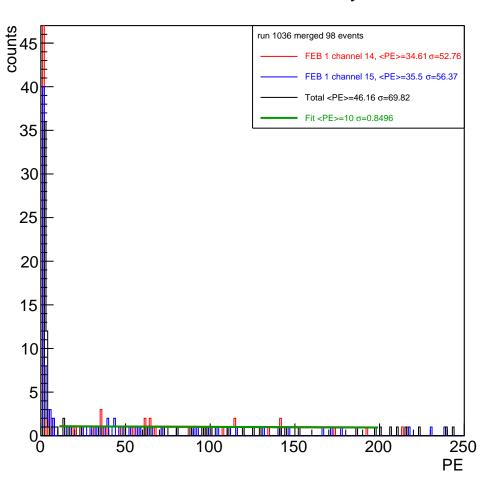

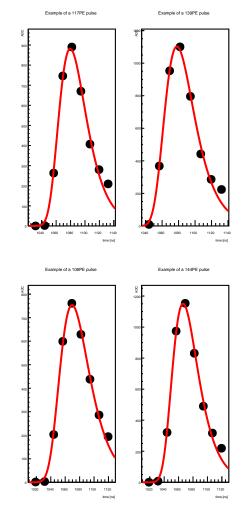

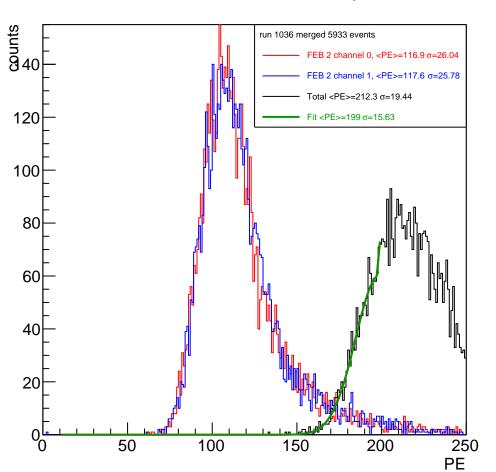


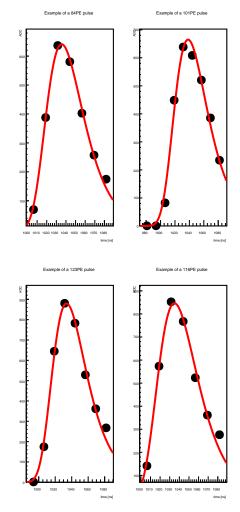


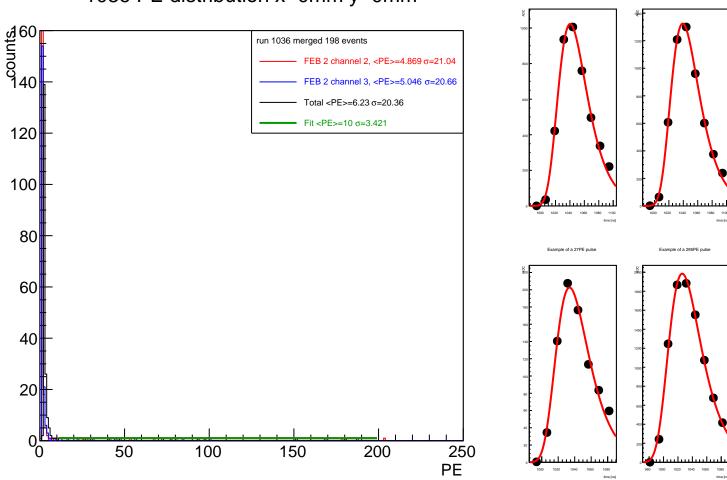


Example of a 136PE pulse

Example of a 173PE pulse

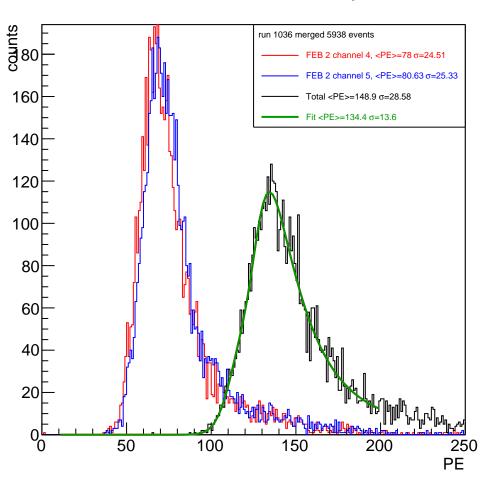


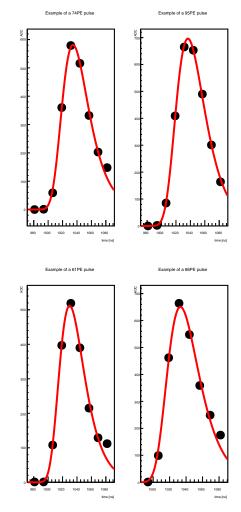


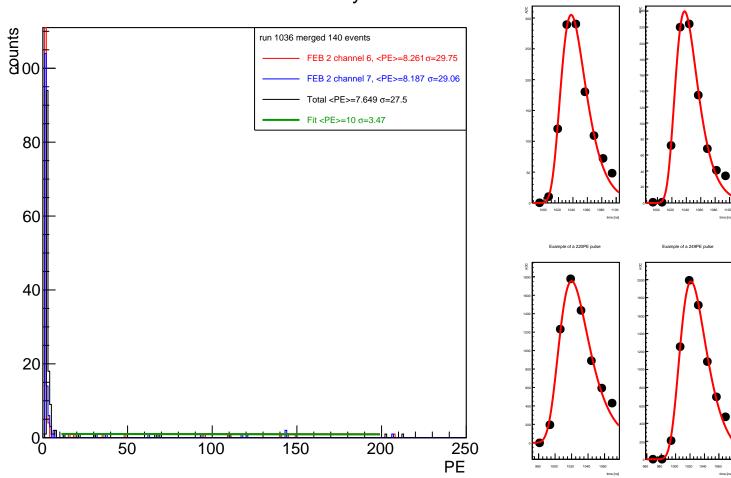


Example of a 37PE pulse

Example of a 25PE pulse

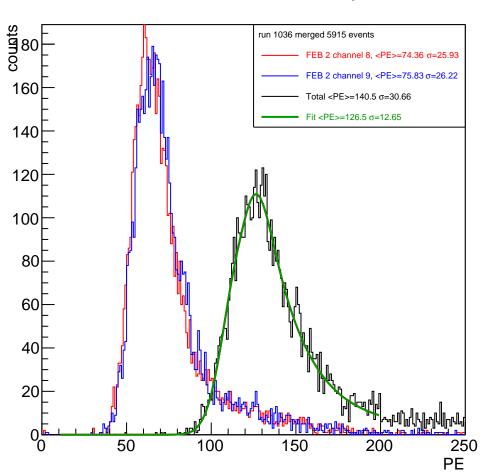


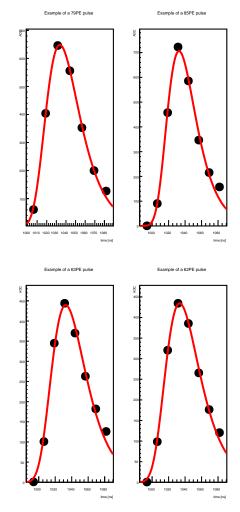


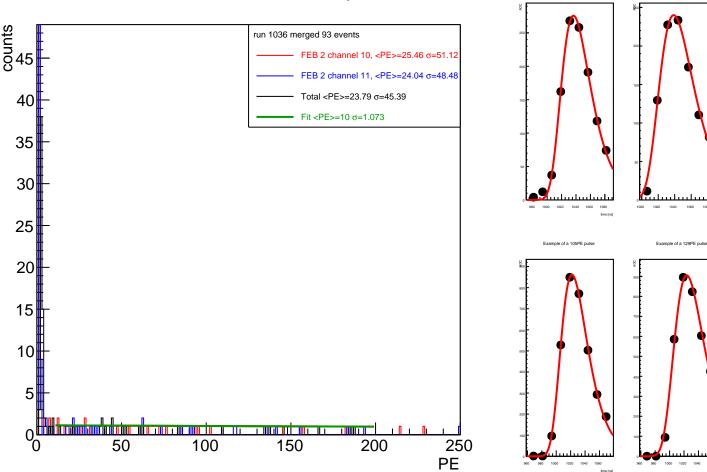


Example of a 37PE pulse

Example of a 34PE pulse

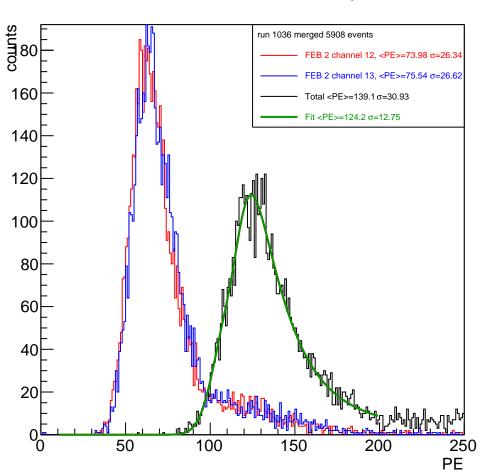

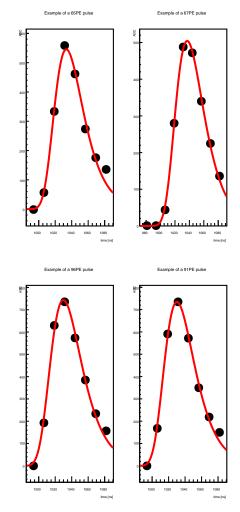

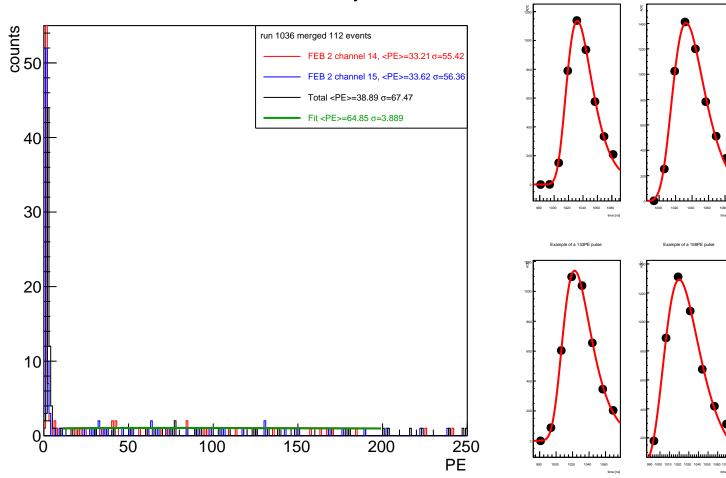

Example of a 135PE pulse

Example of a 182PE pulse