




Example of a 65PE pulse


Example of a 58PE pulse

Example of a 63PE pulse

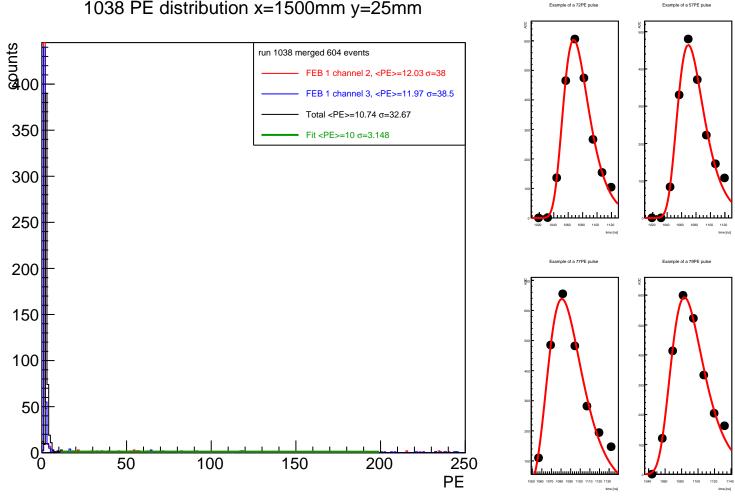

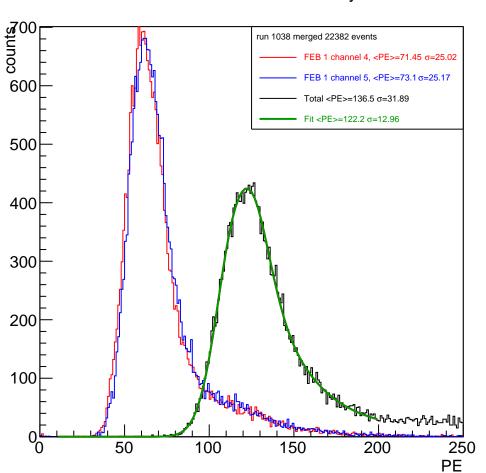


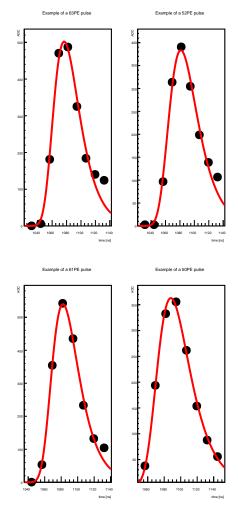


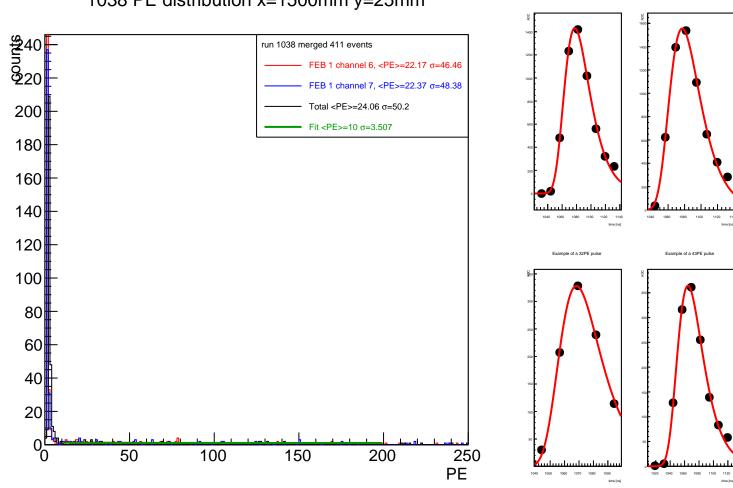



Example of a 172PE pulse


Example of a 195PE pulse

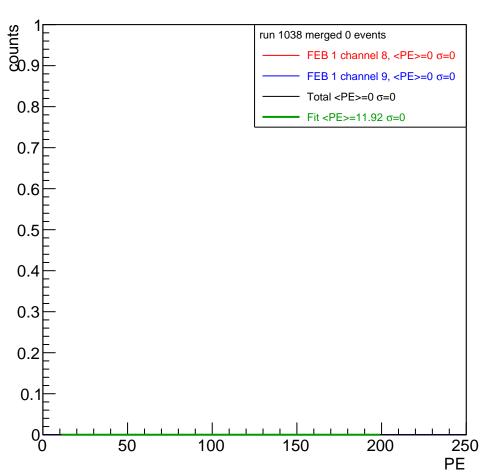

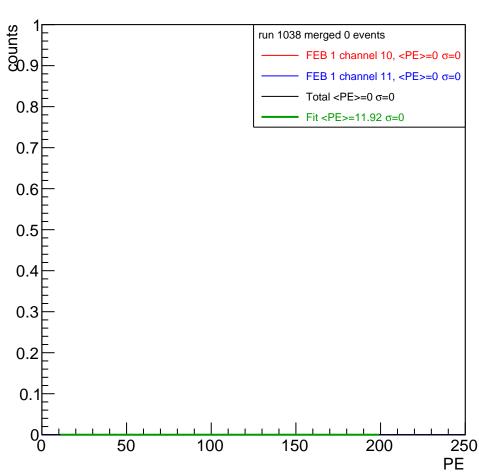

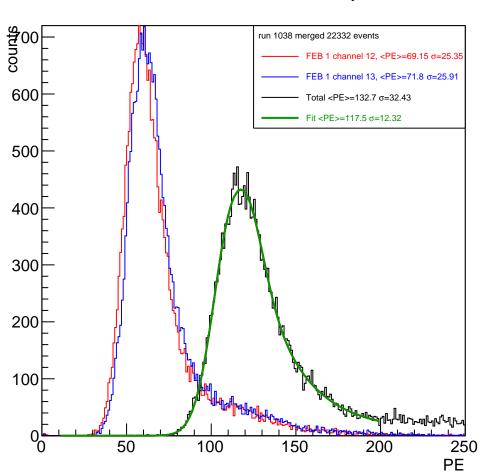


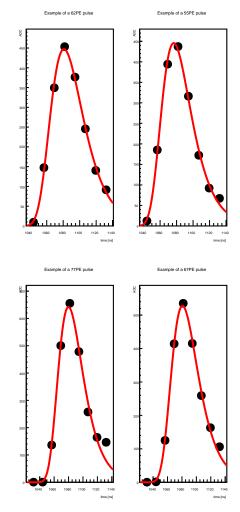


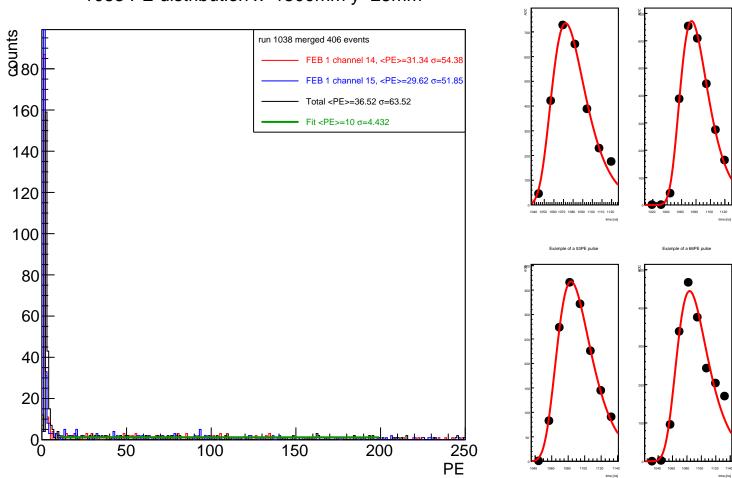


Example of a 91PE pulse

Example of a 90PE pulse

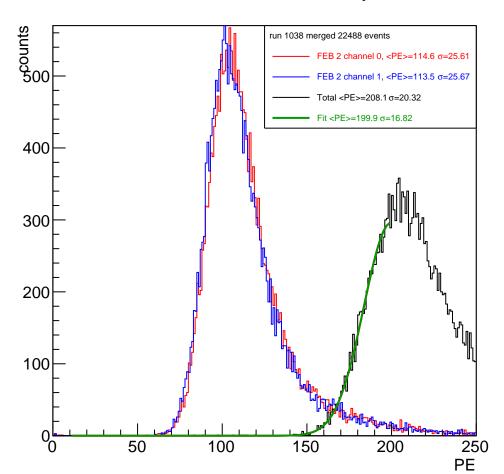


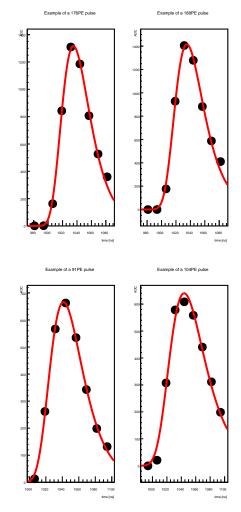

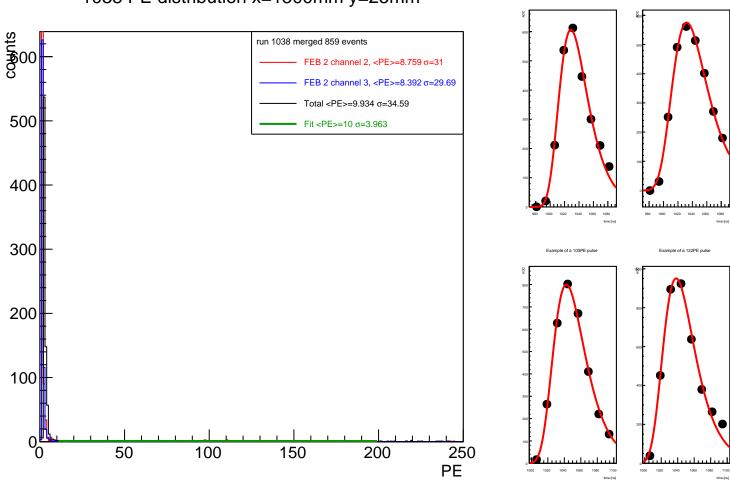


Example of a 80PE pulse


Example of a 93PE pulse

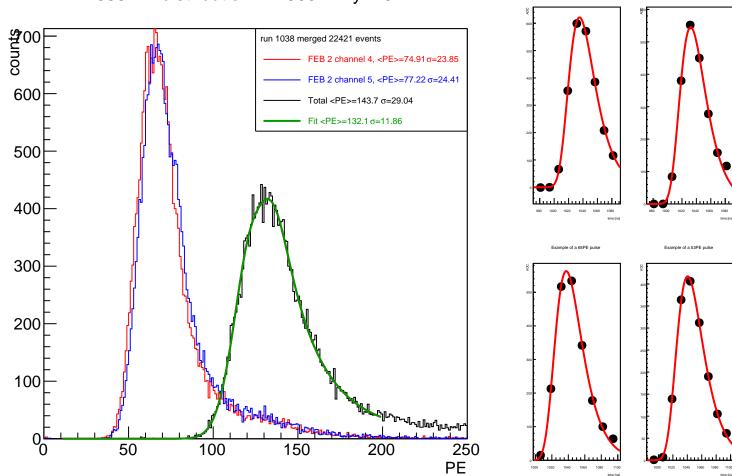



Example of a 79PE pulse

Example of a 67PE pulse

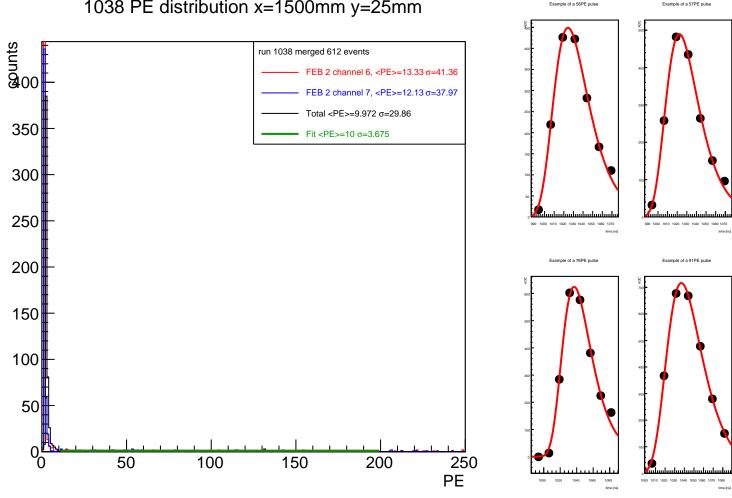

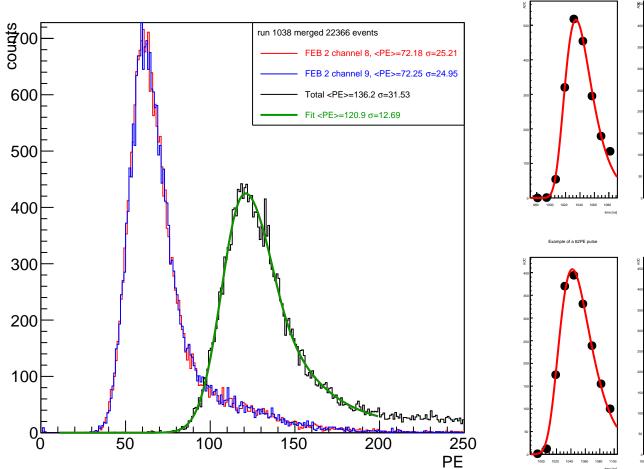


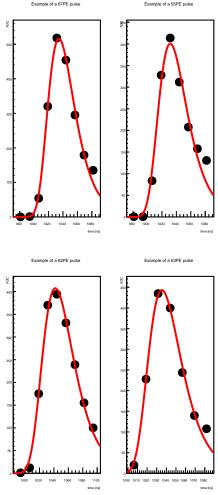


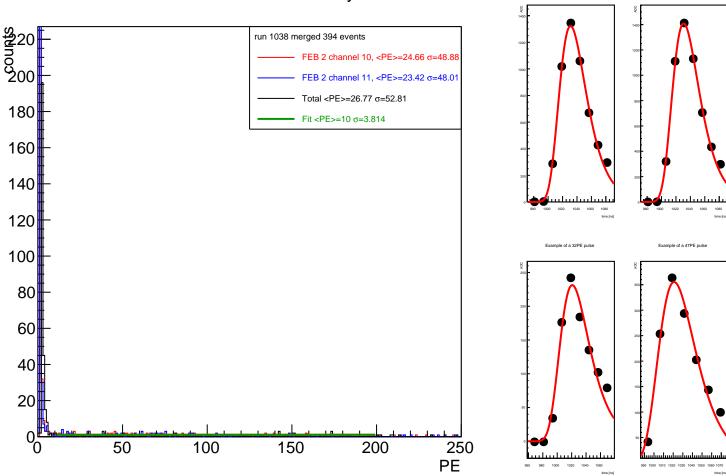

Example of a 168PE pulse


Example of a 181PE pulse

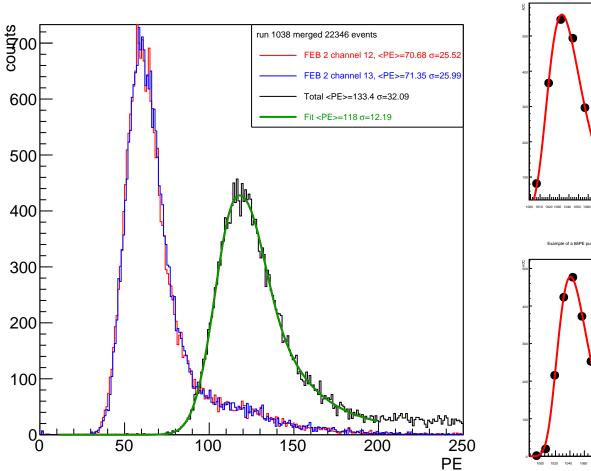

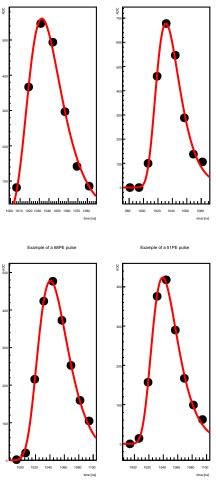

Example of a 74PE pulse

Example of a 66PE pulse

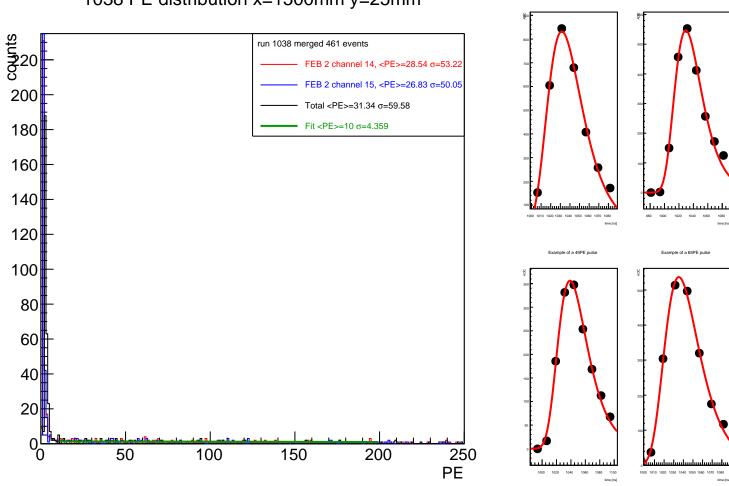

Example of a 102PE pulse

Example of a 69PE pulse