





Example of a 263PE pulse


Example of a 261PE pulse

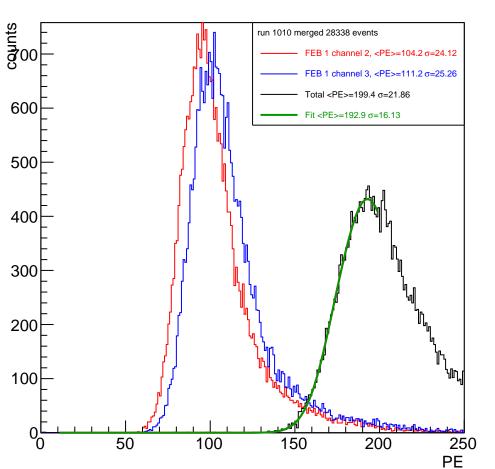


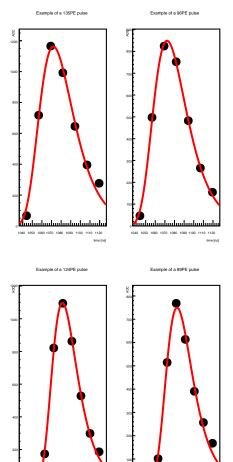


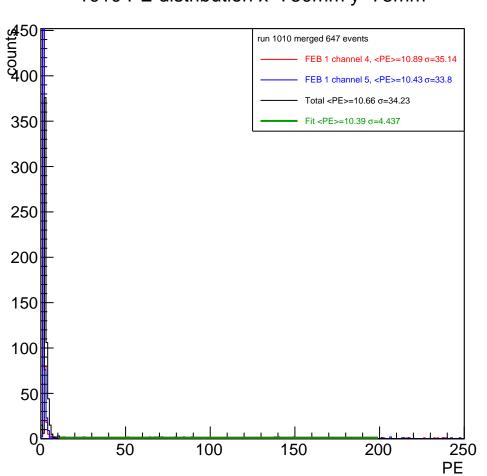


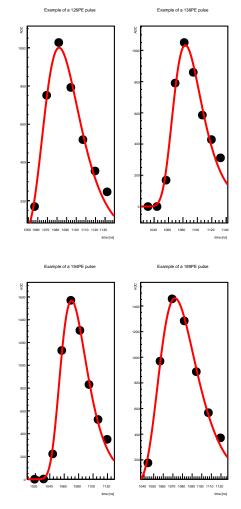


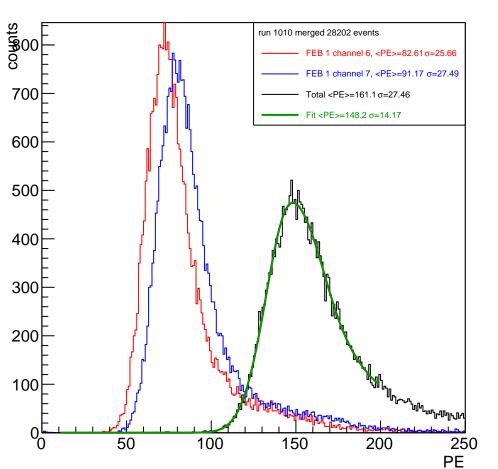


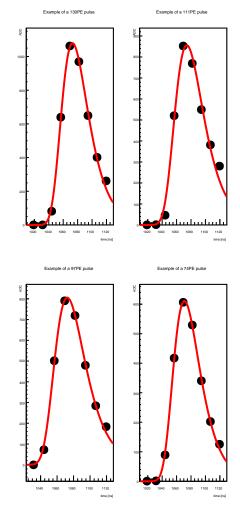

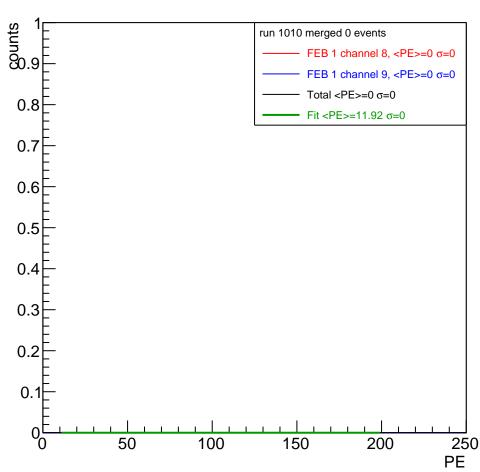

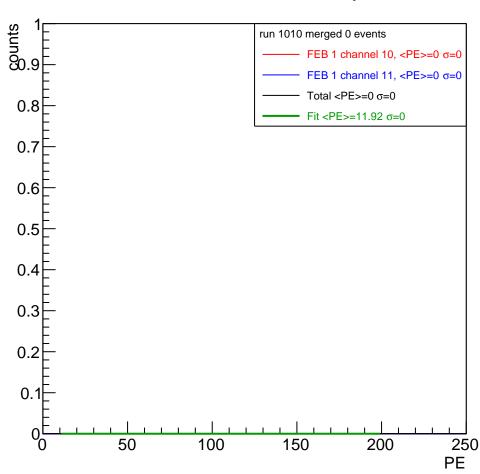


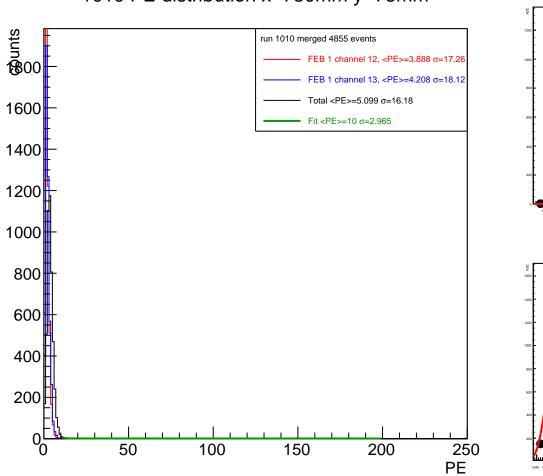

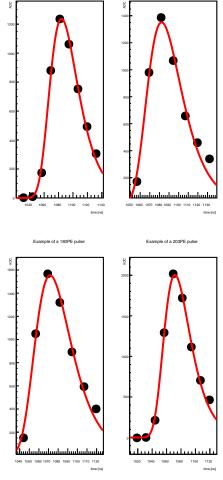


Example of a 134PE pulse

Example of a 149PE pulse

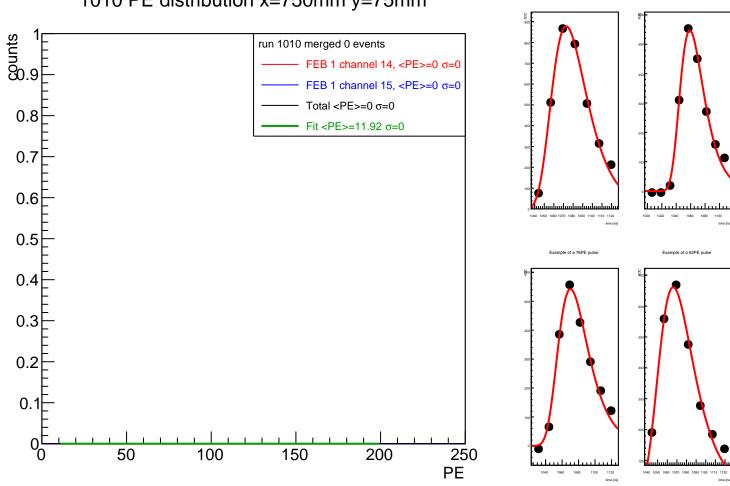

Example of a 123PE pulse


Example of a 69PE pulse

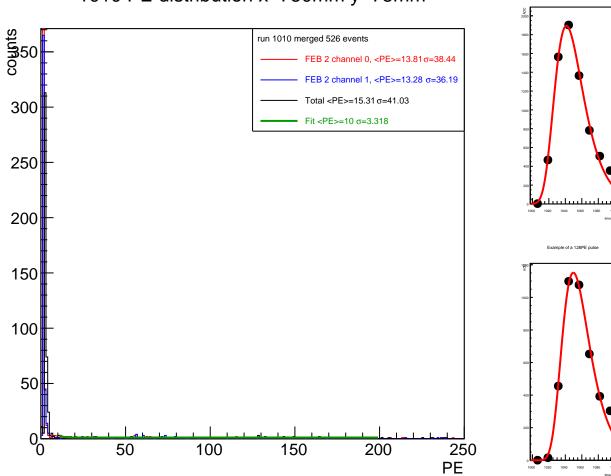



Example of a 219PE pulse

Example of a 191PE pulse

Example of a 114PE pulse

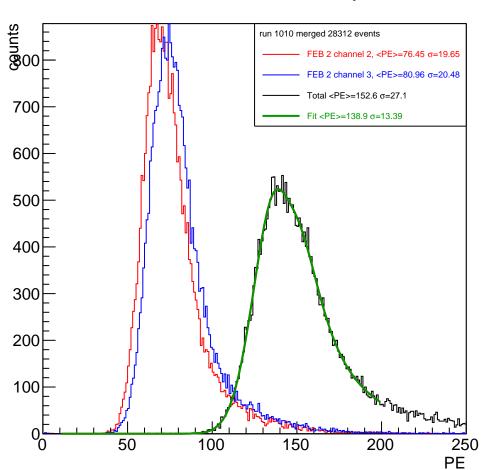


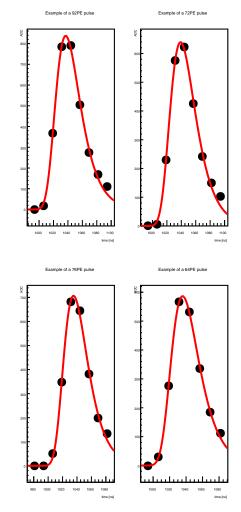


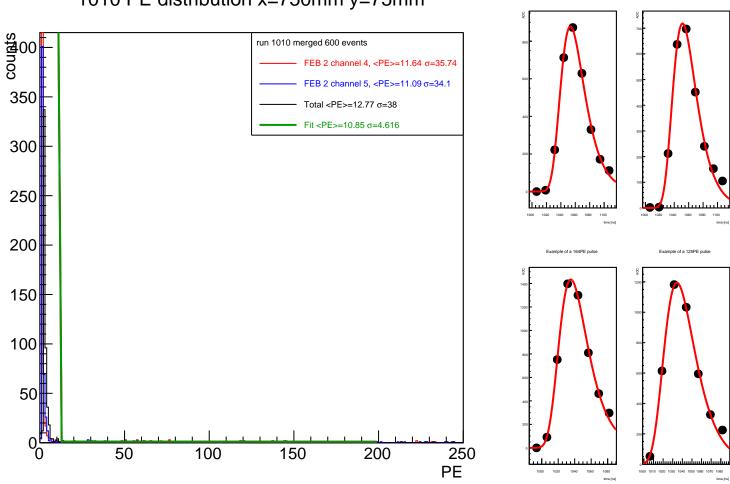



Example of a 96PE pulse

Example of a 76PE pulse

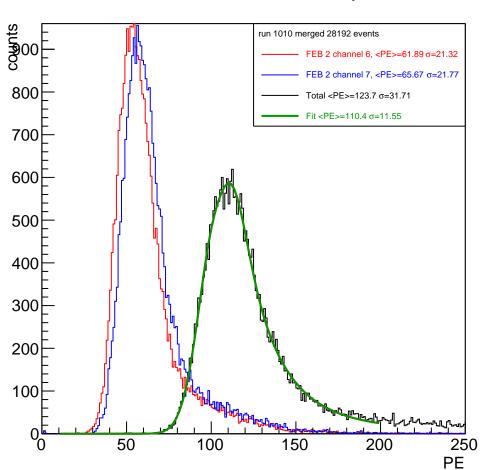

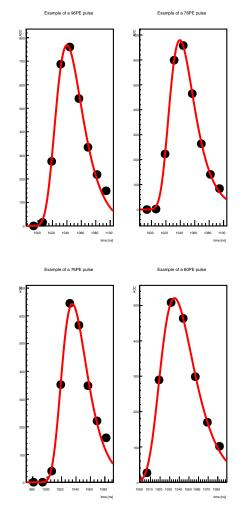


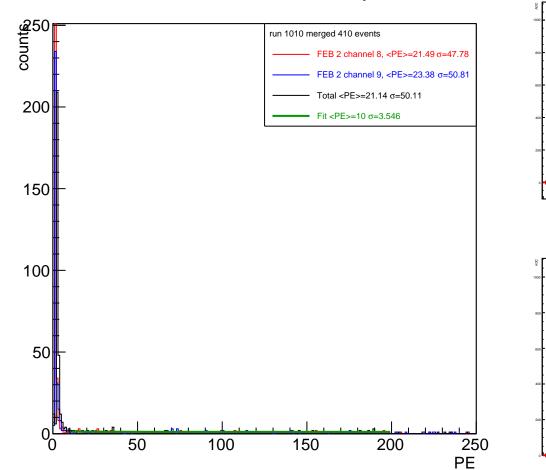


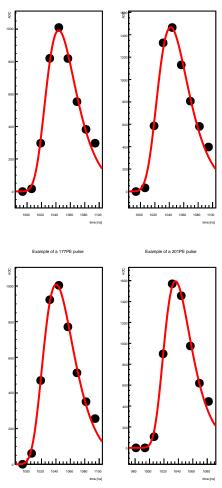


Example of a 210PE pulse

Example of a 172PE pulse

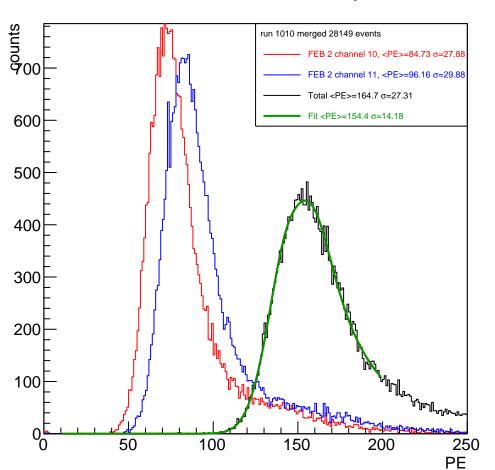

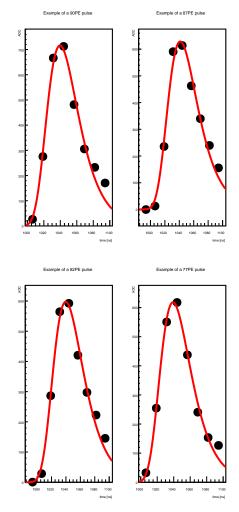

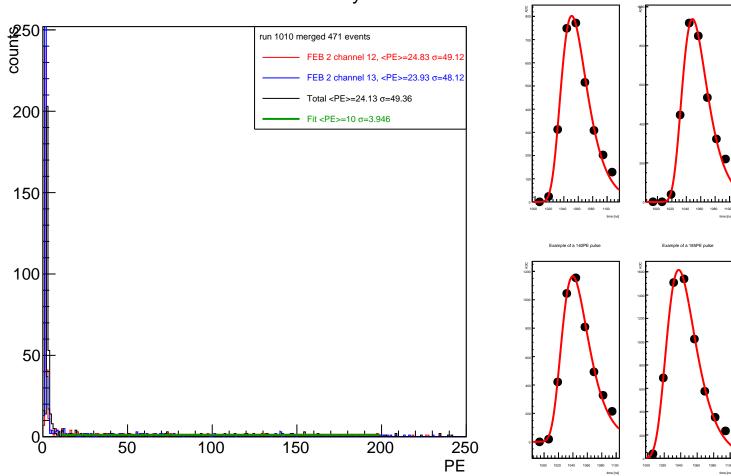

Example of a 93PE pulse

Example of a 106PE pulse

