





Example of a 124PE pulse

Example of a 131PE pulse

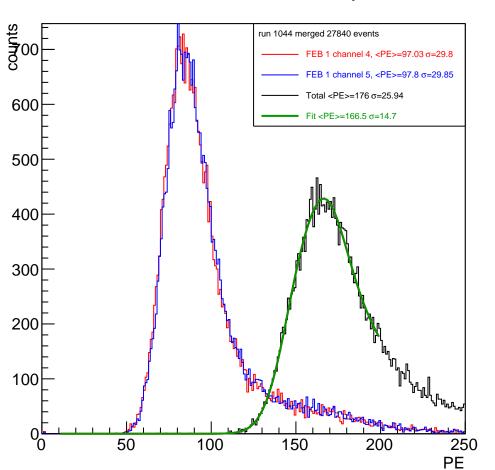

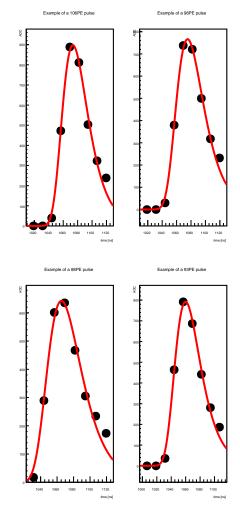


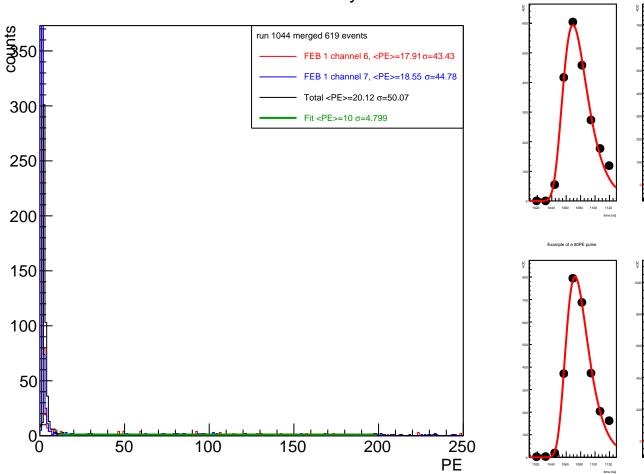


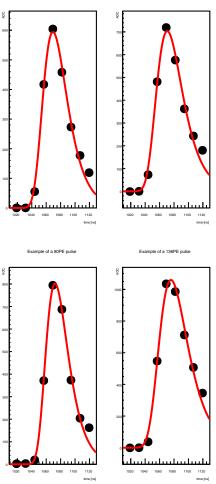



Example of a 82PE pulse


Example of a 65PE pulse

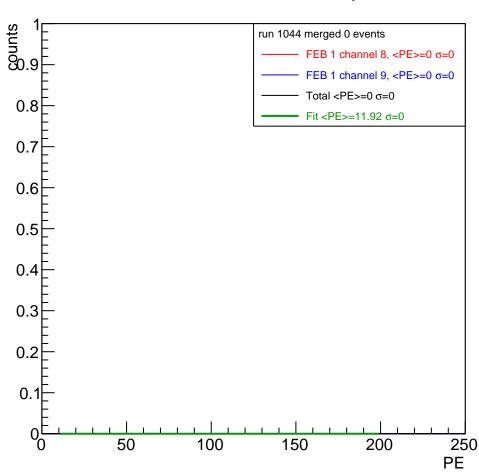

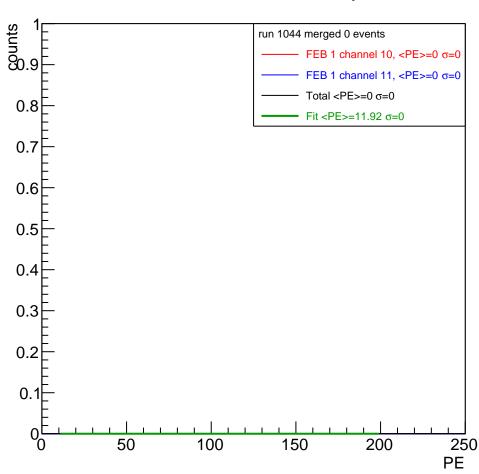

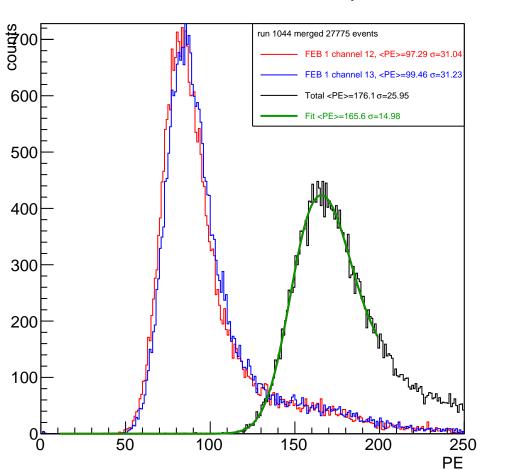


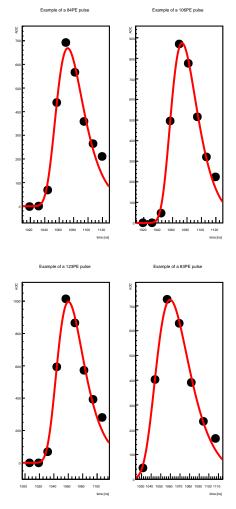

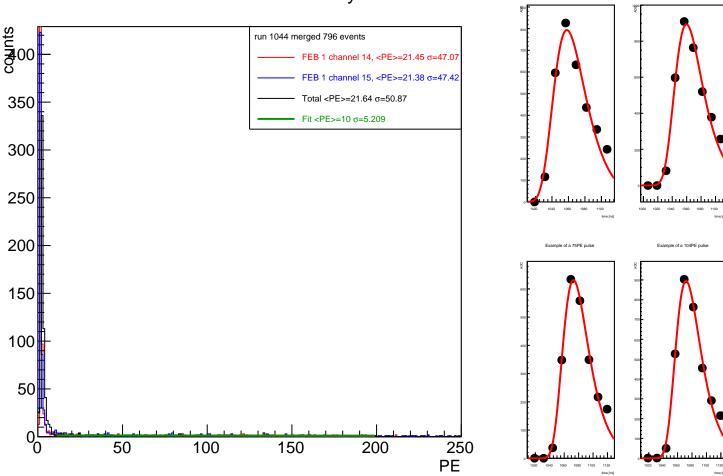


Example of a 104PE pulse


Example of a 117PE pulse

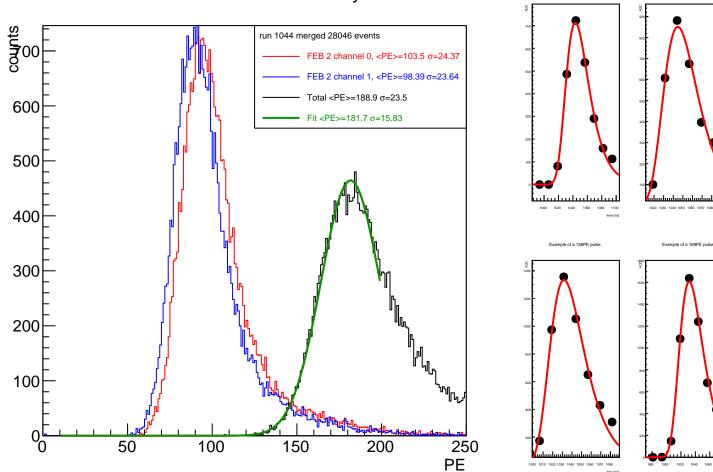



Example of a 75PE pulse


Example of a 99PE pulse

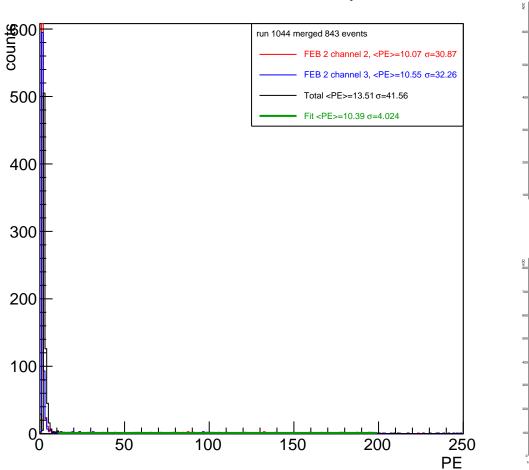

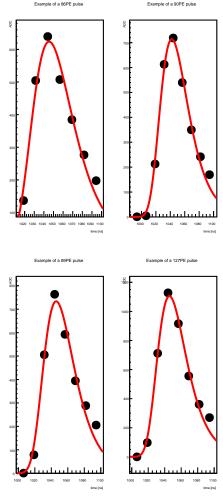

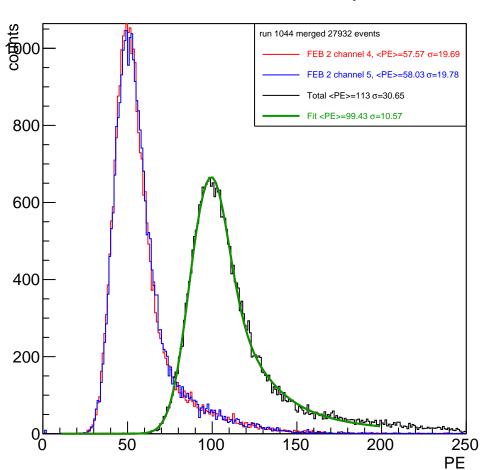


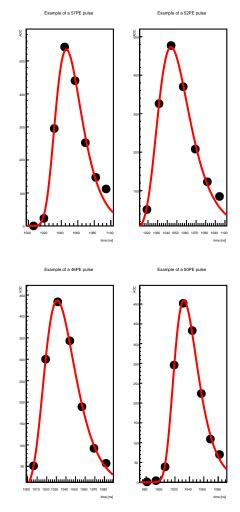


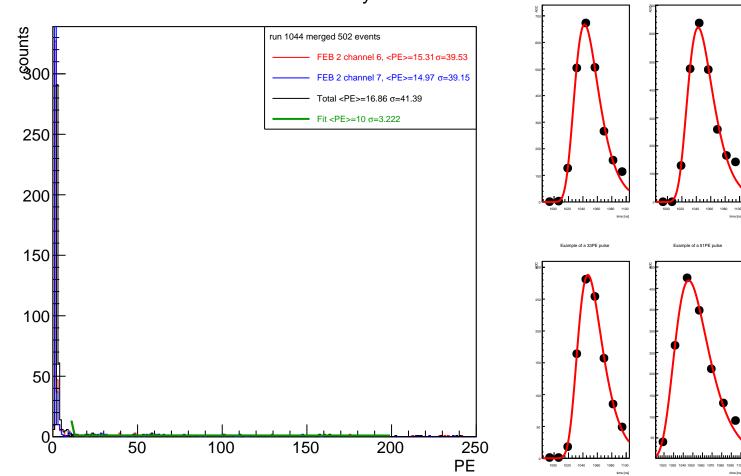


Example of a 75PE pulse

Example of a 75PE pulse

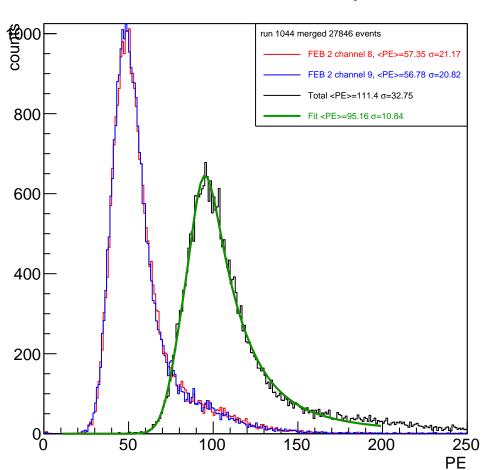


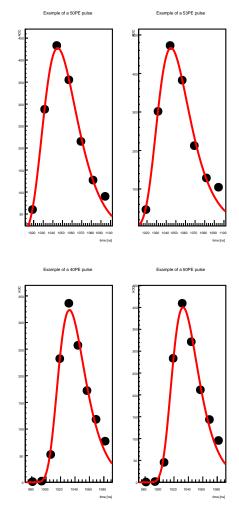


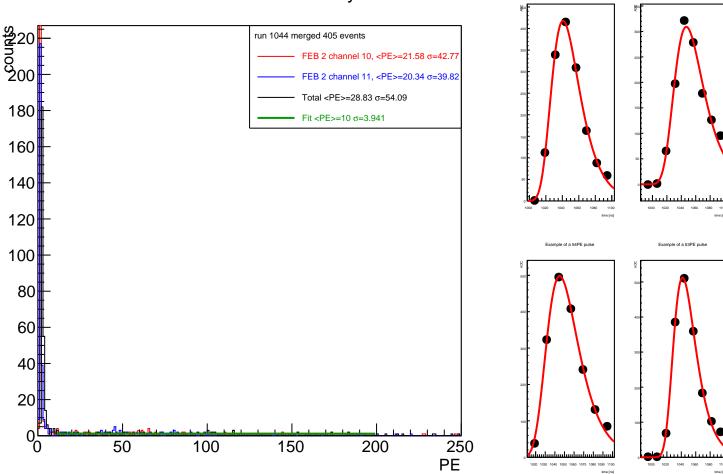


Example of a 47PE pulse

Example of a 42PE pulse

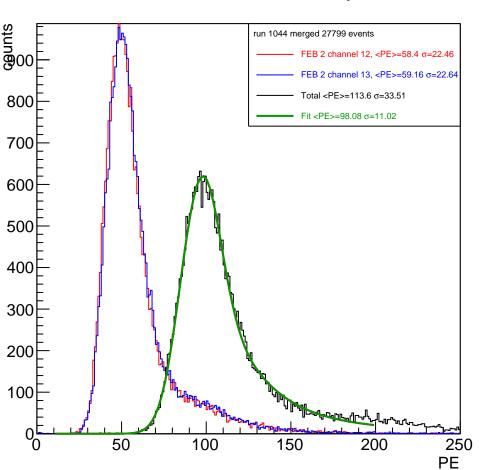

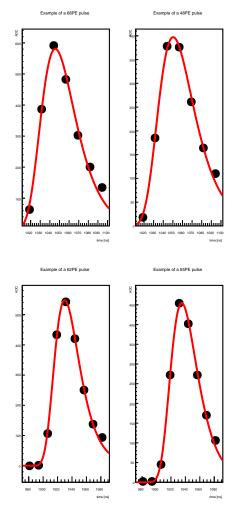

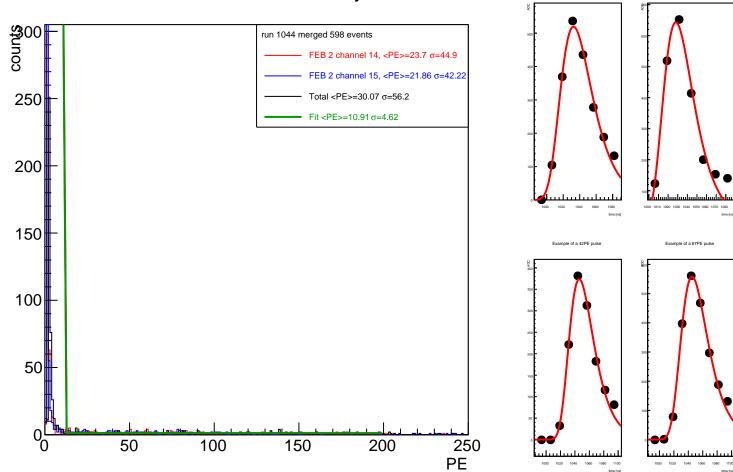

Example of a 65PE pulse

Example of a 66PE pulse