



Example of a 101PE pulse


Example of a 87PE pulse

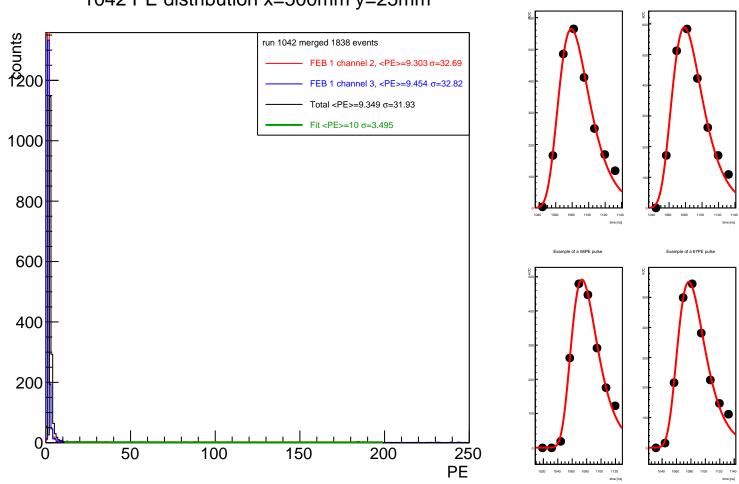


Example of a 69PE pulse

Example of a 70PE pulse

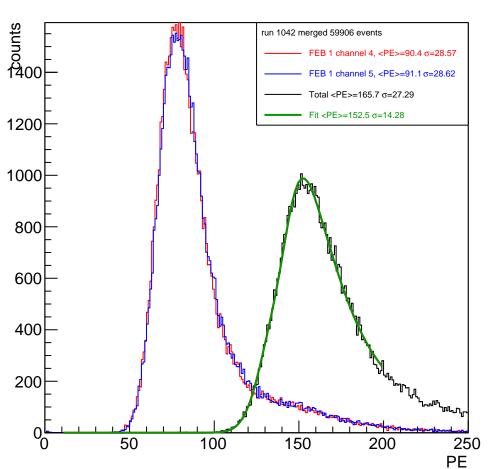


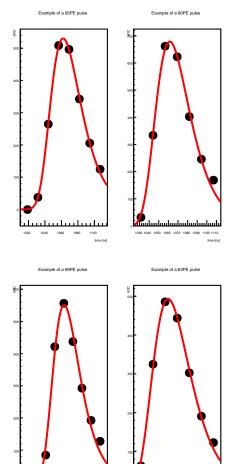


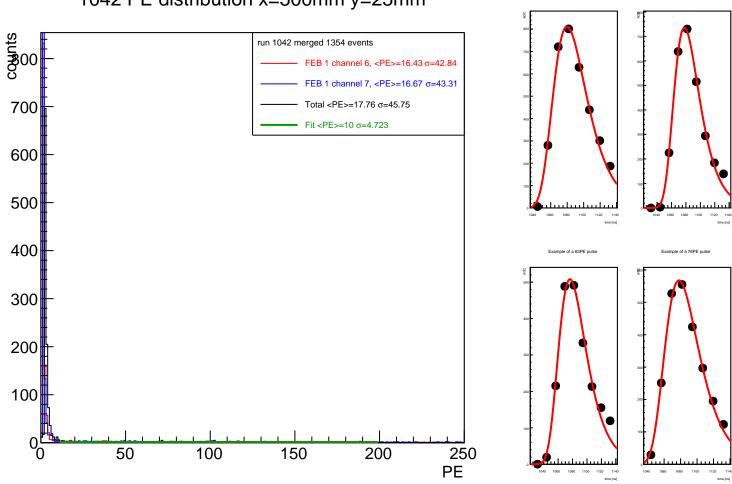



Example of a 108PE pulse

Example of a 84PE pulse

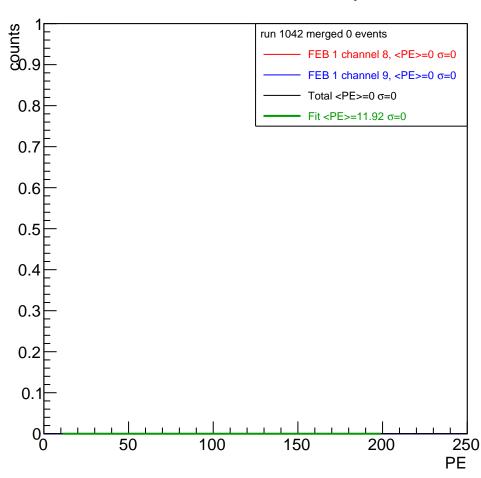

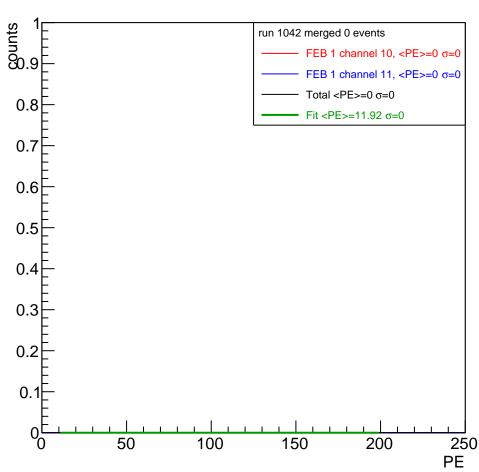


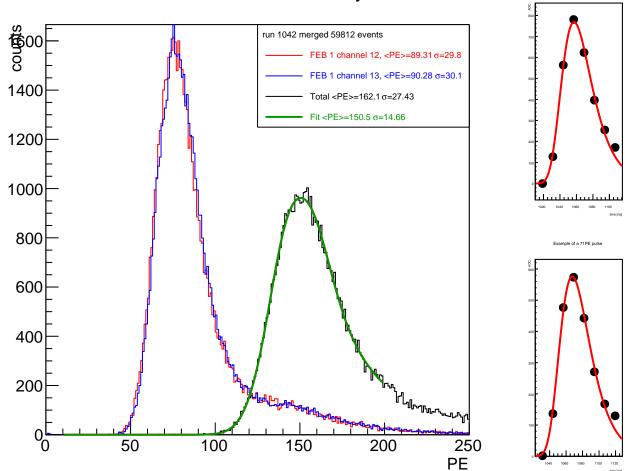

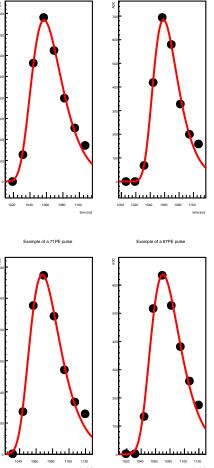


Example of a 78PE pulse


Example of a 95PE pulse

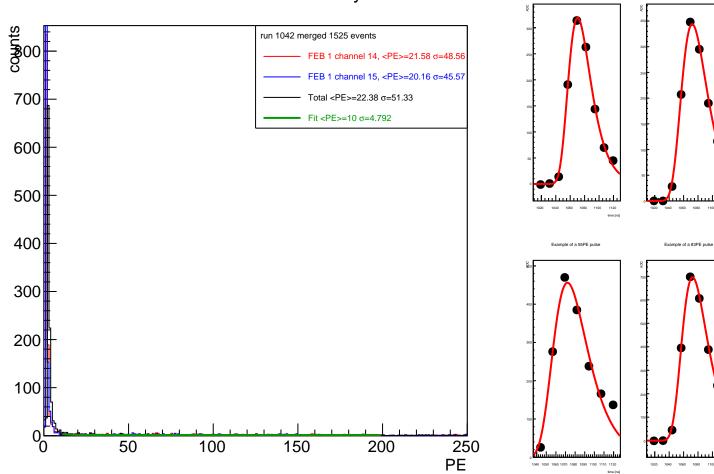


Example of a 34PE pulse

Example of a 41PE pulse

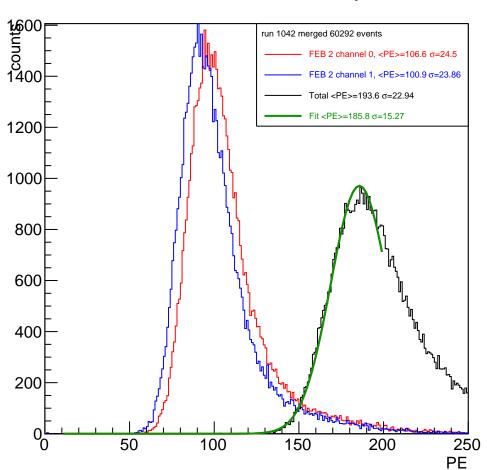


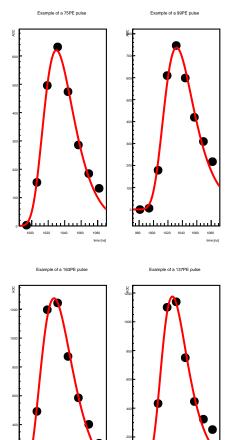

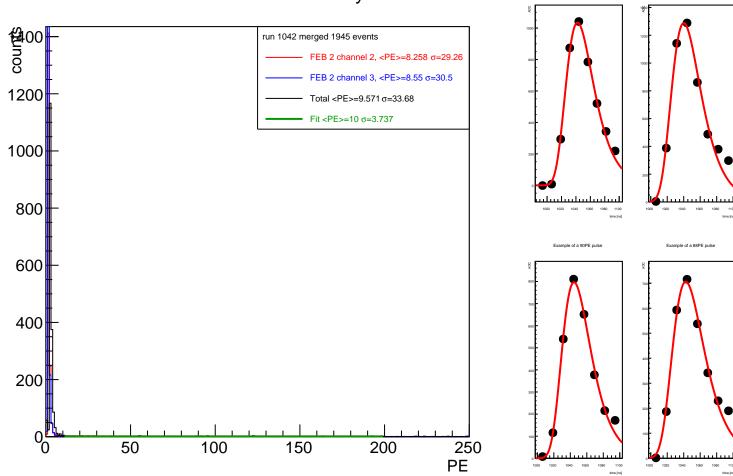


Example of a 129PE pulse


Example of a 150PE pulse

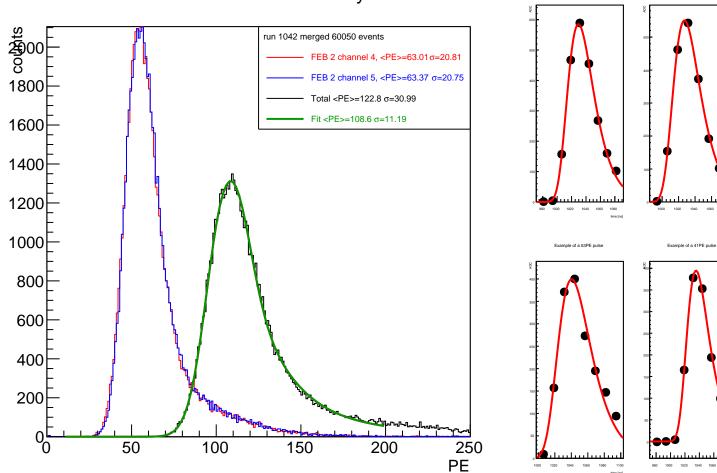

Example of a 71PE pulse


Example of a 61PE pulse

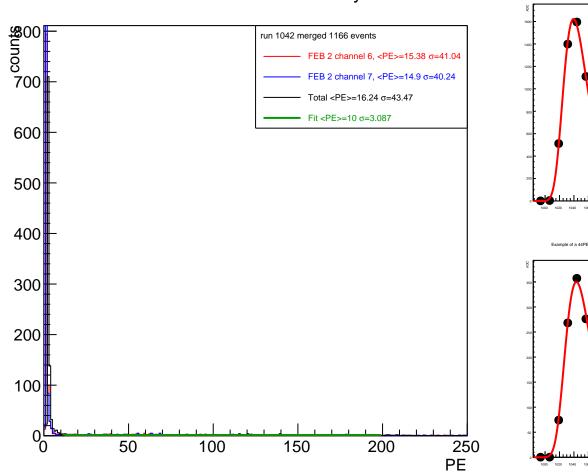

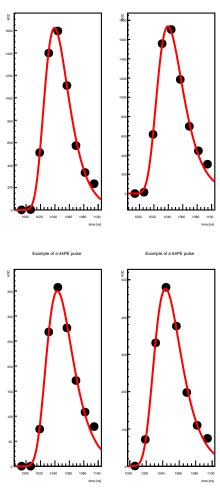


Example of a 211PE pulse

Example of a 190PE pulse

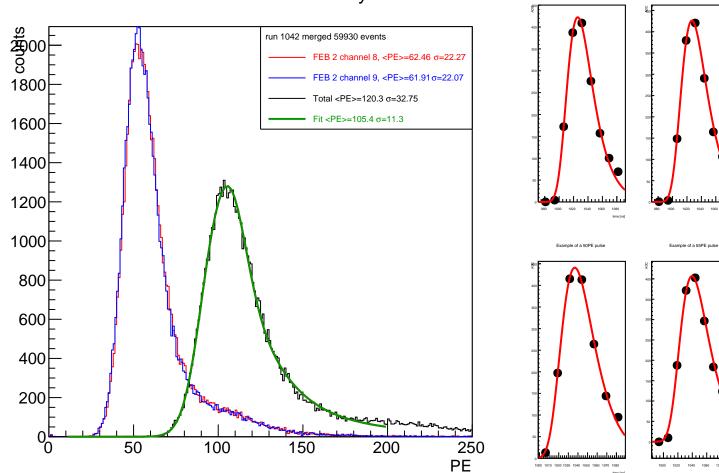


Example of a 50PE pulse

Example of a 52PE pulse

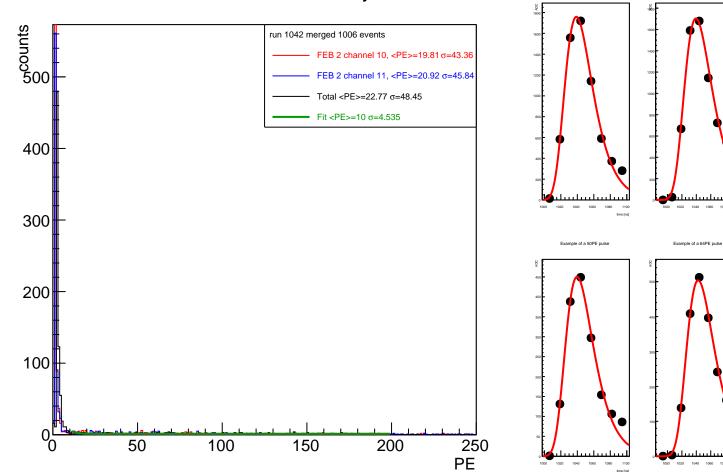


Example of a 195PE pulse

Example of a 218PE pulse

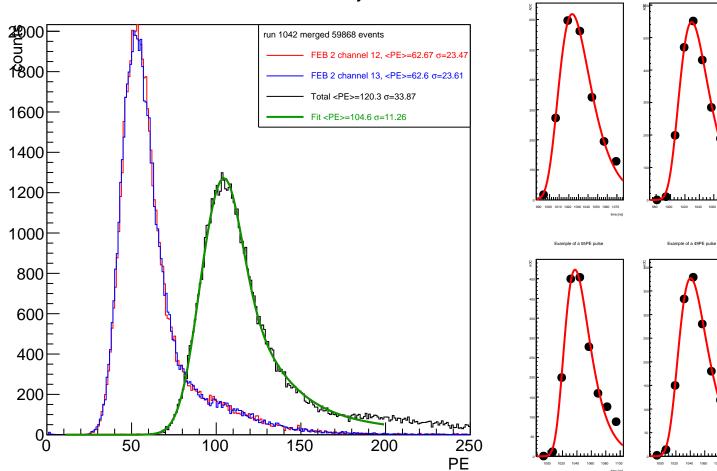

Example of a 67PE pulse

Example of a 72PE pulse

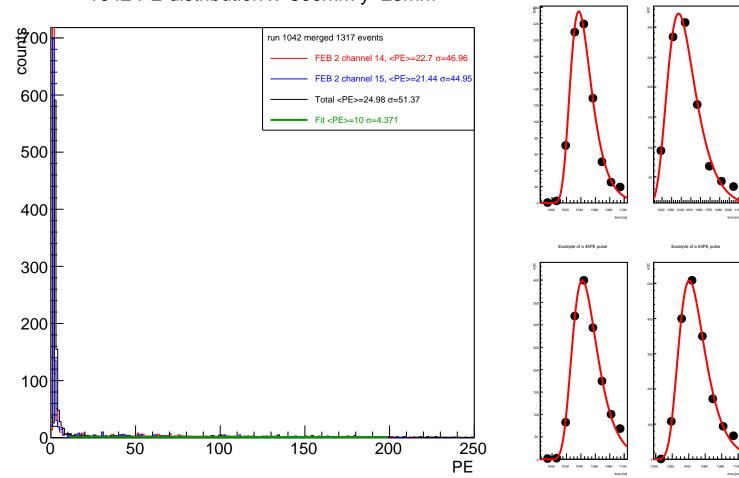

Example of a 22PE pulse

Example of a 31PE pulse