

1276 PE distribution x=0mm y=75mm Example of a 108PE pulse Example of a 273PE pulse 2000 A PDC - 0005 run 1276 merged 3287 events EB 1 channel 2, <PE>=35.62 σ =28.36 Total <PE>=69.99 σ=48.85 150 160 170 180 190 200 210 220 230 Time [ns] Time [ns] Example of a 259PE pulse Example of a 23PE pulse 2200 FO **F**€

200 220

Time [ns]

160 180


200 220


Time [ns]


160 180


PΕ


Counts

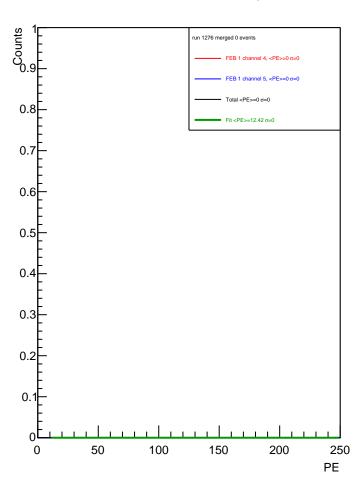

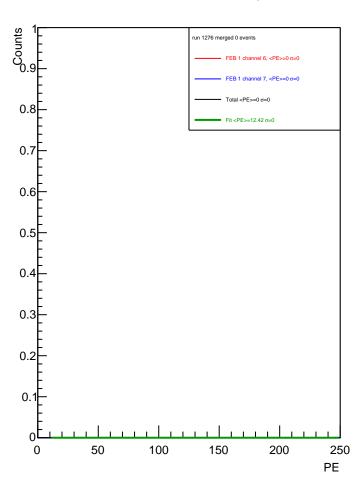

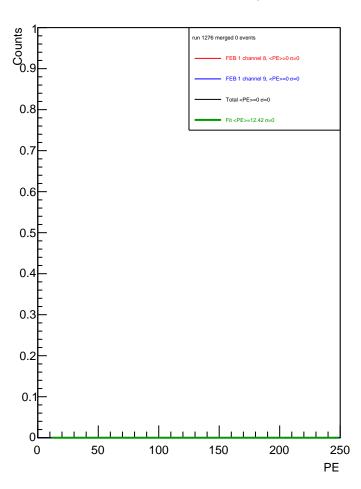

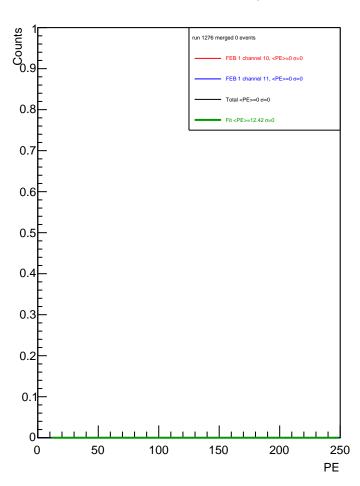

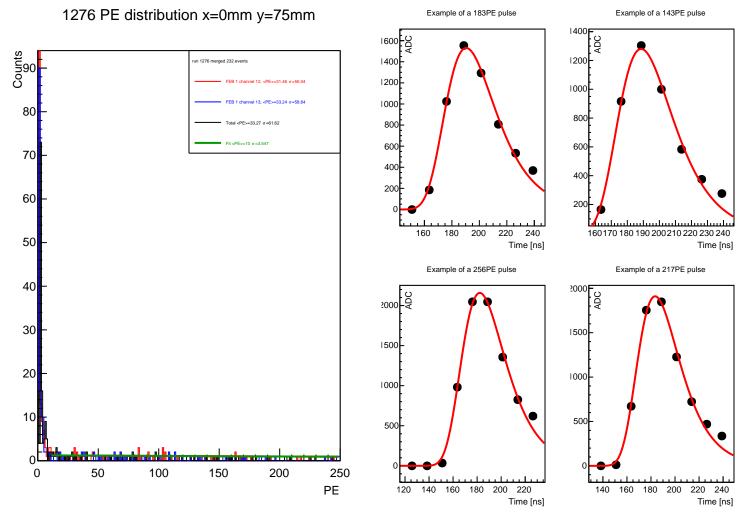

1276 PE distribution x=0mm y=75mm Example of a 124PE pulse Example of a 118PE pulse 1000F **F** ADC ADC run 1276 merged 1839 events Total <PE>=88.42 σ=68.47 Time [ns] Time [ns] Example of a 46PE pulse Example of a 50PE pulse PΕ

Time [ns]

Time [ns]

