

FTDI FT232

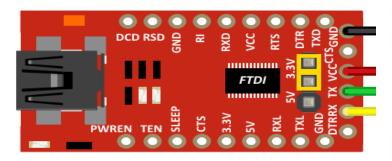



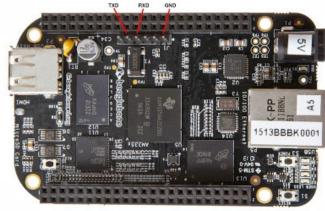

FTDI Chip Beaglebone

RX ----> TX
TX ----> RX
GND ----> GND

Baud Rate: 115200 Data Bits: 8 Parity Bits: None Stop Bits: 1 Handshake: None

Type **ls dev/tty*** before plugging in and after plugging in to find what the device is called

Example command: sudo screen /dev/ttyUSB0 115200,cs8,-parenb,-cstopb,-hupcl