

BAY PROCEDURE

Tacoma RV Center · Document Library

CONCERN

Level Up Advantage 807662 Manual Mode flashes then dumps home. Auto Level still works.
Brinkley Firefly.

MODEL

Level Up Advantage controller (Brinkley / Firefly)

DATE

2026-09-19

WO#

WO-FIREFLY


PRIMARY

Level Up controller and Firefly panel. Leave the rubber-boot plug in.

WHAT THIS PATTERN USUALLY MEANS

When Manual Mode flashes back to the home screen and Auto Level still works, this is usually a Firefly / OneControl conflict on the Level Up Advantage controller. It is not a hydraulic dump test, and you should not start by swapping the Level Up Advantage controller. The Level Up controller has two network plugs. One has a rubber boot on it - leave that one alone. The other has a cable running to the Firefly / OneControl system - unplug that cable only. Then try Manual Mode again.

VISUAL FLOWCHART

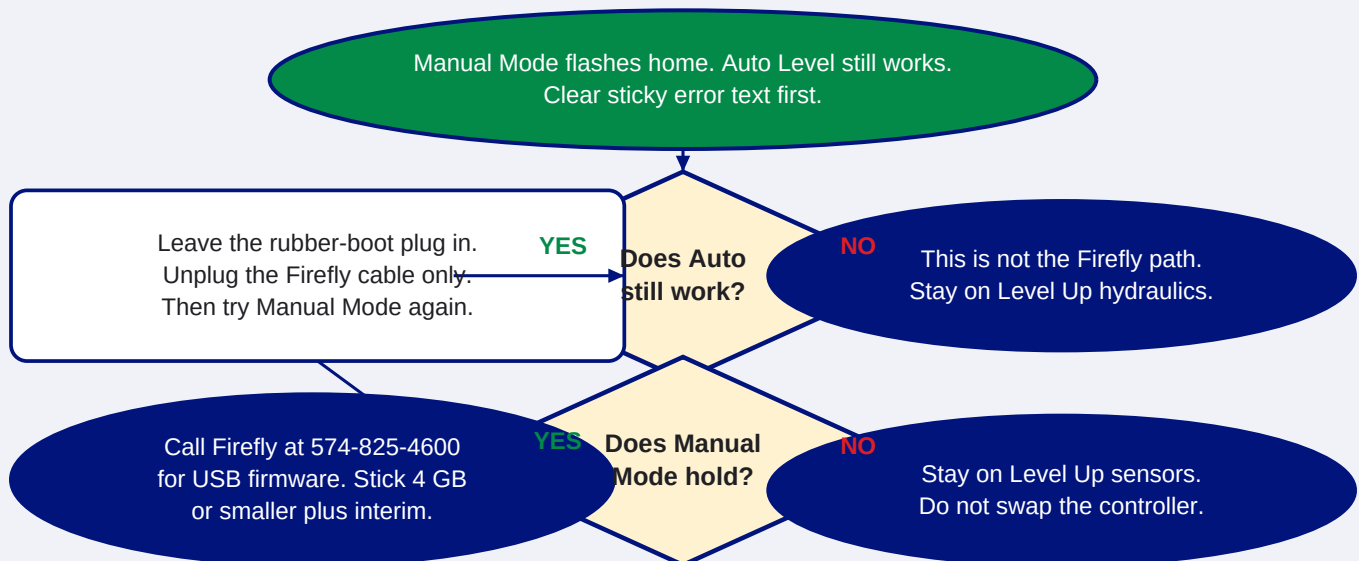

BAY ORDER (DO THIS FIRST)

- ☐ 1. Confirm Auto Level still works and clear sticky Low Voltage, Excess Angle, or External Sensor text if it is present. If Auto is dead, this is not the Firefly path - stay on Level Up hydraulics. If Auto works, do the two-plug prove next.
- ☐ 2. The Level Up controller has two network plugs. One has a rubber boot on it - leave that one alone. The other has a cable running to the Firefly / OneControl system - unplug that cable only. Then try Manual Mode again.
- ☐ 3. If Manual Mode stays open, Firefly is fighting the Level Up controller. Call Firefly at 574-825-4600 for USB firmware. Use a USB stick 4 GB or smaller plus the interim file they specify.
- ☐ 4. If Manual Mode still dumps home, this is not the Firefly path. Stay on the Level Up sensor and harness path. Do not swap another Level Up controller for Firefly blame. Do not push a Firefly USB firmware update as the fix.


DO NOT

- Do not pull the rubber-boot plug.
- Do not condemn the Level Up controller or start pump and valve replacement while Auto Level still works.
- Do not swap another Level Up controller for Firefly blame.
- Do not push Firefly USB firmware unless Manual Mode holds with the Firefly cable unplugged.

SOURCES (SHOP DOCUMENT LIBRARY)

- Shop writeup - Level Up Advantage Manual Mode flash-home and Firefly

Level Up Advantage controller data plate / two network plugs -- Shop writeup - Level Up Advantage...

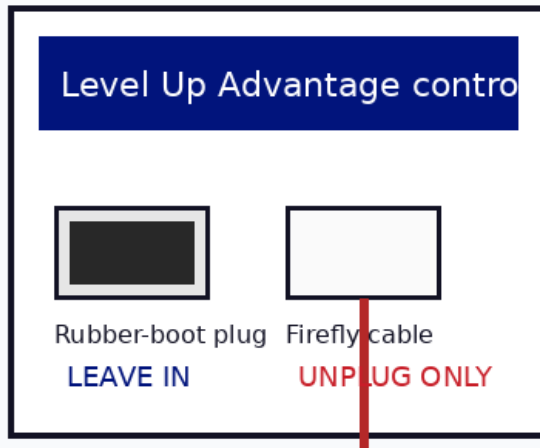

Data plate / two plugs

Leave the rubber-boot plug in. Unplug only the Firefly / OneControl cable.

Brinkley / Firefly coach

Shop PN 807662 (Sources only)