


BAY PROCEDURE

Tacoma RV Center · Document Library

CONCERN	Level Up Advantage 807662 Manual Mode flashes then dumps home. Auto Level still works.		
MODEL	Level Up Advantage controller (Brinkley / Firefly)	DATE	2026-09-19
PRIMARY	Level Up controller and Firefly panel. Leave the rubber-boot terminator in.	WO#	WO-FIREFLY

VISUAL FLOWCHART

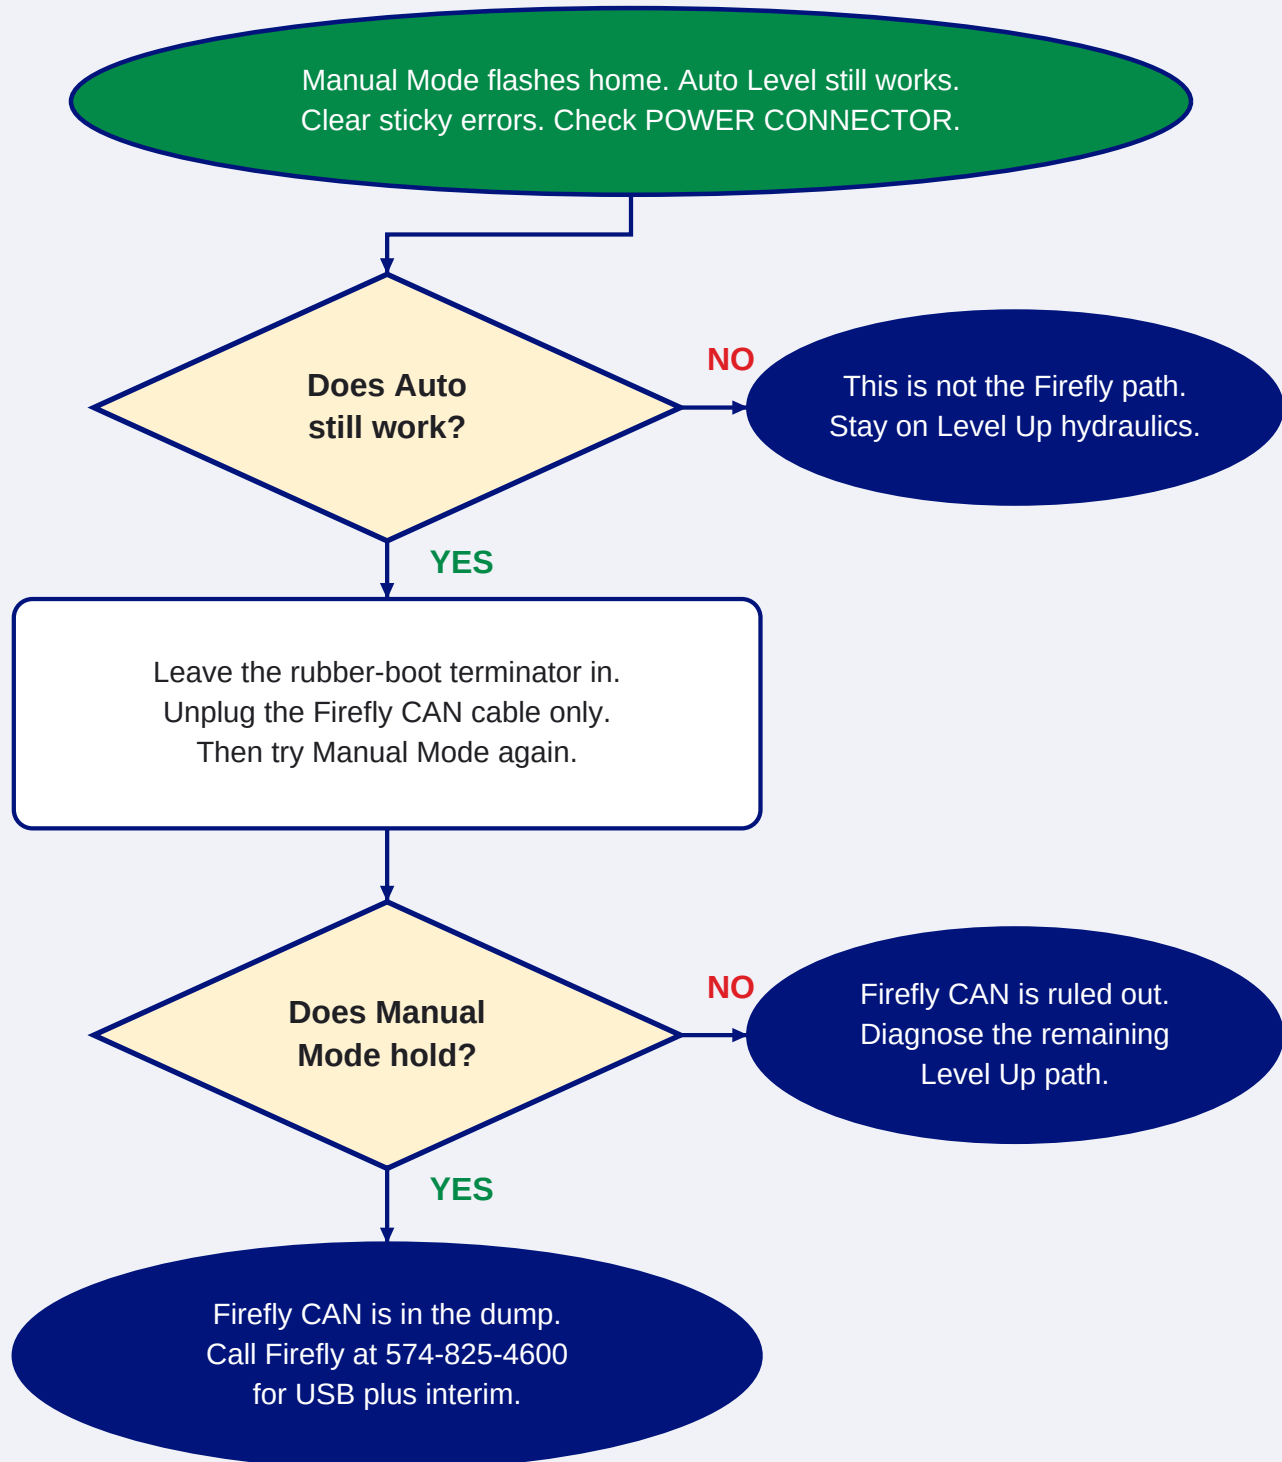

WHAT THIS PATTERN USUALLY MEANS

When Manual Mode flashes back to the home screen and Auto Level still works, diagnose Firefly / OneControl CAN communication first. Do not start diagnosing a Level Up controller fault until Firefly / OneControl CAN communication is ruled out. The Level Up controller has two ports labeled CAN. One is the rubber-boot terminator - leave that one plugged in. The other is the CAN cable to Firefly / OneControl - unplug that one only. Then try Manual Mode again.

BAY ORDER (DO THIS FIRST)

- ☐ 1. Confirm Auto Level still works and clear sticky Low Voltage, Excess Angle, or External Sensor text if it is present. If Auto is dead, this is not the Firefly path - stay on Level Up hydraulics. If Auto works, check the POWER CONNECTOR next.
- ☐ 2. Back-probe the labeled POWER CONNECTOR. Measure Red versus Green ground. You want solid 12V+. Note Yellow. If you do not have solid 12V+, fix power first. If power is solid 12V+, do the CAN prove next.
- ☐ 3. The Level Up controller has two ports labeled CAN. One is the rubber-boot terminator - leave that one plugged in. The other is the CAN cable to Firefly / OneControl - unplug that one only. Then try Manual Mode again.
- ☐ 4. If Manual Mode holds with the Firefly CAN cable unplugged, Firefly / OneControl CAN is in the dump. Do not start a Level Up controller fault path. Next, call Firefly at 574-825-4600 for USB firmware plus interim. If Manual Mode still dumps home with the Firefly CAN cable unplugged, Firefly CAN is ruled out. Diagnose the remaining Level Up path.

DO NOT


- Do not pull the rubber-boot terminator.
- Do not condemn the Level Up controller or start pump and valve replacement while Auto Level still works.
- Do not swap another Level Up controller for Firefly blame.
- Do not push Firefly USB firmware unless Manual Mode holds with the Firefly CAN cable unplugged.

SOURCES (SHOP DOCUMENT LIBRARY)

- Shop writeup - Level Up Advantage Manual Mode flash-home and Firefly
 - Back-probe the labeled POWER CONNECTOR, Red versus Green ground, solid 12V+. The Level Up controller has two ports labeled CAN. One is the rubber-boot terminator - leave that one plugged in. The other is the CAN cable to Firefly / OneControl - unplug that one only. Then try Manual
- Level Up Advantage controller shop PN 807662
 - Listed in Sources only. This is not the MODEL headline.

CITED LIBRARY FIGURES

Level Up Advantage controller - two ports labeled CAN -- Shop writeup - Level Up Advantage Manual...

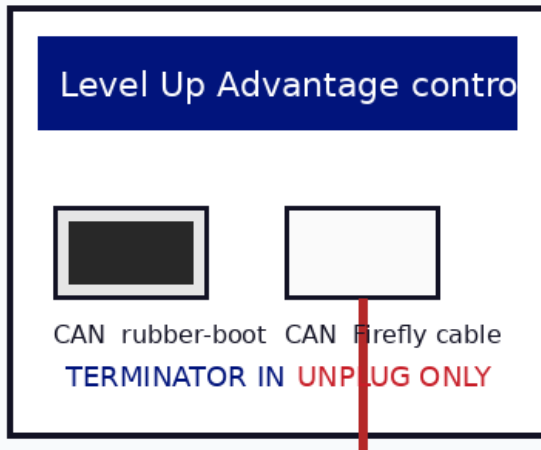

Two ports labeled CAN

Leave the rubber-boot terminator plugged in.

Unplug only the CAN cable to Firefly / OneControl.

POWER CONNECTOR

Red versus Green ground.

Want solid 12V+. Note Yellow.

Shop PN 807662 (Sources only)