

FCI API Reference



Contents

1	Revision l	History	9
2	Module D	ocumentation	11
	2.1 LibFo	CI	11
	2.1.1	Introduction	11
	2.1.2	Acronyms and Definitions	12
	2.1.3	Functions Summary	12
	2.1.4	Commands Summary	12
	2.1.5	Events summary	14
	2.1.6	Interface Management	14
	2.1.7	Features	16
		2.1.7.1 IPv4/IPv6 Router (TCP/UDP)	16
		2.1.7.2 L2 Bridge (Switch)	18
		2.1.7.3 L2L3 Bridge	20
		2.1.7.4 Flexible Parser	21
		2.1.7.5 Flexible Router	22
		2.1.7.6 IPsec Offload	23
		2.1.7.7 Egress QoS	23
	2.1.8	Defines	29
		2.1.8.1 FPP_CMD_PHY_IF	29
		2.1.8.2 FPP_CMD_LOG_IF	30
		2.1.8.3 FPP_CMD_IF_LOCK_SESSION	32
		2.1.8.4 FPP_CMD_IF_UNLOCK_SESSION	32
		2.1.8.5 FPP_CMD_L2_BD	33
		2.1.8.6 FPP_CMD_L2_STATIC_ENT	36
		2.1.8.7 FPP_CMD_L2_FLUSH_LEARNED	38
		2.1.8.8 FPP_CMD_L2_FLUSH_STATIC	38
		2.1.8.9 FPP_CMD_L2_FLUSH_ALL	39
		2.1.8.10 FPP_CMD_FP_TABLE	39
		2.1.8.11 FPP_CMD_FP_RULE	41
		2.1.8.12 FPP_CMD_FP_FLEXIBLE_FILTER	43
		2.1.8.13 FPP_CMD_DATA_BUF_PUT	43
		2.1.8.14 FPP_CMD_DATA_BUF_AVAIL	44
		2.1.8.15 FPP_CMD_SPD	44
		2.1.8.16 FPP_CMD_QOS_QUEUE	46
		2.1.8.17 FPP_CMD_QOS_SCHEDULER	47
		2.1.8.18 FPP_CMD_QOS_SHAPER	48
		2.1.8.19 FPP_CMD_FW_FEATURE	49



			2.1.8.20	FCI_CFG_FORCE_LEGACY_API	50
			2.1.8.21	FPP_CMD_IPV4_CONNTRACK_CHANGE	50
				FPP_CMD_IPV6_CONNTRACK_CHANGE	
				CTCMD_FLAGS_REP_DISABLED	
					51
		2.1.9			51
		_,,,,	2.1.9.1		51
			2.1.9.2		51
			2.1.9.3		52
			2.1.9.4		53
			2.1.9.5		53
			2.1.9.6	11-1	53
			2.1.9.7		53
			2.1.9.8		54
					54
					55
		2.1.10			55
				– 1	55
			2.1.10.2	fci_close()	55
			2.1.10.3	fci_catch()	56
			2.1.10.4	fci_cmd()	57
			2.1.10.5	fci_query()	57
			2.1.10.6	fci_write()	58
			2.1.10.7	fci_register_cb()	59
3					60
	3.1			truct Reference	
			Detailed	Description	വ
	3.2	fpp a			
			lgo_stats_	_t Struct Reference	60
		3.2.1	lgo_stats_ Detailed	Description	60 61
		3.2.1	lgo_stats_ Detailed	Description	60
		3.2.1	lgo_stats_ Detailed	Description	60 61
		3.2.1	lgo_stats_ Detailed Field Do	Description	60 61 61
		3.2.1	lgo_stats_ Detailed Field Do 3.2.2.1	Description	60 61 61 61
		3.2.1	lgo_stats_ Detailed Field Do 3.2.2.1 3.2.2.2	d Description	60 61 61 61
	3.3	3.2.1 3.2.2	lgo_stats_ Detailed Field Do 3.2.2.1 3.2.2.2 3.2.2.3 3.2.2.4	d Description	60 61 61 61
	3.3	3.2.1 3.2.2	lgo_stats_ Detailed Field Do 3.2.2.1 3.2.2.2 3.2.2.3 3.2.2.4 uf_cmd_t	d Description	60 61 61 61 61
	3.3	3.2.1 3.2.2 fpp_b	lgo_stats_ Detailed Field Do 3.2.2.1 3.2.2.2 3.2.2.3 3.2.2.4 uf_cmd_t	d Description	60 61 61 61 61 61
	3.3	3.2.1 3.2.2 fpp_b 3.3.1	lgo_stats_ Detailed Field Do 3.2.2.1 3.2.2.2 3.2.2.3 3.2.2.4 uf_cmd_t	d Description	60 61 61 61 61 61
	3.3	3.2.1 3.2.2 fpp_b 3.3.1	lgo_stats_ Detailed Field Do 3.2.2.1 3.2.2.2 3.2.2.3 3.2.2.4 uf_cmd_t Detailed Field Do 3.3.2.1	d Description	60 61 61 61 61 62 62
	3.3	3.2.1 3.2.2 fpp_b 3.3.1 3.3.2	lgo_stats_ Detailed Field Do 3.2.2.1 3.2.2.2 3.2.2.3 3.2.2.4 uf_cmd_t Detailed Field Do 3.3.2.1 3.3.2.2	d Description	60 61 61 61 61 62 62
		3.2.1 3.2.2 fpp_b 3.3.1 3.3.2	lgo_stats_ Detailed Field Do 3.2.2.1 3.2.2.2 3.2.2.3 3.2.2.4 uf_cmd_t Detailed Field Do 3.3.2.1 3.3.2.2 t6_cmd_t	d Description	60 61 61 61 61 62 62 62
		3.2.1 3.2.2 fpp_b 3.3.1 3.3.2	lgo_stats_ Detailed Field Do 3.2.2.1 3.2.2.2 3.2.2.3 3.2.2.4 uf_cmd_t Detailed Field Do 3.3.2.1 3.3.2.2 t6_cmd_t	d Description	60 61 61 61 61 62 62 62
		3.2.1 3.2.2 fpp_b 3.3.1 3.3.2 fpp_c 3.4.1	lgo_stats_ Detailed Field Do 3.2.2.1 3.2.2.2 3.2.2.3 3.2.2.4 uf_cmd_t Detailed Field Do 3.3.2.1 3.3.2.2 t6_cmd_t	d Description coumentation processed accepted rejected discarded t Struct Reference d Description coumentation payload len struct Reference d Description coumentation payload coumentation coumentation coumentation coumentation coumentation coumentation coumentation	60 61 61 61 61 62 62 62 63 63
		3.2.1 3.2.2 fpp_b 3.3.1 3.3.2 fpp_c 3.4.1	lgo_stats_ Detailed Field Do 3.2.2.1 3.2.2.2 3.2.2.3 3.2.2.4 uf_cmd_t Detailed Field Do 3.3.2.1 3.3.2.2 t6_cmd_t Detailed Field Do 3.4.2.1	d Description coumentation processed accepted rejected discarded t Struct Reference d Description coumentation payload len Struct Reference d Description coumentation payload len Struct Reference d Description coumentation coumentation coumentation description coumentation coumentation coumentation	60 61 61 61 61 62 62 62 63 63
		3.2.1 3.2.2 fpp_b 3.3.1 3.3.2 fpp_c 3.4.1	lgo_stats_Detailed Field Do 3.2.2.1 3.2.2.2 3.2.2.3 3.2.2.4 uf_cmd_t Detailed Field Do 3.3.2.1 3.3.2.2 t6_cmd_t Detailed Field Do 3.4.2.1 3.4.2.2	I Description coumentation processed accepted accepted discarded t Struct Reference I Description coumentation payload len struct Reference I Description coumentation coumentation coumentation coumentation coumentation	60 61 61 61 61 62 62 62 63 63 63
		3.2.1 3.2.2 fpp_b 3.3.1 3.3.2 fpp_c 3.4.1	lgo_stats_Detailed Field Do 3.2.2.1 3.2.2.2 3.2.2.3 3.2.2.4 uf_cmd_t Detailed Field Do 3.3.2.1 3.3.2.2 t6_cmd_t Detailed Field Do 3.4.2.1 3.4.2.2 3.4.2.3	I Description coumentation processed accepted rejected discarded t Struct Reference I Description coumentation payload len Struct Reference I Description coumentation payload len Struct Reference I Description coumentation	60 61 61 61 61 62 62 62 63 63 63
		3.2.1 3.2.2 fpp_b 3.3.1 3.3.2 fpp_c 3.4.1	lgo_stats_Detailed Field Do 3.2.2.1 3.2.2.2 3.2.2.3 3.2.2.4 uf_cmd_t Detailed Field Do 3.3.2.1 3.3.2.2 t6_cmd_t Detailed Field Do 3.4.2.1 3.4.2.2	I Description ocumentation processed accepted rejected discarded t Struct Reference I Description ocumentation payload len Struct Reference I Description cumentation payload len struct Reference I Description cumentation payload len struct Reference I Description cumentation cumentation	60 61 61 61 61 62 62 62 63 63 63



	3.4.2.6 saddr_reply	64
	3.4.2.7 daddr_reply	64
	3.4.2.8 sport_reply	64
	3.4.2.9 dport_reply	64
	3.4.2.10 protocol	64
	3.4.2.11 flags	64
	3.4.2.12 route_id	
	3.4.2.13 route_id_reply	
	3.4.2.14 vlan	
	3.4.2.15 vlan_reply	
3.5	fpp_ct_cmd_t Struct Reference	
0.0	3.5.1 Detailed Description	
	3.5.2 Field Documentation	
	3.5.2.1 action	
	3.5.2.2 saddr	
	3.5.2.3 daddr	
	3.5.2.4 sport	
	3.5.2.5 dport	
	3.5.2.6 saddr_reply	
	3.5.2.7 daddr_reply	
	3.5.2.8 sport_reply	
	3.5.2.9 dport_reply	
	3.5.2.10 protocol	
	3.5.2.11 flags	
	3.5.2.12 route_id	
	3.5.2.13 route_id_reply	
	3.5.2.14 vlan	
	3.5.2.15 vlan_reply	
3.6	fpp_fp_rule_cmd_t Struct Reference	
	3.6.1 Detailed Description	68
	3.6.2 Field Documentation	68
	3.6.2.1 action	69
	3.6.2.2 r	69
3.7	fpp_fp_rule_props_t Struct Reference	69
	3.7.1 Detailed Description	69
3.8	fpp_fp_table_cmd_t Struct Reference	70
	3.8.1 Detailed Description	70
	3.8.2 Field Documentation	70
	3.8.2.1 action	70
	3.8.2.2 table_name	
	3.8.2.3 rule_name	
	3.8.2.4 position	
	3.8.2.5 r	
3.9	fpp_fw_features_cmd_t Struct Reference	
0.0	3.9.1 Detailed Description	
	3.9.2 Field Documentation	
	3.9.2.1 action	
	0.0.0.0	7.



3.9.2.3 desc
3.9.2.4 val
3.9.2.5 variant
3.9.2.6 def_val
3.9.2.7 reserved
3.10 fpp_if_m_args_t Struct Reference
3.10.1 Detailed Description
3.10.2 Field Documentation
3.10.2.1 vlan
3.10.2.2 ethtype
3.10.2.3 sport
3.10.2.4 dport
3.10.2.5
3.10.2.7 proto
3.10.2.8 smac
3.10.2.9 dmac
3.10.2.10fp_table0
3.10.2.11fp_table1
3.10.2.12hif_cookie
3.11 fpp_l2_bd_cmd_t Struct Reference
3.11.1 Detailed Description
3.11.2 Field Documentation
3.11.2.1 action
3.11.2.2 vlan
3.11.2.3 ucast_hit
3.11.2.4 ucast_miss
3.11.2.5 mcast_hit
3.11.2.6 mcast_miss
3.11.2.7 if_list
3.11.2.8 untag_if_list
3.11.2.9 flags
3.12 fpp_log_if_cmd_t Struct Reference
3.12.1 Detailed Description
3.12.2 Field Documentation
3.12.2.1 action
3.12.2.2 name
3.12.2.3 id
3.12.2.4 parent_name
3.12.2.5 parent_id
3.12.2.6 egress
· · · · · · · · · · · · · · · · · · ·
O .
3.12.2.8 match
3.12.2.9 arguments
3.12.2.10stats
3.13 fpp_phy_if_cmd_t Struct Reference
3.13.1 Detailed Description
3.13.2 Field Documentation



6

3.13.2.1 action
3.13.2.2 name
3.13.2.3 id
3.13.2.4 flags
3.13.2.5 mode
3.13.2.6 block_state
3.13.2.7 stats
3.13.2.8 mac_addr
3.13.2.9 mirror
3.13.2.10ftable
3.14 fpp_phy_if_stats_t Struct Reference
3.14.1 Detailed Description
3.14.2 Field Documentation
3.14.2.1 ingress
3.14.2.2 egress
3.14.2.3 malformed
3.14.2.4 discarded
3.15 fpp_qos_queue_cmd_t Struct Reference
3.15.1 Detailed Description
3.15.2 Field Documentation
3.15.2.1 action
3.15.2.2 if_name
3.15.2.3 id
3.15.2.4 mode
3.15.2.5 min
3.15.2.6 max
3.15.2.7 zprob
3.16 fpp_qos_scheduler_cmd_t Struct Reference
3.16.1 Detailed Description
3.16.2 Field Documentation
3.16.2.1 action
3.16.2.2 if_name
3.16.2.3 id
3.16.2.4 mode
3.16.2.5 algo
3.16.2.6 input_en
3.16.2.7 input_w
3.16.2.8 input_src
3.17 fpp_qos_shaper_cmd_t Struct Reference
3.17.1 Detailed Description
3.17.2 Field Documentation
3.17.2.1 action
3.17.2.3 id
3.17.2.4 position
3.17.2.5 mode
3.17.2.6 isl
3.17.2.7 max credit



		3.17.2.8 min_credit	93
	3.18	B fpp_rt_cmd_t Struct Reference	93
		3.18.1 Detailed Description	93
		3.18.2 Field Documentation	93
		3.18.2.1 action	94
		3.18.2.2 src_mac	94
		3.18.2.3 dst_mac	94
		3.18.2.4 output_device	94
		3.18.2.5 id	94
		3.18.2.6 flags	95
	3.19	9 fpp_spd_cmd_t Struct Reference	95
		3.19.1 Detailed Description	95
		3.19.2 Field Documentation	95
		3.19.2.1 action	95
		3.19.2.2 name	96
		3.19.2.3 position	96
		3.19.2.4 saddr	96
		3.19.2.5 daddr	96
		3.19.2.6 sport	96
		3.19.2.7 dport	96
		3.19.2.8 protocol	96
		3.19.2.9 sa_id	96
		3.19.2.10spi	97
		3.19.2.11spd_action	97
	3 20) fpp_timeout_cmd_t Struct Reference	97
	3.20	3.20.1 Detailed Description	97
		5.20.1 Detailed Description	51
4	File	Documentation	98
	4.1	fpp.h File Reference	98
		4.1.1 Detailed Description	
		4.1.2 Macro Definition Documentation	99
		4.1.2.1 FPP_CMD_IPV4_CONNTRACK	99
		4.1.2.2 FPP_CMD_IPV6_CONNTRACK	102
		4.1.2.3 FPP_CMD_IP_ROUTE	
		4.1.2.4 FPP_CMD_IPV4_RESET	
		4.1.2.5 FPP_CMD_IPV6_RESET	
	4.0	4.1.2.6 FPP_CMD_IPV4_SET_TIMEOUT	
	4.2	fpp_ext.h File Reference	
		4.2.1 Detailed Description	
	4.3	libfci.h File Reference	
		4.3.1 Detailed Description	111
5	Eva	mple Documentation	112
•	5.1	fpp_cmd_phy_if.c	
	5.2	fpp_cmd_log_if.c	
	5.3	fpp_cmd_ip_route.c	
	5.4	fpp_cmd_ipv4_conntrack.c	
	5.5	fpp_cmd_ipv6_conntrack.c	
	h h	IND CMG GOS GUEUR C	1 30

	CONTENTS
5.7 fpp_cmd_qos_scheduler.c	
5.8 fpp_cmd_qos_shaper.c	
5.10 fpp_cmd_fp_table.c	141
Index	143



Chapter 1

Revision History

Revision	Change Description
1.0.0	Initial version. Contains description of FCI API and following features: • Interface Management • IPv4/IPv6 Router (TCP/UDP) • L2 Bridge (Switch) • Flexible Parser • Flexible Router
1.1.0	Added description of simple bridge (without VLAN awareness). Disabled part describing async messaging as it is currently not used. Description of fci_cmd(), fci_query(), and fci_write() simplified. Various minor improvements.
1.2.0	Improved description of Router and Bridge configuration steps. Added missing byte order information to various command argument values. Following values unified with rest of structure members to be in network byte order:
	• fpp_rt_cmd_t::id
	• fpp_rt_cmd_t::flags
	• fpp_ct_cmd_t::route_id
	• fpp_ct_cmd_t::route_id_reply
	• fpp_ct_cmd_t::flags
	• fpp_fp_table_cmd_t::position
1.2.1	Added FPP_IF_MIRROR to fpp_if_flags_t. Added name of interface to mirror the traffic to fpp_phy_if_cmd_t.



1.3.0	Description of various elements re-phrased to better explain their				
	purpose. Created summary lists of functions, commands, and events				
	and added links to them to improve document navigation. Added				
	usage examples for FPP_CMD_PHY_IF, FPP_CMD_LOG_IF, and				
	FPP_CMD_IP_ROUTE commands. Described relevant fpp_rt_cm				
	structure members.				
1.4.0	Added usage examples for FPP_CMD_IPV4_CONNTRACK and				
	FPP_CMD_IPV6_CONNTRACK. Related argument structures				
	documentation updated. Removed unwanted and unsupported				
	symbol descriptions.				
1.5.0	Added statistics for physical fpp_phy_if_stats_t and logical				
	fpp_algo_stats_t interfaces . Statistics are in network byte				
	order.				
1.6.0	Added API for data passing: FPP_CMD_DATA_BUF_PUT and				
	FPP_CMD_DATA_BUF_AVAIL with related fpp_buf_cmd_t.				
1.7.0	Described the IPsec offload configuration and related				
	FPP_CMD_SPD command.				
1.8.0	Added QoS configuration commands: FPP_CMD_QOS_QUEUE,				
	FPP_CMD_QOS_SCHEDULER and FPP_CMD_QOS_SHAPER with				
	related argument structures.				
1.8.1	Licensing notice within headers of examples updated.				
1.9.0	Added L2L3 Bridge, Feature management and Static Entries (L2				
	Bridge) API. Synced with recent changes. Various improvements.				
1.9.1	Copyright notice and document classification updated. Removed				
	the "Index" chapters.				
1.9.2	The fpp_rt_cmd_t updated to include src_mac member				
	description. Various minor improvements.				
	•				



Chapter 2

Module Documentation

2.1 LibFCI

This is the Fast Control Interface available to host applications to communicate with the networking engine.

2.1.1 Introduction

This is the Fast Control Interface available to host applications to communicate with the networking engine.

The FCI is intended to provide a generic configuration and monitoring interface to networking acceleration HW. Provided API shall remain the same within all HW/OS-specific implementations to keep dependent applications portable across various systems.

The LibFCI is not directly touching the HW. Instead, it only passes commands to dedicated software component (OS/HW-specific endpoint) and receives return values. The endpoint is then responsible for HW configuration. This approach supports kernel-user space deployment where user space contains only API and the logic is implemented in kernel.

Implementation uses appropriate transport mechanism to pass data between LibFCI user and the endpoint. For reference, in Linux netlink socket will be used, in QNX it will be a message.

Usage scenario example - FCI command execution:

- 1. User calls fci_open() to get the FCI_CLIENT instance, use FCI_GROUP_NONE as multicast group mask.
- 2. User calls fci_cmd() to send a command with arguments to the endpoint.
- 3. Endpoint receives the command and performs requested actions.
- 4. Endpoint generates response and sends it back to the client.
- 5. Client receives the response and informs the caller.
- 6. User calls fci_close() to finalize the FCI_CLIENT instance.



2.1.2 Acronyms and Definitions

- **Physical Interface:** Interface physically able to send and receive data (EMAC, HIF). Physical interfaces are pre-defined and can't be added or removed in runtime. Every physical interface has associated a **default** logical interface and set of properties like classification algorithm.
- Logical Interface: Extension of physical interface defined by set of rules which describes Ethernet traffic. Intended to be used to dispatch traffic being received via particular physical interfaces using 1:N association i.e. traffic received by a physical interface can be classified and distributed to N logical interfaces. These can be either connected to SW stack running in host system or just used to distribute traffic to an arbitrary physical interface(s). Logical interfaces are dynamic objects and can be created and destroyed in runtime.
- Classification Algorithm: Way how ingress traffic is being processed by the PFE firmware.
- **Route:** Routes are representing direction where matching traffic shall be forwarded to. Every route specifies egress physical interface and MAC address of next network node.
- **Conntrack:** "Tracked connection", a data structure containing information about a connection. In context of this document it always refers to an IP connection (TCP, UDP, other). Term is equal to 'routing table entry'. Conntracks contain reference to routes which shall be used in case when a packet is matching the conntrack properties.

2.1.3 Functions Summary

- fci_open()
 Connect to endpoint and create client instance.
- fci_close()

 Close connection and destroy the client instance.
- fci_write()

 Execute FCI command without data response.
- fci_cmd()

 Execute FCI command with data response.
- fci_query()
 Alternative to fci_cmd().
- fci_catch()

 Poll for and process received asynchronous messages.
- fci_register_cb()
 Register callback to be called in case of received message.

2.1.4 Commands Summary

• FPP_CMD_PHY_IF

Management of physical interfaces.

MODULE DOCUMENTATION



- FPP_CMD_LOG_IF
 Management of logical interfaces.
- FPP_CMD_IF_LOCK_SESSION Get exclusive access to interfaces.
- FPP_CMD_IF_UNLOCK_SESSION Cancel exclusive access to interfaces.
- FPP_CMD_L2_BD L2 bridge domains management.
- FPP_CMD_L2_FLUSH_LEARNED Remove all learned MAC table entries.
- FPP_CMD_L2_FLUSH_STATIC Remove all static MAC table entries.
- FPP_CMD_L2_FLUSH_ALL Remove all MAC table entries.
- FPP_CMD_FP_TABLE

 Administration of Flexible Parser tables.
- FPP_CMD_FP_RULE

 Administration of Flexible Parser rules.
- FPP_CMD_FP_FLEXIBLE_FILTER

 Utilization of Flexible Parser to filter out (drop) frames.
- FPP_CMD_IPV4_RESET Reset IPv4 (routes, conntracks, ...).
- FPP_CMD_IPV6_RESET Reset IPv6 (routes, conntracks, ...).
- FPP_CMD_IP_ROUTE Management of IP routes.
- FPP_CMD_IPV4_CONNTRACK Management of IPv4 connections.
- FPP_CMD_IPV6_CONNTRACK Management of IPv6 connections.
- FPP_CMD_IPV4_SET_TIMEOUT Configuration of connection timeouts.
- FPP_CMD_DATA_BUF_PUT Send arbitrary data to the accelerator.
- FPP_CMD_SPD Configure the IPsec offload.
- FPP_CMD_QOS_QUEUE Management of Egress QoS queues.
- FPP_CMD_QOS_SCHEDULER Management of Egress QoS schedulers.
- FPP_CMD_QOS_SHAPER



Management of Egress QoS shapers.

2.1.5 Events summary

• FPP_CMD_DATA_BUF_AVAIL

Network accelerator sends a data buffer to host.

2.1.6 Interface Management

Physical Interface

Physical interfaces are static objects and are defined at startup. LibFCI client can get a list of currently available physical interfaces using query option of the FPP_CMD_PHY_IF command. Every physical interface contains a list of logical interfaces. Without any configuration all physical interfaces are in default operation mode. It means that all ingress traffic is processed using only associated **default** logical interface. Default logical interface is always the tail of the list of associated logical interfaces. When new logical interface is associated, it is placed at head position of the list so the default one remains on tail. User can change the used classification algorithm via update option of the FPP_CMD_PHY_IF command.

Here are supported operations related to physical interfaces:

To list available physical interfaces:

- 1. Lock interface database with FPP_CMD_IF_LOCK_SESSION.
- Read first interface via FPP_CMD_PHY_IF + FPP_ACTION_QUERY.
- 3. Read next interface(s) via FPP_CMD_PHY_IF + FPP_ACTION_QUERY_CONT.
- 4. Unlock interface database with FPP_CMD_IF_UNLOCK_SESSION.

To **modify** a physical interface (read-modify-write):

- 1. Lock interface database with FPP_CMD_IF_LOCK_SESSION.
- 2. Read interface properties via FPP_CMD_PHY_IF + FPP_ACTION_QUERY + FPP_ACTION_QUERY_CONT.
- 3. Modify desired properties.
- 4. Write modifications using FPP_CMD_PHY_IF + FPP_ACTION_UPDATE.
- 5. Unlock interface database with FPP_CMD_IF_UNLOCK_SESSION.

Logical Interface

Logical interfaces specify traffic endpoints. They are connected to respective physical interfaces and contain information about which traffic can they accept and how the accepted traffic shall be processed (where, resp. to which **physical** interface(s) the matching traffic shall be forwarded). For example, there can be two logical interfaces associated with an EMAC1, one accepting traffic with VLAN ID = 10 and the second one accepting all



remaining traffic. First one can be configured to forward the matching traffic to EMAC1 and the second one to drop the rest.

Logical interfaces can be created and destroyed in runtime using actions related to the FPP_CMD_LOG_IF command. Note that first created logical interface on a physical interface becomes the default one (tail). All subsequent logical interfaces are added at head position of list of interfaces.

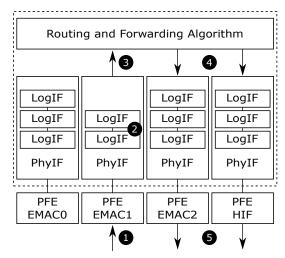


Figure 2.1 Configuration Example

The example shows scenario when physical interface EMAC1 is configured in FPP_IF_OP_FLEXIBLE_ROUTER operation mode:

- 1. Packet is received via EMAC1 port of the PFE.
- 2. Classifier walks through list of Logical Interfaces associated with the ingress Physical Interface. Every Logical Interface contains a set of classification rules (see fpp_if_m_rules_t) the classification process is using to match the ingress packet. Note that the list is searched from head to tail, where tail is the default logical interface.
- 3. Information about matching Logical Interface and Physical Interface is passed to the Routing and Forwarding Algorithm. The algorithm reads the Logical Interface and retrieves forwarding properties.
- 4. The matching Logical Interface is configured to forward the packet to EMAC2 and HIF so the forwarding algorithm ensures that. Optionally, here the packet can be modified according to interface setup (VLAN insertion, source MAC address replacement, ...).
- 5. Packet is physically transmitted via dedicated interfaces. Packet replica sent to HIF carries metadata describing the matching Logical and Physical interface so the host driver can easily dispatch the traffic.

Here are supported operations related to logical interfaces:

To **create** new logical interface:

- 1. Lock interface database with FPP_CMD_IF_LOCK_SESSION.
- Create logical interface via FPP_CMD_LOG_IF + FPP_ACTION_REGISTER.



3. Unlock interface database with FPP_CMD_IF_UNLOCK_SESSION.

To **list** available logical interfaces:

- 1. Lock interface database with FPP_CMD_IF_LOCK_SESSION.
- 2. Read first interface via FPP_CMD_LOG_IF + FPP_ACTION_QUERY.
- 3. Read next interface(s) via FPP_CMD_LOG_IF + FPP_ACTION_QUERY_CONT.
- 4. Unlock interface database with FPP_CMD_IF_UNLOCK_SESSION.

To **modify** an interface (read-modify-write):

- 1. Lock interface database with FPP_CMD_IF_LOCK_SESSION.
- 2. Read interface properties via FPP_CMD_LOG_IF + FPP_ACTION_QUERY + FPP_ACTION_QUERY_CONT.
- 3. Modify desired properties.
- 4. Write modifications using FPP_CMD_LOG_IF + FPP_ACTION_UPDATE.
- 5. Unlock interface database with FPP_CMD_IF_UNLOCK_SESSION.

To **remove** logical interface:

- 1. Lock interface database with FPP_CMD_IF_LOCK_SESSION.
- 2. Remove logical interface via FPP_CMD_LOG_IF + FPP_ACTION_DEREGISTER.
- 3. Unlock interface database with FPP_CMD_IF_UNLOCK_SESSION.

2.1.7 Features

2.1.7.1 IPv4/IPv6 Router (TCP/UDP)

Introduction

The IPv4/IPv6 Forwarder is a dedicated feature to offload the host CPU from tasks related to forwarding of specific IP traffic between physical interfaces. Normally, the ingress IP traffic is passed to the host CPU running TCP/IP stack which is responsible for routing of the packets. Once the stack identifies that a packet does not belong to any of local IP endpoints it performs lookup in routing table to determine how to process such traffic. If the routing table contains entry associated with the packet (5-tuple search) the stack modifies and forwards the packet to another interface to reach its intended destination node. The PFE can be configured to identify flows which do not need to enter the host CPU using its internal routing table, and to ensure that the right packets are forwarded to the right destination interfaces.

Configuration

The FCI contains mechanisms to setup particular Physical Interfaces to start classifying packets using Router classification algorithm as well as to manage PFE routing tables. The router configuration then consists of following steps:

MODULE DOCUMENTATION



- 1. Optionally use FPP_CMD_IPV4_RESET or FPP_CMD_IPV6_RESET to initialize the router. All previous configuration changes will be discarded.
- 2. Create one or more routes (FPP_CMD_IP_ROUTE + FPP_ACTION_REGISTER). Once created, every route has an unique identifier. Creating route on an physical interface causes switch of operation mode of that interface to FPP_IF_OP_ROUTER.
- 3. Create one or more IPv4 routing table entries (FPP_CMD_IPV4_CONNTRACK + FPP_ACTION_REGISTER).
- 4. Create one or more IPv6 routing table entries (FPP_CMD_IPV6_CONNTRACK + FPP_ACTION_REGISTER).
- 5. Set desired physical interface(s) to router mode FPP_IF_OP_ROUTER using FPP_CMD_PHY_IF + FPP_ACTION_UPDATE. This selects interfaces which will use routing algorithm to classify ingress traffic.
- 6. Enable physical interface(s) by setting the FPP_IF_ENABLED flag via the FPP_CMD_PHY_IF + FPP_ACTION_UPDATE.
- 7. Optionally change MAC address(es) via FPP_CMD_PHY_IF + FPP_ACTION_UPDATE.

From this point the traffic matching created countracks is processed according to countrack properties (e.g. NAT) and fast-forwarded to configured physical interfaces. Countracks are subject of aging. When no traffic has been seen for specified time period (see FPP_CMD_IPV4_SET_TIMEOUT) the countracks are removed.

Routes and conntracks can be listed using query commands:

- FPP_CMD_IP_ROUTE + FPP_ACTION_QUERY + FPP_ACTION_QUERY_CONT.
- FPP_CMD_IPV4_CONNTRACK+FPP_ACTION_QUERY+FPP_ACTION_QUERY_CONT.
- FPP_CMD_IPV6_CONNTRACK+FPP_ACTION_QUERY+FPP_ACTION_QUERY_CONT.

When conntrack or route are no more required, they can be deleted via corresponding command:

- FPP_CMD_IP_ROUTE + FPP_ACTION_DEREGISTER,
- FPP_CMD_IPV4_CONNTRACK + FPP_ACTION_DEREGISTER, and
- FPP_CMD_IPV6_CONNTRACK + FPP_ACTION_DEREGISTER.

Deleting route causes deleting all associated countracks. When the latest route on an interface is deleted, the interface is put to default operation mode FPP_IF_OP_DEFAULT.

The conntracks are created default with TTL decrement option. That option can be changed using update command:

- FPP_CMD_IPV4_CONNTRACK + FPP_ACTION_UPDATE, and
- FPP_CMD_IPV6_CONNTRACK + FPP_ACTION_UPDATE.



2.1.7.2 L2 Bridge (Switch)

Introduction

The L2 Bridge functionality covers forwarding of packets based on MAC addresses. It provides possibility to move bridging-related tasks from host CPU to the PFE and thus offloads the host-based networking stack. The L2 Bridge feature represents a network switch device implementing following functionality:

- MAC table and address learning: The L2 bridging functionality is based on determining to which interface an ingress packet shall be forwarded. For this purpose a network switch device implements so called bridging table (MAC table) which is searched to get target interface for each packet entering the switch. If received source MAC address does not match any MAC table entry then a new entry, containing the Physical Interface which the packet has been received on, is added learned. Destination MAC address of an ingress packet is then used to search the table to determine the target interface.
- **Static entries:** Bridge table can also contain static entry that are not aged. This entry is otherwise the same as standard entry. The main usage of static entry is to configure bridge in forward only mode and configure all entries manually. In this case only predetermined traffic matching to the static entries will be forwarded.
- **Aging:** Each MAC table entry gets default timeout value once learned. In time this timeout is being decreased until zero is reached. Entries with zero timeout value are automatically removed from the table. The timeout value is re-set each time the corresponding table entry is used to process a packet. The static entries are not affected by aging.
- **Port migration:** When a MAC address is seen on one interface of the switch and an entry has been created, it is automatically updated when the MAC address is seen on another interface.
- VLAN Awareness: The bridge implements VLAN table. This table is used to implement VLAN-based policies like Ingress and Egress port membership. Feature includes configurable VLAN tagging and un-tagging functionality per bridge interface (Physical Interface). The bridge utilizes PFE HW accelerators to perform MAC and VLAN table lookup thus this operation is highly optimized. Host CPU SW is only responsible for correct bridge configuration using the dedicated API.

L2 Bridge VLAN Awareness and Domains

The VLAN awareness is based on entities called Bridge Domains (BD) which are visible to both classifier firmware, and the driver, and are used to abstract particular VLANs. Every BD contains configurable set of properties:

- Associated VLAN ID.
- Set of Physical Interfaces which are members of the domain.
- Information about which of the member interfaces are 'tagged' or 'untagged'.
- Instruction how to process matching uni-cast packets (forward, flood, discard, ...).



• Instruction how to process matching multi-cast packets.

The L2 Bridge then consists of multiple BD types:

- The Default BD: Default domain is used by the classification process when a packet has been received with default VLAN ID. This can happen either if the packet does not contain VLAN tag or the VLAN tag is equal to the default VLAN configured within the bridge.
- The Fall-back BD: This domain is used when packet with an unknown VLAN ID (does not match any standard or default domain) is received in FPP_IF_OP_VLAN_BRIDGE mode. It is also used as representation of simple L2 bridge when VLAN awareness is disabled (in case of the FPP_IF_OP_BRIDGE mode).
- **Set of particular Standard BDs:** Standard domain. Specifies what to do when packet with VLAN ID matching the Standard BD is received.

Configuration (Bridge Domain)

Here are steps needed to configure VLAN-aware switch:

- 1. Optionally get list of available physical interfaces and their IDs. See the Interface Management.
- Create a bridge domain (VLAN domain) (FPP_CMD_L2_BD + FPP_ACTION_REGISTER).
- 3. Configure domain hit/miss actions (FPP_CMD_L2_BD + FPP_ACTION_UPDATE) to let the bridge know how to process matching traffic.
- 4. Add physical interfaces as members of that domain (FPP_CMD_L2_BD + FPP_ACTION_UPDATE). Adding interface to a bridge domain causes switch of its operation mode to FPP_IF_OP_VLAN_BRIDGE and enabling promiscuous mode on MAC level. There is also a preconfigured default domain that identifies with VLAN 1.
- 5. Set physical interface(s) to VLAN bridge mode FPP_IF_OP_VLAN_BRIDGE using FPP CMD PHY IF + FPP ACTION UPDATE.
- 6. Set promiscuous mode and enable physical interface(s) by setting the FPP_IF_ENABLED and FPP_IF_PROMISC flags via the FPP_CMD_PHY_IF + FPP_ACTION_UPDATE.

For simple, non-VLAN aware switch do:

- 1. Optionally get list of available physical interfaces and their IDs. See the Interface Management.
- Add physical interfaces as members of fall-back BD (FPP_CMD_L2_BD + FPP_ACTION_UPDATE). The fall-back BD is identified by VLAN 0 and exists automatically.
- 3. Configure domain hit/miss actions (FPP_CMD_L2_BD + FPP_ACTION_UPDATE) to let the bridge know how to process matching traffic.



- 4. Set physical interface(s) to simple bridge mode FPP_IF_OP_BRIDGE using FPP_CMD_PHY_IF + FPP_ACTION_UPDATE.
- 5. Set promiscuous mode and enable physical interface(s) by setting the FPP_IF_ENABLED and FPP_IF_PROMISC flags via the FPP_CMD_PHY_IF + FPP_ACTION_UPDATE.

Once interfaces are in bridge domain, all ingress traffic is processed according to bridge domain setup. Unknown source MAC addresses are being learned and after specified time period without traffic are being aged.

An interface can be added to or removed from BD at any time via FPP_CMD_L2_BD + FPP_ACTION_UPDATE. When interface is removed from all bridge domains (is not associated with any BD), its operation mode is automatically switched to FPP_IF_OP_DEFAULT and MAC promiscuous mode is disabled.

List of available bridge domains with their properties can be retrieved using FPP_CMD_L2_BD + FPP_ACTION_QUERY + FPP_ACTION_QUERY_CONT.

Static mac entries can be added once the bridge domain is configured. To add or update use FPP_CMD_L2_STATIC_ENT + FPP_ACTION_REGISTER + FPP_ACTION_UPDATE. A static entry can be deleted using FPP_CMD_L2_STATIC_ENT + FPP_ACTION_DEREGISTER or all entries using FPP_CMD_L2_FLUSH_STATIC.

2.1.7.3 L2L3 Bridge

Introduction

The L2L3 Bridge is an extension of the available L2 bridge and IPv4/IPv6 Router algorithms. It requires both algorithms to be configured and (at least one) static entry with local MAC address flag being set, which denotes that the MAC address belongs to the IP Router.

Whenever a frame arrives it is checked against the local MAC addresses and it is passed to the IP Router algorithm when the frame destination address equals to one of local MAC addresses. Otherwise, it is passed to the L2 bridge.

Note that static entry forward list is ignored when the frame is passed to the IP router.

Configuration

To run the L2L3 Bridge mode

- 1. Configure L2 Bridge and IP Router algorithms as described in respective sections.
- 2. Create at least one static entry with local address flag being set.
- 3. Set physical interface(s) to L2L3 Bridge mode using FPP_CMD_PHY_IF + FPP_ACTION_UPDATE.



2.1.7.4 Flexible Parser

Introduction

The Flexible Parser is PFE firmware-based feature allowing user to extend standard ingress packet classification process by set of customizable classification rules. According to the rules the Flexible Parser can mark frames as ACCEPTED or REJECTED. The rules are configurable by user and exist in form of tables. Every classification table entry consist of following fields:

- 32-bit Data field to be compared with value from the ingress frame.
- 32-bit Mask field (active bits are '1') specifying which bits of the data field will be used to perform the comparison.
- 16-bit Configuration field specifying rule properties including the offset to the frame data which shall be compared.

The number of entries within the table is configurable by user. The table is processed sequentially starting from entry index 0 until the last one is reached or classification is terminated by a rule configuration. When none of rules has decided that the packet shall be accepted or rejected the default result is REJECT.

Example

This is example of how Flexible Parser table can be configured. Every row contains single rule and processing starts with rule 0. ACCEPT/REJECT means that the classification is terminated with given result, CONTINUE means that next rule (sequentially) will be evaluated. CONTINUE with N says that next rule to be evaluated is N. Evaluation of the latest rule not resulting in ACCEPT or REJECT results in REJECT.

Rule	Flags	Mask	Next	Condition
0	FP_FL_INVERT	!= 0	n/a	if ((PacketData&Mask) != (RuleData&Mask))
	FP_FL_REJECT			then REJECT
				else CONTINUE
1	FP_FL_ACCEPT	!= 0	n/a	if ((PacketData&Mask) == (RuleData&Mask))
				then ACCEPT
				else CONTINUE
2	-	!= 0	4	if ((PacketData&Mask) == (RuleData&Mask))
				then CONTINUE with 4
				else CONTINUE
3	FP_FL_REJECT	= 0	n/a	REJECT
4	FP_FL_INVERT	!= 0	6	if ((PacketData&Mask) != (RuleData&Mask))
				then CONTINUE with 6
				else CONTINUE
5	FP_FL_ACCEPT	= 0	n/a	ACCEPT
6	FP_FL_INVERT	!= 0	n/a	if ((PacketData&Mask) != (RuleData&Mask))
	FP_FL_ACCEPT			then ACCEPT
				else CONTINUE
7	FP_FL_REJECT	= 0	n/a	REJECT



Configuration

- 1. Create a Flexible Parser table using FPP_CMD_FP_TABLE + FPP_ACTION_REGISTER.
- 2. Create one or multiple rules with FPP_CMD_FP_RULE + FPP_ACTION_REGISTER.
- 3. Assing rules to tables via FPP_CMD_FP_TABLE + FPP_ACTION_USE_RULE. Rules can be removed from table with FPP_ACTION_UNUSE_RULE.

Created table can be used for instance as argument of Flexible Router. When not needed the table can be deleted with FPP_CMD_FP_TABLE + FPP_ACTION_DEREGISTER and particular rules with FPP_CMD_FP_RULE + FPP_ACTION_DEREGISTER. This cleanup should be always considered since tables and rules are stored in limited PFE internal memory.

Flexible parser classification introduces performance penalty which is proportional to number of rules and complexity of the table.

2.1.7.5 Flexible Router

Introduction

Flexible router specifies behavior when ingress packets are classified and routed according to custom rules different from standard L2 Bridge (Switch) or IPv4/IPv6 Router processing. Feature allows definition of packet distribution rules using physical and logical interfaces. The classification hierarchy is given by ingress physical interface containing a configurable set of logical interfaces. Every time a packet is received via the respective physical interface, which is configured to use the Flexible Router classification, a walk through the list of associated logical interfaces is performed. Every logical interface is used to match the packet using interface-specific rules (fpp_if_m_rules_t). In case of match the matching packet is processed according to the interface configuration (e.g. forwarded via specific physical interface(s), dropped, sent to host, ...). In case when more rules are specified, the logical interface can be configured to apply logical AND or OR to get the match result. Please see the example within Interface Management.

Configuration

- 1. Lock interface database with FPP_CMD_IF_LOCK_SESSION.
- 2. Use FPP_CMD_PHY_IF + FPP_ACTION_UPDATE to set a physical interface(s) to FPP_IF_OP_FLEXIBLE_ROUTER operation mode.
- 3. Use FPP_CMD_LOG_IF + FPP_ACTION_REGISTER to create new logical interface(s) if needed.
- 4. Optionally, if Flexible Parser is desired to be used as a classification rule, create table(s) according to Flexible Parser description.
- 5. Configure existing logical interface(s) (set match rules and arguments) via FPP_CMD_LOG_IF + FPP_ACTION_UPDATE.
- 6. Unlock interface database with FPP_CMD_IF_UNLOCK_SESSION.

MODULE DOCUMENTATION



Note that Flexible Router can be used to implement certain form of IPv4/IPv6 Router (TCP/UDP) as well as L2 Bridge (Switch). Such usage is of course not recommended since both mentioned features exist as fully optimized implementation and usage of Flexible Router this way would pointlessly affect forwarding performance.

2.1.7.6 IPsec Offload

Introduction

The IPsec offload feature is a premium one and requires a special premium firmware version to be available for use. It allows the chosen IP frames to be transparently encoded by the IPsec and IPsec frames to be transparently decoded without the CPU intervention using just the PFE and HSE engines.

The SPD database needs to be established on an interface which contains entries describing frame match criteria together with the SA ID reference to the SA established within the HSE describing the IPsec processing criteria. Frames matching the criteria are then processed by the HSE according to the chosen SA and returned for the classification via physical interface of UTIL PE. Normal classification follows the IPsec processing thus the decrypted packets can be e.g. routed.

Configuration

- 1. Use (repeatedly) the FPP_CMD_SPD command with FPP_ACTION_REGISTER action to set the SPD entries
- 2. Optionally the FPP_CMD_SPD command with FPP_ACTION_DEREGISTER action can be used to delete SPD entries

The HSE also requires the configuration via interfaces of the HSE firmware which is out of the scope of this document. The SAs referenced within the SPD entries must exist prior creation of the respective SPD entry.

2.1.7.7 Egress QoS

Introduction

The egress QoS allows user to prioritize, aggregate and shape traffic intended to leave the accelerator via physical interface. Each physical interface contains dedicated QoS block with specific number of schedulers, shapers and queues. Following applies for the S32G2/PFE:

• Number of queues: 8

• Maximum queue depth: 255

• Probability zones per queue: 8

• Number of schedulers: 2

• Number of scheduler inputs: 8

• Allowed data sources which can be connected to the scheduler inputs:



Source	Description
0 - 7	Queue 0 - 7
8	Output of Scheduler 0
255	Invalid


- Number of shapers: 4
- Allowed shaper positions:

Position	Description
0	Output of Scheduler 1 (QoS master output)
1 - 8	Input 0 - 7 of Scheduler 1
9 - 16	Input 0 - 7 of Scheduler 0
255	Invalid, Shaper disconnected

Note that only shapers connected to a common scheduler inputs are aware of each other and do share the 'conflicting transmission' signal.

Configuration

By default, the egress QoS topology looks like this:

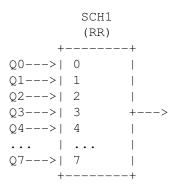

meaning that all queues are connected to Scheduler 1 and the scheduler discipline is set to Round Robin. Rate mode is set to Data Rate (bps). Queues are in Tail Drop Mode.

To **list queue** properties:

1. Read queue properties via FPP_CMD_QOS_QUEUE + FPP_ACTION_QUERY.

To **list scheduler** properties:

1. Read scheduler properties via FPP_CMD_QOS_SCHEDULER + FPP_ACTION_QUERY.

To **list shaper** properties:

1. Read shaper properties via FPP_CMD_QOS_SHAPER + FPP_ACTION_QUERY.



To **modify queue** properties:

- 1. Read scheduler properties via FPP_CMD_QOS_QUEUE + FPP_ACTION_QUERY.
- 2. Modify desired properties.
- 3. Write modifications using FPP_CMD_QOS_QUEUE + FPP_ACTION_UPDATE.


To **modify scheduler** properties (read-modify-write):

- 1. Read scheduler properties via FPP_CMD_QOS_SCHEDULER + FPP_ACTION_QUERY.
- 2. Modify desired properties.
- 3. Write modifications using FPP_CMD_QOS_SCHEDULER + FPP_ACTION_UPDATE.

To **modify shaper** properties (read-modify-write):


- 1. Read shaper properties via FPP_CMD_QOS_SHAPER + FPP_ACTION_QUERY.
- 2. Modify desired properties.
- 3. Write modifications using FPP_CMD_QOS_SCHEDULER + FPP_ACTION_UPDATE.

To **change QoS topology** to following example form:

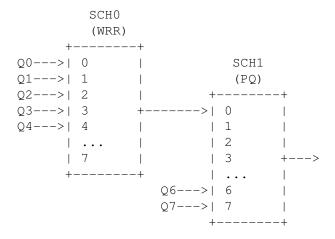

1. Please see the FPP_CMD_QOS_SCHEDULER for full C example (fpp_cmd_qos_scheduler.c).

To add traffic shapers:

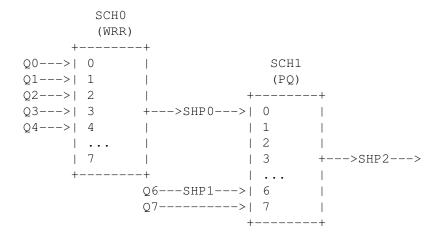



1. Please see the FPP_CMD_QOS_SHAPER for full C example (fpp_cmd_qos_shaper.c).

Files

- file fpp_ext.h

 Extension of the legacy fpp.h.
- file libfci.h Generic LibFCI header file.

Macros

- #define FPP_CMD_PHY_IF FCI command for working with physical interfaces.
- #define FPP_CMD_LOG_IF FCI command for working with logical interfaces.
- #define FPP_CMD_IF_LOCK_SESSION
 FCI command to perform lock on interface database.
- #define FPP_CMD_IF_UNLOCK_SESSION FCI command to perform unlock on interface database.
- #define FPP_CMD_L2_BD VLAN-based L2 bridge domain management.
- #define FPP_CMD_L2_STATIC_ENT VLAN-based L2 bridge static entry management.
- #define FPP_CMD_L2_FLUSH_LEARNED
 FCI command to flush learned MAC table entries.
- #define FPP_CMD_L2_FLUSH_STATIC FCI command to flush static MAC table entries.
- #define FPP_CMD_L2_FLUSH_ALL FCI command to flush all MAC table entries.
- #define FPP_CMD_FP_TABLE

 Administers the Flexible Parser tables.
- #define FPP_CMD_FP_RULE

 Administers the Flexible Parser rules.
- #define FPP_ACTION_USE_RULE Flexible Parser specific 'use' action for FPP_CMD_FP_TABLE.
- #define FPP_ACTION_UNUSE_RULE Flexible Parser specific 'unuse' action for FPP_CMD_FP_TABLE.
- #define FPP_CMD_FP_FLEXIBLE_FILTER
 Uses flexible parser to filter out frames from further processing.
- #define FPP_CMD_DATA_BUF_PUT FCI command to send an arbitrary data to the accelerator.
- #define FPP_CMD_DATA_BUF_AVAIL

 Event reported when accelerator wants to send a data buffer to host.
- #define FPP_CMD_ENDPOINT_SHUTDOWN Notify client about endpoint shutdown event.
- #define FPP_CMD_SPD



Configures the SPD (Security Policy Database) for IPsec.

- #define FPP_CMD_QOS_QUEUE Management of QoS queues.
- #define FPP_CMD_QOS_SCHEDULER Management of QoS scheduler.
- #define FPP_CMD_QOS_SHAPER

 Management of QoS shaper.
- #define FPP_CMD_FW_FEATURE

 Management of configurable firmware features.
- #define FCI_CFG_FORCE_LEGACY_API
 Changes the LibFCI API so it is more compatible with legacy implementation.
- #define FPP_CMD_IPV4_CONNTRACK_CHANGE
- #define FPP CMD IPV6 CONNTRACK CHANGE
- #define CTCMD_FLAGS_ORIG_DISABLED

 Disable connection originator.
- #define CTCMD_FLAGS_REP_DISABLED Disable connection replier.
- #define CTCMD_FLAGS_TTL_DECREMENT Enable TTL decrement.

Enumerations

enum fpp_if_flags_t {

```
FPP_IF_ENABLED, FPP_IF_PROMISC,
 FPP_IF_MATCH_OR, FPP_IF_DISCARD,
 FPP_IF_MIRROR, FPP_IF_LOADBALANCE,
 FPP IF VLAN CONF CHECK, FPP IF PTP CONF CHECK,
 FPP_IF_PTP_PROMISC, FPP_IF_LOOPBACK,
 FPP_IF_ALLOW_Q_IN_Q, FPP_IF_MAX}
   Interface flags.
• enum fpp phy if op mode t {
 FPP_IF_OP_DISABLED, FPP_IF_OP_DEFAULT,
 FPP IF OP BRIDGE, FPP IF OP ROUTER,
 FPP_IF_OP_VLAN_BRIDGE, FPP_IF_OP_FLEXIBLE_ROUTER,
 FPP_IF_OP_L2L3_BRIDGE, FPP_IF_OP_L2L3_VLAN_BRIDGE}
    Physical if modes.
• enum fpp if m rules t {
 FPP_IF_MATCH_TYPE_ETH, FPP_IF_MATCH_TYPE_VLAN,
 FPP_IF_MATCH_TYPE_PPPOE, FPP_IF_MATCH_TYPE_ARP,
 FPP_IF_MATCH_TYPE_MCAST, FPP_IF_MATCH_TYPE_IPV4,
 FPP_IF_MATCH_TYPE_IPV6, FPP_IF_MATCH_RESERVED7,
 FPP IF MATCH RESERVED8, FPP IF MATCH TYPE IPX,
 FPP IF MATCH TYPE BCAST, FPP IF MATCH TYPE UDP,
 FPP_IF_MATCH_TYPE_TCP, FPP_IF_MATCH_TYPE_ICMP,
 FPP IF MATCH TYPE IGMP, FPP IF MATCH VLAN,
 FPP_IF_MATCH_PROTO, FPP_IF_MATCH_SPORT,
 FPP_IF_MATCH_DPORT, FPP_IF_MATCH_SIP6,
```



```
FPP_IF_MATCH_DIP6, FPP_IF_MATCH_SIP,
 FPP_IF_MATCH_DIP, FPP_IF_MATCH_ETHTYPE,
 FPP_IF_MATCH_FP0, FPP_IF_MATCH_FP1,
 FPP_IF_MATCH_SMAC, FPP_IF_MATCH_DMAC,
 FPP_IF_MATCH_HIF_COOKIE, FPP_IF_MATCH_MAX}
    Match rules. Can be combined using bitwise OR.
enum fpp_phy_if_block_state_t {
 BS NORMAL, BS BLOCKED,
 BS LEARN ONLY, BS FORWARD ONLY }
    Interface blocking state.
• enum fpp 12 bd flags t { FPP L2 BD DEFAULT, FPP L2 BD FALLBACK }
    L2 bridge domain flags.
enum fpp_fp_rule_match_action_t {
 FP_ACCEPT, FP_REJECT,
 FP_NEXT_RULE }
    Specifies the Flexible Parser result on the rule match.
• enum fpp_fp_offset_from_t {
 FP_OFFSET_FROM_L2_HEADER, FP_OFFSET_FROM_L3_HEADER,
 FP_OFFSET_FROM_L4_HEADER }
    Specifies how to calculate the frame data offset.
• enum fpp spd action t
    Sets the action to be done for frames matching the SPD entry criteria.
• enum fpp spd flags t
```

- Flags values to be used in fpp_spd_cmd_t structure .flags field.
- enum fci mcast groups t { FCI GROUP NONE, FCI GROUP CATCH } List of supported multicast groups.
- enum fci_client_type_t { FCI_CLIENT_DEFAULT , FCILIB_FF_TYPE } List of supported FCI client types.
- enum fci_cb_retval_t { FCI_CB_STOP , FCI_CB_CONTINUE } The FCI callback return values.

Functions

- FCI CLIENT * fci open (fci client type t type, fci mcast groups t group) Creates new FCI client and opens a connection to FCI endpoint.
- int fci close (FCI CLIENT *client) Disconnects from FCI endpoint and destroys FCI client instance.
- int fci catch (FCI CLIENT *client) Catch and process all FCI messages delivered to the FCI client.
- int fci_cmd (FCI_CLIENT *client, unsigned short fcode, unsigned short *cmd_buf, unsigned short cmd len, unsigned short *rep buf, unsigned short *rep len) Run an FCI command with optional data response.
- int fci query (FCI CLIENT *this client, unsigned short fcode, unsigned short cmd_len, unsigned short *pcmd, unsigned short *rsplen, unsigned short *rsp_data) Run an FCI command with data response.
- int fci_write (FCI_CLIENT *client, unsigned short fcode, unsigned short cmd_len, unsigned short *cmd_buf)

MODULE DOCUMENTATION



Run an FCI command.

- int fci_register_cb (FCI_CLIENT *client, fci_cb_retval_t(*event_cb)(unsigned short fcode, unsigned short len, unsigned short *payload))

 Register event callback function.
- int fci_fd (FCI_CLIENT *this_client)

 Obsolete function, shall not be used.

2.1.8 Defines

2.1.8.1 FPP CMD PHY IF

#define FPP_CMD_PHY_IF

FCI command for working with physical interfaces.

Note

Command is defined as extension of the legacy fpp.h.

Interfaces are needed to be known to FCI to support insertion of routes and conntracks. Command can be used to get operation mode, mac address and operation flags (enabled, promisc).

Command can be used with various .action values:

- FPP_ACTION_UPDATE: Updates properties of an existing physical interface.
- FPP_ACTION_QUERY: Gets head of list of existing physical interfaces properties.
- FPP_ACTION_QUERY_CONT: Gets next item from list of existing physical interfaces. Shall be called after FPP_ACTION_QUERY was called. On each call it replies with properties of the next interface in the list.

Note

Precondition to use the query is to atomically lock the access with FPP_CMD_IF_LOCK_SESSION.

Command Argument Type: fpp_phy_if_cmd_t

Action FPP_ACTION_UPDATE

Update interface properties. Set fpp_phy_if_cmd_t.action to FPP_ACTION_UPDATE and fpp_phy_if_cmd_t.name to name of the desired interface to be updated. Rest of the fpp_phy_if_cmd_t members will be considered to be used as the new interface properties. It is recommended to use read-modify-write approach in combination with FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT.



Action FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT

Get interface properties. Set fpp_phy_if_cmd_t.action to FPP_ACTION_QUERY to get first interface from the list of physical interfaces or FPP_ACTION_QUERY_CONT to get subsequent entries. Response data type for query commands is of type fpp_phy_if_cmd_t.

For operation modes see fpp_phy_if_op_mode_t. For operation flags see fpp_if_flags_t.

Possible command return values are:

- FPP_ERR_OK: Success.
- FPP_ERR_IF_ENTRY_NOT_FOUND: Last entry in the query session.
- FPP_ERR_IF_WRONG_SESSION_ID: Someone else is already working with the interfaces.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

Examples

fpp_cmd_phy_if.c.

2.1.8.2 FPP_CMD_LOG_IF

#define FPP_CMD_LOG_IF

FCI command for working with logical interfaces.

Note

Command is defined as extension of the legacy fpp.h.

Command can be used to update match rules of logical interface or for adding egress interfaces. It can also update operational flags (enabled, promisc, match). Following values of .action are supported:

- FPP ACTION REGISTER: Creates a new logical interface.
- FPP ACTION DEREGISTER: Destroys an existing logical interface.
- FPP_ACTION_UPDATE: Updates properties of an existing logical interface.
- FPP_ACTION_QUERY: Gets head of list of existing logical interfaces parameters.
- FPP_ACTION_QUERY_CONT: Gets next item from list of existing logical interfaces. Shall be called after FPP_ACTION_QUERY was called. On each call it replies with properties of the next interface.

Precondition to use the query is to atomic lock the access with FPP_CMD_IF_LOCK_SESSION.

Command Argument Type: fpp_log_if_cmd_t



Action FPP_ACTION_REGISTER

To create a new logical interface the FPP_CMD_LOG_IF command expects following values to be set in the command argument structure:

The interface *logif1* will be created as child of *emac0* without any configuration and disabled. Names of available physical interfaces can be obtained via FPP_CMD_PHY_IF + FPP_ACTION_QUERY + FPP_ACTION_QUERY_CONT.

Action FPP ACTION DEREGISTER

Items to be set in command argument structure to remove a logical interface:

Action FPP_ACTION_UPDATE

To update logical interface properties just set fpp_log_if_cmd_t.action to FPP_ACTION_UPDATE and fpp_log_if_cmd_t.name to the name of logical interface which you wish to update. Rest of the fpp_log_if_cmd_t structure members will be considered to be used as the new interface properties. It is recommended to use read-modify-write approach in combination with FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT.

For match rules see ($fpp_if_m_rules_t$). For match rules arguments see ($fpp_if_m_args_t$).

Possible command return values are:

- FPP_ERR_OK: Update successful.
- FPP_ERR_IF_ENTRY_NOT_FOUND: If corresponding logical interface doesn't exit.
- FPP_ERR_IF_RESOURCE_ALREADY_LOCKED: Someone else is already configuring the interfaces.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

Action FPP ACTION QUERY and FPP ACTION QUERY CONT

Get interface properties. Set fpp_log_if_cmd_t.action to FPP_ACTION_QUERY to get first interface from the list of all logical interfaces or FPP_ACTION_QUERY_CONT to get subsequent entries. Response data type for query commands is of type fpp_log_if_cmd_t.

Possible command return values are:

- FPP_ERR_OK: Success.
- FPP_ERR_IF_ENTRY_NOT_FOUND: Last entry in the query session.



- FPP_ERR_IF_WRONG_SESSION_ID: Someone else is already working with the interfaces.
- FPP_ERR_IF_MATCH_UPDATE_FAILED: Update of match flags has failed.
- FPP_ERR_IF_EGRESS_UPDATE_FAILED: Update of egress interfaces has failed.
- FPP_ERR_IF_EGRESS_DOESNT_EXIST: Egress interface provided in command doesn't exist.
- FPP_ERR_IF_OP_FLAGS_UPDATE_FAILED: Operation flags update has failed (PROMISC/ENABLE/MATCH).
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

Examples

fpp_cmd_log_if.c.

2.1.8.3 FPP CMD IF LOCK SESSION

#define FPP_CMD_IF_LOCK_SESSION

FCI command to perform lock on interface database.

The reason for it is guaranteed atomic operation between fci/rpc/platform.

Note

Command is defined as extension of the legacy fpp.h.

Possible command return values are:

- FPP_ERR_OK: Lock successful
- FPP_ERR_IF_RESOURCE_ALREADY_LOCKED: Database was already locked by someone else

Examples

fpp_cmd_log_if.c, and fpp_cmd_phy_if.c.

2.1.8.4 FPP_CMD_IF_UNLOCK_SESSION

#define FPP_CMD_IF_UNLOCK_SESSION

FCI command to perform unlock on interface database.

The reason for it is guaranteed atomic operation between fci/rpc/platform.



Note

Command is defined as extension of the legacy fpp.h.

Possible command return values are:

- FPP_ERR_OK: Lock successful
- FPP_ERR_IF_WRONG_SESSION_ID: The lock wasn't locked or was locked in different session and will not be unlocked.

Examples

fpp_cmd_log_if.c, and fpp_cmd_phy_if.c.

2.1.8.5 FPP_CMD_L2_BD

```
#define FPP_CMD_L2_BD
```

VLAN-based L2 bridge domain management.

Bridge domain can be used to include a set of physical interfaces and isolate them from another domains using VLAN. Command can be used with various .action values:

- FPP_ACTION_REGISTER: Create a new bridge domain.
- FPP_ACTION_DEREGISTER: Delete bridge domain.
- FPP_ACTION_UPDATE: Update a bridge domain meaning that will rewrite domain properties except of VLAN ID.
- FPP_ACTION_QUERY: Gets head of list of registered domains.
- FPP_ACTION_QUERY_CONT: Get next item from list of registered domains. Shall be called after FPP_ACTION_QUERY was called. On each call it replies with parameters of next domain. It returns FPP_ERR_RT_ENTRY_NOT_FOUND when no more entries exist.

Command Argument Type: fpp_l2_bd_cmd_t

Action FPP_ACTION_REGISTER

Items to be set in command argument structure:

```
fpp_12_bd_cmd_t cmd_data =
{
    // Register new bridge domain
    .action = FPP_ACTION_REGISTER,
    // VLAN ID associated with the domain (network endian)
    .vlan = ...,
    // Action to be taken when destination MAC address (uni-cast) of a packet
    // matching the domain is found in the MAC table: 0 - Forward, 1 - Flood,
    // 2 - Punt, 3 - Discard
    .ucast_hit = ...,
    // Action to be taken when destination MAC address (uni-cast) of a packet
    // matching the domain is not found in the MAC table.
    .ucast_miss = ...,
```



```
// Multicast hit action
.mcast_hit = ...,
// Multicast miss action
.mcast_miss = ...;
```

Possible command return values are:

- FPP_ERR_OK: Domain added.
- FPP_ERR_WRONG_COMMAND_PARAM: Unexpected argument.
- FPP_ERR_L2_BD_ALREADY_REGISTERED: Given domain already registered.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

Action FPP ACTION DEREGISTER

Items to be set in command argument structure:

```
fpp_12_bd_cmd_t cmd_data =
{
    // Delete bridge domain
    .action = FPP_ACTION_DEREGISTER,
    // VLAN ID associated with the domain to be deleted (network endian)
    .vlan = ...,
};
```

Possible command return values are:

- FPP_ERR_OK: Domain removed.
- FPP_ERR_WRONG_COMMAND_PARAM: Unexpected argument.
- FPP_ERR_L2_BD_NOT_FOUND: Given domain not found.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

Action FPP_ACTION_UPDATE

Items to be set in command argument structure:

```
fpp_12_bd_cmd_t cmd_data =
 // Update bridge domain
  .action = FPP_ACTION_UPDATE,
 // VLAN ID associated with the domain to be updated (network endian)
  .vlan = ...,
  // New unicast hit action (0 - Forward, 1 - Flood, 2 - Punt, 3 - Discard)
 .ucast_hit = ...,
 // New unicast miss action
  .ucast_miss = ...,
 // New multicast hit action
  .mcast_hit = ...,
 // New multicast miss action
  .mcast_miss = ...,
  // New port list (network endian). Bitmask where every set bit represents
 // ID of physical interface being member of the domain. For instance bit
 // (1 \ll 3), if set, says that interface with ID=3 is member of the domain.
 // Only valid interface IDs are accepted by the command. If flag is set,
 \ensuremath{//} interface is added to the domain. If flag is not set and interface
 // has been previously added, it is removed. The IDs are given by the
 // related FCI endpoint and related networking HW. Interface IDs can be
  // obtained via FPP_CMD_PHY_IF.
  .if_list = ...,
 // Flags marking interfaces listed in @c if_list to be 'tagged' or
 \ensuremath{//} 'untagged' (network endian). If respective flag is set, corresponding
  // interface within the @c if_list is treated as 'untagged' meaning that
```



```
// the VLAN tag will be removed. Otherwise it is configured as 'tagged'.
// Note that only interfaces listed within the @c if_list are taken into
// account.
.untag_if_list = ...,
}:
```

Possible command return values are:

- FPP_ERR_OK: Domain updated.
- FPP_ERR_WRONG_COMMAND_PARAM: Unexpected argument.
- FPP_ERR_L2_BD_NOT_FOUND: Given domain not found.
- FPP ERR INTERNAL FAILURE: Internal FCI failure.

Action FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT

Items to be set in command argument structure:

Response data type for queries: fpp_l2_bd_cmd_t

Response data provided (all values in network byte order):

```
// VLAN ID associated with domain (network endian)
rsp data.vlan:
// Action to be taken when destination MAC address (uni-cast) of a packet
// matching the domain is found in the MAC table: 0 - Forward, 1 - Flood,
// 2 - Punt, 3 - Discard
rsp_data.ucast_hit;
// Action to be taken when destination MAC address (uni-cast) of a packet
// matching the domain is not found in the MAC table.
rsp_data.ucast_miss;
// Multicast hit action.
rsp_data.mcast_hit;
// Multicast miss action.
rsp_data.mcast_miss;
// Bitmask where every set bit represents ID of physical interface being member
// of the domain. For instance bit (1 \ll 3), if set, says that interface with ID=3
// is member of the domain.
rsp_data.if_list;
// Similar to @c if_list but this interfaces are configured to be VLAN 'untagged'.
rsp_data.untag_if_list;
// See the fpp_12_bd_flags_t.
rsp data.flags;
```

Possible command return values are:

- FPP ERR OK: Response buffer written.
- FPP_ERR_L2_BD_NOT_FOUND: No more entries.
- FPP ERR INTERNAL FAILURE: Internal FCI failure.

Examples

fpp cmd l2 bd.c.



2.1.8.6 FPP_CMD_L2_STATIC_ENT

```
#define FPP_CMD_L2_STATIC_ENT
```

VLAN-based L2 bridge static entry management.

Note

When using this command MAC entry learning should be disabled.

Command can be used with various .action values:

- FPP_ACTION_REGISTER: Create a new static entry.
- FPP_ACTION_DEREGISTER: Delete static entry.
- FPP_ACTION_UPDATE: Update static entry. It is possible to update forward list only.
- FPP_ACTION_QUERY: Gets head of list of registered static entries.
- FPP_ACTION_QUERY_CONT: Get next item from list of static entries. Shall be called after FPP_ACTION_QUERY was called. On each call it replies with parameters of next domain. It returns FPP_ERR_RT_ENTRY_NOT_FOUND when no more entries exist.

Command Argument Type: fpp_l2_static_ent_cmd_t

Action FPP ACTION REGISTER

Items to be set in command argument structure:

```
fpp_12_static_ent_cmd_t cmd_data =
 // Register new static entry
 .action = FPP_ACTION_REGISTER,
 // VLAN ID associated with the domain (network endian)
  .vlan = ...,
 // MAC address
 .mac = \{...\};
 //Forward list (network endian). Bitmask where traffic matching source MAC will be forwarded
 //The bitmask itself is constructed by setting bit corresponding to the egress ID of
 // For instance bit (1 « 3), if set, says that all traffic matching configured source MAC
 //will be transmitted to physical interface ID=3. If flag is set, given physical interface
      will be used to
 //transmit matching traffic. If flag is cleared and interface has been previously added, all
      new matching traffic will not
 //be transmitted to this interface. The IDs are given by the related FCI endpoint and
      related networking HW.
 //Interface IDs can be obtained via FPP_CMD_PHY_IF.
 .forward_list = ..,
 // Configure the static entry as Local MAC address for L2L3 Bridge mode
 .local = 1
 // Do not discard frames sent from the MAC address
  .src\_discard = 0
 // Do not discard frames sent to the MAC address
 .dst_discard = 0
```

Possible command return values are:

• FPP_ERR_OK: Static entry added.



- FPP_ERR_L2_STATIC_ENT_ALREADY_REGISTERED: Given static entry already registered.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

Action FPP_ACTION_DEREGISTER

Items to be set in command argument structure:

```
fpp_12_static_ent_cmd_t cmd_data =
{
    // Delete bridge domain
    .action = FPP_ACTION_DEREGISTER,
    // VLAN ID associated with the domain (network endian)
    .vlan = ...,
    // MAC address
    .mac = {...};
}:
```

Possible command return values are:

- FPP_ERR_OK: Static entry removed.
- FPP_ERR_L2_STATIC_EN_NOT_FOUND: Given static entry not found.
- FPP ERR INTERNAL FAILURE: Internal FCI failure.

Action FPP_ACTION_UPDATE

Items to be set in command argument structure:

```
fpp_12_static_ent_cmd_t cmd_data
 // Register new static entry
 .action = FPP_ACTION_REGISTER,
 // VLAN ID associated with the domain (network endian). This VLAN+MAC have to be already
      registered for update.
 // MAC address. This VLAN+MAC have to be already registered for update.
 .mac = \{...\},
 //Forward list (network endian). Bitmask where traffic matching source MAC will be forwarded
 //The bitmask itself is constructed by setting bit corresponding to the egress ID of
      physical.
 // For instance bit (1 st 3), if set, says that all traffic matching configured source MAC
 //will be transmitted to physical interface ID=3. If flag is set, given physical interface
      will be used to
 //transmit matching traffic. If flag is cleared and interface has been previously added, all
      new matching traffic will not
 //be transmitted to this interface. The IDs are given by the related FCI endpoint and
      related networking HW.
 //Interface IDs can be obtained via FPP_CMD_PHY_IF.
  .forward_list = ..,
 // Configure the static entry as Local MAC address for L2L3 Bridge mode
 .local = 1
};
```

Possible command return values are:

- FPP_ERR_OK: Static entry updated.
- FPP_ERR_L2_STATIC_EN_NOT_FOUND: Given static entry not found.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.



Action FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT

Items to be set in command argument structure:

Response data type for queries: fpp_l2_static_ent_cmd_t

Response data provided (all values in network byte order):

```
// Register new static entry
.action = FPP_ACTION_REGISTER,
// VLAN ID associated with the domain (network endian)
.vlan = ...,
// MAC address
.mac = {...};
//Forward list (network endian)
.forward_list = ..;
// Is the static entry used as Local MAC address for L2L3 Bridge mode
.local = ...; //1 = yes, 0 = no
```

Possible command return values are:

- FPP_ERR_OK: Response buffer written.
- FPP_ERR_L2_STATIC_EN_NOT_FOUND: No more entries.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

2.1.8.7 FPP_CMD_L2_FLUSH_LEARNED

```
#define FPP_CMD_L2_FLUSH_LEARNED
```

FCI command to flush learned MAC table entries.

Command will remove all adresses from the L2 bridge MAC table which were added within the learning process.

Possible command return values are:

- FPP ERR OK: Flush successful.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

2.1.8.8 FPP CMD L2 FLUSH STATIC

```
#define FPP_CMD_L2_FLUSH_STATIC
```

FCI command to flush static MAC table entries.

Command will remove all addresses from the L2 bridge MAC table which were added as static entries via FPP_CMD_L2_STATIC_ENT.

Possible command return values are:

FPP_ERR_OK: Flush successful.



• FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

2.1.8.9 FPP_CMD_L2_FLUSH_ALL

#define FPP_CMD_L2_FLUSH_ALL

FCI command to flush all MAC table entries.

Command will remove all addresses from the L2 bridge MAC table.

Possible command return values are:

- FPP_ERR_OK: Flush successful.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

2.1.8.10 FPP_CMD_FP_TABLE

#define FPP_CMD_FP_TABLE

Administers the Flexible Parser tables.

The Flexible Parser table is an ordered set of Flexible Parser rules which are matched in the order of appearance until match occurs or end of the table is reached. The following actions can be done on the table:

- FPP_ACTION_REGISTER: Create a new table with a given name.
- FPP_ACTION_DEREGISTER: Destroy an existing table.
- FPP_ACTION_USE_RULE: Add a rule into the table at specified position.
- FPP_ACTION_UNUSE_RULE: Remove a rule from the table.
- FPP ACTION QUERY: Return the first rule in the table.
- FPP_ACTION_QUERY_CONT: Return the next rule in the table.

The Flexible Parser starts processing the table from the 1st rule in the table. If there is no match the Flexible Parser always continues with the rule following the currently processed rule. The processing ends once rule match happens and the rule action is one of the FP_ACCEPT or FP_REJECT and the respective value is returned. REJECT is also returned after the last rule in the table was processed without any match. The Flexible Parser may branch to arbitrary rule in the table if some rule matches and the action is FP_NEXT_RULE. Note that loops are forbidden.

See the FPP_CMD_FP_RULE and fpp_fp_rule_props_t for the detailed description of how the rules are being matched.

Action FPP ACTION REGISTER

Items to be set in command argument structure:



Action FPP_ACTION_DEREGISTER

Items to be set in command argument structure:

Action FPP_ACTION_USE_RULE

Items to be set in command argument structure:

```
fpp_fp_table_cmd_t cmd_data =
{
    .action = FPP_ACTION_USE_RULE,
    .t.table_name = "table_name",
    .t.rule_name = "rule_name",
    .t.position = ...
}
// Add existing rule into specified table
// Identifier of the table to add the rule
// Identifier of the rule to be added into the table
// Desired position of the rule within the table
};
```

Note

Single rule can be member of only one table.

Action FPP_ACTION_UNUSE_RULE

Items to be set in command argument structure:

Action FPP_ACTION_QUERY

Items to be set in command argument structure:

Response data type for queries: fpp_fp_rule_cmd_t

Response data provided:



Note

All data is provided in the network byte order.

Action FPP_ACTION_QUERY_CONT

Items to be set in command argument structure:

Response data is provided in the same form as for FPP_ACTION_QUERY action.

Examples

```
fpp_cmd_fp_table.c.
```

2.1.8.11 FPP_CMD_FP_RULE

```
#define FPP_CMD_FP_RULE
```

Administers the Flexible Parser rules.

Each Flexible Parser rule consists of a condition specified by data, mask and offset triplet and action to be performed. If 32-bit frame data at given offset masked by mask is equal to the specified data masked by the same mask then the condition is true. An invert flag may be set to invert the condition result. The rule action may be either accept, reject or next_rule which means to continue with a specified rule.

The rule administering command may be one of the following actions:

- FPP ACTION REGISTER: Create a new rule.
- FPP_ACTION_DEREGISTER: Delete an existing rule.
- FPP_ACTION_QUERY: Return the first rule (among all existing rules).
- FPP_ACTION_QUERY_CONT: Return the next rule.

Action FPP_ACTION_REGISTER

Items to be set in command argument structure:

```
fpp_fp_rule_cmd_t cmd_data =
{
    // Creates a new rule
    .action = FPP_ACTION_REGISTER,
    // Unique up-to-15-character rule identifier
    .r.rule_name = "rule_name",
    // 32-bit data to match with the frame data at given offset (network endian)
    .r.data = htonl(0x08000000),
    // 32-bit mask to apply on the frame data and .r.data before comparison (network endian)
    .r.mask = htonl(0xFFFF0000),
    // Offset of the frame data to be compared (network endian)
    .r.offset = htonl(12),
    // Invert match or not (values 0 or 1)
    .r.invert = 0,
```



```
// How to calculate the offset
.r.match_action = FP_OFFSET_FROM_L2_HEADER,
// Action to be done on match
.r.offset_from = FP_ACCEPT,
// Identifier of the next rule to use when match_action == FP_NEXT_RULE
.r.next_rule_name = "rule_name2";
```

This example is used to match and accept all IPv4 frames (16-bit value 0x0800 at bytes 12 and 13, when starting bytes counting from 0).

Note

All values are specified in the network byte order.

Warning

It is forbidden to create rule loops using the *next_rule* feature.

Action FPP_ACTION_DEREGISTER

Items to be set in command argument structure:

Action FPP_ACTION_QUERY

Items to be set in command argument structure:

Response data type for queries: fpp_fp_rule_cmd_t

Response data provided:

Note

All data is provided in the network byte order.

Action FPP_ACTION_QUERY_CONT

Items to be set in command argument structure:

Response data is provided in the same form as for FPP_ACTION_QUERY action.



Examples

```
fpp_cmd_fp_table.c.
```

2.1.8.12 FPP_CMD_FP_FLEXIBLE_FILTER

```
#define FPP_CMD_FP_FLEXIBLE_FILTER
```

Uses flexible parser to filter out frames from further processing.

Allows registration of a Flexible Parser table (see FPP_CMD_FP_TABLE) as a filter which:

- FPP_ACTION_REGISTER: Use the specified table as a Flexible Filter (replace old table by a new one if already configured).
- FPP_ACTION_DEREGISTER: Disable Flexible Filter, no table will be used as Flexible Filter.

The Flexible Filter examines received frames before any other processing and discards those which have REJECT result from the configured Flexible Parser.

See the FPP_CMD_FP_TABLE for flexible parser behavior description.

Action FPP_ACTION_REGISTER

Items to be set in command argument structure:

```
fpp_flexible_filter_cmd_t cmd_data =
{
    // Set the specified table as Flexible Filter
    .action = FPP_ACTION_REGISTER,
    // Name of the Flexible Parser table to be used to filter the frames
    .table_name = "table_name"
}
```

Action FPP_ACTION_DEREGISTER

Items to be set in command argument structure:

```
fpp_flexible_filter_cmd_t cmd_data =
{
    // Disable the Flexible Filter
    .action = FPP_ACTION_DEREGISTER,
}
```

2.1.8.13 FPP_CMD_DATA_BUF_PUT

```
#define FPP_CMD_DATA_BUF_PUT
```

FCI command to send an arbitrary data to the accelerator.

Command is intended to be used to send custom data to the accelerator. Format of the command argument is given by the fpp_buf_cmd_t structure which also defines the



maximum payload length. Subsequent commands are not successful until the accelerator reads and acknowledges the current request.

Items to be set in command argument structure:

```
fpp_buf_cmd_t cmd_data =
{
   // Specify buffer payload
   .payload = ...,
   // Payload length in number of bytes
   .len = ...,
}.
```

Possible command return values are:

- FPP ERR OK: Data written and available to the accelerator
- FPP_ERR_AGAIN: Previous command has not been finished yet
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure

2.1.8.14 FPP_CMD_DATA_BUF_AVAIL

```
#define FPP_CMD_DATA_BUF_AVAIL
```

Event reported when accelerator wants to send a data buffer to host.

Indication of this event also carries the buffer payload and payload length. Both are available via the event callback arguments (see the callback type and arguments within description of fci_register_cb()).

2.1.8.15 FPP_CMD_SPD

```
#define FPP_CMD_SPD
```

Configures the SPD (Security Policy Database) for IPsec.

Note

The feature is available only for some Premium firmware versions and it shall not be used with firmware not supporting the IPsec to avoid undefined behavior.

The command is connected with fpp_spd_cmd_t type and allows complete
SPD management which involves insertion of an entry at a given position
(FPP_ACTION_REGISTER), removal of an entry at a given position
(FPP_ACTION_DEREGISTER) and reading the database data (FPP_ACTION_QUERY and
FPP_ACTION_QUERY_CONT).

Action FPP_ACTION_REGISTER

The FPP_ACTION_REGISTER action adds an entry at a given position into the SPD belonging to a given physical interface. The SPD is created if the entry is the 1st one and the position is ignored in such case. Creation of the SPD enables the IPsec processing for given interface.



Items to be set in command argument structure:

```
fpp_spd_cmd_t cmd_data =
  // Set the new rule in SPD
  .action = FPP_ACTION_REGISTER,
  // Name of the physical interface which SPD shall be modified
  .name = "emac0",
  // Add as a 4th rule (1st rule used position 0), current 4th rule will follow the newly
     added rule
  .position = 3,
  // Set the traffic matching criteria
  .saddr = 0xC0A80101, //192.168.1.1
  .daddr = 0xC0A80102, //192.168.1.2
  // Set ports as opaque i.e. ignored, missing FPP_SPD_FLAG_IPv6 means IPv4 traffic
  .flags = FPP_SPD_FLAG_SPORT_OPAQUE | FPP_SPD_FLAG_DPORT_OPAQUE
               //SPI to match in ESP or AH header (used only for action
     FPP_SPD_ACTION_PROCESS_DECODE)
  // Set action for matching traffic
  .spd_action = FPP_SPD_ACTION_PROCESS_DECODE, //Do IPsec decoding
                    //HSE SAD entry ID to be used to process the traffic
  .sa_id = 1,
```

Action FPP_ACTION_DEREGISTER

The FPP_ACTION_DEREGISTER action removes an entry at a given position in the SPD belonging to a given physical interface. The SPD is destroyed if the entry is the last one which disables the IPsec support on the given interface.

Items to be set in command argument structure:

```
fpp_flexible_filter_cmd_t cmd_data =
{
    // Disable the Flexible Filter
    .action = FPP_ACTION_DEREGISTER,
    // Name of the physical interface which SPD shall be modified
    .name = "emac0",
    // Remove the 4th rule (1st rule used position 0)
    .position = 3,
}
```

Action FPP_ACTION_QUERY

Items to be set in command argument structure:

Response data type for queries: fpp_spd_cmd_t

Response data provided has the same format as FPP_ACTION_REGISTER action.

Note

All data is provided in the network byte order.

Action FPP ACTION QUERY CONT

Items to be set in command argument structure:



2.1.8.16 FPP_CMD_QOS_QUEUE

```
#define FPP_CMD_QOS_QUEUE
```

Management of QoS queues.

Command can be used with following .action values:

- FPP_ACTION_UPDATE: Update queue configuration
- FPP_ACTION_QUERY: Get queue properties

Command Argument Type: fpp_qos_queue_cmd_t

Action FPP_ACTION_UPDATE

To update queue properties just set

- fpp_qos_queue_cmd_t.action to FPP_ACTION_QUERY
- fpp_qos_queue_cmd_t.if_name to name of the physical interface and
- fpp_qos_queue_cmd_t.id to the queue ID.

Rest of the fpp_qos_queue_cmd_t structure members will be considered to be used as the new queue properties. It is recommended to use read-modify-write approach in combination with FPP_ACTION_QUERY.

Action FPP_ACTION_QUERY

Get current queue properties. Set

- fpp_qos_queue_cmd_t.action to FPP_ACTION_QUERY
- fpp_qos_queue_cmd_t.if_name to name of the physical interface and
- fpp_qos_queue_cmd_t.id to the queue ID.

Response data type for the query command is fpp_qos_scheduler_cmd_t.

Possible command return values are:

- FPP_ERR_OK: Success.
- FPP_ERR_QUEUE_NOT_FOUND: Queue not found.
- FPP_ERR_WRONG_COMMAND_PARAM: Invalid argument/value.

MODULE DOCUMENTATION



• FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

Examples

fpp_cmd_qos_queue.c.

2.1.8.17 FPP_CMD_QOS_SCHEDULER

```
#define FPP_CMD_QOS_SCHEDULER
```

Management of QoS scheduler.

Command can be used with following .action values:

- FPP_ACTION_UPDATE: Update scheduler configuration
- FPP_ACTION_QUERY: Get scheduler properties

Command Argument Type: fpp_qos_scheduler_cmd_t

Action FPP_ACTION_UPDATE

To update scheduler properties just set

- fpp_qos_scheduler_cmd_t.action to FPP_ACTION_QUERY
- fpp_qos_scheduler_cmd_t.if_name to name of the physical interface and
- fpp_qos_scheduler_cmd_t.id to the scheduler ID.

Rest of the fpp_qos_scheduler_cmd_t structure members will be considered to be used as the new scheduler properties. It is recommended to use read-modify-write approach in combination with FPP_ACTION_QUERY.

Action FPP_ACTION_QUERY

Get current scheduler properties. Set

- fpp_qos_scheduler_cmd_t.action to FPP_ACTION_QUERY
- fpp_qos_scheduler_cmd_t.if_name to name of the physical interface and
- fpp_qos_scheduler_cmd_t.id to the scheduler ID.

Response data type for the query command is fpp_qos_scheduler_cmd_t.

Possible command return values are:

- FPP_ERR_OK: Success.
- FPP_ERR_SCHEDULER_NOT_FOUND: Scheduler not found.



- FPP_ERR_WRONG_COMMAND_PARAM: Invalid argument/value.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

Examples

fpp_cmd_qos_scheduler.c.

2.1.8.18 FPP_CMD_QOS_SHAPER

#define FPP CMD QOS SHAPER

Management of QoS shaper.

Command can be used with following .action values:

- FPP_ACTION_UPDATE: Update scheduler configuration
- FPP_ACTION_QUERY: Get scheduler properties

Command Argument Type: fpp_qos_shaper_cmd_t

Action FPP_ACTION_UPDATE

To update scheduler properties just set

- fpp_qos_shaper_cmd_t.action to FPP_ACTION_QUERY
- fpp_qos_shaper_cmd_t.if_name to name of the physical interface and
- fpp gos shaper cmd t.id to the shaper ID.

Rest of the fpp_qos_shaper_cmd_t structure members will be considered to be used as the new shaper properties. It is recommended to use read-modify-write approach in combination with FPP_ACTION_QUERY.

Action FPP_ACTION_QUERY

Get current scheduler properties. Set

- fpp_qos_shaper_cmd_t.action to FPP_ACTION_QUERY
- fpp_qos_shaper_cmd_t.if_name to name of the physical interface and
- fpp_qos_shaper_cmd_t.id to the shaper ID.

Response data type for the query command is fpp_qos_shaper_cmd_t.

Possible command return values are:

• FPP_ERR_OK: Success.

MODULE DOCUMENTATION



- FPP_ERR_SHAPER_NOT_FOUND: Shaper not found.
- FPP_ERR_WRONG_COMMAND_PARAM: Invalid argument/value.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

Examples

fpp_cmd_qos_shaper.c.

2.1.8.19 FPP_CMD_FW_FEATURE

#define FPP_CMD_FW_FEATURE

Management of configurable firmware features.

Command can be used with following .action values:

- FPP_ACTION_UPDATE: Enable or disable the firmware feature
- FPP_ACTION_QUERY: Get information about available features

Command Argument Type: fpp_fw_features_cmd_t

Action FPP_ACTION_UPDATE

To enable/disable the selected feature set

- fpp_fw_features_cmd_t.action to FPP_ACTION_UPDATE
- fpp_fw_features_cmd_t.name to name of the selected feature
- fpp fw features cmd t.val to 0 to disable or 1 to enable the feature.

Rest of the fpp_fw_features_cmd_t structure members will be ignored.

Action FPP_ACTION_QUERY

To get information about features set:

• fpp_fw_features_cmd_t.action to FPP_ACTION_QUERY or FPP_ACTION_QUERY_CONT Response data type for the query command is fpp fw features cmd t.

Possible command return values are:

- FPP ERR OK: Success.
- FPP_ERR_WRONG_COMMAND_PARAM: Invalid argument/value.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.
- FPP ERR ENTRY NOT FOUND: No more entries.



2.1.8.20 FCI_CFG_FORCE_LEGACY_API

```
#define FCI_CFG_FORCE_LEGACY_API
```

Changes the LibFCI API so it is more compatible with legacy implementation.

LibFCI API was modified to avoid some inconvenient properties. Here are the points the legacy API differs in:

1. With legacy API, argument rsp_data of function fci_query shall be provided shifted by two bytes this way:

```
reply_struct_t rsp_data;
retval = fci_query(this_client, fcode, cmd_len, &pcmd, &rsplen, (unsigned short
 *)(&rsp_data) + lu);
```

Where reply_struct_t is the structure type depending on command being called.

2. In legacy API, macros FPP_CMD_IPV4_CONNTRACK_CHANGE and FPP_CMD_IPV6_CONNTRACK_CHANGE are defined in application files. In current API they are defined here in libfci.h.

Warning

It is not recommended to enable this feature.

2.1.8.21 FPP CMD IPV4 CONNTRACK CHANGE

#define FPP_CMD_IPV4_CONNTRACK_CHANGE

2.1.8.22 FPP_CMD_IPV6_CONNTRACK_CHANGE

#define FPP_CMD_IPV6_CONNTRACK_CHANGE

2.1.8.23 CTCMD_FLAGS_REP_DISABLED

#define CTCMD_FLAGS_REP_DISABLED

Disable connection replier.

Used to create uni-directional connections (see FPP_CMD_IPV4_CONNTRACK, FPP_CMD_IPV4_CONNTRACK)

Examples

fpp_cmd_ipv4_conntrack.c, and fpp_cmd_ipv6_conntrack.c.



2.1.8.24 CTCMD_FLAGS_TTL_DECREMENT

#define CTCMD_FLAGS_TTL_DECREMENT

Enable TTL decrement.

Used to decrement TTL field when the pkt is routed

2.1.9 Enums

2.1.9.1 fpp_if_flags_t

enum fpp_if_flags_t

Interface flags.

Enumerator

FPP_IF_ENABLED	If set, interface is enabled
FPP_IF_PROMISC	If set, interface is promiscuous
FPP_IF_MATCH_OR	Result of match is logical OR of rules, else AND
FPP_IF_DISCARD	Discard matching frames
FPP_IF_MIRROR	If set mirroring is enabled
FPP_IF_LOADBALANCE	If set interface is part of loadbalance bucket
FPP_IF_VLAN_CONF_CHECK	Enable/Disable VLAN conformance check
FPP_IF_PTP_CONF_CHECK	Enable/Disable PTP conformance check
FPP_IF_PTP_PROMISC	Enable/Disable PTP promiscuous mode
FPP_IF_LOOPBACK	If set, loopback mode is enabled
FPP_IF_ALLOW_Q_IN_Q	If set, QinQ traffic is accepted

2.1.9.2 fpp_phy_if_op_mode_t

enum fpp_phy_if_op_mode_t

Physical if modes.

Enumerator

FPP_IF_OP_DISABLED	Disabled
FPP_IF_OP_DEFAULT	Default operational mode
FPP_IF_OP_BRIDGE	L2 bridge
FPP_IF_OP_ROUTER	L3 router
FPP_IF_OP_VLAN_BRIDGE	L2 bridge with VLAN
FPP_IF_OP_FLEXIBLE_ROUTER	Flexible router



Enumerator

FPP_IF_OP_L2L3_BRIDGE	L2 bridge and L3 router combination
FPP_IF_OP_L2L3_VLAN_BRIDGE	L2 Vlan bridge and L3 router combination

2.1.9.3 fpp_if_m_rules_t

enum fpp_if_m_rules_t

Match rules. Can be combined using bitwise OR.

Enumerator

FPP_IF_MATCH_TYPE_ETH	Match ETH Packets
FPP_IF_MATCH_TYPE_VLAN	Match VLAN Tagged Packets
FPP_IF_MATCH_TYPE_PPPOE	Match PPPoE Packets
FPP_IF_MATCH_TYPE_ARP	Match ARP Packets
FPP_IF_MATCH_TYPE_MCAST	Match Multicast (L2) Packets
FPP_IF_MATCH_TYPE_IPV4	Match IPv4 Packets
FPP_IF_MATCH_TYPE_IPV6	Match IPv6 Packets
FPP_IF_MATCH_RESERVED7	Reserved
FPP_IF_MATCH_RESERVED8	Reserved
FPP_IF_MATCH_TYPE_IPX	Match IPX Packets
FPP_IF_MATCH_TYPE_BCAST	Match Broadcast (L2) Packets
FPP_IF_MATCH_TYPE_UDP	Match UDP Packets
FPP_IF_MATCH_TYPE_TCP	Match TCP Packets
FPP_IF_MATCH_TYPE_ICMP	Match ICMP Packets
FPP_IF_MATCH_TYPE_IGMP	Match IGMP Packets
FPP_IF_MATCH_VLAN	Match VLAN ID
FPP_IF_MATCH_PROTO	Match IP Protocol
FPP_IF_MATCH_SPORT	Match L4 Source Port
FPP_IF_MATCH_DPORT	Match L4 Destination Port
FPP_IF_MATCH_SIP6	Match Source IPv6 Address
FPP_IF_MATCH_DIP6	Match Destination IPv6 Address
FPP_IF_MATCH_SIP	Match Source IPv4 Address
FPP_IF_MATCH_DIP	Match Destination IPv4 Address
FPP_IF_MATCH_ETHTYPE	Match EtherType
FPP_IF_MATCH_FP0	Match Packets Accepted by Flexible Parser 0
FPP_IF_MATCH_FP1	Match Packets Accepted by Flexible Parser 1
FPP_IF_MATCH_SMAC	Match Source MAC Address
FPP_IF_MATCH_DMAC	Match Destination MAC Address
FPP_IF_MATCH_HIF_COOKIE	Match HIF header cookie value
·	



2.1.9.4 fpp_phy_if_block_state_t

enum fpp_phy_if_block_state_t

Interface blocking state.

Enumerator

BS_NORMAL	Learning and forwarding enabled
BS_BLOCKED	Learning and forwarding disabled
BS_LEARN_ONLY	Learning enabled, forwarding disabled
BS_FORWARD_ONLY	Learning disabled, forwarding enabled

2.1.9.5 fpp_l2_bd_flags_t

enum fpp_12_bd_flags_t

L2 bridge domain flags.

Enumerator

FPP_L2_BD_DEFAULT	Domain type is default
FPP_L2_BD_FALLBACK	Domain type is fallback

${\bf 2.1.9.6} \quad fpp_fp_rule_match_action_t$

enum fpp_fp_rule_match_action_t

Specifies the Flexible Parser result on the rule match.

Enumerator

FP_ACCEPT	Flexible parser result on rule match is ACCEPT
FP_REJECT	Flexible parser result on rule match is REJECT
FP_NEXT_RULE	On rule match continue matching by the specified rule

2.1.9.7 fpp_fp_offset_from_t

enum fpp_fp_offset_from_t

Specifies how to calculate the frame data offset.

The offset may be calculated either from the L2, L3 or L4 header beginning. The L2 header beginning is also the Ethernet frame beginning because the Ethernet frame begins with the



L2 header. This offset is always valid however if the L3 or L4 header is not recognized then the rule is always skipped as not-matching.

Enumerator

FP_OFFSET_FROM_L2_HEADER	Calculate offset from the L2 header (frame beginning)
FP_OFFSET_FROM_L3_HEADER	Calculate offset from the L3 header
FP_OFFSET_FROM_L4_HEADER	Calculate offset from the L4 header

2.1.9.8 fci_mcast_groups_t

enum fci_mcast_groups_t

List of supported multicast groups.

An FCI client instance can be member of a multicast group. It means it can send and receive multicast messages to/from another group members (another FCI instances or FCI endpoints). This can be in most cases used by FCI endpoint to notify all associated FCI instances about some event has occurred.

Note

Each group is intended to be represented by a single bit flag (max 32-bit, so it is possible to have max 32 multicast groups). Then, groups can be combined using bitwise OR operation.

Enumerator

FCI_GROUP_NONE	Default MCAST group value, no group, for sending FCI commands
FCI_GROUP_CATCH	MCAST group for catching events

2.1.9.9 fci_client_type_t

enum fci_client_type_t

List of supported FCI client types.

FCI client can specify using this type to which FCI endpoint shall be connected.

Enumerator

FCI_CLIENT_DEFAULT	Default type (equivalent of legacy FCILIB_FF_TYPE macro)
--------------------	--



2.1.9.10 fci_cb_retval_t

```
enum fci_cb_retval_t
```

The FCI callback return values.

These return values shall be used in FCI callback (see fci_register_cb). It tells fci_catch function whether it should return or continue.

Enumerator

FCI_CB_STOP	Stop waiting for events and exit fci_catch function
FCI_CB_CONTINUE	Continue waiting for next events

2.1.10 Functions

2.1.10.1 fci_open()

Creates new FCI client and opens a connection to FCI endpoint.

Binds the FCI client with FCI endpoint. This enables sending/receiving data to/from the endpoint. Refer to the remaining API for possible communication options.

Parameters

in	type	Client type. Default value is FCI_CLIENT_DEFAULT. See fci_client_type_t.
in	group	A 32-bit multicast group mask. Each bit represents single multicast
		address. FCI instance will listen to specified multicast addresses as well it
		will send data to all specified multicast groups. See fci_mcast_groups_t.

Returns

The FCI client instance or NULL if failed

2.1.10.2 fci_close()

Disconnects from FCI endpoint and destroys FCI client instance.

Terminate the FCI client and release all allocated resources.



Parameters

in <i>client</i> The FCI client instance
--

Returns

0 if success, error code otherwise

2.1.10.3 fci_catch()

Catch and process all FCI messages delivered to the FCI client.

Function is intended to be called in its own thread. It waits for message/event reception. If there is an event callback associated with the FCI client, assigned by function fci_register_cb(), then, when message is received, the callback is called to process the data. As long as there is no error and the callback returns FCI_CB_CONTINUE, fci_catch() continues waiting for another message. Otherwise it returns.

Note

This is a blocking function.

Multicast group FCI_GROUP_CATCH shall be used when opening the client for catching messages

See also

```
fci_register_cb()
```

Parameters

in	client	The FCI client instance

Returns

0 if success, error code otherwise



2.1.10.4 fci_cmd()

```
int fci_cmd (
    FCI_CLIENT * client,
    unsigned short fcode,
    unsigned short * cmd_buf,
    unsigned short cmd_len,
    unsigned short * rep_buf,
    unsigned short * rep_len )
```

Run an FCI command with optional data response.

This routine can be used when one need to perform any command either with or without data response. If the command responded with some data structure the structure is written into the rep_buf. The length of the returned data structure (number of bytes) is written into rep_len.

Note

The rep_buf buffer must be aligned to 4.

Parameters

in	client	The FCI client instance
in	fcode	Command to be executed. Available commands are listed in
		Commands Summary.
in	cmd_buf	Pointer to structure holding command arguments.
in	cmd_len	Length of the command arguments structure in bytes.
out	rep_buf	Pointer to memory where the data response shall be written. Can
		be NULL.
in,out	rep_len	Pointer to variable where number of response bytes shall be
		written.

Return values

```
    <0 Failed to execute the command.</li>
    >=0 Command was executed with given return value (FPP_ERR_OK for success).
```

2.1.10.5 fci_query()



```
unsigned short * rsplen,
unsigned short * rsp_data )
```

Run an FCI command with data response.

This routine can be used when one need to perform a command which is resulting in a data response. It is suitable for various 'query' commands like reading of whole tables or structured entries from the endpoint.

Note

If either rsp_data or rsplen is NULL pointer, the response data is discarded.

Parameters

in	this_client	The FCI client instance	
in	fcode	Command to be executed. Available commands are listed in	
		Commands Summary.	
in	cmd_len	Length of the command arguments structure in bytes	
in	pcmd	Pointer to structure holding command arguments.	
out	rsplen	Pointer to memory where length of the data response will be provided	
out	rsp_data	Pointer to memory where the data response shall be written.	

Return values

<0	Failed to execute the command.
>=0	Command was executed with given return value (FPP_ERR_OK for success).

Examples

fpp_cmd_ip_route.c, fpp_cmd_l2_bd.c, fpp_cmd_log_if.c, fpp_cmd_phy_if.c, fpp_cmd_qos_queue.c, fpp_cmd_qos_scheduler.c, and fpp_cmd_qos_shaper.c.

2.1.10.6 fci_write()

Run an FCI command.

Similar as the fci_query() but without data response. The endpoint receiving the command is still responsible for generating response but the response is not delivered to the caller.



Parameters

in	client	The FCI client instance	
in	fcode	Command to be executed. Available commands are listed in	
		Commands Summary.	
in	cmd_len	Length of the command arguments structure in bytes	
in	cmd_buf	Pointer to structure holding command arguments	

Return values

<0	Failed to execute the command.	
>=0	Command was executed with given return value (FPP_ERR_OK for success).	

Examples

```
fpp_cmd_fp_table.c, fpp_cmd_ip_route.c, fpp_cmd_ipv4_conntrack.c, fpp_cmd_ipv6_conntrack.c, fpp_cmd_l2_bd.c, fpp_cmd_log_if.c, fpp_cmd_phy_if.c, fpp_cmd_qos_queue.c, fpp_cmd_qos_scheduler.c, and fpp_cmd_qos_shaper.c.
```

2.1.10.7 fci_register_cb()

Register event callback function.

FCI endpoint can send various asynchronous messages to the FCI client. In such case, a callback registered via this function is executed if fci_catch() is running.

Parameters

in	client	The FCI client instance	
in	event_cb	The callback function to be executed. When called then fcode	
		specifies event code (available events are listed in Events summary),	
		payload is pointer to event payload and the len is number of bytes	
		in the payload buffer.	

Returns

0 if success, error code otherwise

Note

In order to continue receiving messages, the callback function shall always return FCI_CB_CONTINUE. Any other value will cause the fci_catch to return.



Chapter 3

Data Structure Documentation

3.1 FCI CLIENT Struct Reference

The FCI client representation type.

```
#include <libfci.h>
```

3.1.1 Detailed Description

The FCI client representation type.

This is the FCI instance representation. It is used by the rest of the API to communicate with associated endpoint. The endpoint can be a standalone application/driver taking care of HW configuration tasks and shall be able to interpret commands sent via the LibFCI API.

Examples

```
fpp_cmd_fp_table.c, fpp_cmd_ip_route.c, fpp_cmd_ipv4_conntrack.c, fpp_cmd_ipv6_conntrack.c, fpp_cmd_l2_bd.c, fpp_cmd_log_if.c, fpp_cmd_phy_if.c, fpp_cmd_qos_queue.c, fpp_cmd_qos_scheduler.c, and fpp_cmd_qos_shaper.c.
```

The documentation for this struct was generated from the following file:

• libfci.h

3.2 fpp_algo_stats_t Struct Reference

Algorithm statistics.

```
#include <fpp_ext.h>
```

Data Fields

- uint32_t processed
- uint32_t accepted



- uint32_t rejected
- uint32_t discarded

3.2.1 Detailed Description

Algorithm statistics.

Statistics used by algorithms in class (eg. log ifs).

Note

All statistics counters are in network byte order.

3.2.2 Field Documentation

3.2.2.1 processed

uint32_t processed

Number of frames processed regardless the result

3.2.2.2 accepted

uint32_t accepted

Number of frames matching the selection criteria

3.2.2.3 rejected

uint32_t rejected

Number of frames not matching the selection criteria

3.2.2.4 discarded

uint32_t discarded

Number of frames marked to be dropped

The documentation for this struct was generated from the following file:

• fpp_ext.h

3.3 fpp_buf_cmd_t Struct Reference

Argument structure for the FPP_CMD_DATA_BUF_PUT command.

#include <fpp_ext.h>



Data Fields

- uint8_t payload [64]
- uint8_t len

3.3.1 Detailed Description

Argument structure for the FPP_CMD_DATA_BUF_PUT command.

3.3.2 Field Documentation

3.3.2.1 payload

```
uint8_t payload[64]
```

The payload area

3.3.2.2 len

```
uint8_t len
```

Payload length in number of bytes

The documentation for this struct was generated from the following file:

• fpp_ext.h

3.4 fpp_ct6_cmd_t Struct Reference

Data structure used in various functions for IPv6 conntrack management.

```
#include <fpp.h>
```

Data Fields

- uint16_t action
- uint32_t saddr [4]
- uint32_t daddr [4]
- uint16_t sport
- uint16_t dport
- uint32_t saddr_reply [4]
- uint32_t daddr_reply [4]
- uint16_t sport_reply
- uint16_t dport_reply

DATA STRUCTURE DOCUMENTATION



- uint16_t protocol
- uint16_t flags
- uint32_t route_id
- uint32_t route_id_reply
- uint16_t vlan
- uint16_t vlan_reply

3.4.1 Detailed Description

Data structure used in various functions for IPv6 conntrack management.

It can be used:

• for command buffer in functions fci_write, fci_query or fci_cmd, with FPP_CMD_IPV6_CONNTRACK command.

Examples

fpp_cmd_ipv6_conntrack.c.

3.4.2 Field Documentation

3.4.2.1 action

uint16_t action

Action to perform

Examples

fpp_cmd_ipv6_conntrack.c.

3.4.2.2 saddr

uint32 t saddr[4]

Source IP address

3.4.2.3 daddr

uint32_t daddr[4]

Destination IP address



3.4.2.4 sport

uint16_t sport

Source port

3.4.2.5 dport

uint16_t dport

Destination port

3.4.2.6 saddr_reply

```
uint32_t saddr_reply[4]
```

Source IP address in 'reply' direction

3.4.2.7 daddr_reply

```
uint32_t daddr_reply[4]
```

Destination IP address in 'reply' direction

3.4.2.8 sport_reply

```
uint16_t sport_reply
```

Source port in 'reply' direction

3.4.2.9 dport_reply

```
uint16_t dport_reply
```

Destination port in 'reply' direction

3.4.2.10 protocol

uint16_t protocol

Protocol ID: TCP, UDP

3.4.2.11 flags

uint16_t flags

Flags. See FPP_CMD_IPV6_CONNTRACK.



3.4.2.12 route_id

```
uint32_t route_id
```

Associated route ID. See FPP_CMD_IP_ROUTE.

3.4.2.13 route_id_reply

```
uint32_t route_id_reply
```

Route for 'reply' direction. Applicable only for bi-directional connections.

3.4.2.14 vlan

```
uint16_t vlan
```

VLAN tag. If non-zero, then it will be added to the routed packet.

3.4.2.15 vlan_reply

```
uint16_t vlan_reply
```

VLAN tag in reply direction. If non-zero, then it will be added to the routed packet.

The documentation for this struct was generated from the following file:

• fpp.h

3.5 fpp_ct_cmd_t Struct Reference

Data structure used in various functions for conntrack management.

```
#include <fpp.h>
```

Data Fields

- uint16_t action
- uint32_t saddr
- uint32 t daddr
- uint16_t sport
- uint16_t dport
- uint32_t saddr_reply
- uint32_t daddr_reply
- uint16_t sport_reply
- uint16_t dport_reply
- uint16_t protocol
- uint16_t flags
- uint32_t route_id



- uint32_t route_id_reply
- uint16_t vlan
- uint16_t vlan_reply

3.5.1 Detailed Description

Data structure used in various functions for countrack management.

It can be used:

• for command buffer in functions fci_write, fci_query or fci_cmd, with FPP_CMD_IPV4_CONNTRACK command.

Examples

fpp_cmd_ipv4_conntrack.c.

3.5.2 Field Documentation

3.5.2.1 action

uint16_t action

Action to perform

Examples

fpp_cmd_ipv4_conntrack.c.

3.5.2.2 saddr

uint32_t saddr

Source IP address

3.5.2.3 daddr

uint32_t daddr

Destination IP address

3.5.2.4 sport

uint16_t sport

Source port



3.5.2.5 dport

uint16_t dport

Destination port

3.5.2.6 saddr_reply

```
uint32_t saddr_reply
```

Source IP address in 'reply' direction

3.5.2.7 daddr_reply

```
uint32_t daddr_reply
```

Destination IP address in 'reply' direction

3.5.2.8 sport_reply

```
uint16_t sport_reply
```

Source port in 'reply' direction

3.5.2.9 dport_reply

```
uint16_t dport_reply
```

Destination port in 'reply' direction

3.5.2.10 protocol

uint16_t protocol

Protocol ID: TCP, UDP

3.5.2.11 flags

uint16_t flags

Flags. See FPP_CMD_IPV4_CONNTRACK.

3.5.2.12 route_id

uint32_t route_id

67

Associated route ID. See FPP_CMD_IP_ROUTE.



3.5.2.13 route_id_reply

```
uint32_t route_id_reply
```

Route for 'reply' direction. Applicable only for bi-directional connections.

3.5.2.14 vlan

```
uint16_t vlan
```

VLAN tag. If non-zero, then it will be added to the routed packet.

3.5.2.15 vlan_reply

```
uint16_t vlan_reply
```

VLAN tag in reply direction. If non-zero, then it will be added to the routed packet.

The documentation for this struct was generated from the following file:

• fpp.h

3.6 fpp_fp_rule_cmd_t Struct Reference

Arguments for the FPP_CMD_FP_RULE command.

```
#include <fpp_ext.h>
```

Data Fields

- uint16_t action
- fpp_fp_rule_props_t r

3.6.1 Detailed Description

Arguments for the FPP_CMD_FP_RULE command.

Examples

fpp_cmd_fp_table.c.

3.6.2 Field Documentation



3.6.2.1 action

```
uint16_t action
```

Action to be done

Examples

fpp_cmd_fp_table.c.

3.6.2.2 r

```
fpp_fp_rule_props_t r
```

Parameters of the rule

Examples

```
fpp_cmd_fp_table.c.
```

The documentation for this struct was generated from the following file:

• fpp_ext.h

3.7 fpp_fp_rule_props_t Struct Reference

Properties of the Flexible parser rule.

```
#include <fpp_ext.h>
```

3.7.1 Detailed Description

Properties of the Flexible parser rule.

```
The rule match can be described as:
```

```
((frame_data[offset] & mask) == (data & mask)) ? match = true : match = false;
match = (invert ? !match : match);
```

Value of match being equal to true causes:

- Flexible Parser to stop and return ACCEPT
- Flexible Parser to stop and return REJECT
- Flexible Parser to set the next rule to rule specified in next_rule_name

The documentation for this struct was generated from the following file:

• fpp_ext.h



3.8 fpp_fp_table_cmd_t Struct Reference

Arguments for the FPP_CMD_FP_TABLE command.

```
#include <fpp_ext.h>
```

Data Fields

- uint16_t action
- uint8_t table_name [16]
- uint8_t rule_name [16]
- uint16_t position
- fpp_fp_rule_props_t r

3.8.1 Detailed Description

Arguments for the FPP_CMD_FP_TABLE command.

Examples

fpp_cmd_fp_table.c.

3.8.2 Field Documentation

3.8.2.1 action

```
uint16_t action
```

Action to be done

Examples

fpp_cmd_fp_table.c.

3.8.2.2 table_name

```
uint8_t table_name[16]
```

Name of the table to be administered by the action

3.8.2.3 rule_name

```
uint8_t rule_name[16]
```

Name of the rule to be added/removed to/from the table



3.8.2.4 position

```
uint16_t position
```

Position where to add rule (network endian)

3.8.2.5 r

```
fpp_fp_rule_props_t r
```

Properties of the rule - used as query result

The documentation for this struct was generated from the following file:

• fpp_ext.h

3.9 fpp_fw_features_cmd_t Struct Reference

Argument of the FPP_CMD_FW_FEATURE command.

```
#include <fpp_ext.h>
```

Data Fields

- uint16_t action
- char name [FPP_FEATURE_NAME_SIZE+1]
- char desc [FPP_FEATURE_DESC_SIZE+1]
- uint8 t val
- uint8_t variant
- uint8_t def_val
- uint8_t reserved

3.9.1 Detailed Description

Argument of the FPP_CMD_FW_FEATURE command.

3.9.2 Field Documentation

3.9.2.1 action

uint16_t action

Action to be done



3.9.2.2 name

```
char name[FPP_FEATURE_NAME_SIZE+1]
```

Feature name (only queries, cannot be modified)

3.9.2.3 desc

```
char desc[FPP_FEATURE_DESC_SIZE+1]
```

Feature description (only queries, cannot be modified)

3.9.2.4 val

```
uint8_t val
```

Value update: to be set / query: which is currently set for the feature

3.9.2.5 variant

```
uint8_t variant
```

Feature configuration variant 0=always disabled, 1=always enabled, 2=configurable

3.9.2.6 def_val

```
uint8_t def_val
```

Default value for configurable variant

3.9.2.7 reserved

```
uint8_t reserved
```

Reserved value

The documentation for this struct was generated from the following file:

• fpp_ext.h

3.10 fpp_if_m_args_t Struct Reference

Match rules arguments.

```
#include <fpp_ext.h>
```

Data Fields

- uint16_t vlan
- uint16_t ethtype



- uint16_t sport
- uint16_t dport
- uint8_t proto
- uint8_t smac [6]
- uint8_t dmac [6]
- char fp_table0 [16]
- char fp_table1 [16]
- uint32_t hif_cookie
- struct { } v4
- struct { } **v6**

3.10.1 Detailed Description

Match rules arguments.

Every value corresponds to specified match rule (fpp_if_m_rules_t).

3.10.2 Field Documentation

3.10.2.1 vlan

```
uint16_t vlan
VLAN ID (FPP_IF_MATCH_VLAN)
```

Examples

fpp_cmd_log_if.c.

3.10.2.2 ethtype

```
uint16_t ethtype
EtherType (FPP_IF_MATCH_ETHTYPE)
```

3.10.2.3 sport

```
uint16_t sport
```

L4 source port number (FPP_IF_MATCH_SPORT)



3.10.2.4 dport

```
uint16_t dport
```

L4 destination port number (FPP_IF_MATCH_DPORT)

3.10.2.5

```
struct { ... } v4
```

IPv4 source and destination address (FPP_IF_MATCH_SIP, FPP_IF_MATCH_DIP)

Examples

fpp_cmd_log_if.c.

3.10.2.6

```
struct { ... } v6
```

IPv6 source and destination address (FPP_IF_MATCH_SIP6, FPP_IF_MATCH_DIP6)

3.10.2.7 proto

```
uint8_t proto
```

IP protocol (FPP_IF_MATCH_PROTO)

3.10.2.8 smac

```
uint8_t smac[6]
```

Source MAC Address (FPP_IF_MATCH_SMAC)

3.10.2.9 dmac

```
uint8_t dmac[6]
```

Destination MAC Address (FPP_IF_MATCH_DMAC)

3.10.2.10 fp_table0

```
char fp_table0[16]
```

Flexible Parser table 0 (FPP_IF_MATCH_FP0)



3.10.2.11 fp_table1

```
char fp_table1[16]
Flexible Parser table 1 (FPP_IF_MATCH_FP1)
```

3.10.2.12 hif_cookie

```
uint32_t hif_cookie
```

HIF header cookie (FPP_IF_MATCH_HIF_COOKIE)

The documentation for this struct was generated from the following file:

• fpp_ext.h

3.11 fpp_l2_bd_cmd_t Struct Reference

Data structure to be used for command buffer for L2 bridge domain control commands.

```
#include <fpp_ext.h>
```

Data Fields

- uint16_t action
- uint16_t vlan
- uint8_t ucast_hit
- uint8_t ucast_miss
- uint8_t mcast_hit
- uint8_t mcast_miss
- uint32_t if_list
- uint32_t untag_if_list
- fpp_l2_bd_flags_t flags

3.11.1 Detailed Description

Data structure to be used for command buffer for L2 bridge domain control commands. It can be used:

• for command buffer in functions fci_write or fci_cmd, with commands: FPP_CMD_L2_BD.

Examples

```
fpp_cmd_l2_bd.c.
```



3.11.2 Field Documentation

3.11.2.1 action

```
uint16_t action
```

Action to be executed (register, unregister, query, ...)

Examples

fpp_cmd_l2_bd.c.

3.11.2.2 vlan

```
uint16_t vlan
```

VLAN ID associated with the bridge domain (network endian)

Examples

fpp_cmd_l2_bd.c.

3.11.2.3 ucast_hit

```
uint8_t ucast_hit
```

Action to be taken when destination MAC address (uni-cast) of a packet matching the domain is found in the MAC table (network endian): 0 - Forward, 1 - Flood, 2 - Punt, 3 - Discard

Examples

fpp_cmd_l2_bd.c.

3.11.2.4 ucast_miss

```
uint8_t ucast_miss
```

Action to be taken when destination MAC address (uni-cast) of a packet matching the domain is not found in the MAC table

Examples

fpp_cmd_l2_bd.c.



3.11.2.5 mcast_hit

uint8_t mcast_hit

Multicast hit action

Examples

fpp_cmd_l2_bd.c.

3.11.2.6 mcast miss

uint8_t mcast_miss

Multicast miss action

Examples

fpp_cmd_l2_bd.c.

3.11.2.7 if list

```
uint32_t if_list
```

Port list (network endian). Bitmask where every set bit represents ID of physical interface being member of the domain. For instance bit (1 « 3), if set, says that interface with ID=3 is member of the domain. Only valid interface IDs are accepted by the command. If flag is set, interface is added to the domain. If flag is not set and interface has been previously added, it is removed. The IDs are given by the related FCI endpoint and related networking HW. Interface IDs can be obtained via FPP_CMD_PHY_IF.

Examples

fpp_cmd_l2_bd.c.

3.11.2.8 untag_if_list

```
uint32_t untag_if_list
```

Flags marking interfaces listed in if_list to be 'tagged' or 'untagged' (network endian). If respective flag is set, corresponding interface within the if_list is treated as 'untagged' meaning that the VLAN tag will be removed. Otherwise it is configured as 'tagged'. Note that only interfaces listed within the if_list are taken into account.

Examples

fpp_cmd_l2_bd.c.



3.11.2.9 flags

```
fpp_12_bd_flags_t flags
See the fpp_12_bd_flags_t
```

The documentation for this struct was generated from the following file:

• fpp_ext.h

3.12 fpp_log_if_cmd_t Struct Reference

Data structure to be used for logical interface commands.

```
#include <fpp_ext.h>
```

Data Fields

- uint16_t action
- char name [IFNAMSIZ]
- uint32_t id
- char parent_name [IFNAMSIZ]
- uint32_t parent_id
- uint32_t egress
- fpp_if_flags_t flags
- fpp_if_m_rules_t match
- fpp_if_m_args_t arguments
- fpp_algo_stats_t stats

3.12.1 Detailed Description

Data structure to be used for logical interface commands.

Usage:

- As command buffer in functions fci_write, fci_query or fci_cmd, with FPP_CMD_LOG_IF command.
- As reply buffer in functions fci_query or fci_cmd, with FPP_CMD_LOG_IF command.

Examples

```
fpp_cmd_log_if.c.
```

3.12.2 Field Documentation



3.12.2.1 action

```
uint16_t action
```

Action

Examples

fpp_cmd_log_if.c.

3.12.2.2 name

```
char name[IFNAMSIZ]
```

Interface name

Examples

fpp_cmd_log_if.c.

3.12.2.3 id

```
uint32_t id
```

Interface ID (network endian)

3.12.2.4 parent_name

```
char parent_name[IFNAMSIZ]
```

Parent physical interface name

Examples

fpp_cmd_log_if.c.

3.12.2.5 parent_id

```
uint32_t parent_id
```

Parent physical interface ID (network endian)

3.12.2.6 egress

```
uint32_t egress
```

Egress interfaces in the form of mask (to get egress id: egress & (1 < id)) must be stored in network order (network endian)



Examples

fpp_cmd_log_if.c.

3.12.2.7 flags

```
fpp_if_flags_t flags
```

Interface flags from query or flags to be set (network endian)

Examples

fpp_cmd_log_if.c.

3.12.2.8 match

```
fpp_if_m_rules_t match
```

Match rules from query or match rules to be set (network endian)

Examples

fpp_cmd_log_if.c.

3.12.2.9 arguments

```
fpp_if_m_args_t arguments
```

Arguments for match rules (network endian)

Examples

fpp_cmd_log_if.c.

3.12.2.10 stats

```
fpp_algo_stats_t stats
```

Logical interface statistics

The documentation for this struct was generated from the following file:

• fpp_ext.h



3.13 fpp_phy_if_cmd_t Struct Reference

Data structure to be used for physical interface commands.

```
#include <fpp_ext.h>
```

Data Fields

- uint16_t action
- char name [IFNAMSIZ]
- uint32_t id
- fpp_if_flags_t flags
- fpp_phy_if_op_mode_t mode
- fpp_phy_if_block_state_t block_state
- fpp_phy_if_stats_t stats
- uint8_t mac_addr [6]
- char mirror [IFNAMSIZ]
- char ftable [16]

3.13.1 Detailed Description

Data structure to be used for physical interface commands.

Usage:

- As command buffer in functions fci_write, fci_query or fci_cmd, with FPP_CMD_PHY_IF command.
- As reply buffer in functions fci_query or fci_cmd, with FPP_CMD_PHY_IF command.

Examples

```
fpp_cmd_phy_if.c.
```

3.13.2 Field Documentation

3.13.2.1 action

```
uint16_t action
```

Action

Examples

fpp_cmd_phy_if.c.



3.13.2.2 name

```
char name[IFNAMSIZ]
```

Interface name

Examples

fpp_cmd_phy_if.c.

3.13.2.3 id

```
uint32_t id
```

Interface ID (network endian)

Examples

fpp_cmd_phy_if.c.

3.13.2.4 flags

```
fpp_if_flags_t flags
```

Interface flags (network endian)

Examples

fpp_cmd_phy_if.c.

3.13.2.5 mode

```
fpp_phy_if_op_mode_t mode
```

Phy if mode (network endian)

Examples

fpp_cmd_phy_if.c.

3.13.2.6 block_state

```
fpp_phy_if_block_state_t block_state
```

Phy if block state



3.13.2.7 stats

```
fpp_phy_if_stats_t stats
```

Physical interface statistics

3.13.2.8 mac_addr

```
uint8_t mac_addr[6]
```

Phy if MAC (network endian)

3.13.2.9 mirror

```
char mirror[IFNAMSIZ]
```

Name of interface to mirror the traffic to

3.13.2.10 ftable

```
char ftable[16]
```

Table to be used to filter ingress traffic. See FPP_CMD_FP_TABLE. If here is non-empty string then the filter is enabled. Empty string disables the filter.

Examples

```
fpp_cmd_phy_if.c.
```

The documentation for this struct was generated from the following file:

• fpp_ext.h

3.14 fpp_phy_if_stats_t Struct Reference

Physical interface statistics.

```
#include <fpp_ext.h>
```

Data Fields

- uint32_t ingress
- uint32_t egress
- uint32_t malformed
- uint32_t discarded



3.14.1 Detailed Description

Physical interface statistics.

Statistics used by physical interfaces (EMAC, HIF).

Note

All statistics counters are in network byte order.

3.14.2 Field Documentation

3.14.2.1 ingress

```
uint32_t ingress
```

Number of ingress frames for the given interface

3.14.2.2 egress

```
uint32_t egress
```

Number of egress frames for the given interface

3.14.2.3 malformed

```
uint32_t malformed
```

Number of ingress frames with detected error (i.e. checksum)

3.14.2.4 discarded

```
uint32_t discarded
```

Number of ingress frames which were discarded

The documentation for this struct was generated from the following file:

• fpp_ext.h

3.15 fpp_qos_queue_cmd_t Struct Reference

Argument of the FPP_CMD_QOS_QUEUE command.

```
#include <fpp_ext.h>
```



Data Fields

- uint16_t action
- char if_name [IFNAMSIZ]
- uint8_t id
- uint8_t mode
- uint32_t min
- uint32_t max
- uint8_t zprob [32]

3.15.1 Detailed Description

Argument of the FPP_CMD_QOS_QUEUE command.

Examples

fpp_cmd_qos_queue.c.

3.15.2 Field Documentation

3.15.2.1 action

uint16_t action

Action

Examples

fpp_cmd_qos_queue.c.

3.15.2.2 if_name

char if_name[IFNAMSIZ]

Interface name

Examples

fpp_cmd_qos_queue.c.



3.15.2.3 id

```
uint8_t id
```

Queue ID. IDs start with 0 and maximum value depends on the number of available queues within the given interface .if_name. See Egress QoS.

Examples

```
fpp_cmd_qos_queue.c.
```

3.15.2.4 mode

```
uint8_t mode
```

Queue mode:

- 0 Disabled. Queue will drop all packets.
- 1 Default. HW implementation-specific. Normally not used.
- 2 Tail drop
- 3 WRED

Examples

```
fpp_cmd_qos_queue.c.
```

3.15.2.5 min

```
uint32_t min
```

Minimum threshold (network endian). Value is .mode-specific:

- Disabled, Default: n/a
- Tail drop: n/a
- WRED: Threshold in number of packets in the queue at which the WRED lowest drop probability zone starts, i.e. if queue fill level is below this threshold the drop probability is 0%.

Examples

fpp_cmd_qos_queue.c.



3.15.2.6 max

```
uint32_t max
```

Maximum threshold (network endian). Value is .mode-specific:

- Disabled, Default: n/a
- Tail drop: The queue length in number of packets. Queue length is the number of packets the queue can accommodate before drops will occur.
- WRED: Threshold in number of packets in the queue at which the WRED highest drop probability zone ends, i.e. if queue fill level is above this threshold the drop probability is 100%.

Examples

```
fpp_cmd_qos_queue.c.
```

3.15.2.7 zprob

```
uint8_t zprob[32]
```

WRED drop probabilities for all probability zones in [%]. The lowest probability zone is .zprob[0]. Only valid for .mode = WRED. Value 255 means 'invalid'. Number of zones per queue is implementation-specific. See the Egress QoS.

Examples

```
fpp_cmd_qos_queue.c.
```

The documentation for this struct was generated from the following file:

• fpp_ext.h

3.16 fpp_qos_scheduler_cmd_t Struct Reference

Argument of the FPP_CMD_QOS_SCHEDULER command.

```
#include <fpp_ext.h>
```

Data Fields

- uint16_t action
- char if_name [IFNAMSIZ]
- uint8 tid
- uint8_t mode
- uint8_t algo



- uint32_t input_en
- uint32_t input_w [32]
- uint8_t input_src [32]

3.16.1 Detailed Description

Argument of the FPP_CMD_QOS_SCHEDULER command.

Examples

fpp_cmd_qos_scheduler.c.

3.16.2 Field Documentation

3.16.2.1 action

uint16_t action

Action

Examples

fpp_cmd_qos_scheduler.c.

3.16.2.2 if_name

```
char if_name[IFNAMSIZ]
```

Name of physical interface owning the scheduler

Examples

fpp_cmd_qos_scheduler.c.

3.16.2.3 id

```
uint8_t id
```

Scheduler ID. IDs start with 0 and maximum value depends on the number of available schedulers within the given interface .if_name. See Egress QoS.

Examples

fpp_cmd_qos_scheduler.c.



3.16.2.4 mode

uint8_t mode

Scheduler mode:

- 0 Scheduler disabled
- 1 Data rate (payload length)
- 2 Packet rate (number of packets)

Examples

fpp_cmd_qos_scheduler.c.

3.16.2.5 algo

uint8_t algo

Scheduler algorithm:

- 0 PQ (Priority Queue). Input with the highest priority is serviced first. Input 0 has the **lowest** priority.
- 1 DWRR (Deficit Weighted Round Robin)
- 2 RR (Round Robin)
- 3 WRR (Weighted Round Robin)

Examples

fpp_cmd_qos_scheduler.c.

3.16.2.6 input_en

```
uint32_t input_en
```

Input enable bitfield (network endian). When a bit n is set it means that scheduler input n is enabled and connected to traffic source defined by .source [n]. Number of inputs is implementation-specific. See the Egress QoS.

Examples

fpp_cmd_qos_scheduler.c.



3.16.2.7 input_w

```
uint32_t input_w[32]
```

Input weight (network endian). Scheduler algorithm-specific:

- PQ, RR n/a
- WRR, DWRR Weight in units given by scheduler . mode

Examples

fpp_cmd_qos_scheduler.c.

3.16.2.8 input_src

```
uint8_t input_src[32]
```

Traffic source ID per scheduler input. Scheduler traffic sources are implementation-specific. See the Egress QoS.

Examples

```
fpp_cmd_qos_scheduler.c.
```

The documentation for this struct was generated from the following file:

• fpp_ext.h

3.17 fpp_qos_shaper_cmd_t Struct Reference

Argument of the FPP_CMD_QOS_SHAPER command.

```
#include <fpp_ext.h>
```

Data Fields

- uint16_t action
- char if_name [IFNAMSIZ]
- uint8_t id
- uint8_t position
- uint8_t mode
- uint32_t isl
- int32_t max_credit
- int32_t min_credit



3.17.1 Detailed Description

Argument of the FPP_CMD_QOS_SHAPER command.

Examples

fpp_cmd_qos_shaper.c.

3.17.2 Field Documentation

3.17.2.1 action

uint16_t action

Action

Examples

fpp_cmd_qos_shaper.c.

3.17.2.2 if_name

char if_name[IFNAMSIZ]

Interface name

Examples

fpp_cmd_qos_shaper.c.

3.17.2.3 id

uint8_t id

Shaper ID. IDs start with 0 and maximum value depends on the number of available shapers within the given interface .if_name. See Egress QoS.

Examples

fpp_cmd_qos_shaper.c.



3.17.2.4 position

uint8_t position

Position of the shaper

Examples

fpp_cmd_qos_shaper.c.

3.17.2.5 mode

uint8_t mode

Shaper mode:

- 0 Shaper disabled
- 1 Data rate. The isl is in units of bits-per-second and max_credit with min_credit are numbers of bytes.
- 2 Packet rate. The isl is in units of packets-per-second and max_credit with min_credit are number of packets.

Examples

fpp_cmd_qos_shaper.c.

3.17.2.6 isl

uint32_t isl

Idle slope in units per second (network endian)

Examples

fpp_cmd_qos_shaper.c.

3.17.2.7 max_credit

int32_t max_credit

Max credit (network endian)

Examples

fpp_cmd_qos_shaper.c.



3.17.2.8 min_credit

```
int32_t min_credit
```

Min credit (network endian)

Examples

```
fpp_cmd_qos_shaper.c.
```

The documentation for this struct was generated from the following file:

• fpp_ext.h

3.18 fpp_rt_cmd_t Struct Reference

Structure representing the command to add or remove a route.

```
#include <fpp.h>
```

Data Fields

- uint16 taction
- uint8_t src_mac [6]
- uint8_t dst_mac [6]
- char output_device [IFNAMSIZ]
- uint32_t id
- uint32_t flags

3.18.1 Detailed Description

Structure representing the command to add or remove a route.

Data structure to be used for command buffer for route commands. It can be used:

- as command buffer in functions fci_write, fci_query or fci_cmd, with FPP CMD IP ROUTE command.
- as reply buffer in functions fci_query or fci_cmd, with FPP_CMD_IP_ROUTE command.

Examples

```
fpp_cmd_ip_route.c.
```

3.18.2 Field Documentation



3.18.2.1 action

```
uint16_t action
```

Action to perform

Examples

```
fpp_cmd_ip_route.c.
```

3.18.2.2 src_mac

```
uint8_t src_mac[6]
```

Source MAC address (network endian)

3.18.2.3 dst_mac

```
uint8_t dst_mac[6]
```

Destination MAC address (network endian)

Examples

```
fpp_cmd_ip_route.c.
```

3.18.2.4 output_device

```
char output_device[IFNAMSIZ]
```

Name of egress physical interface

Examples

```
fpp_cmd_ip_route.c.
```

3.18.2.5 id

```
uint32_t id
```

Unique route identifier

Examples

fpp_cmd_ip_route.c.



3.18.2.6 flags

```
uint32_t flags
```

Flags (network endian). 1 for IPv4 route, 2 for IPv6.

Examples

```
fpp_cmd_ip_route.c.
```

The documentation for this struct was generated from the following file:

• fpp.h

3.19 fpp_spd_cmd_t Struct Reference

Argument structure for the FPP_CMD_SPD command.

```
#include <fpp_ext.h>
```

Data Fields

- uint16_t action
- char name [IFNAMSIZ]
- uint16_t position
- uint32_t saddr [4]
- uint32_t daddr [4]
- uint16_t sport
- uint16_t dport
- uint8_t protocol
- uint32_t sa_id
- uint32_t spi
- fpp_spd_action_t spd_action

3.19.1 Detailed Description

Argument structure for the FPP_CMD_SPD command.

3.19.2 Field Documentation

3.19.2.1 action

uint16_t action

Action



3.19.2.2 name

char name[IFNAMSIZ]

Interface name

3.19.2.3 position

uint16_t position

Rule position (0 = 1st one, X = insert before Xth rule, if X > count then add as a last one)

3.19.2.4 saddr

uint32_t saddr[4]

Source IP address (IPv4 uses only 1st word)

3.19.2.5 daddr

uint32_t daddr[4]

Destination IP address (IPv4 uses only 1st word)

3.19.2.6 sport

uint16_t sport

Source port

3.19.2.7 dport

uint16_t dport

Destination port

3.19.2.8 protocol

uint8_t protocol

Protocol ID: TCP, UDP

3.19.2.9 sa_id

uint32_t sa_id

SAD entry identifier (used only for actions SPD_ACT_PROCESS_ENCODE)



3.19.2.10 spi

```
uint32_t spi
```

SPI to match if action is FPP_SPD_ACTION_PROCESS_DECODE

3.19.2.11 spd_action

```
fpp_spd_action_t spd_action
```

Action to be done on the frame

The documentation for this struct was generated from the following file:

• fpp_ext.h

3.20 fpp_timeout_cmd_t Struct Reference

Timeout command argument.

```
#include <fpp.h>
```

3.20.1 Detailed Description

Timeout command argument.

Data structure to be used for command buffer for timeout settings. It can be used:

• for command buffer in functions fci_write, fci_query or fci_cmd, with FPP_CMD_IPV4_SET_TIMEOUT command.

The documentation for this struct was generated from the following file:

• fpp.h



Chapter 4

File Documentation

4.1 fpp.h File Reference

```
The legacy FCI API.
```

```
#include "pfe_cfg.h"
#include <stdint.h>
```

Data Structures

- struct fpp_ct_cmd_t

 Data structure used in various functions for conntrack management.
- struct fpp_ct6_cmd_t

 Data structure used in various functions for IPv6 conntrack management.
- struct fpp_rt_cmd_t
 Structure representing the command to add or remove a route.
- struct fpp_timeout_cmd_t Timeout command argument.

Macros

- #define FPP_ACTION_REGISTER

 Generic 'register' action for FPP_CMD_*.
- #define FPP_ACTION_DEREGISTER

 Generic 'deregister' action for FPP_CMD_*.
- #define FPP_ACTION_UPDATE

 Generic 'update' action for FPP_CMD_*.
- #define FPP_ACTION_QUERY Generic 'query' action for FPP_CMD_*.
- #define FPP_ACTION_QUERY_CONT Generic 'query continue' action for FPP_CMD_*.
- #define FPP_CMD_IPV4_CONNTRACK
 Specifies FCI command for working with IPv4 tracked connections.



- #define FPP_CMD_IPV6_CONNTRACK
 Specifies FCI command for working with IPv6 tracked connections.
- #define FPP_CMD_IP_ROUTE Specifies FCI command for working with routes.
- #define FPP_CMD_IPV4_RESET

 Specifies FCI command that clears all IPv4 routes (see FPP_CMD_IP_ROUTE) and conntracks

 (see FPP_CMD_IPV4_CONNTRACK)
- #define FPP_CMD_IPV6_RESET

 Specifies FCI command that clears all IPv6 routes (see FPP_CMD_IP_ROUTE) and conntracks

 (see FPP_CMD_IPV6_CONNTRACK)
- #define FPP_CMD_IPV4_SET_TIMEOUT Specifies FCI command for setting timeouts of conntracks.

4.1.1 Detailed Description

The legacy FCI API.

This file origin is the fpp.h file from CMM sources.

4.1.2 Macro Definition Documentation

4.1.2.1 FPP_CMD_IPV4_CONNTRACK

#define FPP_CMD_IPV4_CONNTRACK

Specifies FCI command for working with IPv4 tracked connections.

This command can be used with various values of .action:

- FPP_ACTION_REGISTER: Defines a connection and binds it to previously created route(s).
- FPP_ACTION_DEREGISTER: Deletes previously defined connection.
- FPP_ACTION_UPDATE: Updates properties of previously defined connection.
- FPP_ACTION_QUERY: Gets parameters of existing connection. It creates a snapshot of all active conntrack entries and replies with first of them.
- FPP_ACTION_QUERY_CONT: Shall be called periodically after FPP_ACTION_QUERY was called. On each call it replies with parameters of next connection. It returns FPP_ERR_CT_ENTRY_NOT_FOUND when no more entries exist.

Command Argument Type: fpp_ct_cmd_t

Action FPP ACTION REGISTER

Items to be set in command argument structure:



```
fpp_ct_cmd_t cmd_data =
 // Register new conntrack
 .action = FPP_ACTION_REGISTER,
 // Source IPv4 address (network endian)
 .saddr = ...,
 // Destination IPv4 address (network endian)
 .daddr = ...,
 // Source port (network endian)
 .sport = ...,
 // Destination port (network endian)
 .dport = ...,
 // Reply source IPv4 address (network endian). Used for NAT, otherwise equals .daddr
 .saddr_reply = ...,
 // Reply destination IPv4 address (network endian). Used for NAT, otherwise equals .saddr
 .daddr_reply = ...,
 // Reply source port (network endian). Used for NAT, otherwise equals .dport
 .sport_reply = ...,
 // Reply destination port (network endian). Used for NAT, otherwise equals .sport
 .dport_reply = ...,
 // IP protocol ID (17=UDP, 6=TCP, ...)
 .protocol = ...,
 // Bidirectional/Single direction (network endian)
 .flags = ...,
 // ID of route previously created with .FPP_CMD_IP_ROUTE command (network endian)
 // ID of reply route previously created with .FPP_CMD_IP_ROUTE command (network endian)
 .route_id_reply = ...,
 // VLAN tag in normal direction. If non-zero then it is added to routed traffic which
 // is untagged. If the routed traffic is tagged, then the outer tag will be replaced.
 // VLAN tag in reply direction. Same meaning as .vlan.
 .vlan_reply = \dots
```

By default the connection is created as bi-directional. It means that two routing table entries are created at once: one for standard flow given by .saddr, .daddr, .sport, .dport, and .protocol and one for reverse flow defined by .saddr_reply, .daddr_reply, .sport_reply and .dport_reply. To create uni-directional connection, either:

- \bullet set <code>.flags |= CTCMD_FLAGS_REP_DISABLED</code> and don't set <code>route_id_reply, or</code>
- set .flags |= CTCMD_FLAGS_ORIG_DISABLED and don't set route_id.

To configure NAT-ed connection, set reply addresses and/or ports different than original addresses and ports. To achieve NAPT (also called PAT), use daddr_reply, dport_reply, and sport_reply:

- daddr_reply != saddr: Source address of packets in original direction will be changed from saddr to daddr_reply. In case of bi-directional connection, destination address of packets in reply direction will be changed from daddr_reply to saddr.
- 2. dport_reply != sport: Source port of packets in original direction will be changed from sport to dport_reply. In case of bi-directional connection, destination port of packets in reply direction will be changed from dport_reply to sport.
- 3. saddr_reply != daddr: Destination address of packets in original direction will be changed from daddr to saddr_reply. In case of bi-directional connection, source address of packets in reply direction will be changed from saddr_reply to daddr.



4. sport_reply != dport: Destination port of packets in original direction will be changed from dport to sport_reply. In case of bi-directional connection, source port of packets in reply direction will be changed from sport_reply to dport.

To disable port numbers check, just set both .sport and .dport to zero. This allows routing using only IP addresses and protocol number.

Action FPP ACTION DEREGISTER

Items to be set in command argument structure:

```
fpp_ct_cmd_t cmd_data =
{
    .action = FPP_ACTION_DEREGISTER, // Deregister previously created conntrack
    .saddr = ..., // Source IPv4 address (network endian)
    .daddr = ..., // Destination IPv4 address (network endian)
    .sport = ..., // Source port (network endian)
    .dport = ..., // Destination port (network endian)
    .saddr_reply = ..., // Reply source IPv4 address (network endian)
    .sport_reply = ..., // Reply destination IPv4 address (network endian)
    .sport_reply = ..., // Reply source port (network endian)
    .dport_reply = ..., // Reply destination port (network endian)
    .protocol = ..., // IP protocol ID
};
```

Action FPP_ACTION_UPDATE

Items to be set in command argument structure:

Action FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT

Items to be set in command argument structure:

Response data type for queries: fpp_ct_cmd_t

Response data provided:

```
rsp_data.saddr; // Source IPv4 address (network endian)
rsp_data.daddr; // Destination IPv4 address (network endian)
rsp_data.sport; // Source port (network endian)
rsp_data.dport; // Destination port (network endian)
rsp_data.saddr_reply; // Reply source IPv4 address (network endian)
rsp_data.daddr_reply; // Reply destination IPv4 address (network endian)
rsp_data.sport_reply; // Reply source port (network endian)
rsp_data.dport_reply; // Reply destination port (network endian)
rsp_data.protocol; // IP protocol ID (17=UDP, 6=TCP, ...)
```

Examples

fpp_cmd_ipv4_conntrack.c.



4.1.2.2 FPP_CMD_IPV6_CONNTRACK

```
#define FPP_CMD_IPV6_CONNTRACK
```

Specifies FCI command for working with IPv6 tracked connections.

This command can be used with various values of .action:

- FPP_ACTION_REGISTER: Defines a connection and binds it to previously created route(s).
- FPP_ACTION_DEREGISTER: Deletes previously defined connection.
- FPP_ACTION_UPDATE: Updates properties of previously defined connection.
- FPP_ACTION_QUERY: Gets parameters of existing connection. It creates a snapshot of all active conntrack entries and replies with first of them.
- FPP_ACTION_QUERY_CONT: Shall be called periodically after FPP_ACTION_QUERY was called. On each call it replies with parameters of next connection. It returns FPP_ERR_CT_ENTRY_NOT_FOUND when no more entries exist.

Command Argument Type: fpp_ct6_cmd_t

Action FPP_ACTION_REGISTER

Items to be set in command argument structure:

```
fpp_ct6_cmd_t cmd_data =
 // Register new conntrack
 .action = FPP_ACTION_REGISTER,
 // Source IPv6 address, (network endian)
 .saddr[0..3] = ...,
 // Destination IPv6 address, (network endian)
 .daddr[0..3] = ...,
 // Source port (network endian)
 .sport = ...,
 // Destination port (network endian)
 .dport = ...,
 // Reply source IPv6 address (network endian). Used for NAT, otherwise equals .daddr
  .saddr_reply[0..3] = ...,
 // Reply destination IPv6 address (network endian). Used for NAT, otherwise equals .saddr
 .daddr_reply[0..3] = ...,
 // Reply source port (network endian). Used for NAT, otherwise equals .dport
 .sport_reply = ...,
 // Reply destination port (network endian). Used for NAT, otherwise equals .sport
 .dport_reply = ...
 // IP protocol ID (17=UDP, 6=TCP, ...)
 .protocol = ...,
 // Bidirectional/Single direction (network endian)
 // ID of route previously created with <code>.FPP_CMD_IP_ROUTE</code> command (network endian)
 .route_id = ...,
 // ID of reply route previously created with .FPP_CMD_IP_ROUTE command (network endian)
 .route_id_reply = ...
 // VLAN tag in normal direction. If non-zero then it is added to routed traffic which
 // is untagged. If the routed traffic is tagged, then the outer tag will be replaced.
 .vlan = ...,
 \ensuremath{//} VLAN tag in reply direction. Same meaning as .vlan.
  .vlan_reply = \dots
```



} **;**

By default the connection is created as bi-directional. It means that two routing table entries are created at once: one for standard flow given by .saddr, .daddr, .sport, .dport, and .protocol and one for reverse flow defined by .saddr_reply, .daddr_reply, .sport_reply and .dport_reply. To create uni-directional connection, either:

- set .flags |= CTCMD_FLAGS_REP_DISABLED and don't set route_id_reply, or
- set .flags |= CTCMD_FLAGS_ORIG_DISABLED and don't set route_id.

To configure NAT-ed connection, set reply addresses and/or ports different than original addresses and ports. To achieve NAPT (also called PAT), use daddr_reply, dport_reply, and sport_reply:

- daddr_reply != saddr: Source address of packets in original direction will be changed from saddr to daddr_reply. In case of bi-directional connection, destination address of packets in reply direction will be changed from daddr_reply to saddr.
- dport_reply != sport: Source port of packets in original direction will be changed from sport to dport_reply. In case of bi-directional connection, destination port of packets in reply direction will be changed from dport_reply to sport.
- 3. saddr_reply != daddr: Destination address of packets in original direction will be changed from daddr to saddr_reply. In case of bi-directional connection, source address of packets in reply direction will be changed from saddr_reply to daddr.
- 4. sport_reply != dport: Destination port of packets in original direction will be changed from dport to sport_reply. In case of bi-directional connection, source port of packets in reply direction will be changed from sport_reply to dport.

To disable port numbers check, just set both .sport and .dport to zero. This allows routing using only IP addresses and protocol number.

Action FPP_ACTION_DEREGISTER

Items to be set in command argument structure:

```
fpp_ct6_cmd_t cmd_data =
  .action = FPP_ACTION_DEREGISTER, // Deregister previously created conntrack
                                      // Source IPv6 address, (network endian)
  .saddr[0..3] = ...,
 .daddr[0..3] = ...,
                                      // Destination IPv6 address, (network endian)
  .sport = ...,
                                      // Source port (network endian)
                                      // Destination port (network endian)
  .dport = ...,
 ..., .saddr_reply[0..3] = ..., // Reply source IPv6 address (network endian)
.daddr_reply[0..3] = ..., // Reply destination IPv6 address (network en
                                     // Reply destination IPv6 address (network endian)
 .sport_reply = ...,
                                      // Reply source port (network endian)
 .dport_reply = ...,
                                      // Reply destination port (network endian)
                                      // IP protocol ID
  .protocol = ...,
```



Action FPP_ACTION_UPDATE

Items to be set in command argument structure:

Action FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT

Items to be set in command argument structure:

Response data type for queries: fpp_ct6_cmd_t

Response data provided (all values in network byte order):

```
rsp_data.saddr; // Source IPv6 address (network endian)
rsp_data.daddr; // Destination IPv6 address (network endian)
rsp_data.sport; // Source port (network endian)
rsp_data.dport; // Destination port (network endian)
rsp_data.saddr_reply; // Reply source IPv6 address (network endian)
rsp_data.daddr_reply; // Reply destination IPv6 address (network endian)
rsp_data.sport_reply; // Reply source port (network endian)
rsp_data.dport_reply; // Reply destination port (network endian)
rsp_data.protocol; // IP protocol ID (17=UDP, 6=TCP, ...)
```

Examples

fpp_cmd_ipv6_conntrack.c.

4.1.2.3 FPP_CMD_IP_ROUTE

```
#define FPP_CMD_IP_ROUTE
```

Specifies FCI command for working with routes.

Routes are representing direction where matching traffic shall be forwarded to. Every route specifies egress physical interface and MAC address of next network node. This command can be used with various values of .action:

- FPP_ACTION_REGISTER: Defines a new route.
- FPP_ACTION_DEREGISTER: Deletes previously defined route.
- FPP_ACTION_QUERY: Gets parameters of existing routes. It creates a snapshot of all active route entries and replies with first of them.
- FPP_ACTION_QUERY_CONT: Shall be called periodically after FPP_ACTION_QUERY was called. On each call it replies with parameters of



next route. It returns FPP_ERR_RT_ENTRY_NOT_FOUND when no more entries exist.

Command Argument Type: fpp_rt_cmd_t

Action FPP_ACTION_REGISTER

Items to be set in command argument structure:

Action FPP_ACTION_DEREGISTER

Items to be set in command argument structure:

```
fpp_rt_cmd_t cmd_data =
{
    .action = FPP_ACTION_DEREGISTER, // Deregister a route
    .id = ... // Unique route identifier (network endian)
}.
```

Action FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT

Items to be set in command argument structure:

Response data provided (fpp_rt_cmd_t):

```
rsp_data.src_mac; // Source MAC address
rsp_data.dst_mac; // Destination MAC address
rsp_data.output_device; // Output device name
rsp_data.id; // Route ID (network endian)
srp_data.flags; // Flags (network endian)
```

Examples

fpp_cmd_ip_route.c.

4.1.2.4 FPP_CMD_IPV4_RESET

```
#define FPP_CMD_IPV4_RESET
```

Specifies FCI command that clears all IPv4 routes (see FPP_CMD_IP_ROUTE) and conntracks (see FPP_CMD_IPv4_CONNTRACK)



This command uses no arguments.

Command Argument Type: none (cmd_buf = NULL; cmd_len = 0;)

Examples

```
fpp_cmd_ip_route.c.
```

4.1.2.5 FPP_CMD_IPV6_RESET

```
#define FPP_CMD_IPV6_RESET
```

Specifies FCI command that clears all IPv6 routes (see FPP_CMD_IP_ROUTE) and conntracks (see FPP_CMD_IPV6_CONNTRACK)

This command uses no arguments.

Command Argument Type: none (cmd_buf = NULL; cmd_len = 0;)

Examples

```
fpp_cmd_ip_route.c.
```

4.1.2.6 FPP_CMD_IPV4_SET_TIMEOUT

```
#define FPP_CMD_IPV4_SET_TIMEOUT
```

Specifies FCI command for setting timeouts of conntracks.

This command sets timeout for conntracks based on protocol. Three kinds of protocols are distinguished: TCP, UDP and others. For each of them timeout can be set independently. For UDP it is possible to set different value for bidirectional and single-directional connection. Default timeout value is 5 days for TCP, 300s for UDP and 240s for others.

Newly created connections are being created with new timeout values already set. Previously created connections have their timeout updated with first received packet.

Command Argument Type: fpp_timeout_cmd_t

Items to be set in command argument structure:

```
fpp_timeout_cmd_t cmd_data =
{
    // IP protocol to be affected. Either 17 for UDP, 6 for TCP or 0 for others.
    .protocol;
    // Use 0 for normal connections, 1 for 4over6 IP tunnel connections.
    .sam_4o6_timeout;
    // Timeout value in seconds.
    .timeout_value1;
    // Optional timeout value which is valid only for UDP connections. If the value is set    // (non zero), then it affects unidirectional UDP connections only.
    .timeout_value2;
};
```



4.2 fpp_ext.h File Reference

Extension of the legacy fpp.h.

Data Structures

- struct fpp_if_m_args_t Match rules arguments.
- struct fpp_phy_if_stats_t Physical interface statistics.
- struct fpp_algo_stats_t Algorithm statistics.
- struct fpp_phy_if_cmd_t

 Data structure to be used for physical interface commands.
- struct fpp_log_if_cmd_t

 Data structure to be used for logical interface commands.
- struct fpp_l2_bd_cmd_t

 Data structure to be used for command buffer for L2 bridge domain control commands.
- struct fpp_fp_rule_props_t

 Properties of the Flexible parser rule.
- struct fpp_fp_rule_cmd_t
 Arguments for the FPP_CMD_FP_RULE command.
- struct fpp_fp_table_cmd_t
 Arguments for the FPP_CMD_FP_TABLE command.
- struct fpp_buf_cmd_t

 Argument structure for the FPP_CMD_DATA_BUF_PUT command.
- struct fpp_spd_cmd_t Argument structure for the FPP_CMD_SPD command.
- struct fpp_qos_queue_cmd_t

 Argument of the FPP_CMD_QOS_QUEUE command.
- struct fpp_qos_scheduler_cmd_t

 Argument of the FPP_CMD_QOS_SCHEDULER command.
- struct fpp_qos_shaper_cmd_t
 Argument of the FPP_CMD_QOS_SHAPER command.
- struct fpp_fw_features_cmd_t Argument of the FPP_CMD_FW_FEATURE command.

Macros

107

- #define FPP_CMD_PHY_IF

 FCI command for working with physical interfaces.
- #define FPP_CMD_LOG_IF FCI command for working with logical interfaces.
- #define FPP_CMD_IF_LOCK_SESSION FCI command to perform lock on interface database.
- #define FPP_CMD_IF_UNLOCK_SESSION



FCI command to perform unlock on interface database.

• #define FPP_CMD_L2_BD

VLAN-based L2 bridge domain management.

#define FPP_CMD_L2_STATIC_ENT

VLAN-based L2 bridge static entry management.

#define FPP_CMD_L2_FLUSH_LEARNED

FCI command to flush learned MAC table entries.

• #define FPP_CMD_L2_FLUSH_STATIC

FCI command to flush static MAC table entries.

• #define FPP_CMD_L2_FLUSH_ALL

FCI command to flush all MAC table entries.

• #define FPP_CMD_FP_TABLE

Administers the Flexible Parser tables.

• #define FPP CMD FP RULE

Administers the Flexible Parser rules.

• #define FPP ACTION USE RULE

Flexible Parser specific 'use' action for FPP_CMD_FP_TABLE.

• #define FPP_ACTION_UNUSE_RULE

Flexible Parser specific 'unuse' action for FPP_CMD_FP_TABLE.

• #define FPP CMD FP FLEXIBLE FILTER

Uses flexible parser to filter out frames from further processing.

• #define FPP CMD DATA BUF PUT

FCI command to send an arbitrary data to the accelerator.

• #define FPP CMD DATA BUF AVAIL

Event reported when accelerator wants to send a data buffer to host.

• #define FPP CMD ENDPOINT SHUTDOWN

Notify client about endpoint shutdown event.

• #define FPP CMD SPD

Configures the SPD (Security Policy Database) for IPsec.

• #define FPP CMD QOS QUEUE

Management of QoS queues.

• #define FPP_CMD_QOS_SCHEDULER

Management of QoS scheduler.

• #define FPP_CMD_QOS_SHAPER

Management of QoS shaper.

• #define FPP CMD FW FEATURE

Management of configurable firmware features.

Enumerations

enum fpp_if_flags_t {
 FPP_IF_ENABLED, FPP_IF_PROMISC,
 FPP_IF_MATCH_OR, FPP_IF_DISCARD,
 FPP_IF_MIRROR, FPP_IF_LOADBALANCE,
 FPP_IF_VLAN_CONF_CHECK, FPP_IF_PTP_CONF_CHECK,
 FPP_IF_PTP_PROMISC, FPP_IF_LOOPBACK,
 FPP_IF_ALLOW_Q_IN_Q, FPP_IF_MAX }



Interface flags.

```
• enum fpp phy if op mode t {
 FPP_IF_OP_DISABLED , FPP_IF_OP_DEFAULT ,
 FPP_IF_OP_BRIDGE, FPP_IF_OP_ROUTER,
 FPP_IF_OP_VLAN_BRIDGE, FPP_IF_OP_FLEXIBLE_ROUTER,
 FPP_IF_OP_L2L3_BRIDGE, FPP_IF_OP_L2L3_VLAN_BRIDGE}
    Physical if modes.
• enum fpp_if_m_rules_t {
 FPP_IF_MATCH_TYPE_ETH, FPP_IF_MATCH_TYPE_VLAN,
 FPP IF MATCH TYPE PPPOE, FPP IF MATCH TYPE ARP,
 FPP_IF_MATCH_TYPE_MCAST, FPP_IF_MATCH_TYPE_IPV4,
 FPP_IF_MATCH_TYPE_IPV6, FPP_IF_MATCH_RESERVED7,
 FPP IF MATCH RESERVED8, FPP IF MATCH TYPE IPX,
 FPP_IF_MATCH_TYPE_BCAST, FPP_IF_MATCH_TYPE_UDP,
 FPP_IF_MATCH_TYPE_TCP, FPP_IF_MATCH_TYPE_ICMP,
 FPP_IF_MATCH_TYPE_IGMP, FPP_IF_MATCH_VLAN,
 FPP IF MATCH PROTO, FPP IF MATCH SPORT,
 FPP_IF_MATCH_DPORT, FPP_IF_MATCH_SIP6,
 FPP_IF_MATCH_DIP6, FPP_IF_MATCH_SIP,
 FPP_IF_MATCH_DIP, FPP_IF_MATCH_ETHTYPE,
 FPP_IF_MATCH_FP0, FPP_IF_MATCH_FP1,
 FPP IF MATCH SMAC, FPP IF MATCH DMAC,
 FPP IF MATCH HIF COOKIE, FPP IF MATCH MAX }
    Match rules. Can be combined using bitwise OR.
enum fpp_phy_if_block_state_t {
 BS_NORMAL, BS_BLOCKED,
 BS LEARN_ONLY, BS_FORWARD_ONLY}
    Interface blocking state.
enum fpp_l2_bd_flags_t { FPP_L2_BD_DEFAULT , FPP_L2_BD_FALLBACK }
    L2 bridge domain flags.
enum fpp_fp_rule_match_action_t {
 FP ACCEPT, FP REJECT,
 FP NEXT RULE }
    Specifies the Flexible Parser result on the rule match.
enum fpp_fp_offset_from_t {
 FP_OFFSET_FROM_L2_HEADER, FP_OFFSET_FROM_L3_HEADER,
 FP_OFFSET_FROM_L4_HEADER }
    Specifies how to calculate the frame data offset.
enum fpp_spd_action_t
    Sets the action to be done for frames matching the SPD entry criteria.
enum fpp_spd_flags_t
```

Flags values to be used in fpp_spd_cmd_t structure .flags field.

4.2.1 Detailed Description

Extension of the legacy fpp.h.



All FCI commands and related elements not present within the legacy fpp.h shall be put into this file. All macro values (uint16_t) shall have the upper nibble set to b1111 to ensure no conflicts with the legacy macro values.

Note

Documentation is part of libfci.h.

4.3 libfci.h File Reference

Generic LibFCI header file.

Macros

- #define FCI_CFG_FORCE_LEGACY_API

 Changes the LibFCI API so it is more compatible with legacy implementation.
- #define FPP_CMD_IPV4_CONNTRACK_CHANGE
- #define FPP_CMD_IPV6_CONNTRACK_CHANGE
- #define CTCMD_FLAGS_ORIG_DISABLED Disable connection originator.
- #define CTCMD_FLAGS_REP_DISABLED Disable connection replier.
- #define CTCMD_FLAGS_TTL_DECREMENT Enable TTL decrement.

Enumerations

- enum fci_mcast_groups_t { FCI_GROUP_NONE , FCI_GROUP_CATCH } List of supported multicast groups.
- enum fci_client_type_t { FCI_CLIENT_DEFAULT , FCILIB_FF_TYPE } List of supported FCI client types.
- enum fci_cb_retval_t { FCI_CB_STOP , FCI_CB_CONTINUE } The FCI callback return values.

Functions

- FCI_CLIENT * fci_open (fci_client_type_t type, fci_mcast_groups_t group) Creates new FCI client and opens a connection to FCI endpoint.
- int fci_close (FCI_CLIENT *client)

 Disconnects from FCI endpoint and destroys FCI client instance.
- int fci_catch (FCI_CLIENT *client)

 Catch and process all FCI messages delivered to the FCI client.
- int fci_cmd (FCI_CLIENT *client, unsigned short fcode, unsigned short *cmd_buf, unsigned short cmd_len, unsigned short *rep_buf, unsigned short *rep_len)

 *Run an FCI command with optional data response.



- int fci_query (FCI_CLIENT *this_client, unsigned short fcode, unsigned short cmd_len, unsigned short *pcmd, unsigned short *rsplen, unsigned short *rsp_data)

 *Run an FCI command with data response.
- int fci_write (FCI_CLIENT *client, unsigned short fcode, unsigned short cmd_len, unsigned short *cmd_buf)

 *Run an FCI command.
- int fci_register_cb (FCI_CLIENT *client, fci_cb_retval_t(*event_cb)(unsigned short fcode, unsigned short len, unsigned short *payload))

 Register event callback function.
- int fci_fd (FCI_CLIENT *this_client)

 Obsolete function, shall not be used.

4.3.1 Detailed Description

Generic LibFCI header file.

This file contains generic API and API description



Chapter 5

Example Documentation

5.1 fpp_cmd_phy_if.c

```
* Copyright 2020-2021 NXP
\star NXP Confidential. This software is owned or controlled by NXP and may
  only be used strictly in accordance with the applicable license terms
  found at https://www.nxp.com/docs/en/disclaimer/LA_OPT_NXP_SW.html.
* For this example the Clause 2.3 of this license is not applicable.
#include <stdio.h>
#include <stdlib.h>
#include <arpa/inet.h>
#include <errno.h>
#include <string.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
* @brief
               Get QUERY response by interface name
* @param[in] cl The FCI client instance
* @param[in] name Physical interface name
* @param[out] phy_if Pointer where the response shall be written
* @return
                1 if success, zero otherwise
int fci_phy_if_get_by_name(FCI_CLIENT *cl, char *name, fpp_phy_if_cmd_t *phy_if)
    fpp_phy_if_cmd_t rep = \{0\}, cmd = \{0\};
   unsigned short replen;
    int ret, retval = 0;
    /* Get exclusive access to interfaces */
    if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL)))
        printf("FPP_CMD_IF_LOCK_SESSION failed: %d\n", ret);
    }
    else
        /* Get all interfaces */
        cmd.action = FPP_ACTION_QUERY;
        ret = fci_query(cl, FPP_CMD_PHY_IF, sizeof(cmd), (unsigned short *)&cmd,
                    &replen, (unsigned short *)&rep);
        while (FPP_ERR_OK == ret)
            if (0 == strcmp(name, rep.name))
            {
                memcpy(phy_if, &rep, sizeof(*phy_if));
                retval = 1;
                break;
            }
            else
```



```
cmd.action = FPP_ACTION_QUERY_CONT;
                ret = fci_query(cl, FPP_CMD_PHY_IF, sizeof(cmd), (unsigned short *)&cmd,
                            &replen, (unsigned short *)&rep);
            }
        /* Unlock interfaces */
        if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL)))
            printf("FPP_CMD_IF_UNLOCK_SESSION failed: %d\n", ret);
    return retval;
}
/*
* @brief
               Enable physical interface
 * \operatorname{@param[in]} cl The FCI client instance
               name Physical interface name
 * @param[in]
void fci_phy_if_enable(FCI_CLIENT *cl, char *name)
    fpp_phy_if_cmd_t cmd;
    int ret;
    if (fci_phy_if_get_by_name(cl, name, &cmd))
    {
        /* Get exclusive access to interfaces */
        if (FPP_ERR_OK != fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL))
            printf("FPP_CMD_IF_LOCK_SESSION failed\n");
        }
        else
        {
            cmd.action = FPP_ACTION_UPDATE;
            cmd.flags |= htonl(FPP_IF_ENABLED);
            if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_PHY_IF, sizeof(cmd),
                                         (unsigned short *) & cmd)))
            {
                printf("%s enable failed: %d\n", name, ret);
            }
        }
           Unlock interfaces */
        if (FPP_ERR_OK != fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL))
            printf("FPP_CMD_IF_UNLOCK_SESSION failed\n");
    }
    else
    {
        printf("%s not found\n", name);
}
* @brief
                Disable physical interface
               cl The FCI client instance
* @param[in]
 * @param[in]
               name Physical interface name
void fci_phy_if_disable(FCI_CLIENT *cl, char *name)
    fpp_phy_if_cmd_t cmd;
    int ret;
    if (fci_phy_if_get_by_name(cl, name, &cmd))
        cmd.action = FPP_ACTION_UPDATE;
        cmd.flags &= htonl(~FPP_IF_ENABLED);
        /\star Get exclusive access to interfaces \star/
        if (FPP_ERR_OK != fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL))
        {
            printf("FPP_CMD_IF_LOCK_SESSION failed\n");
        }
        else
            if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_PHY_IF, sizeof(cmd),
                                             (unsigned short *)&cmd)))
```



```
printf("%s disable failed: %d\n", name, ret);
           Unlock interfaces */
        if (FPP_ERR_OK != fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL))
            printf("FPP_CMD_IF_UNLOCK_SESSION failed\n");
    }
    else
        printf("%s not found\n", name);
    }
}
/*
 * @brief
               Print all physical interfaces
 * @param[in]
              The FCI client instance
void fci_phy_if_print_all(FCI_CLIENT *cl)
    fpp_phy_if_cmd_t rep = {0}, cmd = {0};
    unsigned short replen;
    int ret:
    /* Get exclusive access to interfaces */
    if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL)))
    {
        printf("FPP_CMD_IF_LOCK_SESSION failed: %d\n", ret);
    }
    else
        /* Get all interfaces */
        cmd.action = FPP_ACTION_QUERY;
        ret = fci_query(cl, FPP_CMD_PHY_IF, sizeof(cmd), (unsigned short *)&cmd,
                    &replen, (unsigned short *)&rep);
        while (FPP_ERR_OK == ret)
        {
            printf("%02d %-5s: Mode: 0x%x, Flags: 0x%04x, Filter: %s\n",
                        ntohl(rep.id), rep.name, rep.mode, ntohl(rep.flags),
                            (0 == strlen(rep.ftable)) ? "Disabled" : rep.ftable);
            cmd.action = FPP_ACTION_QUERY_CONT;
            ret = fci_query(cl, FPP_CMD_PHY_IF, sizeof(cmd), (unsigned short *)&cmd,
                        &replen, (unsigned short *)&rep);
    }
    /*
       Unlock interfaces */
    if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL)))
        printf("FPP_CMD_IF_UNLOCK_SESSION failed: %d\n", ret);
}
/*
* @brief
                Get physical interface ID by name
               The FCI client instance
* @param[in]
 * @param[in]
              name Name of physical interface
               Physical interface ID (in host byte order) or -1 if failed.
int fci_phy_if_get_id(FCI_CLIENT *cl, char *name)
{
    fpp_phy_if_cmd_t rep = {0};
    int ret;
    /\star~ Get reply data by name \star/
    if (fci_phy_if_get_by_name(cl, name, &rep))
    {
        ret = ntohl(rep.id);
    }
    else
        ret = -1;
    return ret;
}
/*
```



```
* @brief
               Change mode and enable physical interface
* @param[in]
               cl The FCI client instance
* @param[in]
               id Physical interface ID
* @param[in]
              mode New operation mode to be set
void fci_phy_if_set_mode(FCI_CLIENT *cl, char *name, fpp_phy_if_op_mode_t mode)
   fpp_phy_if_cmd_t rep;
   int ret;
   /* Get interface reply by name */
   if (fci_phy_if_get_by_name(cl, name, &rep))
        /* Get exclusive access to interfaces */
       if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL)))
           printf("FPP_CMD_IF_LOCK_SESSION failed: %d\n", ret);
        }
       else
        {
            /* Change the mode */
           rep.action = FPP_ACTION_UPDATE;
            rep.mode = mode;
            if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_PHY_IF,
                                       sizeof(rep), (unsigned short *)&rep)))
               printf("Mode change failed: %d\n", ret);
           }
            /* Unlock interfaces */
            if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL)))
            {
                printf("FPP_CMD_IF_UNLOCK_SESSION failed: %d\n", ret);
        }
   }
   else
       printf("%s not found\n", name);
* @brief
               Set Flexible Filter table
* @details
               Setting a table enables the filter. Setting NULL-table
               disables the filter.
* @param[in]
               cl The FCI client instance
* @param[in]
              name Name of physical interface
              table Name of the table. See @ref FPP_CMD_FP_TABLE. Empty string
* @param[in]
                     here disables the filter.
* /
void fci_phy_if_set_ftable(FCI_CLIENT *cl, char *name, char *table)
   fpp_phy_if_cmd_t rep;
   int ret;
   /* Get interface reply by name */
   if (fci_phy_if_get_by_name(cl, name, &rep))
        /* Get exclusive access to interfaces */
       if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL)))
        {
           printf("FPP_CMD_IF_LOCK_SESSION failed: %d\n", ret);
        }
       else
        {
            /* Change the mode */
           rep.action = FPP_ACTION_UPDATE;
           rep.ftable[0] = 0;
            strncpy(rep.ftable, table, sizeof(rep.ftable) - 1U);
           if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_PHY_IF,
                                       sizeof(rep), (unsigned short *)&rep)))
            {
               printf("Mode change failed: %d\n", ret);
            /* Unlock interfaces */
            if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL)))
```



```
printf("FPP_CMD_IF_UNLOCK_SESSION failed: %d\n", ret);
    }
    else
    {
        printf("%s not found\n", name);
}
/*
 * @brief
               Set an interface flag
 * @param[in] cl The FCI client instance
 * @param[in]
               name Physical interface name
 * @param[in]
               mode Flag to be set
void fci_phy_if_set_flag(FCI_CLIENT *cl, char *name, fpp_if_flags_t flag)
    fpp_phy_if_cmd_t cmd;
    int ret;
    if (fci_phy_if_get_by_name(cl, name, &cmd))
        cmd.action = FPP_ACTION_UPDATE;
        cmd.flags |= htonl(flag);
        /\star Get exclusive access to interfaces \star/
        if (FPP_ERR_OK != fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL))
        {
            printf("FPP_CMD_IF_LOCK_SESSION failed\n");
        }
        else
            if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_PHY_IF, sizeof(cmd),
                                             (unsigned short *)&cmd)))
                printf("%s: Set flag failed: %d\n", name, ret);
           Unlock interfaces */
        if (FPP_ERR_OK != fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL))
            printf("FPP_CMD_IF_UNLOCK_SESSION failed\n");
    }
    else
    {
        printf("%s not found\n", name);
}
 * @brief
               Clear interface flag
 * @param[in] cl The FCI client instance
 * @param[in]
               name Physical interface name
 * @param[in]
               mode Flag to be cleared
void fci_phy_if_clear_flag(FCI_CLIENT *cl, char *name, fpp_if_flags_t flag)
    fpp_phy_if_cmd_t cmd;
    int ret;
    if (fci_phy_if_get_by_name(cl, name, &cmd))
        cmd.action = FPP_ACTION_UPDATE;
        cmd.flags &= htonl(~flag);
        /* Get exclusive access to interfaces */
        if (FPP_ERR_OK != fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL))
        {
            printf("FPP_CMD_IF_LOCK_SESSION failed\n");
        }
        else
            if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_PHY_IF, sizeof(cmd),
                                             (unsigned short *)&cmd)))
                printf("%s: Set flag failed: %d\n", name, ret);
```



```
}
}
/* Unlock interfaces */
if (FPP_ERR_OK != fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL))
{
    printf("FPP_CMD_IF_UNLOCK_SESSION failed\n");
}
else
{
    printf("%s not found\n", name);
}
```

5.2 fpp_cmd_log_if.c

```
* Copyright 2020-2021 NXP
\star NXP Confidential. This software is owned or controlled by NXP and may
\star only be used strictly in accordance with the applicable license terms
   found at https://www.nxp.com/docs/en/disclaimer/LA_OPT_NXP_SW.html.
* For this example the Clause 2.3 of this license is not applicable.
* ========== */
#include <stdio.h>
#include <stdlib.h>
#include <arpa/inet.h>
#include <errno.h>
#include <string.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
             Print all logical interfaces
   @param[in] cl The FCI client instance
void fci_log_if_print_all(FCI_CLIENT *cl)
   fpp_log_if_cmd_t rep, cmd;
   unsigned short replen;
   int ret;
   /\star Get exclusive access to interfaces \star/
   if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL)))
       printf("FPP_CMD_IF_LOCK_SESSION failed: %d\n", ret);
   }
   else
       /* Get all interfaces */
       cmd.action = FPP_ACTION_QUERY;
       ret = fci_query(cl, FPP_CMD_LOG_IF, sizeof(cmd), (unsigned short *)&cmd,
                  &replen, (unsigned short *)&rep);
       while (FPP_ERR_OK == ret)
          printf("%02d %s (%-5s): Flags: 0x%04x, Egress: 0x%08x, MatchRules: 0x%08x\n",
                     ntohl(rep.id), rep.name, rep.parent_name, ntohl(rep.flags),
                             ntohl(rep.egress), ntohl(rep.match));
           cmd.action = FPP_ACTION_QUERY_CONT;
          ret = fci_query(cl, FPP_CMD_LOG_IF, sizeof(cmd), (unsigned short *)&cmd,
                     &replen, (unsigned short *)&rep);
       /* Unlock interfaces */
       if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL)))
          printf("FPP_CMD_IF_UNLOCK_SESSION failed: %d\n", ret);
   }
```



```
* @brief
                Create IPC channel
                Add logical interface on hif0 to send certain traffic to hif2. This allows
 * @details
               setup of IPC channel between two host cores. Packets transmitted by host CPU
                via HIF channel 0 will be classified and in case that they contain destination
                IP address equal to 14.41.48.1 OR VLAN tag equal to 123, they will be
                forwarded to HIF channel 2, otherwise they will follow the default path.
                In case the host sitting on hif2 would require similar packet distribution
                to hif0, another logical interface needs to be created on hif2.
                This example utilizes the Flexible Router operation mode of hif0.
* @param[in]
               cl The FCI client instance
void fci_add_ipc_log_if(FCI_CLIENT *cl)
   fpp_log_if_cmd_t cmd = {0};
   int ret;
   int dst_id = fci_phy_if_get_id(cl, "hif2");
   if (dst id < 0)</pre>
       printf("Could not get destination interface ID\n");
       return;
    /* Get exclusive access to interfaces */
    if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL)))
    {
       printf("FPP CMD IF LOCK SESSION failed: %d\n", ret);
   }
   else
    {
        /* Add logical interface to 'src' physical interface */
       cmd.action = FPP_ACTION_REGISTER;
        strncpy(cmd.name, "ipc0", sizeof(cmd.name)-1);
        strncpy(cmd.parent_name, "hif0", sizeof(cmd.parent_name)-1);
        ret = fci_write(cl, FPP_CMD_LOG_IF, sizeof(cmd), (unsigned short *)&cmd);
        if (FPP_ERR_OK != ret)
        {
           printf("ipc0 could not be created: %d\n", ret);
        }
       else
        {
            /* Configure the new interface */
           cmd.action = FPP ACTION UPDATE;
           cmd.match = htonl(FPP_IF_MATCH_DIP|FPP_IF_MATCH_VLAN);
           cmd.arguments.v4.dip = htonl(0x0e293001); /* 14.41.48.1 */
           cmd.arguments.vlan = htons(123);
            cmd.flags = htonl(FPP_IF_ENABLED|FPP_IF_MATCH_OR);
           cmd.egress = htonl(1 « dst_id);
           ret = fci_write(cl, FPP_CMD_LOG_IF, sizeof(cmd), (unsigned short *)&cmd);
            if (FPP_ERR_OK != ret)
            {
               printf("Can't update: %d\n", ret);
        /* Unlock interfaces */
        if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL)))
           printf("FPP_CMD_IF_UNLOCK_SESSION failed: %d\n", ret);
       Configure pfe0 to start using logical interface-based
        classification of ingress traffic (Flexible Router) \star/
   fci_phy_if_set_mode(cl, "hif0", FPP_IF_OP_FLEXIBLE_ROUTER);
    /\star Enable the hif0 and hif2 \star/
    fci_phy_if_enable(cl, "hif0");
   fci_phy_if_enable(cl, "hif2");
* @brief
               Delete a logical interface
* @param[in]
              cl The FCI client instance
* @param[in]
               name Name of the logical interface to remove
```



```
void fci_log_if_del(FCI_CLIENT *cl, char *name)
    fpp_log_if_cmd_t cmd = {0};
   int ret;
   /* Get exclusive access to interfaces */
   if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL)))
       printf("FPP_CMD_IF_LOCK_SESSION failed: %d\n", ret);
   }
   else
        /* Remove logical interface */
       cmd.action = FPP_ACTION_DEREGISTER;
       strncpy(cmd.name, name, sizeof(cmd.name)-1);
        ret = fci_write(cl, FPP_CMD_LOG_IF, sizeof(cmd), (unsigned short *)&cmd);
        if (FPP_ERR_OK != ret)
           printf("ipc0 could not be deleted: %d\n", ret);
        /* Unlock interfaces */
        if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL)))
           printf("FPP_CMD_IF_UNLOCK_SESSION failed: %d\n", ret);
   }
```

5.3 fpp_cmd_ip_route.c

```
* Copyright 2020-2021 NXP
 \star NXP Confidential. This software is owned or controlled by NXP and may
 \star only be used strictly in accordance with the applicable license terms
   found at https://www.nxp.com/docs/en/disclaimer/LA_OPT_NXP_SW.html.
 * For this example the Clause 2.3 of this license is not applicable.
#include <stdio.h>
#include <stdlib.h>
#include <arpa/inet.h>
#include <errno.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
* @brief
              Reset IPv4 and IPv6 router
* @param[in] cl The FCI client instance
void fci_router_reset(FCI_CLIENT *cl)
   ret = fci_write(cl, FPP_CMD_IPV4_RESET, 0, NULL);
    if (FPP_ERR_OK != ret)
       printf("FPP_CMD_IPV4_RESET failed: %d\n", ret);
   ret = fci_write(cl, FPP_CMD_IPV6_RESET, 0, NULL);
    if (FPP_ERR_OK != ret)
       printf("FPP_CMD_IPV6_RESET failed: %d\n", ret);
}
 * @brief
               Register two IPv4 routes
               Function registers two IPv4 routes: one targeting emac0 and the second
 * @details
               one emacl. Traffic matching respective route will be forwarded via
               physical interface given by 'fpp_rt_cmd_t.output_device' while its source
               {\tt MAC} address will be replaced by {\tt MAC} address of the output interface and
               destination MAC address will be replaced by 'fpp_rt_cmd_t.dst_mac'.
```



```
* @param[in]
                cl The FCI client instance
void fci_router_register_ipv4_routes(FCI_CLIENT *cl)
    int ret;
    fpp_rt_cmd_t r1 =
        /* Register new route */
        .action = FPP_ACTION_REGISTER,
        /\star Destination MAC address to be used for packets matching the route \star/
        .dst_mac = \{0x00, 0xaa, 0xbb, 0xcc, 0xdd, 0xee\},
        /* Egress physical interface */
        .output_device = "emac0",
        /* Unique route identifier */
        .id = htonl(123),
        /* Use IPv4 addressing */
        .flags = htonl(1)
    };
    fpp_rt_cmd_t r2 =
        .action = FPP_ACTION_REGISTER,
        .dst_mac = \{0x00, 0x11, 0x22, 0x33, 0x44, 0x55\},
        .output_device = "emac1",
        .id = htonl(456),
        .flags = htonl(1),
    };
    /* Register route "r1" */
    ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(r1), (void *)&r1);
    if (FPP_ERR_OK != ret)
    {
        printf("FPP_CMD_IP_ROUTE[FPP_ACTION_REGISTER] failed: %d\n", ret);
       return:
    /* Register route "r2" */
    ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(r2), (void *)&r2);
    if (FPP_ERR_OK != ret)
       printf("FPP_CMD_IP_ROUTE[FPP_ACTION_REGISTER] failed: %d\n", ret);
    }
}
                Register two IPv6 routes
* @brief
* @details
                Function registers two IPv6 routes: one targeting emac0 and the second
                one emacl. Traffic matching respective route will be forwarded via
                physical interface given by 'fpp_rt_cmd_t.output_device' while its source
                MAC address will be replaced by MAC address of the output interface and
               destination MAC address will be replaced by 'fpp_rt_cmd_t.dst_mac'.
* @param[in]
               cl The FCI client instance
void fci_router_register_ipv6_routes(FCI_CLIENT *cl)
    int ret;
    fpp_rt_cmd_t r1 =
        /* Register new route */
        .action = FPP_ACTION_REGISTER,
        /\star Destination MAC address to be used for packets matching the route \star/
        .dst_mac = \{0x00, 0xaa, 0xbb, 0xcc, 0xdd, 0xee\},
        /* Egress physical interface */
        .output_device = "emac0",
        /* Unique route identifier */
        .id = htonl(111),
        /* Use IPv6 addressing */
        .flags = htonl(2)
    fpp_rt_cmd_t r2 =
        .action = FPP_ACTION_REGISTER,
        .dst_mac = \{0x00, 0x11, 0x22, 0x33, 0x44, 0x55\},
        .output_device = "emac1",
        .id = htonl(222),
        .flags = htonl(2),
```



```
/* Register route "rl" */
   ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(r1), (void *)&r1);
    if (FPP_ERR_OK != ret)
    {
       printf("FPP_CMD_IP_ROUTE[FPP_ACTION_REGISTER] failed: %d\n", ret);
   }
    /* Register route "r2" */
   ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(r2), (void *)&r2);
   if (FPP_ERR_OK != ret)
       printf("FPP_CMD_IP_ROUTE[FPP_ACTION_REGISTER] failed: %d\n", ret);
       return;
   }
}
/*
* @brief
               Print all IPv4 routes
* @param[in] cl The FCI client instance
void fci_router_print_ipv4_routes(FCI_CLIENT *cl)
   int ret;
   fpp_rt_cmd_t cmd;
   fpp_rt_cmd_t rep;
   unsigned short rep_len;
   cmd.action = FPP ACTION QUERY;
   ret = fci_query(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd, &rep_len, (void *)&rep);
   while (FPP_ERR_OK == ret)
    {
        if (1 == ntohl(rep.flags))
        {
           printf("%03d: %s (%02x:%02x:%02x:%02x:%02x:%02x), flags: 0x%x\n",
                ntohl(rep.id), rep.output_device, rep.dst_mac[0], rep.dst_mac[1],
                   rep.dst_mac[2], rep.dst_mac[3], rep.dst_mac[4], rep.dst_mac[5],
                       ntohl(rep.flags));
       cmd.action = FPP_ACTION_QUERY_CONT;
       ret = fci_query(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd, &rep_len, (void
       *)&rep);
   }
* @brief
               Print all IPv6 routes
* @param[in] cl The FCI client instance
void fci_router_print_ipv6_routes(FCI_CLIENT *cl)
   int ret;
   fpp_rt_cmd_t cmd;
   fpp_rt_cmd_t rep;
   unsigned short rep_len;
   cmd.action = FPP_ACTION_QUERY;
   ret = fci_query(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd, &rep_len, (void *)&rep);
   while (FPP_ERR_OK == ret)
    {
       if (2 == ntohl(rep.flags))
        {
           printf("%03d: %s (%02x:%02x:%02x:%02x:%02x), flags: 0x%x\n",
                ntohl(rep.id), rep.output_device, rep.dst_mac[0], rep.dst_mac[1],
                   rep.dst_mac[2], rep.dst_mac[3], rep.dst_mac[4], rep.dst_mac[5],
                       ntohl(rep.flags));
       cmd.action = FPP_ACTION_QUERY_CONT;
       ret = fci_query(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd, &rep_len, (void
       *)&rep);
   }
}
* @brief
               Remove routes created by fci_router_register_ipv4_routes()
* @param[in]
              cl The FCI client instance
void fci_router_remove_ipv4_routes(FCI_CLIENT *cl)
```



```
int ret;
    fpp_rt_cmd_t cmd;
    cmd.action = FPP_ACTION_DEREGISTER;
    cmd.id = htonl(123);
    ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd);
    if (FPP_ERR_OK != ret)
        printf("FPP_CMD_IP_ROUTE[FPP_ACTION_DEREGISTER] failed: %d\n", ret);
    cmd.id = htonl(456);
    ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd);
    if (FPP_ERR_OK != ret)
        printf("FPP_CMD_IP_ROUTE[FPP_ACTION_DEREGISTER] failed: %d\n", ret);
}
 * @brief
               Remove routes created by fci_router_register_ipv6_routes()
 * @param[in] cl The FCI client instance
void fci_router_remove_ipv6_routes(FCI_CLIENT *cl)
    int ret;
    fpp_rt_cmd_t cmd;
    cmd.action = FPP_ACTION_DEREGISTER;
    cmd.id = htonl(111);
    ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd);
    if (FPP_ERR_OK != ret)
        printf("FPP_CMD_IP_ROUTE[FPP_ACTION_DEREGISTER] failed: %d\n", ret);
    cmd.id = htonl(222);
    ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd);
    if (FPP ERR OK != ret.)
        printf("FPP_CMD_IP_ROUTE[FPP_ACTION_DEREGISTER] failed: %d\n", ret);
}
```

5.4 fpp_cmd_ipv4_conntrack.c

```
_____
* Copyright 2020-2021 NXP
\star NXP Confidential. This software is owned or controlled by NXP and may
\star only be used strictly in accordance with the applicable license terms
   found at https://www.nxp.com/docs/en/disclaimer/LA_OPT_NXP_SW.html.
 * For this example the Clause 2.3 of this license is not applicable.
#include <stdio.h>
#include <stdlib.h>
#include <arpa/inet.h>
#include <errno.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
* @brief
               Register two UPD connections to be fast-forwarded
              Add 2 routing table entries (conntracks). Traffic matching
* @details
               respective conntrack will be forwarded via physical interface
               given by matching route (fpp_rt_cmd_t.output_device) while its
               source MAC address will be replaced by MAC address of the output
               interface and destination MAC address will be replaced by the
               one defined by route (fpp_rt_cmd_t.dst_mac).
               In case of no hit, packet will be sent to default logical
               interface (to host). Host can configure slow-path routing using
               standard OS-provided mechanisms to route rest of traffic (e.g.
```



```
TCMP).
                cl The FCI client instance
* @param[in]
void fci_router_register_ipv4_conntracks(FCI_CLIENT *cl)
    int ret;
    fpp_ct_cmd_t ct1 =
        /* New connection */
        .action = FPP_ACTION_REGISTER,
        /* Source IP address: 11.41.48.100 */
        .saddr = htonl(0x0b293064),
        /* Destination IP address: 12.41.48.100 */
        .daddr = hton1(0x0c293064),
        /* Source L4 port */
        .sport = htons(11),
        /* Destination L4 port */
        .dport = htons(12),
        /\star Source IP address in reply direction. Equal to 'daddr' to disable
           replacement. */
        .saddr_reply = htonl(0x0c293064),
        /\star~ Destination IP address in reply direction. Same as 'saddr' to
            disable replacement. \star/
        .daddr_reply = htonl(0x0b293064),
        /* Source L4 port in reply direction. Equal to 'dport' to disable
           replacement. */
        .sport_reply = htons(12),
        /\star Destination L4 port in reply direction. Equal to 'sport' to disable
           replacement.*/
        .dport_reply = htons(11),
        /* Protocol ID: UDP */
        .protocol = 17,
        /* Flags: Do not open reply connection */
        .flags = htons(CTCMD_FLAGS_REP_DISABLED),
        /\star Associated route (456=emac1). This route will be used to forward
            packets matching this tracked connection (SIP+DIP+SPORT+DPORT+PROTO).
            Route must exist. To create a route see the FPP_CMD_IP_ROUTE. \star/
        .route_id = htonl(456),
    fpp_ct_cmd_t ct2 =
        .action = FPP_ACTION_REGISTER,
        /* Source IP address: 12.41.48.100 */
        .saddr = htonl(0x0c293064),
        /* Destination IP address: 11.41.48.100 */
        .daddr = hton1(0x0b293064),
        .sport = htons(12),
        .dport = htons(11),
        .saddr_reply = htonl(0x0b293064),
        .daddr_reply = htonl(0x0c293064),
        .sport_reply = htons(11),
        .dport_reply = htons(12),
        .protocol = 17,
        .flags = htons(CTCMD_FLAGS_REP_DISABLED),
        .route_id = htonl(123),
    };
    /* Register connection "ct1" */
    ret = fci_write(cl, FPP_CMD_IPV4_CONNTRACK, sizeof(ct1), (void *)&ct1);
    if (0 != ret)
    {
       printf("FPP_CMD_IPV4_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
    /* Register connection "ct2" */
    ret = fci_write(cl, FPP_CMD_IPV4_CONNTRACK, sizeof(ct2), (void *)&ct2);
    if (0 != ret)
    {
       printf("FPP_CMD_IPV4_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
    }
}
* @brief
                Register two UPD connections to be fast-forwarded with NAT
```



```
* @details
                Add 2 routing table entries (conntracks). Traffic matching
                respective conntrack will be forwarded via physical interface
                given by matching route (fpp_rt_cmd_t.output_device) while its
                source MAC address will be replaced by MAC address of the output
                interface and destination MAC address will be replaced by the
                one defined by route (fpp_rt_cmd_t.dst_mac). Additionally, source
                and destination IP address will be replaced using '.daddr_reply'
                and '.saddr_reply' as well as source and destination port number
                will be replaced by '.dport_reply' and '.sport_reply' values.
                In case of no hit, packet will be sent to default logical
                interface (to host). Host can configure slow-path routing using
                standard OS-provided mechanisms to route rest of traffic (e.g.
                TCMP).
* @param[in]
                cl The FCI client instance
void fci_router_register_ipv4_conntracks_nat(FCI_CLIENT *cl)
    int ret:
    fpp_ct_cmd_t ct1 =
        /* New connection */
        .action = FPP_ACTION_REGISTER,
        /* Source IP address: 11.41.48.100 */
        .saddr = htonl(0x0b293064),
        /* Destination IP address: 12.41.48.100 */
        .daddr = hton1(0x0c293064),
        /* Source L4 port */
        .sport = htons(11),
        /\star Destination L4 port \star/
        .dport = htons(12),
        /* Source IP address in reply direction. Destination IP address of
            routed packet will be replaced by this value (120.41.48.100). */
        .saddr_reply = hton1(0x78293064),
        /* Destination IP address in reply direction. Source IP address of
            routed packet will be replaced by this value (110.41.48.100). */
        .daddr_reply = htonl(0x6e293064),
        /* Source L4 port in reply direction. Destination port of routed packet
            will be replaced by this value. \star/
            .sport_reply = htons(120),
        /\star Destination L4 port in reply direction. Source port or routed packet
           will be replaced by this value. \star/
        .dport_reply = htons(110),
        /* Protocol ID: UDP */
        .protocol = 17,
        /\star Flags: Do not open reply connection \star/
        .flags = htons(CTCMD_FLAGS_REP_DISABLED),
        /* Associated route (456=emacl). This route will be used to forward
            packets matching this tracked connection (SIP+DIP+SPORT+DPORT+PROTO).
            Route must exist. To create a route see the FPP_CMD_IP_ROUTE. */
        .route_id = htonl(456),
    fpp_ct_cmd_t ct2 =
        .action = FPP_ACTION_REGISTER,
        /* Source IP address: 120.41.48.100 */
        .saddr = ht.onl(0x78293064).
        /* Destination IP address: 110.41.48.100 */
        .daddr = htonl(0x6e293064),
        .sport = htons(120),
        .dport = htons(110),
        .saddr_reply = htonl(0x0b293064),
        .daddr_reply = htonl(0x0c293064),
        .sport_reply = htons(11),
        .dport_reply = htons(12),
        .protocol = 17,
        .flags = htons(CTCMD_FLAGS_REP_DISABLED),
        .route_id = htonl(123)
    };
    /* Register connection "ct1" */
    ret = fci_write(cl, FPP_CMD_IPV4_CONNTRACK, sizeof(ct1), (void *)&ct1);
    if (0 != ret)
    {
```



```
printf("FPP_CMD_IPV4_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
        return:
   }
    /* Register connection "ct2" */
   ret = fci_write(cl, FPP_CMD_IPV4_CONNTRACK, sizeof(ct2), (void *)&ct2);
   if (0 != ret)
       printf("FPP_CMD_IPV4_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
        return;
}
                Register bi-directional UPD connection to be fast-forwarded
* @details
                Add 2 routing table entries with a single conntrack. Traffic
                matching respective conntrack will be forwarded via physical
               interface given by matching route defined for both, the
               original as well as reply direction.
               In case of no hit, packet will be sent to default logical
               interface (to host). Host can configure slow-path routing using
                standard OS-provided mechanisms to route rest of traffic (e.g.
               TCMP).
* @param[in]
               cl The FCI client instance
*/
void fci_router_register_bd_ipv4_conntrack(FCI_CLIENT *cl)
   int ret:
    fpp_ct_cmd_t ct1 =
        /* New connection */
        .action = FPP_ACTION_REGISTER,
       /* Source IP address: 11.41.48.100 */
        .saddr = htonl(0x0b293064),
        /* Destination IP address: 12.41.48.100 */
        .daddr = hton1(0x0c293064),
        /* Source L4 port */
        .sport = htons(11),
        /\star Destination L4 port \star/
        .dport = htons(12),
        /* Source IP address in reply direction. Equal to 'daddr' to
           disable NAT */
        .saddr_reply = htonl(0x0c293064),
        /* Destination IP address in reply direction. Same as 'saddr' to
           disable NAT. */
        .daddr_reply = htonl(0x0b293064),
        /\star~ Source L4 port in reply direction. Equal to 'dport' to disable
           replacement. */
        .sport_reply = htons(12),
        /\star~ Destination L4 port in reply direction. Equal to 'sport' to disable
           replacement.*/
        .dport_reply = htons(11),
        /* Protocol ID: UDP */
        .protocol = 17,
        /* Flags: None. Create bi-directional connection. */
        .flags = htons(0),
        /* Associated route (123=emac0, 456=emac1). This routes will be used to
            forward packets matching this tracked connection either in original
            or opposite, reply direction. Routes must exist. To create a route
           see the FPP_CMD_IP_ROUTE. */
        .route_id = htonl(456),
        .route_id_reply = htonl(123)
   };
    /* Register connection "ct1" */
   ret = fci_write(cl, FPP_CMD_IPV4_CONNTRACK, sizeof(ct1), (void *)&ct1);
   if (0 != ret)
    {
       printf("FPP_CMD_IPV4_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
       return;
}
* @brief
               Configure IPv4 router
               Create routes and conntracks to fast-forward traffic between
* @details
```



```
EMACO and EMAC1. Put both EMACs to Router mode and enable them.
                cl The FCI client instance
* @param[in]
void fci_setup_ipv4_router(FCI_CLIENT *cl)
    /* Reset the router */
    fci_router_reset(cl);
    /* Create routes */
    fci_router_register_ipv4_routes(cl);
    /* Create conntracks */
    fci_router_register_ipv4_conntracks(cl);
    /* Set interface mode */
   fci_phy_if_set_mode(cl, "emac0", FPP_IF_OP_ROUTER);
fci_phy_if_set_mode(cl, "emac1", FPP_IF_OP_ROUTER);
    /* Enable interfaces */
    fci_phy_if_enable(cl, "emac0");
    fci_phy_if_enable(cl, "emacl");
        Now traffic received via EMACO or EMAC1 and matching conntracks will be
        routed via interfaces defined by routes.
}
/*
                Configure IPv4 router with NAT
* @brief
* @details
                Create routes and conntracks to fast-forward traffic between
                EMACO and EMAC1 and modify IP addresses and port numbers. Put
                both EMACs to Router mode and enable them.
* @param[in]
                cl The FCI client instance
void fci_setup_ipv4_router_nat(FCI_CLIENT *cl)
    /* Reset the router */
    fci_router_reset(cl);
    /* Create routes */
    fci_router_register_ipv4_routes(cl);
    /* Create conntracks with NAT enabled */
    fci_router_register_ipv4_conntracks_nat(cl);
    /\star Set interface mode \star/
   fci_phy_if_set_mode(cl, "emac0", FPP_IF_OP_ROUTER);
fci_phy_if_set_mode(cl, "emac1", FPP_IF_OP_ROUTER);
    /* Enable interfaces */
    fci_phy_if_enable(cl, "emac0");
    fci_phy_if_enable(cl, "emacl");
        Now traffic received via EMACO or EMAC1 and matching conntracks will be
        routed via interfaces defined by routes. Each routed packet will be
        modified in way that its source and destination IP address and source
        and destination port numbers will be replaced using configured values.
}
* @brief
                Configure IPv4 router using bi-directional conntrack
* @details
                Create routes and conntrack to fast-forward traffic between
                EMACO and EMAC1. Put both EMACs to Router mode and enable them.
* @param[in]
                cl The FCI client instance
*/
void fci_setup_ipv4_router_bd(FCI_CLIENT *cl)
    /* Reset the router */
    fci_router_reset(cl);
    /* Create routes */
    fci_router_register_ipv4_routes(cl);
    /* Create bi-directional conntrack */
    fci_router_register_bd_ipv4_conntrack(cl);
    /* Set interface mode */
    fci_phy_if_set_mode(cl, "emac0", FPP_IF_OP_ROUTER);
    fci_phy_if_set_mode(cl, "emacl", FPP_IF_OP_ROUTER);
    /* Enable interfaces */
    fci_phy_if_enable(cl, "emac0");
    fci_phy_if_enable(cl, "emacl");
    /*
        Now traffic received via EMACO or EMACO and matching conntrack in both
        directions will be routed via interfaces defined by routes.
```



*/

5.5 fpp_cmd_ipv6_conntrack.c

```
* Copyright 2020-2021 NXP
 \star NXP Confidential. This software is owned or controlled by NXP and may
   only be used strictly in accordance with the applicable license terms
  found at https://www.nxp.com/docs/en/disclaimer/LA_OPT_NXP_SW.html.
 \star For this example the Clause 2.3 of this license is not applicable.
#include <stdio.h>
#include <stdlib.h>
#include <arpa/inet.h>
#include <errno.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
* @brief
               Register two UPD connections to be fast-forwarded
 * @details
              Add 2 routing table entries (conntracks). Traffic matching
                respective conntrack will be forwarded via physical interface
                given by matching route (fpp_rt_cmd_t.output_device) while its
                source MAC address will be replaced by MAC address of the output
                interface and destination MAC address will be replaced by the
                one defined by route (fpp_rt_cmd_t.dst_mac).
                In case of no hit, packet will be sent to default logical
                interface (to host). Host can configure slow-path routing using
                standard OS-provided mechanisms to route rest of traffic (e.g.
                ICMP).
 * @param[in]
              cl The FCI client instance
void fci_router_register_ipv6_conntracks(FCI_CLIENT *cl)
    int ret:
    fpp_ct6_cmd_t ct1 =
        /* New connection */
        .action = FPP_ACTION_REGISTER,
        /* Source IP address: ::aaaa */
        .saddr[0] = htonl(0),
        .saddr[1] = htonl(0),
        .saddr[2] = htonl(0),
        .saddr[3] = htonl(0x0000aaaa),
        /* Destination IP address: ::bbbb */
        .daddr[0] = htonl(0),
        .daddr[1] = htonl(0),
        .daddr[2] = htonl(0),
        .daddr[3] = htonl(0x0000bbbb),
        /* Source L4 port */
        .sport = htons(10),
        /* Destination L4 port */
        .dport = htons(11),
        /\star Source IP address in reply direction. Equal to 'daddr' to disable
            replacement. */
        .saddr_reply[0] = htonl(0),
        .saddr_reply[1] = htonl(0),
        .saddr_reply[2] = htonl(0),
        .saddr_reply[3] = htonl(0x0000bbbb),
        /* Destination IP address in reply direction. Same as 'saddr' to
            disable replacement. */
        .daddr_reply[0] = htonl(0),
        .daddr_reply[1] = htonl(0),
        .daddr_reply[2] = htonl(0),
        .daddr_reply[3] = htonl(0x0000aaaa),
        /* Source L4 port in reply direction. Equal to 'dport' to disable
```



```
replacement. */
       .sport_reply = htons(11),
       /\star Destination L4 port in reply direction. Equal to 'sport' to disable
          replacement.*/
       .dport_reply = htons(10),
       /* Protocol ID: UDP */
       .protocol = 17,
       /* Flags: Do not open reply connection */
       .flags = htons(CTCMD_FLAGS_REP_DISABLED),
       /\star Associated route (222=emac1). This route will be used to forward
           packets matching this tracked connection (SIP+DIP+SPORT+DPORT+PROTO).
           Route must exist. To create a route see the FPP_CMD_IP_ROUTE. */
       .route_id = htonl(222),
   };
   fpp_ct6_cmd_t ct2 =
       .action = FPP_ACTION_REGISTER,
       /* Source IP address: ::bbbb */
       .saddr[0] = htonl(0),
       .saddr[1] = htonl(0),
       .saddr[2] = htonl(0),
       .saddr[3] = htonl(0x0000bbbb),
       /* Destination IP address: ::aaaa */
       .daddr[0] = htonl(0),
.daddr[1] = htonl(0),
       .daddr[2] = htonl(0),
       .daddr[3] = htonl(0x0000aaaa),
       .sport = htons(11),
       .dport = htons(10),
       .saddr_reply[0] = htonl(0),
       .saddr_reply[1] = htonl(0),
       .saddr_reply[2] = hton1(0),
       .saddr_reply[3] = htonl(0x0000aaaa),
       .daddr_reply[0] = htonl(0),
       .daddr_reply[1] = htonl(0),
       .daddr_reply[2] = htonl(0),
       .daddr_reply[3] = htonl(0x0000bbbb),
       .sport_reply = htons(10),
       .dport_reply = htons(11),
       .protocol = 17,
       .flags = htons(CTCMD_FLAGS_REP_DISABLED),
       .route_id = htonl(111)
   };
   /* Register connection "ct1" */
   ret = fci_write(cl, FPP_CMD_IPV6_CONNTRACK, sizeof(ct1), (void *)&ct1);
   if (0 != ret)
      printf("FPP_CMD_IPV6_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
       return;
   /* Register connection "ct2" */
   ret = fci_write(cl, FPP_CMD_IPV6_CONNTRACK, sizeof(ct2), (void *)&ct2);
   {
       printf("FPP_CMD_IPV6_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
       return;
   }
* @brief
               Register bi-directional UPD connection to be fast-forwarded
* @details
               Add 2 routing table entries with a single conntrack. Traffic
               matching respective conntrack will be forwarded via physical
               interface given by matching route defined for both, the
               original as well as reply direction. Traffic matching
               respective direction will be forwarded via physical interface
               given by matching route (fpp_rt_cmd_t.output_device) while its
               source MAC address will be replaced by MAC address of the output
               interface and destination MAC address will be replaced by the
               one defined by route (fpp_rt_cmd_t.dst_mac).
               In case of no hit, packet will be sent to default logical
               interface (to host). Host can configure slow-path routing using
               standard OS-provided mechanisms to route rest of traffic (e.g.
```



```
TCMP).
* @param[in]
                cl The FCI client instance
void fci_router_register_bd_ipv6_conntrack(FCI_CLIENT *cl)
    int ret;
    fpp_ct6_cmd_t ct1 =
        /* New connection */
        .action = FPP_ACTION_REGISTER,
        /* Source IP address: ::aaaa */
        .saddr[0] = htonl(0),
        .saddr[1] = htonl(0),
        .saddr[2] = htonl(0),
        .saddr[3] = htonl(0x0000aaaa),
        /* Destination IP address: ::bbbb */
        .daddr[0] = htonl(0),
        .daddr[1] = htonl(0),
        .daddr[2] = htonl(0),
        .daddr[3] = htonl(0x0000bbbb),
        /* Source L4 port */
        .sport = htons(10),
        /* Destination L4 port */
        .dport = htons(11),
        /* Source IP address in reply direction. Same as 'saddr' to
            disable replacement. */
        .saddr_reply[0] = htonl(0),
        .saddr_reply[1] = htonl(0),
        .saddr_reply[2] = htonl(0),
        .saddr_reply[3] = htonl(0x0000bbbb),
        /\star~ Destination IP address in reply direction. Same as 'saddr' to
           disable replacement. */
        .daddr_reply[0] = htonl(0),
        .daddr_reply[1] = htonl(0),
        .daddr_reply[2] = htonl(0),
        .daddr_reply[3] = htonl(0x0000aaaa),
        /* Source L4 port in reply direction. Equal to 'dport' to disable
           replacement. */
        .sport_reply = htons(11),
        /\star Destination L4 port in reply direction. Equal to 'dport' to disable
            replacement. */
        .dport_reply = htons(10),
        /* Protocol ID: UDP */
        .protocol = 17,
        /\star Flags: Create connection also in reply direction \star/
        .flags = htons(0),
        /\star Associated route (111=emac0, 222=emac1). This route will be used to forward
            packets matching this tracked connection (SIP+DIP+SPORT+DPORT+PROTO).
            Route must exist. To create a route see the FPP_CMD_IP_ROUTE. */
        .route_id = htonl(222),
        .route_id_reply = htonl(111),
    /* Register connection "ct1" */
    ret = fci_write(cl, FPP_CMD_IPV6_CONNTRACK, sizeof(ct1), (void *)&ct1);
    if (0 != ret)
    {
       printf("FPP_CMD_IPV6_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
    }
}
* @brief
               Configure IPv6 router
* @details
                Create routes and conntracks to fast-forward traffic between
                EMAC0 and EMAC1. Put both EMACs to Router mode and enable them.
* @param[in]
              cl The FCI client instance
void fci_setup_ipv6_router(FCI_CLIENT *cl)
    /* Reset the router */
   fci_router_reset(cl);
    /* Create routes */
    fci_router_register_ipv6_routes(cl);
    /* Create conntracks */
```



```
fci_router_register_ipv6_conntracks(cl);
    /* Set interface mode */
   fci_phy_if_set_mode(cl, "emac0", FPP_IF_OP_ROUTER);
    fci_phy_if_set_mode(cl, "emac1", FPP_IF_OP_ROUTER);
    /* Enable interfaces */
   fci_phy_if_enable(cl, "emac0");
   fci_phy_if_enable(cl, "emac1");
        Now traffic received via EMACO or EMAC1 and matching conntracks will be
       routed via interfaces defined by routes.
* @brief
               Configure IPv6 router using bi-directional conntrack
               Create routes and conntrack to fast-forward traffic between
               EMACO and EMAC1 and modify IP addresses and port numbers. Put
               both EMACs to Router mode and enable them.
* @param[in] cl The FCI client instance
void fci_setup_ipv6_router_bd(FCI_CLIENT *cl)
    /* Reset the router */
   fci_router_reset(cl);
   /* Create routes */
   fci_router_register_ipv6_routes(cl);
    /* Create bi-directional conntrack */
   fci_router_register_bd_ipv6_conntrack(cl);
    /* Set interface mode */
   fci_phy_if_set_mode(cl, "emac0", FPP_IF_OP_ROUTER);
   fci_phy_if_set_mode(cl, "emac1", FPP_IF_OP_ROUTER);
    /* Enable interfaces */
   fci_phy_if_enable(cl, "emac0");
   fci_phy_if_enable(cl, "emacl");
        Now traffic received via EMACO or EMAC1 and matching conntracks will be
        routed via interfaces defined by routes. Each routed packet will be
       modified in way that its source and destination IP address and source
       and destination port numbers will be replaced using configured values.
}
```

5.6 fpp_cmd_qos_queue.c

```
* Copyright 2020-2021 NXP
* NXP Confidential. This software is owned or controlled by NXP and may
   only be used strictly in accordance with the applicable license terms
  found at https://www.nxp.com/docs/en/disclaimer/LA_OPT_NXP_SW.html.
\star For this example the Clause 2.3 of this license is not applicable.
 + ------ + /
#include <stdio.h>
#include <stdlib.h>
#include <arpa/inet.h>
#include <errno.h>
#include <string.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
/*
* @brief
              Get queue properties
             cl The FCI client instance
* @param[in]
* @param[in]
              phy_if Name of physical interface containing the queue
             id ID of the queue to get. There can be multiple queue instances
 * @param[in]
                 associated with a physical interface and this index allows to
                 select a particular one.
* @param[out] queue The query response structure where the shaper properties will be
                  written.
             1 if success, 0 otherwise
```



```
int fci_qos_queue_get(FCI_CLIENT *cl, char *phy_if, uint8_t id, fpp_qos_queue_cmd_t *queue)
    fpp_qos_queue_cmd_t cmd;
    unsigned short replen = sizeof(*queue);
    int ret;
    cmd.action = FPP_ACTION_QUERY;
    strncpy(cmd.if_name, phy_if, sizeof(cmd.if_name)-1);
    cmd.id = id;
    ret = fci_query(cl, FPP_CMD_QOS_QUEUE, sizeof(cmd), (unsigned short *)&cmd,
            &replen, (unsigned short *) queue);
    if (FPP_ERR_OK != ret)
        printf("FPP_CMD_QOS_QUEUE[FPP_ACTION_QUERY] failed: %d\n", ret);
    }
    return 1;
}
 * @brief
               Print queue properties
               cl The FCI client instance
 * @param[in]
                phy_if Name of physical interface containing the queue
 * @param[in]
                id ID of the queue to get. There can be multiple queue instances
 * @param[in]
                   associated with a physical interface and this index allows to
                   select a particular one.
void fci_queue_print(FCI_CLIENT *cl, char *phy_if, uint8_t id)
    fpp_qos_queue_cmd_t queue;
    static const char *modes[] = {"Disabled", "Default", "Tail Drop", "WRED"};
    int ii = OU;
    /* Get queue properties into "queue" */
    if (0 == fci_qos_queue_get(cl, phy_if, id, &queue))
        printf("[%s] Queue %d not found\n", phy_if, id);
        return;
    }
    else
        printf("[%s] Queue %d\n", phy_if, id);
        printf(" Mode : %s\n", modes[queue.mode]);
        if (queue.mode != 0)
        {
            printf(" Min : %d\n", ntohl(queue.min));
printf(" Max : %d\n", ntohl(queue.max));
            if (queue.mode == 3)
                while (queue.zprob[ii] != 255)
                    printf(" Zone[%d].Probability: %d%\n", ii, queue.zprob[ii]);
                    ii++;
            }
        }
    }
}
 * @brief
                Set queue mode
 * @param[in]
               cl The FCI client instance
               phy_if Name of physical interface containing the queue
 * @param[in]
 * @param[in]
                id ID of the queue to get. There can be multiple queue instances
                 associated with a physical interface and this index allows to
                   select a particular one.
 * @param[in]
               mode Queue mode. See the fpp_qos_queue_cmd_t.
               min Minimum threshold. See the fpp_qos_queue_cmd_t.
 * @param[in]
 * @param[in] max Maximum threshold. See the fpp_qos_queue_cmd_t.
 * @return
                1 if success, 0 otherwise
 */
```



```
int fci_queue_set_mode(FCI_CLIENT *cl, char *phy_if, uint8_t id, uint8_t mode, uint32_t min,
      uint32_t max)
    fpp_qos_queue_cmd_t cmd = {0};
   int ret;
   cmd.action = FPP_ACTION_UPDATE;
    strncpy(cmd.if_name, phy_if, sizeof(cmd.if_name)-1);
   cmd.id = id;
   cmd.mode = mode;
   cmd.min = htonl(min);
    cmd.max = htonl(max);
   memset(cmd.zprob, 0, sizeof(cmd.zprob));
    ret = fci_write(cl, FPP_CMD_QOS_QUEUE, sizeof(cmd), (unsigned short *)&cmd);
   if (FPP_ERR_OK != ret)
    {
        printf("FPP_CMD_QOS_QUEUE[FPP_ACTION_UPDATE] failed: %d\n", ret);
       return 0:
    }
   else
    {
        return 1;
}
               Set WRED zone probability
* @brief
* @param[in]
               cl The FCI client instance
               phy_if Name of physical interface containing the queue
* @param[in]
               id ID of the queue to get. There can be multiple queue instances
* @param[in]
                   associated with a physical interface and this index allows to
                  select a particular one.
                zone WRED zone index. See @ref egress_qos for number of zones per queue.
* @param[in]
* @param[in]
               prob New WRED zone drop probability in [%]
                1 if success, 0 otherwise
* @return
*/
int fci_queue_set_wred_zone_probability(FCI_CLIENT *cl, char *phy_if, uint8_t id, uint8_t
       zone, uint8_t prob)
    fpp_qos_queue_cmd_t queue;
    int ret;
    if (zone >= 32)
    {
        return 0;
    }
    if (0 == fci_qos_queue_get(cl, phy_if, id, &queue))
    {
        return 0;
    }
   else
    {
        queue.action = FPP_ACTION_UPDATE;
        queue.zprob[zone] = prob;
        ret = fci_write(cl, FPP_CMD_QOS_QUEUE, sizeof(queue), (unsigned short *)&queue);
        if (FPP_ERR_OK != ret)
            printf("FPP_CMD_QOS_QUEUE[FPP_ACTION_UPDATE] failed: %d\n", ret);
            return 0;
        }
       else
            return 1;
    }
```



5.7 fpp_cmd_qos_scheduler.c

```
* Copyright 2020-2021 NXP
\star NXP Confidential. This software is owned or controlled by NXP and may
\star only be used strictly in accordance with the applicable license terms
* found at https://www.nxp.com/docs/en/disclaimer/LA_OPT_NXP_SW.html.
* For this example the Clause 2.3 of this license is not applicable.
#include <stdio.h>
#include <stdlib.h>
#include <arpa/inet.h>
#include <errno.h>
#include <string.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
             Get scheduler properties cl The FCI client instance
* @brief
* @param[in]
              phy_if Name of physical interface containing the scheduler
* @param[in]
* @param[in]
              id ID of the scheduler to get. There can be multiple scheduler instances
                  associated with a physical interface and this index allows to select
                  a particular one.
\star @param[out] sch The query response structure where the scheduler properties will be
                   written.
* @return
              1 if success, 0 otherwise
int fci_qos_scheduler_qet(FCI_CLIENT *cl, char *phy_if, uint8_t id, fpp_qos_scheduler_cmd_t
      *sch)
   fpp_qos_scheduler_cmd_t cmd;
   unsigned short replen = sizeof(*sch);
   int ret;
   cmd.action = FPP_ACTION_QUERY;
   strncpy(cmd.if_name, phy_if, sizeof(cmd.if_name)-1);
   cmd.id = id;
   ret = fci_query(cl, FPP_CMD_QOS_SCHEDULER, sizeof(cmd), (unsigned short *)&cmd,
           &replen, (unsigned short *)sch);
   if (FPP_ERR_OK != ret)
       printf("FPP_CMD_QOS_SCHEDULER[FPP_ACTION_QUERY] failed: %d\n", ret);
       return 0;
   return 1;
}
* @brief
              Print scheduler properties
* @param[in] cl The FCI client instance
* @param[in]
              phy_if Name of physical interface containing the scheduler
               id ID of the scheduler to get. There can be multiple scheduler instances
* @param[in]
                  associated with a physical interface and this index allows to select
                  a particular one.
void fci_qos_scheduler_print(FCI_CLIENT *cl, char *phy_if, uint8_t id)
   fpp_qos_scheduler_cmd_t sch;
   int ii;
   static const char *modes[] = {"Disabled", "Data Rate", "Packet Rate"};
   static const char *algos[] = {"PQ", "DWRR", "RR", "WRR"};
   /* Get scheduler properties into "sch" */
   if (0 == fci_qos_scheduler_get(cl, phy_if, id, &sch))
       printf("[%s] Scheduler %d not found\n", phy_if, id);
       return;
```



```
else
    {
        printf("[%s] Scheduler %d (%s/%s)\n",
                phy_if, id, algos[sch.algo], modes[sch.mode]);
        for (ii=0U; ii<32U; ii++)</pre>
        {
            if (ntohl(sch.input_en) & (1U « ii))
            {
                printf(" Input %02d: Source: %d, Weight: %d\n",
                        ii, sch.input_src[ii], ntohl(sch.input_w[ii]));
    }
    return;
}
* @brief
               Change scheduler algorithm
* @param[in]
               cl The FCI client instance
* @param[in]
               phy_if Name of physical interface containing the scheduler
* @param[in]
                id ID of the scheduler to get. There can be multiple scheduler instances
                  associated with a physical interface and this index allows to select
                   a particular one.
* @param[in]
               algo The new algorithm value. See the fpp_qos_scheduler_cmd_t.
                1 if success, 0 otherwise
* @return
int fci_gos_scheduler_set_algo(FCI_CLIENT *cl, char *phy_if, uint8_t id, uint8_t algo)
    fpp_qos_scheduler_cmd_t sch;
   int ret, retval = 0;
    /* Get scheduler properties into "sch" */
    if (0 == fci_qos_scheduler_get(cl, phy_if, id, &sch))
    {
        retval = 0;
    }
   else
    {
        /\star~ Modify the response to form UPDATE command \star/
        sch.action = FPP_ACTION_UPDATE;
        sch.algo = algo;
        ret = fci_write(cl, FPP_CMD_QOS_SCHEDULER, sizeof(sch), (unsigned short *)&sch);
        if (FPP_ERR_OK != ret)
            printf("FPP_CMD_QOS_SCHEDULER[FPP_ACTION_UPDATE] failed: %d\n", ret);
            retval = 0;
        }
       else
            retval = 1;
    }
    return retval;
}
* @brief
                Set example topology 1
* @details
                Function will create following QoS configuration:
 * @verbatim
                           SCH0
                           (WRR)
                  Q0--->| 0
                                              SCH1
                  01--->| 1
                                              (PQ)
                  Q2--->| 2
                  Q3--->| 3
                                          > | 0
                  Q4--->| 4
                                           | 1
                                           | 2
                        1 ...
                        1 7
                                           | 3
                                    Q6--->| 6
                                     Q7--->| 7
```



```
+----+
  @endverbatim
* @param[in] cl The FCI client instance
* @param[in]
              phy_if Name of physical interface to be configured
* @return
               1 if success, 0 otherwise
int fci_qos_scheduler_set_topo1(FCI_CLIENT *cl, char *phy_if)
    fpp_qos_scheduler_cmd_t sch;
   int ret;
    /* Scheduler 0 */
   ret = fci_qos_scheduler_get(cl, phy_if, OU, &sch);
   if (0 == ret)
    {
       return 0:
   }
   else
    {
       sch.action = FPP_ACTION_UPDATE;
       sch.mode = 2U;
       sch.algo = 3U;
       sch.input_en = htonl(0x1fU);
       sch.input_src[0] = 0U;
       sch.input_src[1] = 1U;
       sch.input_src[2] = 2U;
       sch.input_src[3] = 3U;
        sch.input_src[4] = 4U;
       sch.input_w[0] = htonl(1U);
        sch.input_w[1] = htonl(10U);
        sch.input_w[2] = htonl(100U);
       sch.input_w[3] = htonl(500U);
       sch.input_w[4] = htonl(200U);
       /* Set new Scheduler 0 configuration */
       ret = fci_write(cl, FPP_CMD_QOS_SCHEDULER, sizeof(sch), (unsigned short *)&sch);
        if (FPP_ERR_OK != ret)
        {
           printf("FPP_CMD_QOS_SCHEDULER[FPP_ACTION_UPDATE] failed: %d\n", ret);
           return 0:
   }
    /* Scheduler 1 */
   ret = fci_qos_scheduler_get(cl, phy_if, 1U, &sch);
   if (0 == ret)
    {
       return 0;
   }
   else
    {
       sch.action = FPP_ACTION_UPDATE;
       sch.mode = 1U;
       sch.algo = OU;
       sch.input_en = htonl((1U«0))(1U«6))(1U«7));
       sch.input_src[0] = 8U;
        sch.input_src[6] = 6U;
       sch.input_src[7] = 7U;
        /* Set new Scheduler 1 configuration */
       ret = fci_write(cl, FPP_CMD_QOS_SCHEDULER, sizeof(sch), (unsigned short *)&sch);
        if (FPP_ERR_OK != ret)
           printf("FPP_CMD_QOS_SCHEDULER[FPP_ACTION_UPDATE] failed: %d\n", ret);
           return 0;
   }
   return 1;
}
/*
* @brief
               Set example topology 2
* @details
               Function will create following QoS configuration:
```



* @verbatim

```
SCH0
                             (WRR)
                   Q0--->| 0
                                                     SCH1
                   01--->| 1
                                                     (PO)
                   Q2--->| 2
                   Q3--->| 3
                                   +--->SHP0--->| 0
                   Q4--->| 4
                                                 | 1
                                                  | 2
                        | | ...
                                                            +--->SHP2--->
                          1 7
                                                  1 3
                                    Q6---SHP1--->| 6
                                    Q7---->| 7
  @endverbatim
 * \operatorname{@param[in]} cl The FCI client instance
               phy_if Name of physical interface to be configured
 * @param[in]
                1 if success, 0 otherwise
* @return
*/
int fci_gos_scheduler_set_topo2(FCI_CLIENT *cl, char *phy_if)
    ret = fci_qos_scheduler_set_topo1(cl, phy_if);
    if (0 == ret)
    {
        return 0;
    }
    else
    {
        /* Add Shaper 0:
               - TX Rate : 500Mbps
- Idle slope: 50Mbps
- Max credit: 1522
                - Min credit: -1522
         */
        ret = fci_shaper_enable(cl, phy_if, OU, true, 50000000U, 1522, -1522, 1U);
        if (0 == ret)
        {
            return 0;
            Add Shaper 1:
               - TX Rate : 500Mbps
                - Idle slope: 100Mbps
- Max credit: 1522
                 - Min credit: -1522
         */
        ret = fci_shaper_enable(cl, phy_if, 1U, true, 10000000U, 1522, -1522, 7U);
        if (0 == ret)
        {
            return 0;
        }
            Add Shaper 2:
                - TX Rate : 1Gbps
- Idle slope: 500Mbps
                - Max credit: 1522
- Min credit: -1522
         */
        ret = fci_shaper_enable(cl, phy_if, 2U, true, 50000000U, 100000, -100000, 0U);
        if (0 == ret)
        {
            return 0;
        return 1;
    }
}
```



5.8 fpp_cmd_qos_shaper.c

```
* Copyright 2020-2021 NXP
\star NXP Confidential. This software is owned or controlled by NXP and may
\star only be used strictly in accordance with the applicable license terms
* found at https://www.nxp.com/docs/en/disclaimer/LA_OPT_NXP_SW.html.
* For this example the Clause 2.3 of this license is not applicable.
#include <stdio.h>
#include <stdlib.h>
#include <arpa/inet.h>
#include <errno.h>
#include <string.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
              Get shaper properties cl The FCI client instance
* @brief
* @param[in]
              phy_if Name of physical interface containing the shaper
* @param[in]
* @param[in]
              id ID of the shaper to get. There can be multiple shaper instances
                 associated with a physical interface and this index allows to select
                  a particular one.
\star @param[out] \, shp The query response structure where the shaper properties will be
                   written.
* @return
              1 if success, 0 otherwise
int fci_qos_shaper_get(FCI_CLIENT *cl, char *phy_if, uint8_t id, fpp_gos_shaper_cmd_t *shp)
   fpp_qos_shaper_cmd_t cmd;
   unsigned short replen = sizeof(*shp);
   int ret;
   cmd.action = FPP_ACTION_QUERY;
   strncpy(cmd.if_name, phy_if, sizeof(cmd.if_name)-1);
   cmd.id = id;
   ret = fci_query(cl, FPP_CMD_QOS_SHAPER, sizeof(cmd), (unsigned short *)&cmd,
           &replen, (unsigned short *)shp);
   if (FPP_ERR_OK != ret)
       printf("FPP_CMD_QOS_SHAPER[FPP_ACTION_QUERY] failed: %d\n", ret);
       return 0;
   return 1:
* @brief
              Print shaper properties
* @param[in]
              cl The FCI client instance
* @param[in]
              phy_if Name of physical interface containing the shaper
* @param[in]
              id ID of the shaper to get. There can be multiple shaper instances
                  associated with a physical interface and this index allows to select
                  a particular one.
*/
void fci_shaper_print(FCI_CLIENT *cl, char *phy_if, uint8_t id)
   fpp_qos_shaper_cmd_t shp;
   static const char *modes[] = {"Disabled", "Data Rate", "Packet Rate"};
   /* Get shaper properties into "shp" */
   if (0 == fci_qos_shaper_get(cl, phy_if, id, &shp))
       printf("[%s] Shaper %d not found\n", phy_if, id);
       return:
   }
   else
       printf("[%s] Shaper %d\n", phy_if, id);
```



```
printf(" Mode
                            : %s\n", modes[shp.mode]);
        if (shp.mode != 0)
        {
            printf(" Position : %d\n", shp.position);
            printf(" Idle Slope: %d\n", ntohl(shp.isl));
printf(" MAX Credit: %d\n", ntohl(shp.max_credit));
            printf(" MIN Credit: %d\n", ntohl(shp.min_credit));
    }
}
/*
* @brief
               Enable shaper and connect it at given position
* @param[in]
               cl The FCI client instance
               phy_if Name of physical interface containing the shaper
* @param[in]
 * @param[in]
                id ID of the shaper to get. There can be multiple shaper instances
                  associated with a physical interface and this index allows to select
                   a particular one.
* @param[in]
               bps When TRUE the shaper works with bits-per-second otherwise it works
                    with packets-per-second.
* @param[in]
               isl Idle slope
* @param[in]
                max Max credit
               min Min credit
* @param[in]
* @parma[in]
               pos Shaper position within the QoS topology
* @return
                1 if success, 0 otherwise
int fci_shaper_enable(FCI_CLIENT *cl, char *phy_if, uint8_t id, bool bps,
        uint32_t isl, int32_t max, int32_t min, uint8_t pos)
    fpp_qos_shaper_cmd_t cmd;
   int ret;
   cmd.action = FPP_ACTION_UPDATE;
    strncpy(cmd.if_name, phy_if, sizeof(cmd.if_name)-1);
    cmd.id = id;
   cmd.mode = (bps) ? 1U : 2U;
    cmd.position = pos;
    cmd.isl = htonl(isl);
   cmd.max_credit = htonl(max);
    cmd.min_credit = htonl(min);
    ret = fci_write(cl, FPP_CMD_QOS_SHAPER, sizeof(cmd), (unsigned short *)&cmd);
    if (FPP_ERR_OK != ret)
    {
        printf("FPP_CMD_QOS_SCHEDULER[FPP_ACTION_UPDATE] failed: %d\n", ret);
       return 0;
    }
    else
    {
        return 1;
}
* @brief
                Disable shaper
* @details
                Shaper will stop process traffic. Useful for topology diagnostics.
* @param[in]
                cl The FCI client instance
* @param[in]
               phy_if Name of physical interface containing the shaper
                id ID of the shaper to get. There can be multiple shaper instances
* @param[in]
                   associated with a physical interface and this index allows to select
                   a particular one.
* @return
                1 if success, 0 otherwise
int fci_shaper_disable(FCI_CLIENT *cl, char *phy_if, uint8_t id)
    fpp_qos_shaper_cmd_t cmd = {0};
    int ret;
    cmd.action = FPP_ACTION_UPDATE;
    strncpy(cmd.if_name, phy_if, sizeof(cmd.if_name)-1);
    cmd.id = id;
    cmd.mode = 0:
    /* This is optional to disconnect the shaper from its position */
    cmd.position = 255;
```



```
ret = fci_write(cl, FPP_CMD_QOS_SHAPER, sizeof(cmd), (unsigned short *)&cmd);
if (FPP_ERR_OK != ret)
{
    printf("FPP_CMD_QOS_SCHEDULER[FPP_ACTION_UPDATE] failed: %d\n", ret);
    return 0;
}
else
{
    return 1;
}
```

5.9 fpp_cmd_l2_bd.c

```
* Copyright 2021 NXP
\star NXP Confidential. This software is owned or controlled by NXP and may
\star only be used strictly in accordance with the applicable license terms
* found at https://www.nxp.com/docs/en/disclaimer/LA_OPT_NXP_SW.html.
\star For this example the Clause 2.3 of this license is not applicable.
#include <stdio.h>
#include <stdlib.h>
#include <arpa/inet.h>
#include <errno.h>
#include <string.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
* @brief
              Create bridge domain
* @param[in]
              cl The FCI client instance
             vlan The VLAN ID identifying the domain
* @param[in]
* @return
              1 if success, zero otherwise
int fci_bd_create(FCI_CLIENT *cl, uint16_t vlan)
   fpp_12_bd_cmd_t cmd;
   int ret;
   cmd.action = FPP_ACTION_REGISTER;
   cmd.vlan = htons(vlan);
   /\star Default policy is to discard all \star/
   cmd.ucast_hit = 3;
   cmd.ucast_miss = 3;
   cmd.mcast_hit = 3;
   cmd.mcast_miss = 3;
   ret = fci_write(cl, FPP_CMD_L2_BD, sizeof(cmd), (unsigned short *)&cmd);
   if (FPP_ERR_OK != ret)
       printf("FPP_CMD_L2_BD failed: %d\n", ret);
   return 1;
}
* @brief
              Get bridge domain
              cl The FCI client instance
* @param[in]
              vlan The VLAN ID identifying the domain
* @param[in]
* @param[out] bd Pointer where response shall be written
              1 if success, zero otherwise
* @return
int fci_bd_get(FCI_CLIENT *cl, uint16_t vlan, fpp_12_bd_cmd_t *bd)
   fpp_12_bd_cmd_t cmd;
   unsigned short replen = sizeof(*bd);
   int ret;
   cmd.action = FPP_ACTION_QUERY;
```



```
ret = fci_query(cl, FPP_CMD_L2_BD, sizeof(cmd), (unsigned short *)&cmd,
            &replen, (unsigned short *)bd);
    while (FPP_ERR_OK == ret)
    {
        if (vlan == ntohs(bd->vlan))
        {
            return 1;
        }
        else
            cmd.action = FPP_ACTION_QUERY_CONT;
            ret = fci_query(cl, FPP_CMD_L2_BD, sizeof(cmd), (unsigned short *)&cmd,
                        &replen, (unsigned short *)bd);
    }
    return 0:
}
* @brief
               Add interface to a bridge domain
* @param[in]
               cl The FCI client instance
* @param[in]
                vlan The VLAN ID identifying the domain
                phy_if Name of physical interface to be added
* @param[in]
 * @param[in]
                tag If TRUE then in case of VLAN bridge the traffic leaving
                    the interface "phy_if" will be VLAN tagged. If FALSE
                    then in case of VLAN bridge the traffic leaving the interface
                    "phy_if" will be untagged (VLAN tag will be stripped).
                1 if success, zero otherwise
* @return
int fci_bd_add_if(FCI_CLIENT *cl, uint16_t vlan, char *phy_if, bool tag)
    int if_id = fci_phy_if_get_id(cl, phy_if);
    int ret:
    fpp_12_bd_cmd_t bd;
    if (if_id < 0)</pre>
    {
        printf("Could not get interface ID\n");
        return 0;
    if (0 == fci_bd_get(cl, vlan, &bd))
    {
        printf("Can't get bridge domain\n");
        return 0;
   bd.action = FPP_ACTION_UPDATE;
    bd.if_list |= htonl(1 « if_id);
    if (tag)
    {
       bd.untag_if_list &= ~htonl(1 « if_id);
    }
    else
    {
       bd.untag_if_list |= htonl(1 « if_id);
    ret = fci_write(cl, FPP_CMD_L2_BD, sizeof(bd), (unsigned short *)&bd);
    if (FPP_ERR_OK != ret)
        printf("FPP_CMD_L2_BD failed: %d\n", ret);
       return 0;
    return 1;
* @brief
                Set bridge domain policy
* @details
                It is possible to configure action for various conditions
                related to the bridge domain. Available actions are:
                0 - Forward, 1 - Flood, 2 - Punt, 3 - Discard.
               cl The FCI client instance
* @param[in]
* @param[in]
                vlan The VLAN ID identifying the domain
                uh Unicast-Hit action. MAC table hit (unicast address).
* @param[in]
               um Unicase-Miss action. MAC table miss (unicast address).
* @param[in]
 * @param[in]
               mh Multicast-Hit action. MAC table hit (multicast address).
* @param[in]
               mm Multicast-Miss action. MAC table miss (multicast address).
               1 if success, zero otherwise
* @return
```



5.10 fpp_cmd_fp_table.c

```
* Copyright 2021 NXP
 * NXP Confidential. This software is owned or controlled by NXP and may
 \star only be used strictly in accordance with the applicable license terms
  found at https://www.nxp.com/docs/en/disclaimer/LA_OPT_NXP_SW.html.
 * For this example the Clause 2.3 of this license is not applicable.
#include <stdio.h>
#include <stdlib.h>
#include <arpa/inet.h>
#include <errno.h>
#include <string.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
void fci_fp_table_create(FCI_CLIENT *cl, char *name)
    fpp_fp_table_cmd_t cmd = {0};
    int ret;
    cmd.action = FPP_ACTION_REGISTER;
    strncpy((char *)&cmd.t.table_name[0], name, sizeof(cmd.t.table_name) - 1U);
    if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_FP_TABLE, sizeof(cmd),
                                (unsigned short *) & cmd)))
        printf("Table registration failed: %d\n", ret);
}
void fci_fp_table_add_rule(FCI_CLIENT *cl, char *name, char *rule_name, uint32_t position)
    fpp_fp_table_cmd_t cmd = {0};
    int ret;
    cmd.action = FPP_ACTION_USE_RULE;
    strncpy((char *)&cmd.t.table_name[0], name, sizeof(cmd.t.table_name) - 1U);
    strncpy((char *)&cmd.t.rule_name[0], rule_name, sizeof(cmd.t.rule_name) - 1U);
    cmd.t.position = htons(position);
    if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_FP_TABLE, sizeof(cmd),
                                (unsigned short *)&cmd)))
        printf("Rule add failed: %d\n", ret);
    }
}
```



```
void fci_fp_table_del_rule(FCI_CLIENT *cl, char *name, char *rule_name)
          fpp_fp_table_cmd_t cmd = {0};
          int ret;
          cmd.action = FPP_ACTION_UNUSE_RULE;
          strncpy((char *)&cmd.t.table_name[0], name, sizeof(cmd.t.table_name) - 1U);
          strncpy((char *)&cmd.t.rule_name[0], rule_name, sizeof(cmd.t.rule_name) - 1U);
          if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_FP_TABLE, sizeof(cmd),
                                                                                     (unsigned short *)&cmd)))
                    printf("Rule removal failed: %d\n", ret);
\verb|void fci_fp_rule_create|| (FCI_CLIENT *cl, char *name, uint32_t data, uint32_t mask, line | (FCI_CLIENT *cl, char *name, uint32_t data, uint32_t mask, line | (FCI_CLIENT *cl, char *name, uint32_t data, uint32_t mask, line | (FCI_CLIENT *cl, char *name, uint32_t data, uint32_t mask, line | (FCI_CLIENT *cl, char *name, uint32_t data, uint32_t mask, line | (FCI_CLIENT *cl, char *name, uint32_t data, uint32_t mask, line | (FCI_CLIENT *cl, char *name, uint32_t data, uint32_t mask, line | (FCI_CLIENT *cl, char *name, uint32_t data, uint32_t mask, line | (FCI_CLIENT *cl, char *name, uint32_t data, uint32_t mask, line | (FCI_CLIENT *cl, char *name, uint32_t data, uint32_t mask, line | (FCI_CLIENT *cl, char *name, uint32_t data, uint32_t mask, line | (FCI_CLIENT *cl, char *name, uint32_t data, uint32_t mask, line | (FCI_CLIENT *cl, char *name, uint32_t data, uint32_t d
                               uint32_t offset, uint8_t invert, fpp_fp_rule_match_action_t action,
                                          fpp_fp_offset_from_t from, char *next_rule_name)
{
          fpp_fp_rule_cmd_t cmd = {0};
          int ret;
          cmd.action = FPP_ACTION_REGISTER;
          strncpy((char *)&cmd.r.rule_name[0], name, sizeof(cmd.r.rule_name) - 1U);
          cmd.r.data = htonl(data);
          cmd.r.mask = htonl(mask);
          cmd.r.offset = htonl(offset);
          cmd.r.invert = invert;
          cmd.r.match_action = action;
          cmd.r.offset_from = from;
          cmd.r.next_rule_name[0] = 0U;
          strncpy((char *)&cmd.r.next_rule_name[0], next_rule_name, sizeof(cmd.r.next_rule_name) -
                  1U);
          if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_FP_RULE, sizeof(cmd),
                                                                                                (unsigned short *)&cmd)))
                    printf("Rule registration failed: %d\n", ret);
          }
}
```



Index

accepted	fpp_ct6_cmd_t, 64
fpp_algo_stats_t, 61	fpp_ct_cmd_t, 67
action	def_val
fpp_ct6_cmd_t, 63	fpp_fw_features_cmd_t, 72
fpp_ct_cmd_t, 66	desc
fpp_fp_rule_cmd_t, 68	fpp_fw_features_cmd_t, 72
fpp_fp_table_cmd_t, 70	discarded
fpp_fw_features_cmd_t, 71	fpp_algo_stats_t, 61
fpp_l2_bd_cmd_t, 76	fpp_phy_if_stats_t, 84
fpp_log_if_cmd_t, 78	dmac
fpp_phy_if_cmd_t, 81	fpp_if_m_args_t, 74
fpp_qos_queue_cmd_t, 85	dport
fpp_qos_scheduler_cmd_t, 88	fpp_ct6_cmd_t, 64
fpp_qos_shaper_cmd_t, 91	fpp_ct_cmd_t, 66
fpp_rt_cmd_t, 93	fpp_if_m_args_t, 73
fpp_spd_cmd_t, 95	fpp_spd_cmd_t, 96
algo	dport_reply
fpp_qos_scheduler_cmd_t, 89	fpp_ct6_cmd_t, 64
arguments	fpp_ct_cmd_t, 67
fpp_log_if_cmd_t, 80	dst_mac
	fpp_rt_cmd_t, 94
block_state	000000
fpp_phy_if_cmd_t, 82	egress
BS_BLOCKED	fpp_log_if_cmd_t, 79
LibFCI, 53	fpp_phy_if_stats_t, 84
BS_FORWARD_ONLY	ethtype
LibFCI, 53	fpp_if_m_args_t, 73
BS_LEARN_ONLY	fci_catch
LibFCI, 53	LibFCI, <mark>56</mark>
BS_NORMAL	FCI_CB_CONTINUE
LibFCI, 53	LibFCI, 55
CTCMD_FLAGS_REP_DISABLED	fci_cb_retval_t
LibFCI, 50	LibFCI, 54
CTCMD_FLAGS_TTL_DECREMENT	FCI_CB_STOP
LibFCI, 50	LibFCI, 55
Libi Gi, 50	FCI_CFG_FORCE_LEGACY_API
daddr	LibFCI, 49
fpp_ct6_cmd_t, 63	FCI_CLIENT, 60
fpp_ct_cmd_t, 66	FCI_CLIENT_DEFAULT
fpp_spd_cmd_t, 96	LibFCI, 54
daddr_reply	fci_client_type_t



LibFCI, 54	FPP_CMD_IPV6_RESET, 106
fci_close	fpp_algo_stats_t, 60
LibFCI, 55	accepted, 61
fci_cmd	discarded, 61
LibFCI, 56	processed, 61
FCI_GROUP_CATCH	rejected, 61
LibFCI, 54	fpp_buf_cmd_t, 61
FCI_GROUP_NONE	len, 62
LibFCI, 54	payload, 62
fci_mcast_groups_t	FPP_CMD_DATA_BUF_AVAIL
LibFCI, 54	LibFCI, 44
fci_open	FPP_CMD_DATA_BUF_PUT
LibFCI, 55	LibFCI, 43
fci_query	FPP_CMD_FP_FLEXIBLE_FILTER
LibFCI, 57	LibFCI, 43
fci_register_cb	FPP_CMD_FP_RULE
LibFCI, 59	LibFCI, 41
fci_write	FPP_CMD_FP_TABLE
LibFCI, 58	LibFCI, 39
flags	FPP_CMD_FW_FEATURE
fpp_ct6_cmd_t, 64	LibFCI, 49
fpp_ct_cmd_t, 67	FPP_CMD_IF_LOCK_SESSION
fpp_l2_bd_cmd_t, 77	LibFCI, 32
fpp_log_if_cmd_t, 80	FPP_CMD_IF_UNLOCK_SESSION
fpp_phy_if_cmd_t, 82	LibFCI, 32
fpp_rt_cmd_t, 94	FPP_CMD_IP_ROUTE
FP_ACCEPT	fpp.h, 104
LibFCI, 53	FPP_CMD_IPV4_CONNTRACK
FP_NEXT_RULE	fpp.h, 99
LibFCI, 53	FPP_CMD_IPV4_CONNTRACK_CHANGE
FP_OFFSET_FROM_L2_HEADER	LibFCI, 50
LibFCI, 54	FPP_CMD_IPV4_RESET
FP_OFFSET_FROM_L3_HEADER	fpp.h, 105
LibFCI, 54	FPP_CMD_IPV4_SET_TIMEOUT
FP_OFFSET_FROM_L4_HEADER	fpp.h, 106
LibFCI, 54	FPP_CMD_IPV6_CONNTRACK
FP_REJECT	fpp.h, 102
LibFCI, 53	FPP_CMD_IPV6_CONNTRACK_CHANGE
fp_table0	LibFCI, 50
fpp_if_m_args_t, 74	FPP_CMD_IPV6_RESET
fp_table1	fpp.h, 106
fpp_if_m_args_t, 74	FPP_CMD_L2_BD
fpp.h, 98	LibFCI, 33
FPP_CMD_IP_ROUTE, 104	FPP_CMD_L2_FLUSH_ALL
FPP_CMD_IPV4_CONNTRACK, 99	LibFCI, 39
FPP_CMD_IPV4_RESET, 105	FPP_CMD_L2_FLUSH_LEARNED
FPP_CMD_IPV4_SET_TIMEOUT, 106	LibFCI, 38
FPP_CMD_IPV6_CONNTRACK, 102	FPP_CMD_L2_FLUSH_STATIC



LibFCI, 38	fpp_fp_offset_from_t
FPP_CMD_L2_STATIC_ENT	LibFCI, 53
LibFCI, 35	fpp_fp_rule_cmd_t, 68
FPP_CMD_LOG_IF	action, 68
LibFCI, 30	r, 69
FPP_CMD_PHY_IF	fpp_fp_rule_match_action_t
LibFCI, 29	LibFCI, 53
FPP_CMD_QOS_QUEUE	fpp_fp_rule_props_t, 69
LibFCI, 46	fpp_fp_table_cmd_t, 70
FPP_CMD_QOS_SCHEDULER	action, 70
LibFCI, 47	position, 70
FPP_CMD_QOS_SHAPER	r, 71
LibFCI, 48	rule_name, 70
FPP_CMD_SPD	table_name, 70
LibFCI, 44	fpp_fw_features_cmd_t, 71
fpp_ct6_cmd_t, 62	action, 71
action, 63	
·	def_val, 72
daddr, 63	desc, 72
daddr_reply, 64	name, 71
dport, 64	reserved, 72
dport_reply, 64	val, 72
flags, 64	variant, 72
protocol, 64	FPP_IF_ALLOW_Q_IN_Q
route_id, 64	LibFCI, 51
route_id_reply, 65	FPP_IF_DISCARD
saddr, 63	LibFCI, 51
saddr_reply, 64	FPP_IF_ENABLED
sport, <mark>63</mark>	LibFCI, 51
sport_reply, 64	fpp_if_flags_t
vlan, 65	LibFCI, 51
vlan_reply, 65	FPP_IF_LOADBALANCE
fpp_ct_cmd_t, 65	LibFCI, 51
action, 66	FPP_IF_LOOPBACK
daddr, 66	LibFCI, 51
daddr_reply, 67	fpp_if_m_args_t, 72
dport, 66	dmac, 74
dport_reply, 67	dport, 73
flags, 67	ethtype, 73
protocol, 67	fp_table0, 74
route_id, 67	fp_table1, 74
route_id_reply, 67	hif_cookie, 75
saddr, 66	proto, 74
saddr_reply, 67	smac, 74
sport, 66	sport, 73
sport_reply, 67	v4, 74
vlan, 68	v6, 74
vlan_reply, 68	vlan, 73
fpp_ext.h, 107	fpp_if_m_rules_t
<u> </u>	11



LibFCI, 52	LibFCI, 52
FPP_IF_MATCH_DIP	FPP_IF_MATCH_TYPE_MCAST
LibFCI, 52	LibFCI, 52
FPP IF MATCH DIP6	FPP_IF_MATCH_TYPE_PPPOE
LibFCI, 52	LibFCI, 52
FPP_IF_MATCH_DMAC	FPP_IF_MATCH_TYPE_TCP
LibFCI, 52	LibFCI, 52
FPP_IF_MATCH_DPORT	FPP_IF_MATCH_TYPE_UDP
LibFCI, 52	LibFCI, 52
FPP_IF_MATCH_ETHTYPE	FPP_IF_MATCH_TYPE_VLAN
LibFCI, 52	LibFCI, 52
FPP_IF_MATCH_FP0	FPP_IF_MATCH_VLAN
LibFCI, 52	LibFCI, 52
FPP_IF_MATCH_FP1	FPP_IF_MIRROR
LibFCI, 52	LibFCI, 51
FPP_IF_MATCH_HIF_COOKIE	FPP_IF_OP_BRIDGE
LibFCI, 52	LibFCI, 51
FPP_IF_MATCH_OR	FPP_IF_OP_DEFAULT
LibFCI, 51	LibFCI, 51
FPP_IF_MATCH_PROTO	FPP_IF_OP_DISABLED
LibFCI, 52	LibFCI, 51
FPP_IF_MATCH_RESERVED7	FPP_IF_OP_FLEXIBLE_ROUTER
LibFCI, 52	LibFCI, 51
FPP_IF_MATCH_RESERVED8	FPP_IF_OP_L2L3_BRIDGE
LibFCI, 52	LibFCI, 52
FPP_IF_MATCH_SIP	FPP_IF_OP_L2L3_VLAN_BRIDGE
LibFCI, 52	LibFCI, 52
FPP_IF_MATCH_SIP6	FPP_IF_OP_ROUTER
LibFCI, 52	LibFCI, 51
FPP_IF_MATCH_SMAC	FPP_IF_OP_VLAN_BRIDGE
LibFCI, 52	LibFCI, 51
FPP IF MATCH SPORT	FPP_IF_PROMISC
LibFCI, 52	LibFCI, 51
FPP_IF_MATCH_TYPE_ARP	FPP IF PTP CONF CHECK
LibFCI, 52	LibFCI, 51
FPP_IF_MATCH_TYPE_BCAST	FPP_IF_PTP_PROMISC
LibFCI, 52	LibFCI, 51
FPP_IF_MATCH_TYPE_ETH	FPP_IF_VLAN_CONF_CHECK
LibFCI, 52	LibFCI, 51
	•
FPP_IF_MATCH_TYPE_ICMP	fpp_l2_bd_cmd_t, 75
LibFCI, 52	action, 76
FPP_IF_MATCH_TYPE_IGMP	flags, 77
LibFCI, 52	if_list, 77
FPP_IF_MATCH_TYPE_IPV4	mcast_hit, 76
LibFCI, 52	mcast_miss, 77
FPP_IF_MATCH_TYPE_IPV6	ucast_hit, 76
LibFCI, 52	ucast_miss, 76
FPP_IF_MATCH_TYPE_IPX	untag_if_list, 77



vlan, 76	algo, 89
FPP_L2_BD_DEFAULT	id, 88
 LibFCI, <u>53</u>	if_name, 88
FPP_L2_BD_FALLBACK	input_en, 89
 LibFCI, <u>53</u>	input_src, 90
fpp_l2_bd_flags_t	input_w, 89
LibFCI, 53	mode, 88
fpp_log_if_cmd_t, 78	fpp_qos_shaper_cmd_t, 90
action, 78	action, 91
arguments, 80	id, 91
egress, 79	if_name, 91
flags, 80	isl, 92
id, 79	max_credit, 92
match, 80	min_credit, 92
name, 79	mode, 92
parent_id, 79	position, 91
parent_name, 79	fpp_rt_cmd_t, 93
stats, 80	action, 93
fpp_phy_if_block_state_t	dst_mac, 94
LibFCI, 52	flags, 94
fpp_phy_if_cmd_t, 81	id, 94
action, 81	output_device, 94
block_state, 82	src_mac, 94
flags, 82	fpp_spd_cmd_t, 95
3	action, 95
ftable, 83	daddr, 96
id, 82	dport, 96
mac_addr, 83	name, 95
mirror, 83	position, 96
mode, 82	protocol, 96
name, 81	sa_id, 96
stats, 82	saddr, 96
fpp_phy_if_op_mode_t	spd_action, 97
LibFCI, 51	spi, 96
fpp_phy_if_stats_t, 83	sport, 96
discarded, 84	fpp_timeout_cmd_t, 97
egress, 84	ftable
ingress, 84	fpp_phy_if_cmd_t, 83
malformed, 84	ipp_piiy_ii_onia_t, oo
fpp_qos_queue_cmd_t, 84	hif_cookie
action, 85	fpp_if_m_args_t, 75
id, 85	
if_name, 85	id
max, 86	fpp_log_if_cmd_t, 79
min, 86	fpp_phy_if_cmd_t, 82
mode, 86	fpp_qos_queue_cmd_t, 85
zprob, 87	fpp_qos_scheduler_cmd_t, 88
fpp_qos_scheduler_cmd_t, 87	fpp_qos_shaper_cmd_t, 91
action, 88	fpp_rt_cmd_t, 94



if_list	FPP_CMD_DATA_BUF_PUT, 43
fpp_l2_bd_cmd_t, 77	FPP_CMD_FP_FLEXIBLE_FILTER, 43
if_name	FPP_CMD_FP_RULE, 41
fpp_qos_queue_cmd_t, 85	FPP_CMD_FP_TABLE, 39
fpp_qos_scheduler_cmd_t, 88	FPP_CMD_FW_FEATURE, 49
fpp_qos_shaper_cmd_t, 91	FPP_CMD_IF_LOCK_SESSION, 32
ingress	FPP_CMD_IF_UNLOCK_SESSION, 32
fpp_phy_if_stats_t, 84	FPP_CMD_IPV4_CONNTRACK_CHANGE,
input_en	50
fpp_qos_scheduler_cmd_t, 89	FPP_CMD_IPV6_CONNTRACK_CHANGE,
input_src	50
fpp_qos_scheduler_cmd_t, 90	FPP_CMD_L2_BD, 33
input_w	FPP_CMD_L2_FLUSH_ALL, 39
fpp_qos_scheduler_cmd_t, 89	FPP_CMD_L2_FLUSH_LEARNED, 38
isl	FPP_CMD_L2_FLUSH_STATIC, 38
fpp_qos_shaper_cmd_t, 92	FPP_CMD_L2_STATIC_ENT, 35
lan	FPP_CMD_LOG_IF, 30
len	FPP_CMD_PHY_IF, 29
fpp_buf_cmd_t, 62	FPP_CMD_QOS_QUEUE, 46
LibFCI, 11	FPP_CMD_QOS_SCHEDULER, 47
BS_BLOCKED, 53 BS_FORWARD_ONLY, 53	FPP_CMD_QOS_SHAPER, 48
BS_LEARN_ONLY, 53	FPP_CMD_SPD, 44
BS_NORMAL, 53	fpp_fp_offset_from_t, 53
CTCMD_FLAGS_REP_DISABLED, 50	fpp_fp_rule_match_action_t, 53
CTCMD_FLAGS_REF_DISABLED, 50 CTCMD_FLAGS_TTL_DECREMENT, 50	FPP_IF_ALLOW_Q_IN_Q, 51
fci_catch, 56	FPP_IF_DISCARD, 51
FCI_CB_CONTINUE, 55	FPP_IF_ENABLED, 51
fci_cb_retval_t, 54	fpp_if_flags_t, 51
FCI_CB_STOP, 55	FPP_IF_LOADBALANCE, 51
FCI_CFG_FORCE_LEGACY_API, 49	FPP_IF_LOOPBACK, 51
FCI_CLIENT_DEFAULT, 54	fpp_if_m_rules_t, 52
fci_client_type_t, 54	FPP_IF_MATCH_DIP, 52
fci_close, 55	FPP_IF_MATCH_DIP6, 52
fci_cmd, 56	FPP_IF_MATCH_DMAC, 52
FCI_GROUP_CATCH, 54	FPP_IF_MATCH_DPORT, 52
FCI_GROUP_NONE, 54	FPP_IF_MATCH_ETHTYPE, 52
fci_mcast_groups_t, 54	FPP_IF_MATCH_FP0, 52
fci_open, 55	FPP_IF_MATCH_FP1, 52
fci_query, 57	FPP_IF_MATCH_HIF_COOKIE, 52
fci_register_cb, 59	FPP_IF_MATCH_OR, 51
fci_write, 58	FPP_IF_MATCH_PROTO, 52
FP ACCEPT, 53	FPP_IF_MATCH_RESERVED7, 52
FP_NEXT_RULE, 53	FPP_IF_MATCH_RESERVED8, 52
FP_OFFSET_FROM_L2_HEADER, 54	FPP_IF_MATCH_SIP, 52
FP_OFFSET_FROM_L3_HEADER, 54	FPP_IF_MATCH_SIP6, 52
FP_OFFSET_FROM_L4_HEADER, 54	FPP_IF_MATCH_SMAC, 52
FP_REJECT, 53	FPP_IF_MATCH_SPORT, 52
FPP_CMD_DATA_BUF_AVAIL, 44	FPP_IF_MATCH_TYPE_ARP, 52



FPP_IF_MATCH_TYPE_BCAST, 52	min_credit
FPP_IF_MATCH_TYPE_ETH, 52	fpp_qos_shaper_cmd_t, 92
FPP_IF_MATCH_TYPE_ICMP, 52	mirror
FPP_IF_MATCH_TYPE_IGMP, 52	fpp_phy_if_cmd_t, 83
FPP_IF_MATCH_TYPE_IPV4, 52	mode
FPP_IF_MATCH_TYPE_IPV6, 52	fpp_phy_if_cmd_t, 82
FPP_IF_MATCH_TYPE_IPX, 52	fpp_qos_queue_cmd_t, 86
FPP_IF_MATCH_TYPE_MCAST, 52	fpp_qos_scheduler_cmd_t, 88
FPP_IF_MATCH_TYPE_PPPOE, 52	fpp_qos_shaper_cmd_t, 92
FPP_IF_MATCH_TYPE_TCP, 52	
FPP_IF_MATCH_TYPE_UDP, 52	name
FPP_IF_MATCH_TYPE_VLAN, 52	fpp_fw_features_cmd_t, 71
FPP_IF_MATCH_VLAN, 52	fpp_log_if_cmd_t, 79
FPP_IF_MIRROR, 51	fpp_phy_if_cmd_t, 81
FPP_IF_OP_BRIDGE, 51	fpp_spd_cmd_t, 95
FPP_IF_OP_DEFAULT, 51	autout davia
FPP_IF_OP_DISABLED, 51	output_device
FPP_IF_OP_FLEXIBLE_ROUTER, 51	fpp_rt_cmd_t, 94
FPP_IF_OP_L2L3_BRIDGE, 52	parent_id
FPP_IF_OP_L2L3_VLAN_BRIDGE, 52	fpp_log_if_cmd_t, 79
FPP_IF_OP_ROUTER, 51	parent_name
FPP_IF_OP_VLAN_BRIDGE, 51	fpp_log_if_cmd_t, 79
FPP_IF_PROMISC, 51	payload
FPP_IF_PTP_CONF_CHECK, 51	fpp_buf_cmd_t, 62
FPP_IF_PTP_PROMISC, 51	position
FPP_IF_VLAN_CONF_CHECK, 51	fpp_fp_table_cmd_t, 70
FPP_L2_BD_DEFAULT, 53	fpp_qos_shaper_cmd_t, 91
FPP_L2_BD_FALLBACK, 53	fpp_spd_cmd_t, 96
fpp_l2_bd_flags_t, 53	processed
fpp_phy_if_block_state_t, 52	fpp_algo_stats_t, 61
fpp_phy_if_op_mode_t, 51	proto
libfci.h, 110	fpp_if_m_args_t, 74
	protocol
mac_addr	fpp_ct6_cmd_t, 64
fpp_phy_if_cmd_t, 83	fpp_ct_cmd_t, 67
malformed	fpp_spd_cmd_t, 96
fpp_phy_if_stats_t, 84	
match	r
fpp_log_if_cmd_t, 80	fpp_fp_rule_cmd_t, 69
max	fpp_fp_table_cmd_t, 71
fpp_qos_queue_cmd_t, 86	rejected
max_credit	fpp_algo_stats_t, 61
fpp_qos_shaper_cmd_t, 92	reserved
mcast_hit	fpp_fw_features_cmd_t, 72
fpp_l2_bd_cmd_t, 76	route_id
mcast_miss	fpp_ct6_cmd_t, 64
fpp_l2_bd_cmd_t, 77	fpp_ct_cmd_t, 67
min	route_id_reply
fpp_qos_queue_cmd_t, 86	fpp_ct6_cmd_t, 65



fpp_ct_cmd_t, 67	fpp_fw_features_cmd_t, 72
rule_name	vlan
fpp_fp_table_cmd_t, 70	fpp_ct6_cmd_t, 65
sa_id	fpp_ct_cmd_t, 68
fpp_spd_cmd_t, 96	fpp_if_m_args_t, 73
saddr	fpp_l2_bd_cmd_t, 76
fpp_ct6_cmd_t, 63	vlan_reply fpp_ct6_cmd_t, 65
fpp_ct_cmd_t, 66	fpp_ct_cmd_t, 68
fpp_spd_cmd_t, 96	ipp_ct_cind_t, 00
saddr_reply	zprob
fpp_ct6_cmd_t, 64	fpp_qos_queue_cmd_t, 87
fpp_ct_cmd_t, 67	
smac	
fpp_if_m_args_t, 74	
spd_action	
fpp_spd_cmd_t, 97	
spi	
fpp_spd_cmd_t, 96	
sport	
fpp_ct6_cmd_t, 63	
fpp_ct_cmd_t, 66	
fpp_if_m_args_t, 73 fpp_spd_cmd_t, 96	
sport_reply	
fpp_ct6_cmd_t, 64	
fpp_ct_cmd_t, 67	
src_mac	
fpp_rt_cmd_t, 94	
stats	
fpp_log_if_cmd_t, 80	
fpp_phy_if_cmd_t, 82	
. 11	
table_name	
fpp_fp_table_cmd_t, 70	
ucast_hit	
fpp_l2_bd_cmd_t, 76	
ucast_miss	
fpp_l2_bd_cmd_t, 76	
untag_if_list	
fpp_l2_bd_cmd_t, 77	
774	
fpp_if_m_args_t, 74	
v6	
fpp_if_m_args_t, 74	
val	
fpp_fw_features_cmd_t, 72	
variant	