

INFORMATION AND ENTERTAINMENT SYSTEM - VEHICLES WITH: INCONTROL TOUCH


AUDIO AMPLIFIER MODULE (G2133308)

REMOVAL AND INSTALLATION

|          |                                                  |                    |      |              |  |
|----------|--------------------------------------------------|--------------------|------|--------------|--|
| 86.50.67 | AUDIO UNIT<br>AMPLIFIER -<br>RENEW               | ALL<br>DERIVATIVES | 0.70 | USED WITHINS |  |
| 87.01.15 | AUDIO<br>AMPLIFIER<br>MODULE<br>(AAM) -<br>RENEW | ALL<br>DERIVATIVES | 0.60 | USED WITHINS |  |
| 87.02.15 | AUDIO<br>AMPLIFIER<br>MODULE<br>(AAM) -<br>RENEW | ALL<br>DERIVATIVES | 0.60 | USED WITHINS |  |

REMOVAL

1.

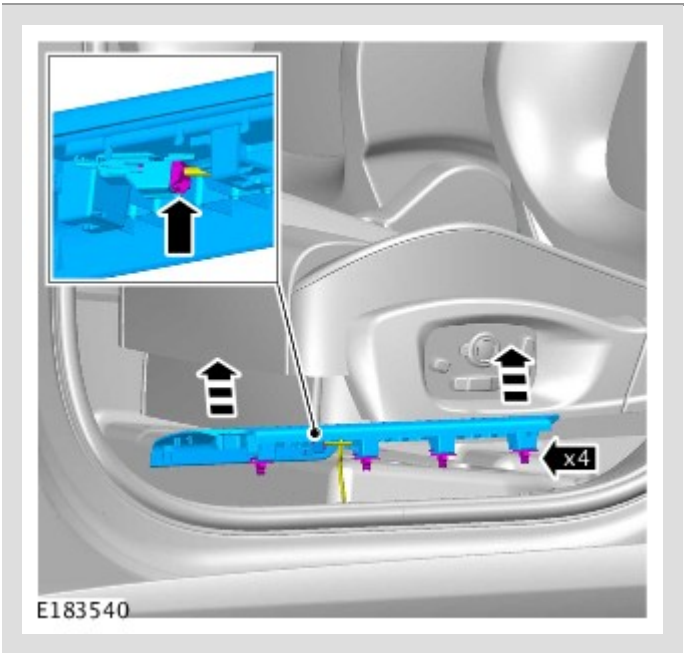

Remove the front tread plate trim panel.

2.

Remove the front left seat.

Refer to: Front Row Seat (501-10, Removal and Installation).

3.

Disconnect the startup battery ground cable.


Refer to: Startup Battery Disconnect and Connect (414-01, General Procedures).

4.




Position the front carpet to one side.

5.

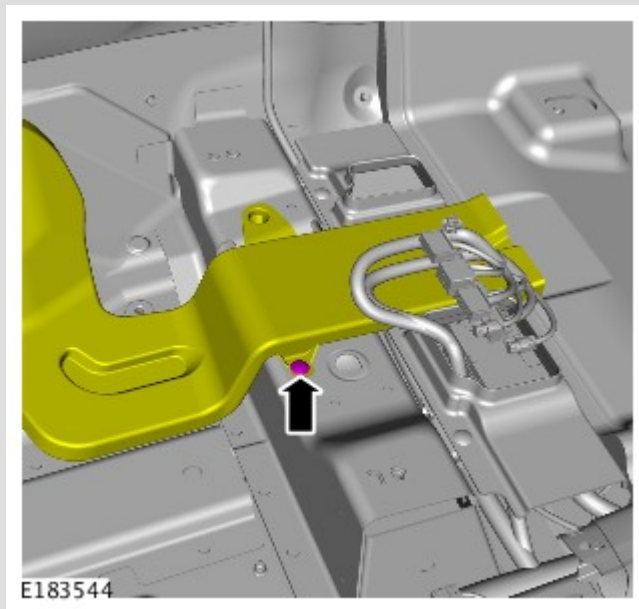


Position the air vent to one side.

6.

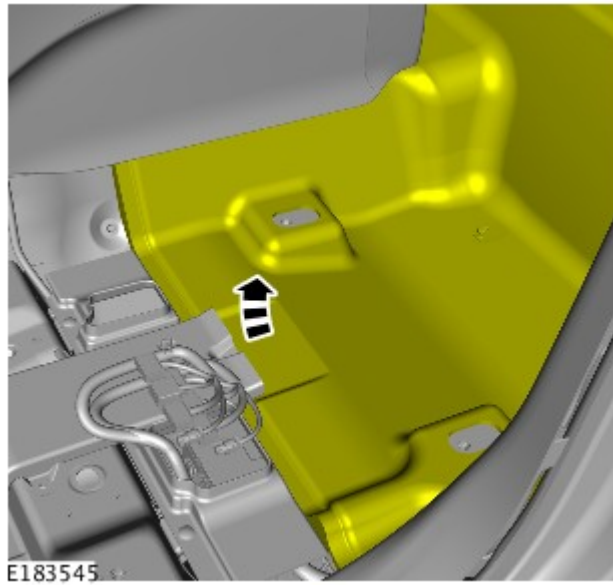


Position the rear carpet to one side.

7.

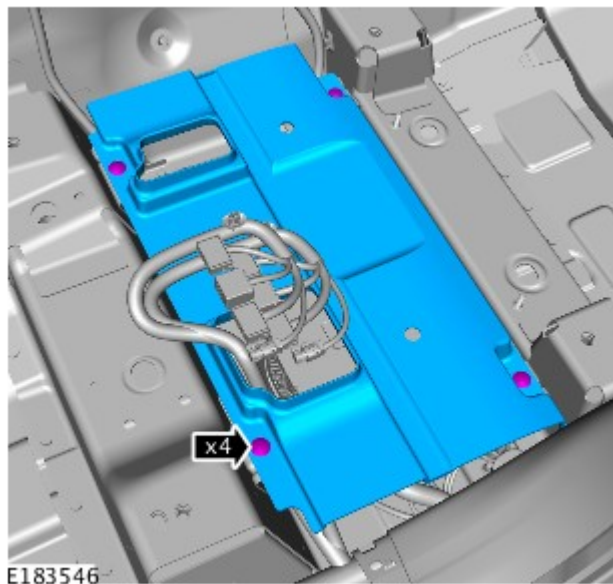

Remove the audio amplifier module cover trim panel.

8.

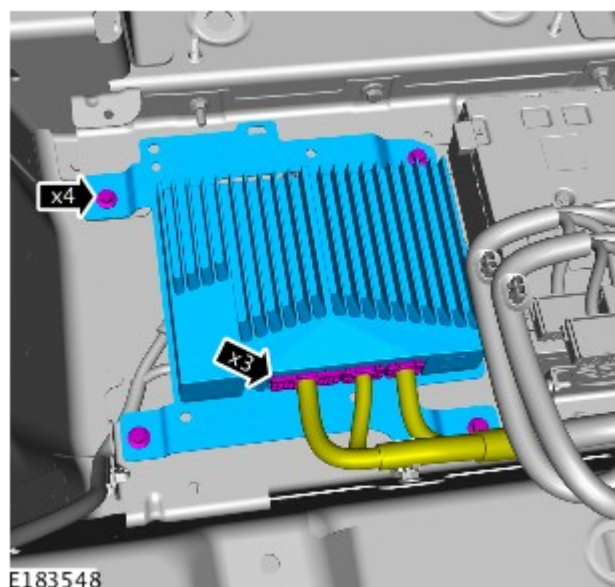


Remove the audio amplifier module.

*Torque: 7 Nm*

9.

#### NOTE:

Do not disassemble further if the component is removed for access only.

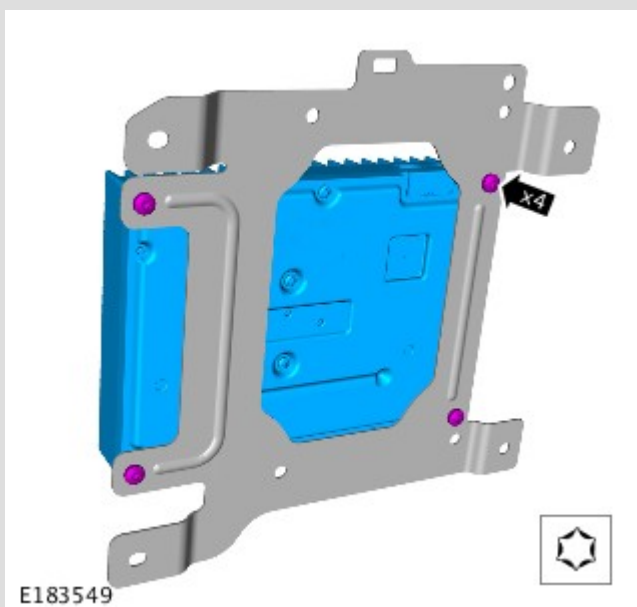

Remove the audio amplifier module bracket.

*Torque: 4.1 Nm*

## INSTALLATION

1.

To install, reverse the removal procedure.

