

18-649 Lab 1: Requirements Document

Misho Alexandrov (mvalexan), Ore Abolade (oabolade), T'sairus Beasley (tbeasley)

1. Introduction with system objective

1.1 Background

Modern vehicles are shifting from mechanical linkages to drive-by-wire systems, where sensors, embedded controllers, and actuators replace direct mechanical connections between driver inputs and vehicle response. This gives more flexibility but removes any mechanical fallback. The industry's response has been to move toward zone architectures: functionally related sensors/actuators are grouped under a zone controller, and zones communicate over a shared, fault-tolerant bus instead of point-to-point wiring.

1.2 System Objective


The objective is to provide electronic control of a tabletop car through coordinated cockpit, steering, and drivetrain zones. The system must:

- Translate cockpit steering, throttle, brake and turn-signal inputs into steering, drivetrain and blinker commands.
- Maintain target wheel velocity with encoder feedback; brake commands override throttle.
- Measure steering-actuator load and return force feedback to the driver's wheel.
- Transmit control, force-feedback, heartbeat and error messages in parallel on independent CAN A and CAN B.
- Continue operating without a switchover delay when either bus, or one node's connection to one bus, is lost.
- Detect zone failures and degraded CAN communication and apply defined degraded, error and recovery behavior.
- Coordinate fault recovery across all zones through defined system-state transitions.

1.3 Scope

The system has three zones — Cockpit (Raspberry Pi), Front/Steering, and Rear/Drivetrain (independently-clocked STM32s running an RTOS). The cockpit zone bridges a UDP proxy (wheel/pedal hardware) to the CAN network; the steering and drivetrain zones consume CAN control messages and drive the servo, motors, and blinkers. A custom PCB implements dual CAN A/B interfaces per zone with fault-injection jumpers, enabling systematic bus- and node-level fault testing.

2. System state chart

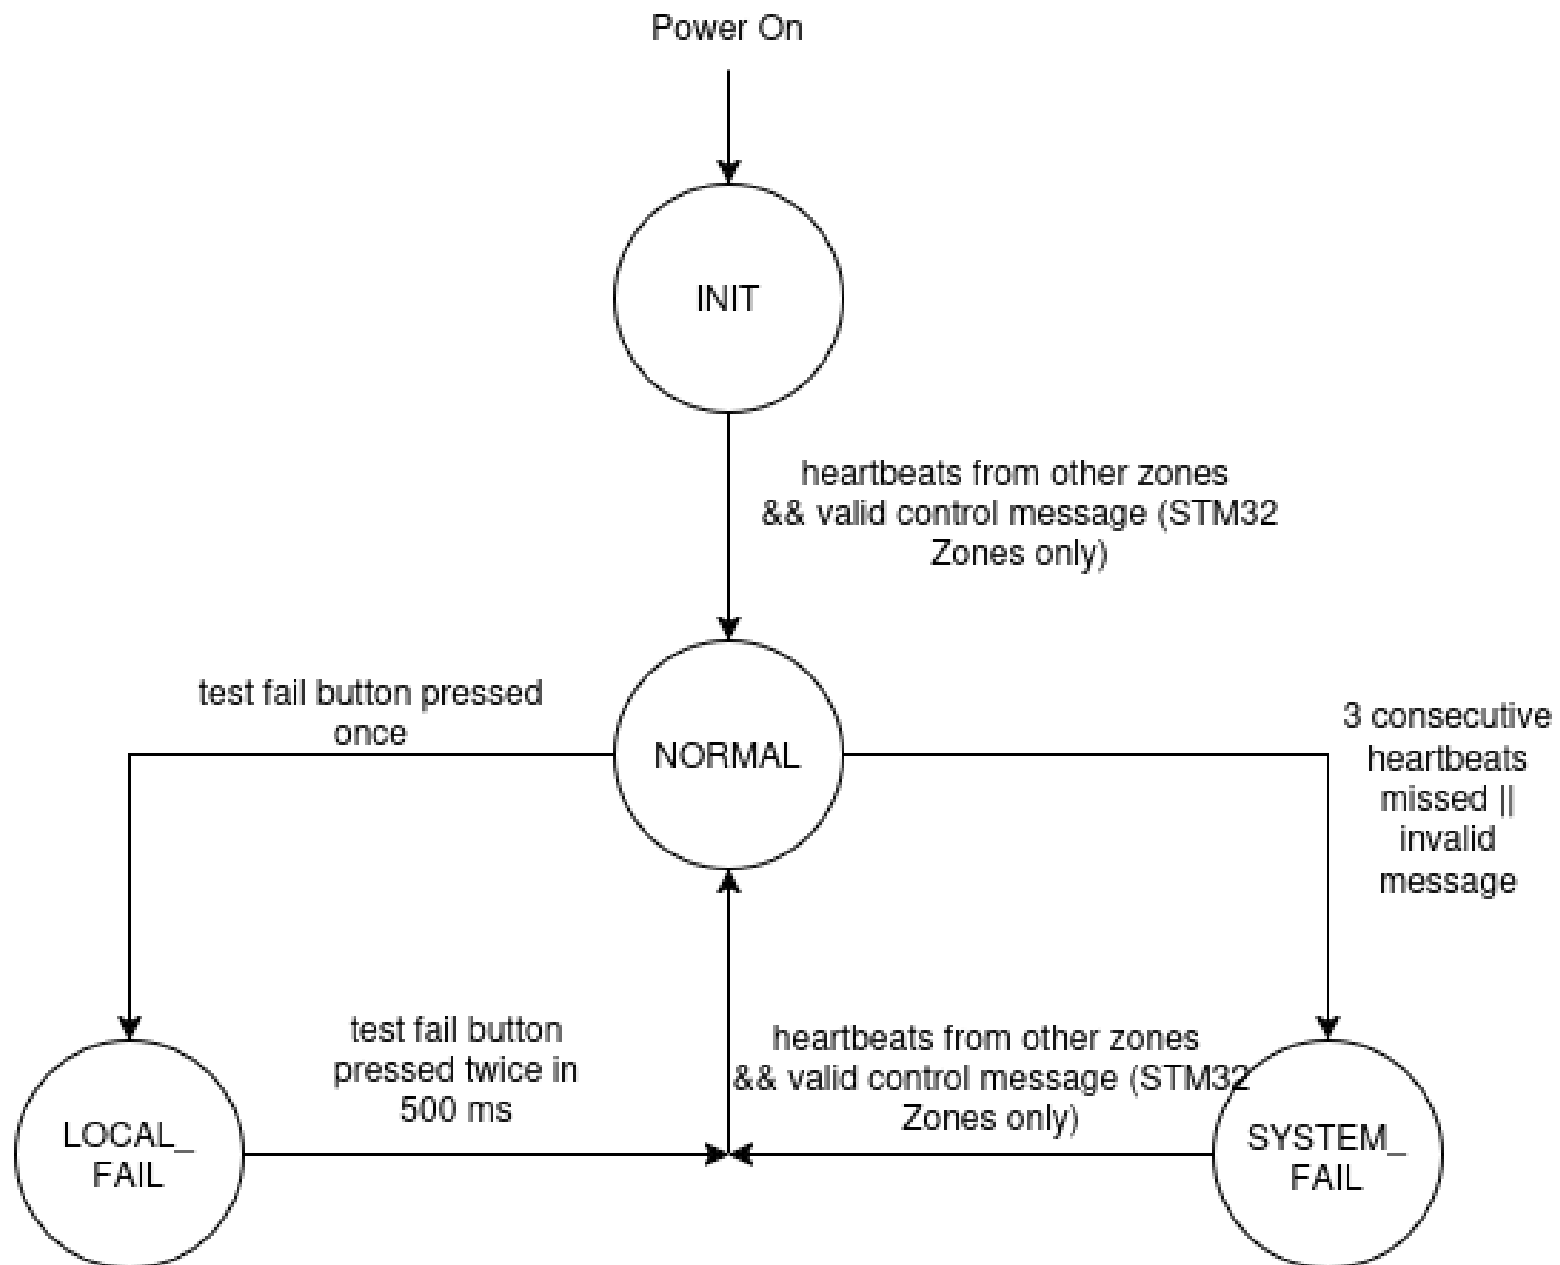

Heartbeat behavior by state

- **INIT and SYSTEM_FAIL:** the zone continues transmitting its heartbeat on both CAN A and CAN B while in either of these states. In INIT, this lets other zones detect the new node coming online and lets the zone itself detect when it has heard back from everyone (satisfying the R3 power-up condition). In SYSTEM_FAIL, the zone is reacting to a fault it observed elsewhere (missed heartbeats from another zone, or an invalid control value) rather than a fault in itself — since it remains functional, it keeps heartbeating so the rest of the network sees it as healthy and doesn't mistakenly treat it as a second failure.
- **LOCAL_FAIL:** per R4.5, a zone that fails its own self-test must stop transmitting its heartbeat on both buses entirely. This is the signal the rest of the system uses to detect the failure (three consecutive missed heartbeats on both buses → SYSTEM_FAIL for everyone else). Heartbeat transmission does not resume until the zone receives a double press (within 500ms) and restores to NORMAL.

CAN bus degradation


Bus health is tracked independently of, and does not affect, the state machine above. Each zone monitors CAN A and CAN B separately per R4.7: a bus is flagged degraded if no traffic from any other node has been seen on it for three heartbeat periods (60ms) while the other bus is still active. Degradation is reported via a per-bus status LED and in the zone's heartbeat payload, but does not force a transition out of NORMAL — the system must remain fully operational (no braking, no hazards) on a single healthy bus.

Safe-state entry

Every state except NORMAL drives the zone to its documented safe output: motor PWM disabled with the H-Bridge in dynamic braking, blinkers flashing the hazard pattern, and the steering actuator continuing to track the commanded wheel angle. The one exception is the steering zone specifically in LOCAL_FAIL: since it is the zone that has failed, it stops tracking the steering wheel entirely rather than continuing to servo to a value it can no longer trust it's receiving correctly.


3. Sequence diagrams for each use-case (S1–S6)

Use Case 1: Throttle

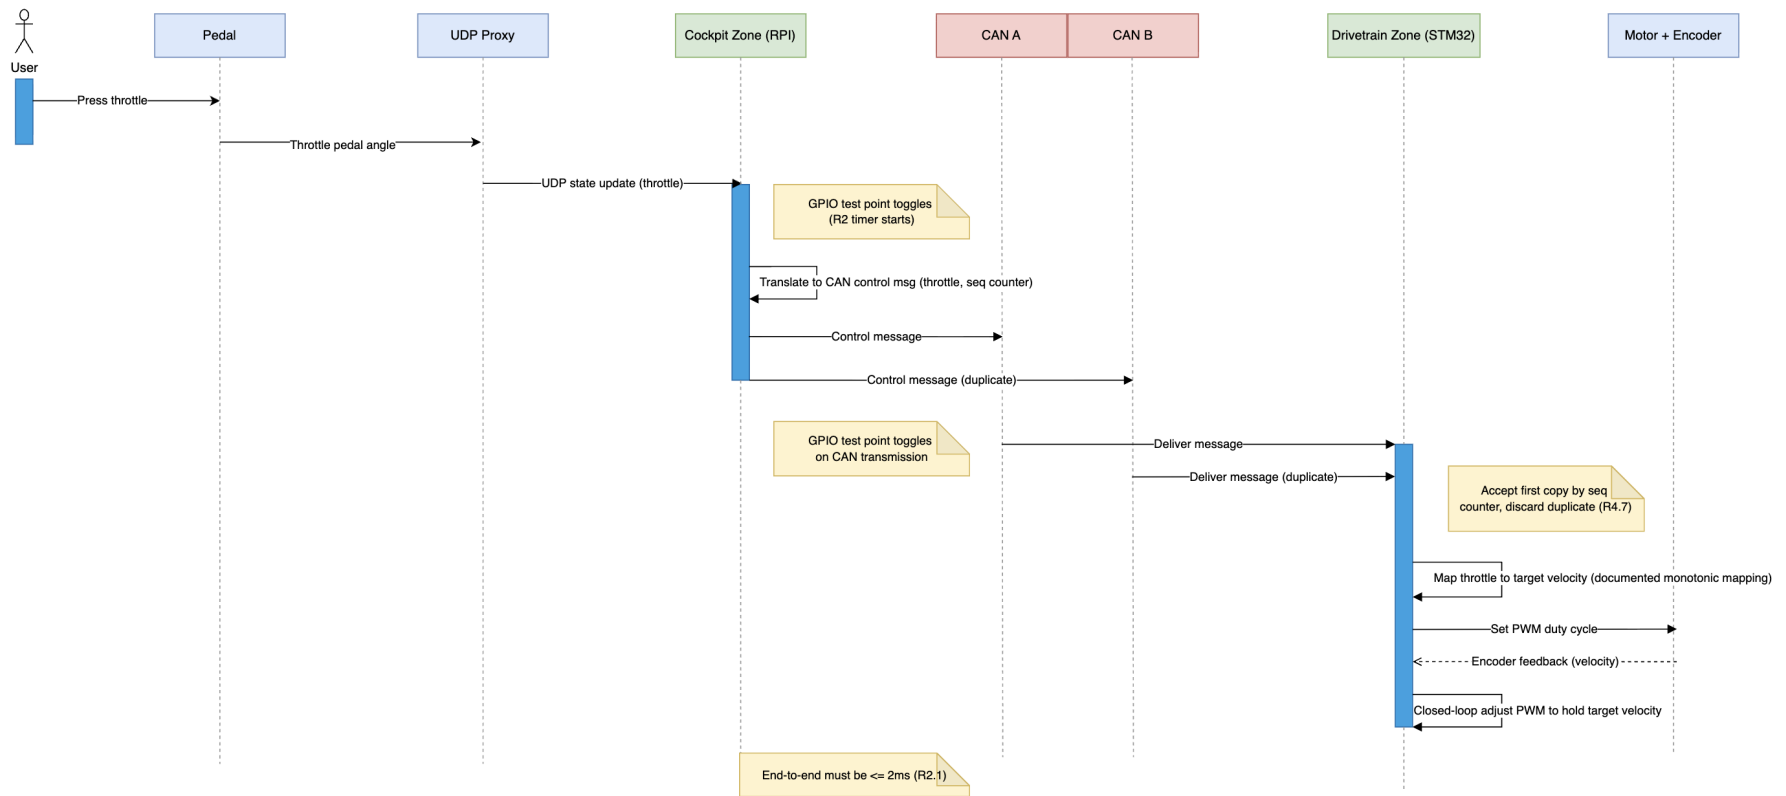


S1 throttle-control sequence diagram

Use Case 2: Brake

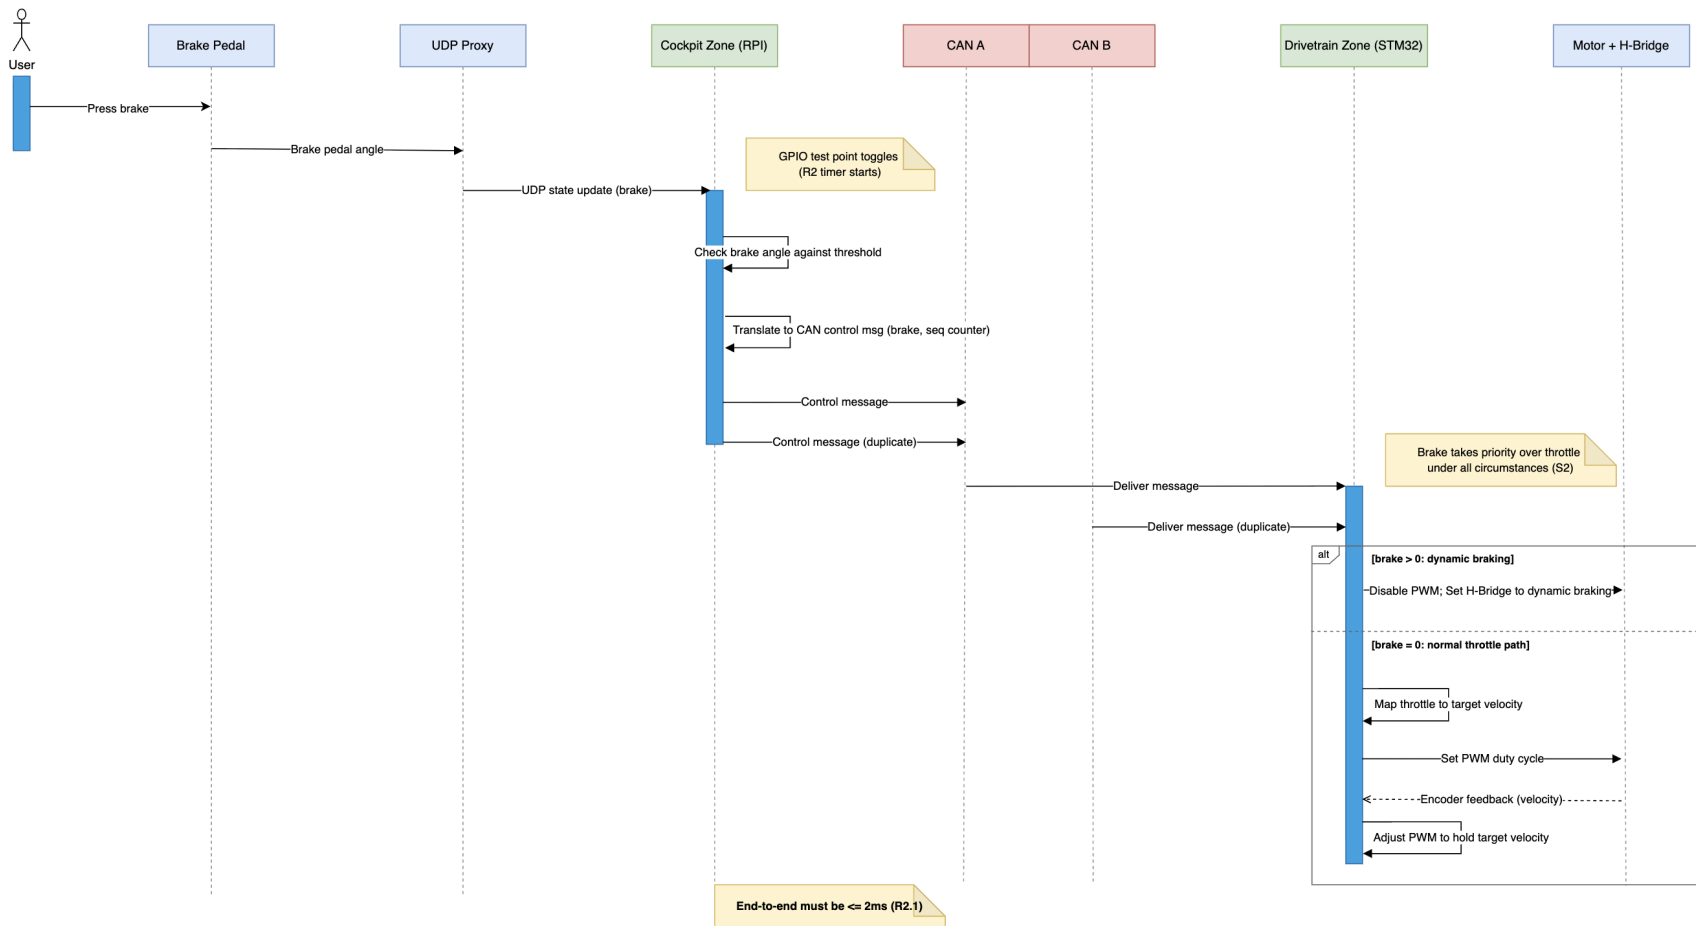


S2 brake-control sequence diagram

Use Case 3: Steering

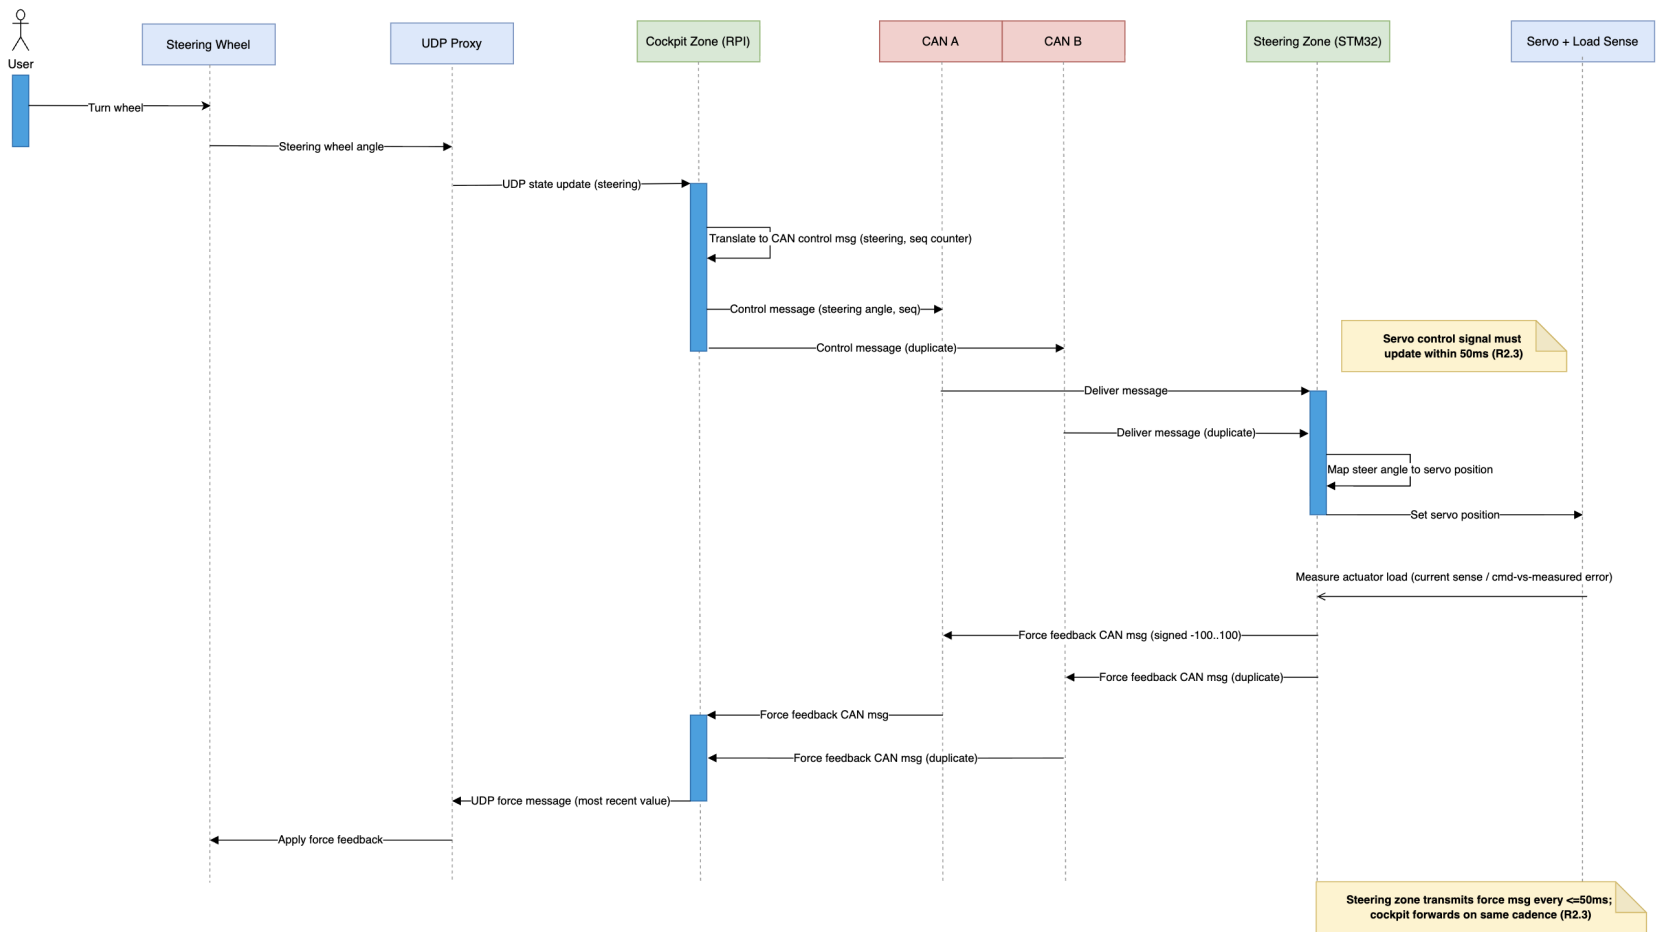


S3 steering sequence diagram

Use Case 4: Blinkers

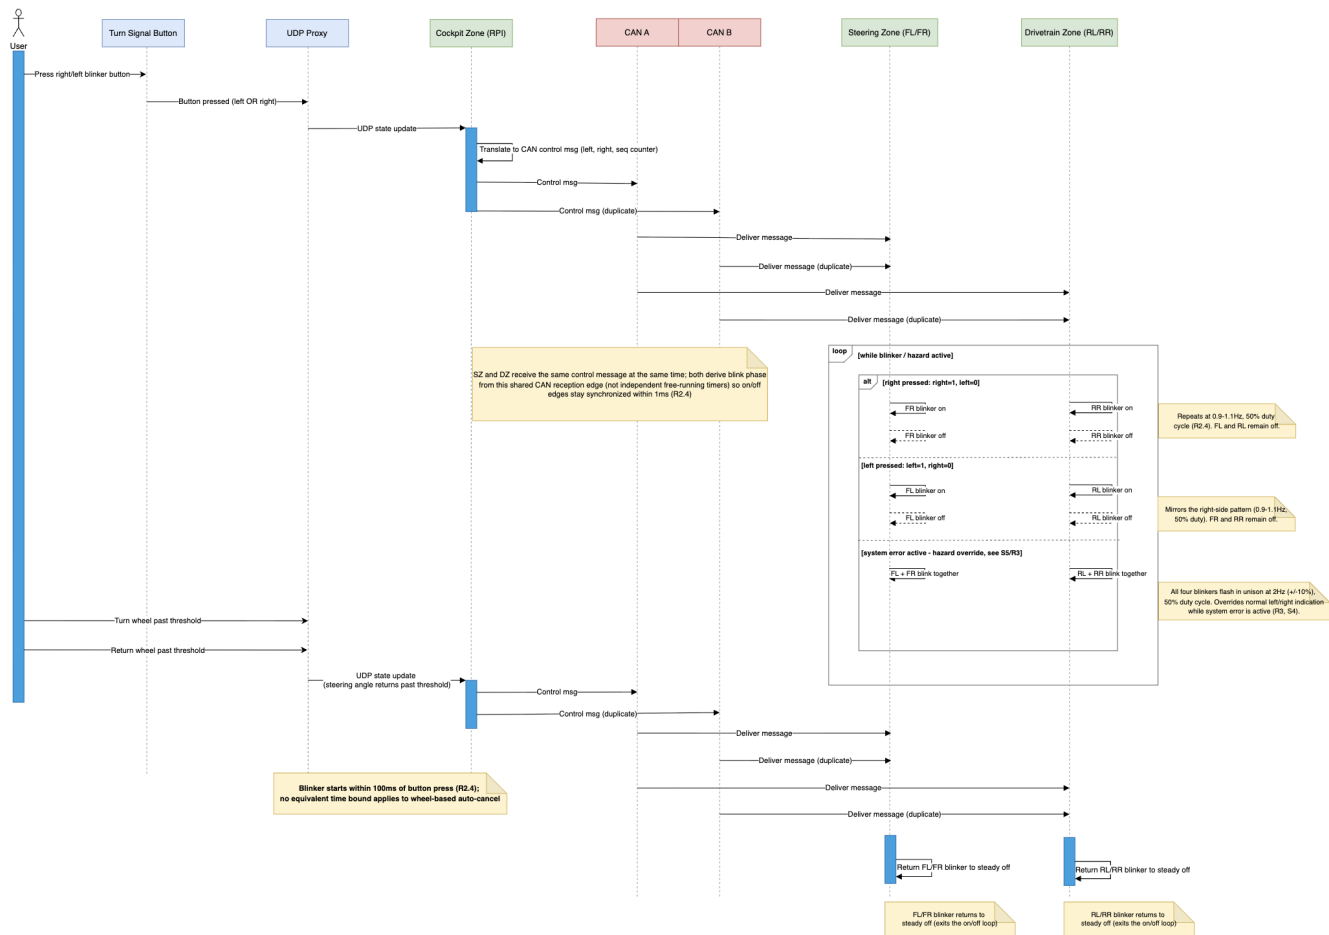


S4 blinker sequence diagram

Use Case 5: Self Test

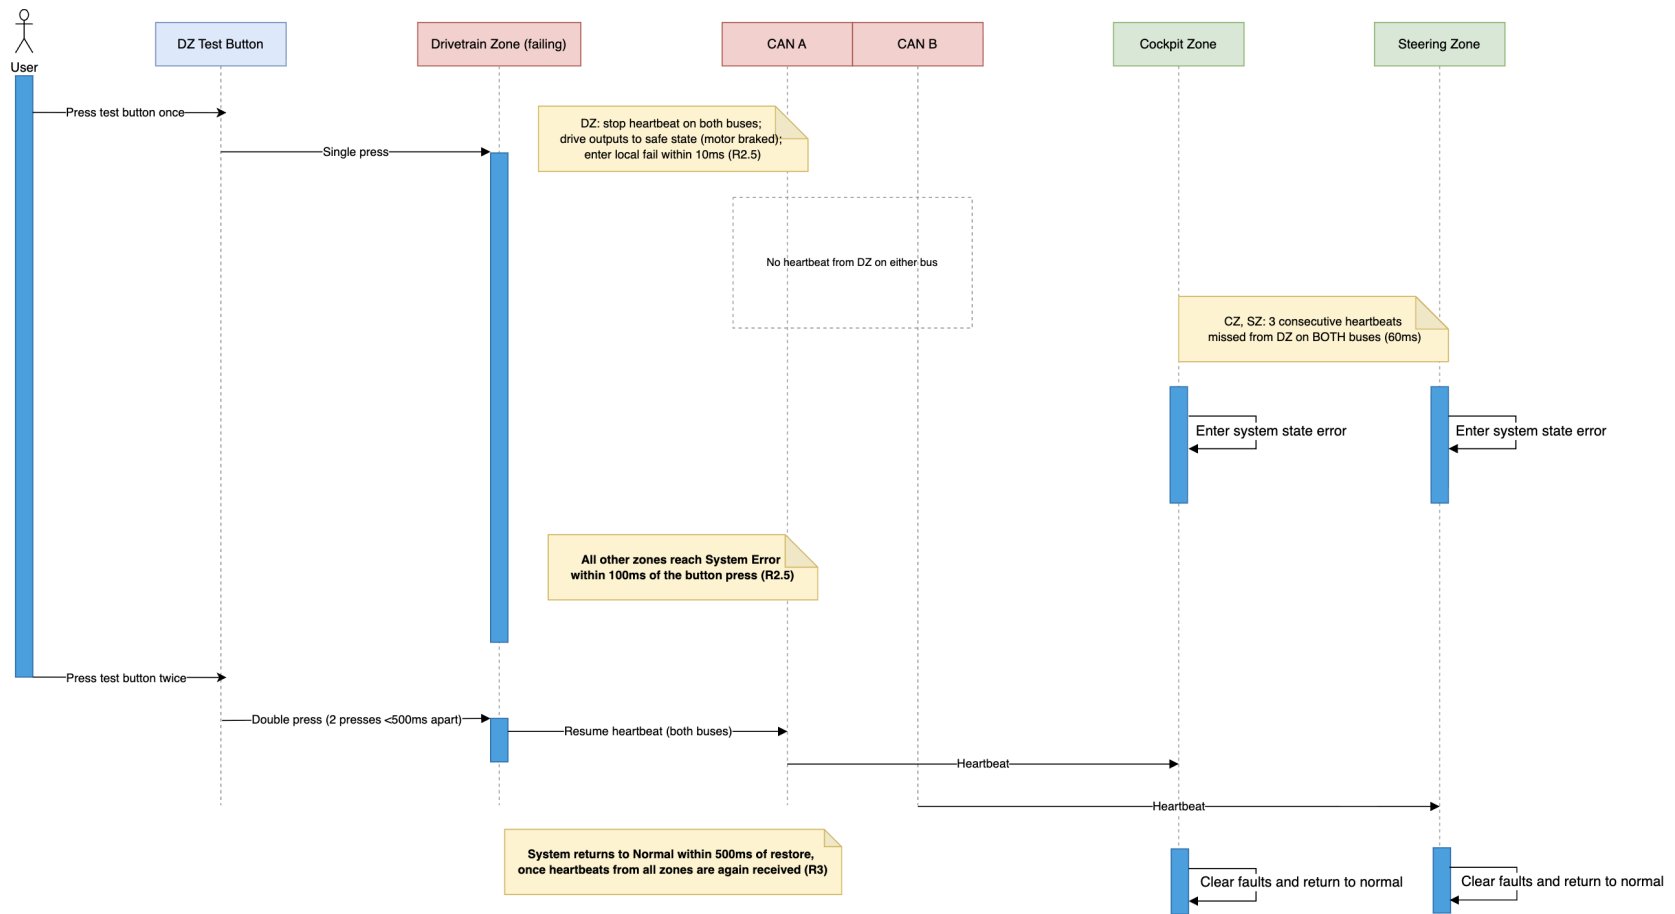

S5 self-test sequence diagram

Use Case 6: CAN Bus Fault

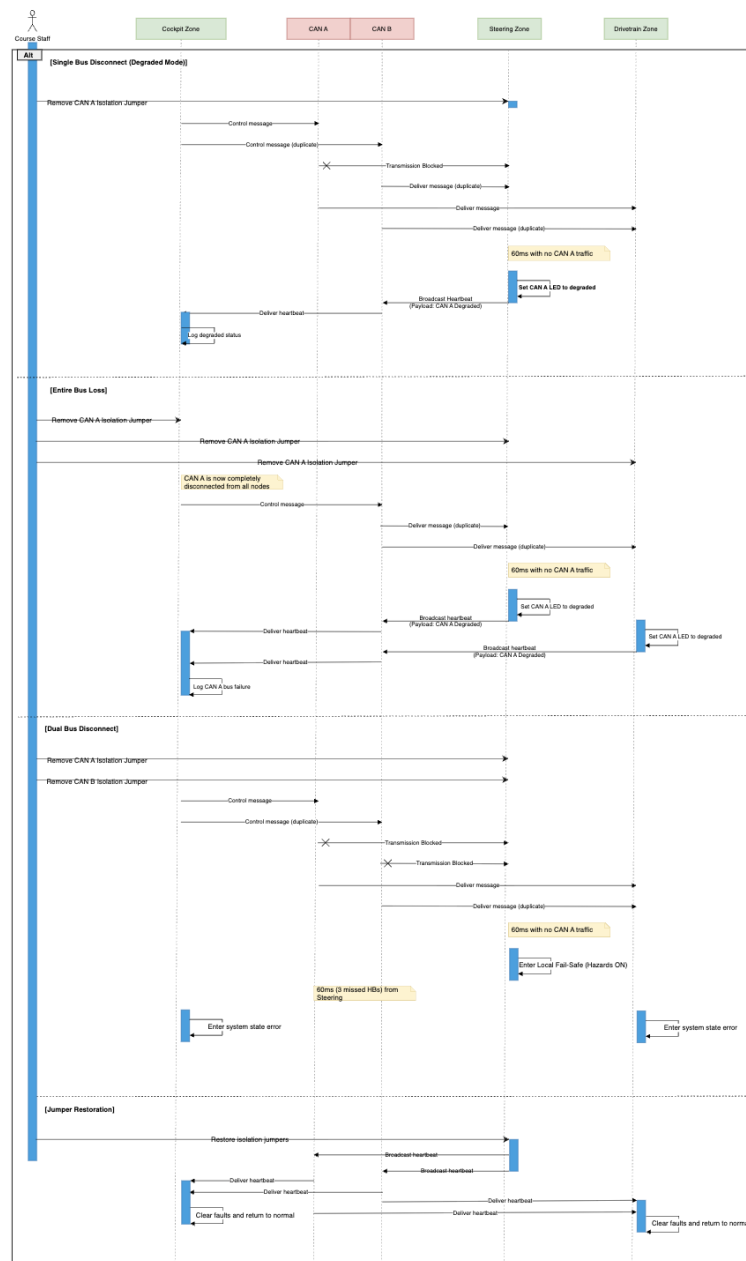

S6 CAN-bus fault-tolerance sequence diagram

4. Traceability for each use-case (S1–S6)

4.1 Use-case links

Each use case below links to its requirements, responsible zones and design documents. Code and verification links will be added as the system develops.

4.1.1 S1 — Throttle Control

Requirements: R2.1; R3; S1; Rear (drivetrain) Zone.

System behavior:

- The cockpit receives throttle input over UDP and sends it on CAN A and CAN B. The drivetrain accepts the first valid copy and uses encoder feedback to maintain the target speed.
- With the brake released, target speed follows pedal angle. Use the average of both encoder speeds and document the throttle mapping and maximum speed.
- **R2.1:** Change motor PWM within 2 ms of cockpit UDP reception. If a nonzero speed is commanded but no encoder movement occurs for at least 200 ms, increase PWM up to the documented limit.
- **R3:** LOCAL_FAIL or SYSTEM_FAIL disables motor PWM and applies dynamic braking.

Responsible zones: Cockpit: input and CAN messages. Drivetrain: speed control, encoders, PWM and motor-current checks.

Design links:

- S1 sequence diagram: cockpit-to-drivetrain commands and encoder feedback.
- System state chart: NORMAL, LOCAL_FAIL and SYSTEM_FAIL outputs.
- Proposed timing analysis: throttle response.
- CAN message catalog: throttle/brake commands. Table of all team-defined values: speed mapping, limits and current thresholds.
- Code links — TBD: UDP input, throttle mapping, speed-control loop and motor driver.
- Verification links — TBD: Throttle mapping, speed regulation, stuck-wheel response and 2 ms timing.

4.1.2 S2 — Brake Control

Requirements: R2.2; R3; S2.

System behavior:

- The cockpit sends brake input over both CAN buses. The drivetrain gives braking priority over throttle under all circumstances.
- **R2.2:** Disable PWM and apply H-Bridge dynamic braking within 2 ms of cockpit UDP reception.
- **R3:** Apply the same braking outputs in LOCAL_FAIL and SYSTEM_FAIL.

Responsible zones: Cockpit: brake input and CAN messages. Drivetrain: brake priority, PWM disable and H-Bridge control.

Design links:

- S2 sequence diagram: brake and normal-throttle paths.
- System state chart: safe braking outputs. Proposed timing analysis: brake response.

- CAN message catalog: brake message priority and payload. Table of all team-defined values: valid brake values.
- Code links — TBD: Brake input, brake/throttle priority and H-Bridge driver.
- Verification links — TBD: Brake priority, dynamic braking and 2 ms timing.

4.1.3 S3 — Steering Wheel

Requirements: R2.3; R3; S3; Front (steering) Zone.

System behavior:

- The cockpit sends wheel position to the steering zone. The steering zone moves the servo, measures actuator load and sends force feedback back through the cockpit to the UDP proxy.
- Cover the full mechanical steering range with a monotonic mapping: moving the wheel farther in one direction must not reverse the commanded direction.
- **R2.3:** Update the servo signal within 50 ms of cockpit UDP reception. Send force over CAN at least every 50 ms and send the latest force to the UDP proxy every 50 ms.
- Document the load-to-force mapping and use signed force values from -100 to 100. Keep steering active in `SYSTEM_FAIL` unless the steering zone itself has failed; hold steering when it is isolated from both buses.

Responsible zones: Cockpit: wheel input and UDP force output. Steering: servo control and load measurement.

Design links:

- S3 sequence diagram: steering command and force-feedback paths.
- System state chart: steering behavior in `NORMAL`, `SYSTEM_FAIL` and `LOCAL_FAIL`.
- Proposed timing analysis: steering response and force-message periods.
- CAN message catalog: steering and force messages. Table of all team-defined values: steering range, sensing method and force mapping.
- Code links — TBD: Steering mapping, servo driver, load sensing and CAN-to-UDP force output.
- Verification links — TBD: Steering range, force feedback and 50 ms timing.

4.1.4 S4 — Turn Signal and Hazard Blinkers

Requirements: R2.4; R3; S4.

System behavior:

- The cockpit sends the selected turn signal to both vehicle zones. Activate that side's front and rear blinkers and turn off the opposite side.
- Cancel the turn signal after the wheel crosses that side's turn threshold and returns past it.
- **R2.4:** Start blinking within 100 ms of cockpit UDP reception. Blink at 0.9–1.1 Hz with equal on/off time; keep front/rear changes on the same side within 1 ms.
- In the error state, override normal turn signals and flash all four hazards together at 2 Hz $\pm 10\%$, with equal on/off time.

Responsible zones: Cockpit: button and wheel input. Steering: front blinkers. Drivetrain: rear blinkers. All zones: error-state coordination.

Design links:

- S4 sequence diagram: side selection, auto-cancel and hazard override; it proposes a shared CAN reception event to set blink timing.

- System state chart: hazard outputs. Proposed timing analysis: activation and synchronization limits.
- CAN message catalog: turn-signal and synchronization messages. Table of all team-defined values: turn thresholds and repeated-button behavior.
- Code links — TBD: Turn-signal state logic, auto-cancel, synchronized blinking and hazard override.
- Verification links — TBD: Blinker coverage required by Appendix A, including cancel behavior, timing and hazards.

4.1.5 S5 — Self Test

Requirements: R2.5; R3; R4.5; S5.

System behavior:

- A single test-button press puts that zone in LOCAL_FAIL within 10 ms, stops its CAN transmissions and sets safe outputs. Treat presses less than 50 ms apart as one press.
- Other zones enter SYSTEM_FAIL within 100 ms of the press after three consecutive missed heartbeats from the failed zone on both buses.
- Send heartbeats every 20 ms $\pm 10\%$. As described in the System state chart, healthy zones continue heartbeats in INIT and SYSTEM_FAIL; a zone in LOCAL_FAIL stops them.
- Two presses within 500 ms restore the failed zone. Return to NORMAL within 500 ms of restoration once heartbeats from all zones are received again.
- On startup, INIT keeps safe outputs until heartbeats arrive from every other zone on at least one bus. STM32 zones also need a valid control message. Invalid or out-of-range controls trigger SYSTEM_FAIL.

Responsible zones: All zones: failure detection and recovery. STM32s: hardware test buttons and independent watchdogs. Cockpit: game-controller test input; stop its heartbeat after 100 ms without UDP updates until updates resume.

Design links:

- S5 sequence diagram: drivetrain failure example; apply the same rules to each zone.
- System state chart: INIT, NORMAL, LOCAL_FAIL and SYSTEM_FAIL, including heartbeat behavior.
- Proposed timing analysis: local failure, error propagation and restoration.
- CAN message catalog: heartbeat/error messages. Table of all team-defined values: valid control ranges.
- Code links — TBD: Button handling, watchdogs, heartbeat checks, input validation and state recovery.
- Verification links — TBD: Failure in each zone, startup, invalid inputs, lost UDP updates and recovery timing.

4.1.6 S6 — CAN Bus Fault Tolerance

Requirements: R2.1–R2.5; R3; R4.1–R4.8; S6.

System behavior:

- Send every message on CAN A and CAN B together. Accept the first valid copy and discard its duplicate using the sequence counter.
- Losing one bus or one node's connection to a bus must preserve all functions and R2 timing. Keep NORMAL with no switchover delay, hazards or braking caused by that fault.
- Mark a connection degraded after 60 ms without traffic from other nodes on that bus while the other bus works. Report it through the per-bus LED and heartbeat for cockpit logging.
- Support R4.8(a)–(f): one node off CAN A; one off CAN B; two nodes off opposite buses; one off both buses; complete loss of one bus; and jumper restoration.
- If a node loses both buses, the remaining zones enter SYSTEM_FAIL and the isolated node enters its own safe state. R4.8(d) requires error entry within 100 ms; isolated steering holds position.

- Clear the degraded indication within 100 ms of traffic resuming. Recover a bus-off controller within 100 ms of bus restoration and resume normal operation within 500 ms of jumper restoration, without reset or power cycle.

Responsible zones: All zones: independent CAN interfaces, duplicate handling, connection health and safe outputs. Cockpit: degraded-status logging.

Design links:

- S6 sequence diagram: single-bus loss, complete bus loss, isolation and restoration.
- Dual-CAN redundancy design: wiring, termination, jumpers and LEDs.
- CAN message catalog and bus utilization calculation: counters, priorities, heartbeat status and no more than 50% use per bus.
- Proposed timing analysis: deadlines with one bus remaining. System state chart: failure and recovery.
- Fault-injection test matrix: expected zone/LED states and recovery for R4.8(a)–(f).
- Code links — TBD: Dual-CAN hardware, receive filtering, status LEDs/logging and bus-off recovery.
- Verification links — TBD: R4.8(a)–(f) fault cases, zone/LED states and response/recovery times.

4.2 Keeping the links current

The sequence diagrams, state description, timing analysis, message catalog, team-defined values and redundancy design establish the initial design baseline. Final hardware-dependent values, code and verification links will be added as the work and evidence exist.

- Keep S1–S6 and the handout's requirement IDs unchanged. Use document headings, diagram names, CAN IDs and code links to identify the relevant work.
- Update affected links when behavior or design changes, including shared R1 architecture and R4 communication requirements. Check that every use case links to its requirements and every requirement links to a use case or other documented behavior.
- Record progress as Mapped, Designed, Implemented or Verified only when the supporting work exists. Use Needs review when a change may affect a link. Keep verification procedures and results in the Testing Document.

5. Proposed timing analysis

#	Requirement	Bound	Measurement method
1	Throttle response	≤2ms	Cockpit-zone UDP-reception GPIO edge (t=0) vs. drivetrain motor PWM duty-cycle change, dual-channel oscilloscope capture.
2	Brake response	≤2ms	Cockpit-zone UDP-reception GPIO edge (t=0) vs. H-Bridge braking-mode/PWM-disable transition, dual-channel oscilloscope capture.
3	Steering response	≤50ms	Cockpit-zone UDP-reception GPIO edge (t=0) vs. servo control signal change, dual-channel oscilloscope capture.

#	Requirement	Bound	Measurement method
4	Force feedback (CAN) period	$\leq 50\text{ms}$	USB-CAN adapter passively logging steering-zone force-feedback frame timestamps on CAN A/B; verify inter-frame period.
5	Force feedback (UDP) period	$\leq 50\text{ms}$	USB-CAN adapter timestamping inbound force-feedback CAN frames, cross-referenced against cockpit-zone UDP-transmit GPIO edge to confirm steady output period.
6	Turn signal response	$\leq 100\text{ms}$	Cockpit-zone UDP-reception GPIO edge ($t=0$) vs. blinker output test point, dual-channel oscilloscope capture.
7	Turn signal sync (front/rear)	$\leq 1\text{ms}$	Simultaneous two-channel oscilloscope capture of front and rear blinker test points (same side); measure edge-to-edge offset.
8	Local fail latency	$\leq 10\text{ms}$	Debounced test-button-press GPIO (added test point, $t=0$) vs. failing zone's own safe-state output (PWM/H-Bridge or servo test point); cross-checked via USB-CAN adapter confirming heartbeat cessation on both buses.
9	System-wide fail propagation	$\leq 100\text{ms}$	Debounced test-button-press GPIO ($t=0$) vs. non-failed zones' hazard/braked outputs (blinker and motor test points); multi-channel or repeated single-channel capture across zones.
10	Heartbeat period	$20\text{ms} \pm 10\%$	USB-CAN adapter passively logging each zone's heartbeat frame timestamps on CAN A/B independently.
11	Bus degradation detection	60ms (3 periods)	USB-CAN adapter selectively suppressing/injecting traffic on one bus; timestamp gap to per-bus status LED assertion on affected zone.
12	Bus degradation recovery	$\leq 100\text{ms}$	USB-CAN adapter resuming traffic on degraded bus ($t=0$) vs. per-bus status LED clearing.

#	Requirement	Bound	Measurement method
13	Isolation detection → fail-safe	≤100ms (after 60ms detection)	USB-CAN adapter suppressing all traffic on both buses; timestamp isolation conclusion (via zone's status/LED) vs. fail-safe output activation on that zone's test points.
14	Bus-off recovery	≤100ms	USB-CAN adapter inducing bus-off condition (e.g., forced error frames) then restoring bus; timestamp restoration vs. resumed valid frame transmission from the affected controller.
15	Jumper restoration recovery	≤500ms	Physical isolation-jumper restoration (t=0) vs. system resuming normal operation, confirmed via USB-CAN adapter (frame resumption) and relevant output test points.
16	Test-button restore	≤500ms	Second (double-press) debounced test-button GPIO edge (t=0) vs. resumed heartbeats (USB-CAN adapter) and other zones' outputs returning to normal tracking/response behavior.

6. CAN message catalog (R4.4) and bus utilization calculation (R4.6)

All inter-zone messages are transmitted simultaneously on CAN A and CAN B. The receiver accepts the first valid copy and discards the later duplicate using the sequence counter.

Proposed CAN message catalog

The identifiers below are proposed standard 11-bit CAN IDs. They use one vehicle-control message so steering, throttle, brake and turn-signal data stay consistent across the Front/Steering Zone and Rear/Drivetrain Zone. Final IDs and signal scales must be copied into the CAN message catalog after the team confirms the hardware and UDP input ranges.

Message	Proposed ID	Sender → receiver(s)	Payload layout	Rate / trigger	Priority reason
SYSTEM_ERROR	0x080	Any zone → all zones	B0: version + seq[3:0]; B1: source zone; B2: error reason; B3: state; B4–B7: reserved	On SYSTEM_FAIL entry; repeat ≤50 ms while active	Highest: commands safe outputs.
VEHICLE_CONTROL	0x100	Cockpit → steering, drivetrain	B0: version + seq[3:0]; B1: throttle 0–100%; B2: brake 0–100%; B3–B4: steering –1000...+1000; B5: turn state; B6: control flags; B7: reserved	Every UDP update; gap ≤50 ms	High: carries brake and current driver control.

Message	Proposed ID	Sender → receiver(s)	Payload layout	Rate / trigger	Priority reason
HEARTBEAT_COCKPIT	0x300	Cockpit → steering, drivetrain	B0: version + seq[3:0]; B1: I NIT/NORMAL/LOCAL_FAIL /SYSTEM_FAIL; B2: CAN A/B health flags; B3: error code; B4–B7: reserved	Every 20 ms ±10% while the zone is healthy	Needed for failure detection.
HEARTBEAT_STEERING	0x301	Steering → cockpit, drivetrain	Same layout as HEARTBEAT_COCKPIT	Every 20 ms ±10% while the zone is healthy	Needed for failure detection.
HEARTBEAT_DRIVETRAIN	0x302	Drivetrain → cockpit, steering	Same layout as HEARTBEAT_COCKPIT	Every 20 ms ±10% while the zone is healthy	Needed for failure detection.
FORCE_FEEDBACK	0x400	Steering → cockpit	B0: version + seq[3:0]; B1: signed force –100...+100; B2: load status; B3–B7: reserved	At least every 50 ms	Convenience feedback; below safety messages.

Message-handling rules

- A receiver checks the CAN ID, expected frame length, message version, sequence counter and every documented value range. A malformed or out-of-range control value causes SYSTEM_FAIL.
- Each receiver stores the newest sequence counter for each message. It accepts the first valid copy from either bus and discards the second copy with the same counter.
- A counter wraparound is valid after 15. A copy with the same counter is a duplicate only within the expected CAN A/CAN B arrival window; a later new message may reuse that counter after wraparound.
- VEHICLE_CONTROL is sent for every UDP state update and at least once every 50 ms. In SYSTEM_FAIL, SYSTEM_ERROR is sent on entry and then at least once every 50 ms while the state remains active.
- Heartbeat bus-health flags report whether CAN A or CAN B is degraded. Missing heartbeats on one bus alone indicate degraded communication, not a failed zone.

Worst-case bus-utilization calculation

Calculate CAN A and CAN B separately. They carry the same set of messages, so the utilization calculation is the same for each bus. At 500 kbit/s, use a conservative 160 bit-times per 8-byte standard CAN frame, including protocol overhead, possible bit stuffing and inter-frame space. This equals 0.320 ms per frame.

For each message: utilization (%) = frame rate (frames/s) × 160 / 500,000 × 100. Add every periodic message and the highest expected event-driven message rate. The total must stay at or below 50% on each bus.

Traffic source	Worst-case rate per bus	Frame budget	Utilization per bus
HEARTBEAT_COCKPIT / STEERING / DRIVETRAIN	3 × 50 = 150 frames/s	160 bits/frame	4.80%
FORCE_FEEDBACK	20 frames/s	160 bits/frame	0.64%
VEHICLE_CONTROL	F_UDP_MAX frames/s	160 bits/frame	0.032 × F_UDP_MAX %

Traffic source	Worst-case rate per bus	Frame budget	Utilization per bus
SYSTEM_ERROR	F_ERROR_MAX frames/s	160 bits/frame	$0.032 \times F_ERROR_MAX \%$
Total	$170 + F_UDP_MAX + F_ERROR_MAX$ frames/s	160 bits/frame	$5.44 + 0.032 \times (F_UDP_MAX + F_ERROR_MAX) \%$
Example planning case	100 UDP updates/s; 20 error messages/s	160 bits/frame	9.28%

With the proposed catalog, the periodic load excluding vehicle-control traffic is $3 \text{ heartbeats} \times 50 \text{ Hz} + 1 \text{ force-feedback message} \times 20 \text{ Hz} = 170 \text{ frames/s}$, or 5.44% per bus. Add VEHICLE_CONTROL at F_UDP_MAX: its load is $0.032 \times F_UDP_MAX$ percent per bus. Add the selected SYSTEM_ERROR rate when the error state is active. At 100 UDP updates/s and 20 SYSTEM_ERROR messages/s, the estimated total is 9.28% per bus. This is a planning estimate; rechecks occur after payload sizes and maximum UDP rate are set.

External CAN observation and validation

- Use a USB-CAN adapter or CAN analyzer on the CAN A and CAN B test headers. Capture IDs, payloads, sequence counters, and timestamps on both buses.
- Compare measured frame counts over a fixed window with the catalog rates and utilization calculation. Confirm that every message appears on both buses and that a receiver uses only the first valid copy.
- Use an oscilloscope for end-to-end timing: cockpit UDP-receive GPIO as the start point and the receiving-zone output test point as the end point. Use the CAN test header or CAN-transmit/receive GPIOs to isolate CAN latency when needed.
- During jumper fault injection, capture the remaining bus. Confirm that it continues carrying control traffic within R2 limits, status LEDs show degradation, and recovery times meet the timing analysis.

7. Table of all team-defined values

Record team choices here as the design develops. Proposed values are starting points, not final decisions. Hardware-dependent values cannot be finalized until components are selected; calibration values need measurements on the assembled system.

Status guide: Fixed by handout = mandatory; Proposed = suggested behavior; Hardware-dependent = depends on purchased or developed hardware; Design-dependent = software/interface choice; Needs calibration = must be measured or tuned.

Driver inputs and steering

Value	Current choice / units	Reason / hardware dependency	Status
Steering input	TBD: min, center, max; raw units	Read UDP values; check wheel model and direction.	Needs calibration
Servo travel	TBD: left, center, right; degrees and pulse width	Depends on servo, linkage and chassis travel.	Hardware-dependent
Steering mapping	Monotonic; full usable steering range	Required behavior; endpoints need calibration.	Fixed rule; values TBD

Value	Current choice / units	Reason / hardware dependency	Status
Throttle input	TBD: released/full values; raw units	Read UDP pedal values; measure rest noise.	Needs calibration
Throttle mapping	Linear target speed vs pedal travel	Starting point for S1; normalize input first.	Proposed
Maximum speed	TBD; wheel rpm or m/s	Depends on motor, gearing, wheel size and supply.	Hardware-dependent
Brake activation	TBD threshold; raw or normalized units	S2 uses brake > 0; confirm encoding and noise.	Needs calibration
Brake priority	Brake overrides throttle	Required by S2; dynamic braking with PWM off.	Fixed by handout

Turn signals, buttons and force feedback

Value	Current choice / units	Reason / hardware dependency	Status
Turn thresholds	TBD: left/right; steering units or degrees	Choose from calibrated steering range.	Needs calibration
Cancel hysteresis	TBD; steering units or degrees	If needed, avoid noise around turn thresholds.	Proposed; calibrate
Repeated turn press	Same-side press leaves signal active	Simple rule; still cancels on completed turn.	Proposed
Both turn buttons	Ignore conflicting request; retain turn state	Team choice; error hazards still override.	Proposed
Held turn button	Act on press edge, not every UDP update	Avoid repeated actions while held.	Proposed
Test-button debounce	Presses <50 ms apart count as one	R2.5; button hardware still needs checking.	Fixed by handout
Restore window	Two presses within 500 ms	R3; applies to each zone's test input.	Fixed by handout
Force sensing	TBD: current sensing or position error	Depends on servo, available sensors and PCB.	Hardware-dependent
Force mapping	TBD: zero, sign, gain, deadband	Depends on measured load and wheel response.	Needs calibration
Force output limit	-100 to 100; signed value	Front Zone description and UDP encoding.	Fixed by handout

Drivetrain, encoders and motor limits

Value	Current choice / units	Reason / hardware dependency	Status
Encoder scale	TBD: counts per wheel revolution	Encoder resolution, decoding mode and gearing.	Hardware-dependent
Wheel size	TBD; diameter in metres	Needed if speed is expressed in m/s.	Hardware-dependent
Speed feedback	Average of both encoder speeds	Rear Zone description.	Fixed by handout
Speed-control period	TBD; ms	Encoder rate, MCU/RTOS budget and motor response.	Design-dependent
Control gains	TBD; units follow chosen controller	Choose controller, then tune on actual drivetrain.	Needs calibration
Maximum PWM	TBD; % duty cycle	Motor, driver, supply and thermal limits.	Hardware-dependent
Stuck-wheel trigger	Nonzero command; no encoder edges ≥ 200 ms	Rear Zone description.	Fixed by handout
Stuck-wheel increase	TBD: duty step/ramp and update interval	Increase only to chosen PWM cap; check heating.	Needs calibration
Motor current limits	TBD: open/overload thresholds; A	Motor startup/load current and sensor accuracy.	Hardware-dependent
Current-fault filtering	TBD: persistence time; ms	Reject normal transients; meet fault response needs.	Needs calibration

CAN communication and fault handling


Value	Current choice / units	Reason / hardware dependency	Status
CAN identifiers	Proposed in the CAN message catalog; final assignment TBD	Assign priorities; brake/error before convenience.	Design-dependent
Payload definitions	Proposed in the CAN message catalog; final scaling and valid ranges TBD	Document in CAN message catalog; sensor ranges matter.	Design-dependent
Sequence counter	At least 4 bits; final width TBD	R4.4; define wraparound and duplicate tracking.	Fixed minimum; design TBD
CAN bit timing	500 kbit/s; timing segments TBD	R4.2; depends on chosen controllers and clocks.	Fixed rate; hardware TBD
Control-message cadence	Every UDP update; gap ≤ 50 ms	R4.4; receiving hardware/software must support it.	Fixed by handout

Value	Current choice / units	Reason / hardware dependency	Status
Health indication	TBD: LED colors and on/off meaning	Depends on PCB LEDs; map healthy/degraded states.	Design-dependent
Watchdog timeout	TBD; ms	STM32 watchdog clock, task timing and fault handling.	Hardware/design-dependent

Before values are finalized

- Select the wheel/pedals, servo and linkage, motors and gearing, encoders, motor driver, current/load sensors, power supply, CAN controllers and their clock sources.
 - Record the selected part numbers and measured input ranges. Set limits from component ratings, mechanical travel and measurements; do not treat a proposed value as a safe hardware limit.
 - Keep timing requirements in Proposed timing analysis and message details in CAN message catalog. Use the same values in code, diagrams and the Testing Document.
 - For button decisions, define how an edge is detected and how state is reset after faults. The proposed both-button rule applies only to turn signals; it does not override error handling or self-test controls.
- Update each TBD with a value, unit and source, such as a datasheet, measurement or design decision. Record calibration results before marking the value final.
-

8. Dual-CAN redundancy design

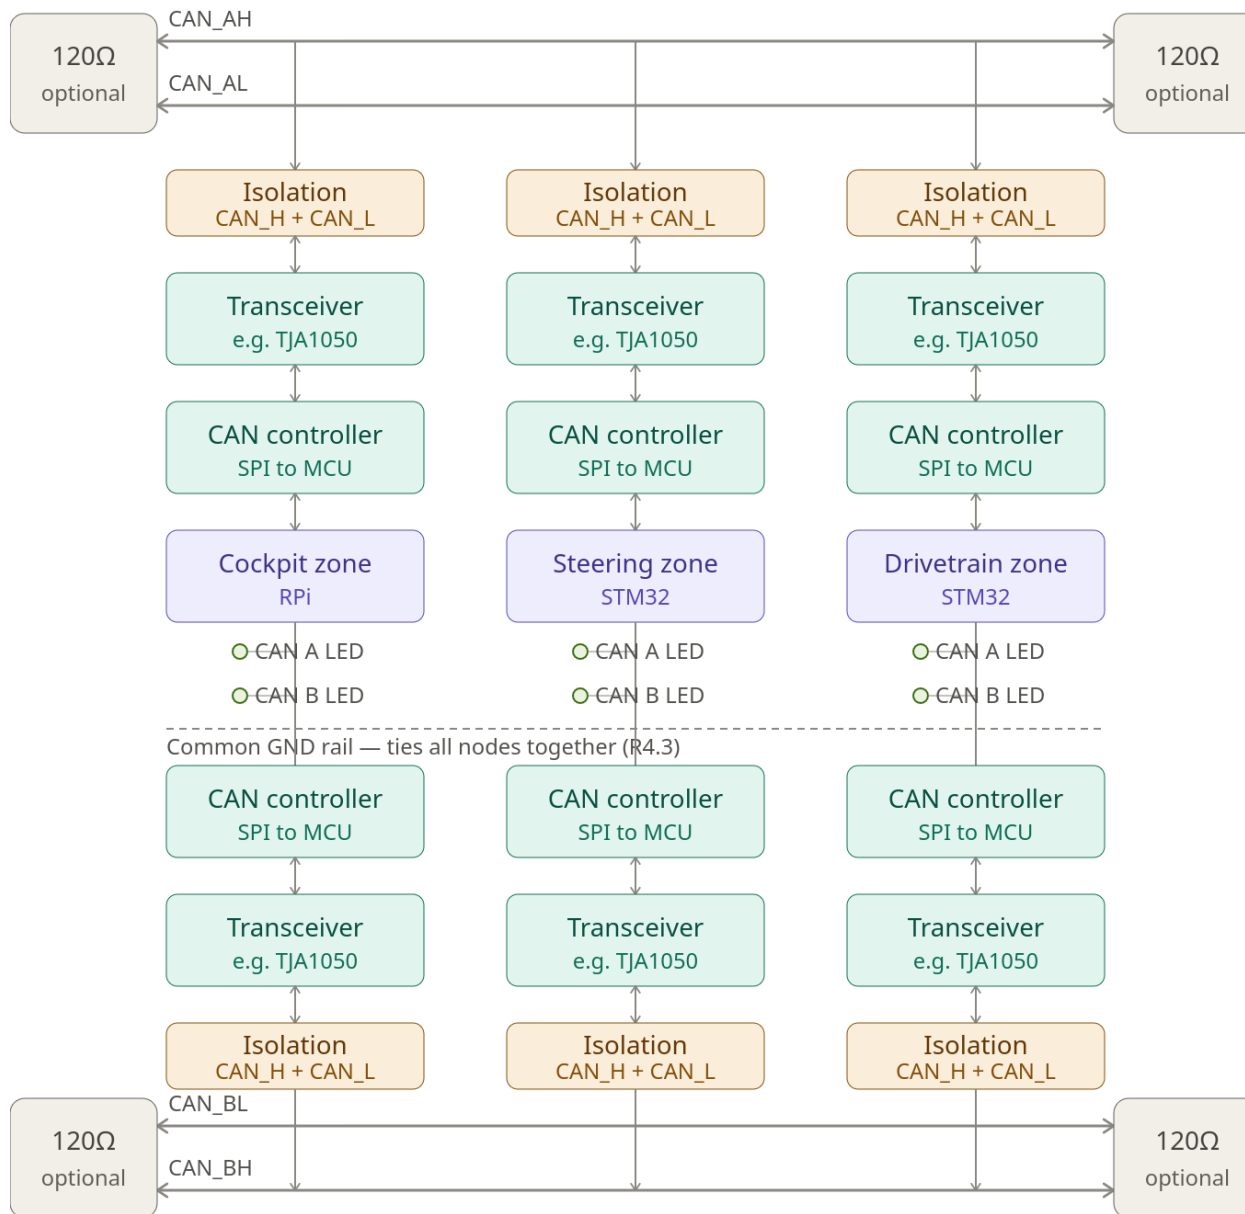

9. Fault-injection test matrix

Covers scenarios (a)–(f) of R4.8. "Node X" / "Node Y" refer to any node used to demonstrate each scenario.

Scenario	Fault Injected	Node(s) Own Behavior	Other Zones' Behavior	Per-Bus Status LEDs	System State	Expected Recovery Time	Measured
a	Node X isolated from CAN A only; CAN B remains operational	Marks its CAN A as degraded after 60ms of silence	Still communicates with Node X via CAN B	Node X: CAN A LED = degraded, CAN B LED = OK. All others: CANs A/B LEDs = OK	Fully operational; no hazard, no braking, all R2 timing met	Degraded indication within 60ms of isolation	
b	Node X isolated from CAN B only; CAN A remains operational	Marks its CAN B as degraded after 60ms of silence	Still communicates with Node X via CAN A	Node X: CAN B LED = degraded, CAN A LED = OK. All others: CANs A/B LEDs = OK	Fully operational; no hazard, no braking, all R2 timing met	Degraded indication within 60ms of isolation	
c	Node X isolated from CAN A and Node Y isolated from CAN B (different nodes, different buses)	Node X: CAN A is degraded but still uses CAN B. Node Y: CAN B is degraded but still uses CAN A	All three zones remain fully operational; each still reachable via its healthy bus	Node X: CAN A LED = degraded, CAN B LED = OK. Node Y: CAN B LED = degraded, CAN A LED = OK. Third node: CANs A/B LEDs = OK	Fully operational; all three zones stay functional, R2 timing met	Degraded indications within 60ms; no functional interruption	
d	Node X isolated from both CAN A and CAN B	Node X receives no heartbeats on either bus for 60ms and enters local fail-safe within 100ms	Other zones miss 3 consecutive heartbeats from X on both buses, declare X failed, trigger system-wide error state	Node X: both LEDs = failed/isolated. All others: error indicator active	System error state: PWM disabled, dynamic braking, hazard flash (2Hz $\pm 10\%$, 50% duty)	System error state within 100ms of isolation	
e	Entire bus lost, all nodes isolated from the same bus (A or B)	Each node independently detects 60ms silence on the lost bus, marks that bus degraded	All traffic continues via the remaining bus; no node ever misses 3 heartbeats on both buses	All nodes: lost-bus LED = degraded, remaining-bus LED = OK	Fully operational; system continues normally on remaining bus	Degraded indication within 60ms; no functional interruption	

Scenario	Fault Injected	Node(s) Own Behavior	Other Zones' Behavior	Per-Bus Status LEDs	System State	Expected Recovery Time	Measured
f	Any previously pulled jumper(s) restored	Restored CAN controller (if bus-off) auto-recovers within 100ms of bus restoration	Any node with that bus marked degraded clears the indication once traffic resumes	Affected LED(s) transition back to OK	Returns to normal operation automatically without reset/power cycle	Full recovery within 500ms of restoration	