
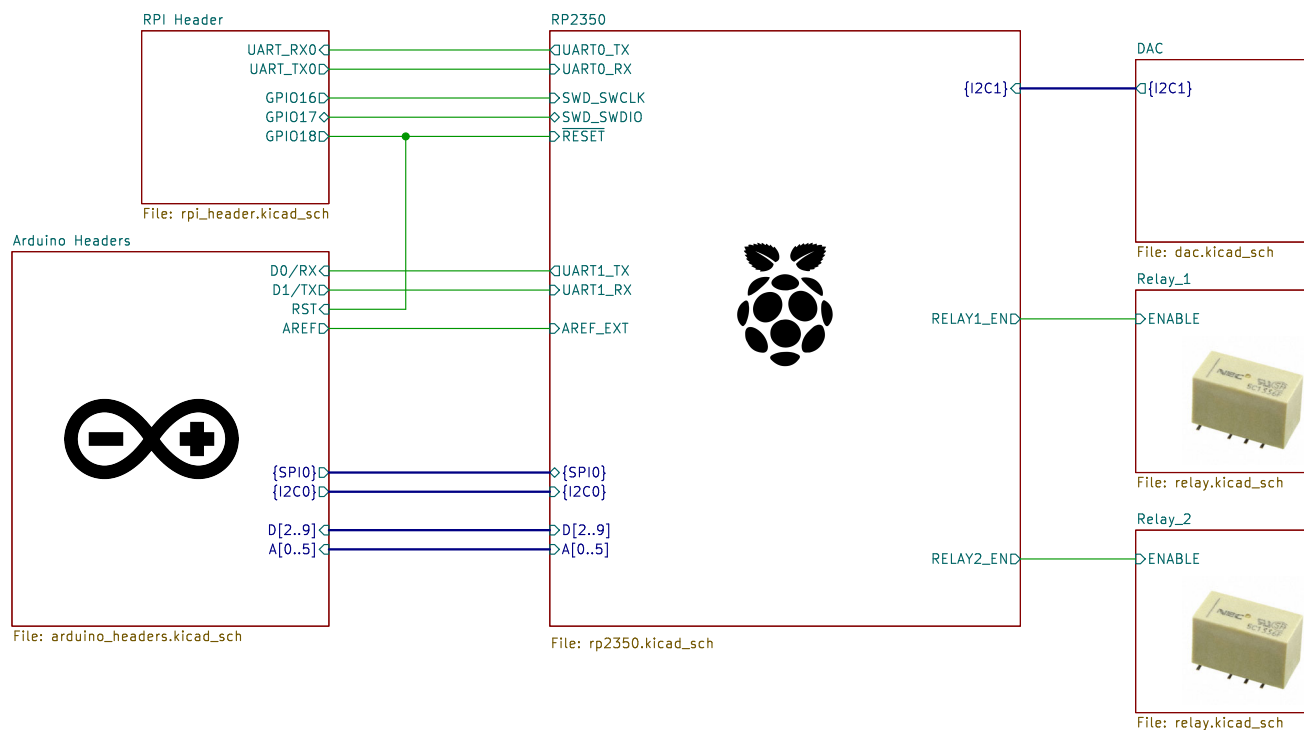


Ryan TODO list.

- 1) Go over all pins numbers/names, make sure they're correct.
- 2) Audit all footprints.
- 3) Assign remaining footprints.
- 4) Double check 3.3V supply component values
- 5) Double check DAC pins, wire up remaining IO
- 6) Decide how to wire out remaining
 - 4x DAC pins
 - 2x ADC
 - Remaining RP2350 pins
- 7) Calculate Y1 load caps
- 8) Test SWD programming from RPI. Decide if this is how we want to proceed.
- 9) Maybe add grove connector
- 10) Set all IOs on schematic to proper I or O

PMIC

File: pmic.kicad_sch

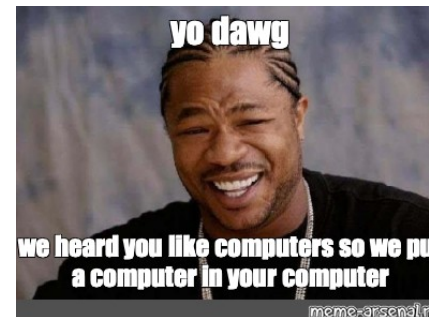

Sheet: /

File: blocky_breakout_pcb.kicad_sch

Title: RPI <--> RP2350 Breakout


Size: A4

Date:


KiCad E.D.A. 9.0.3

Rev: R0.1

Id: 1/8

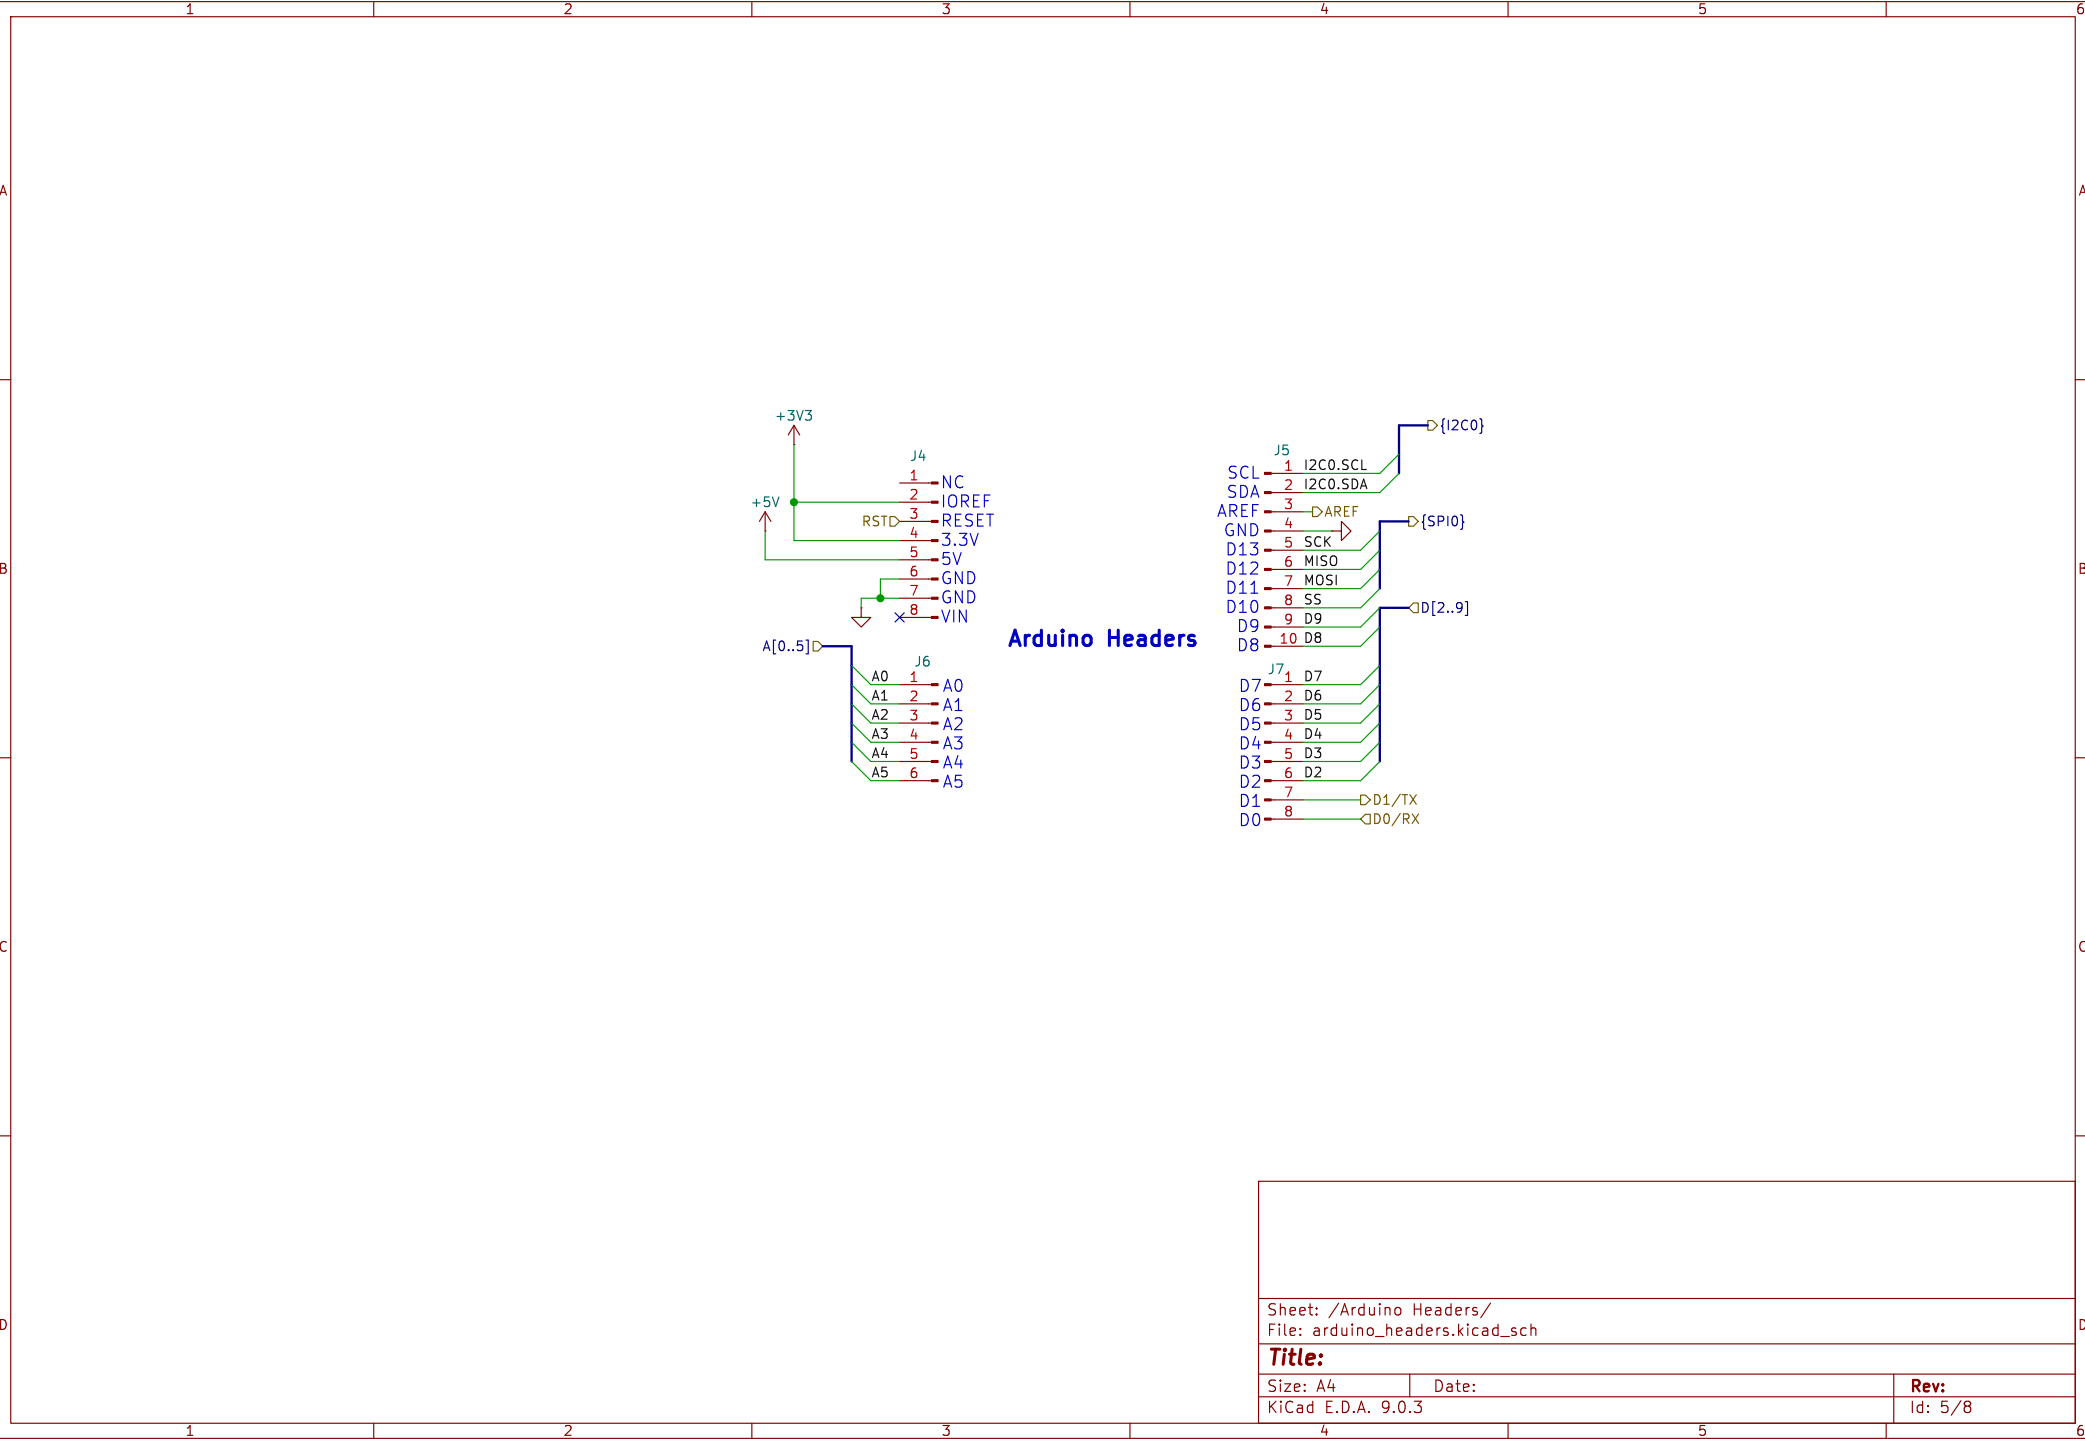

Raspberry PI Pin Header

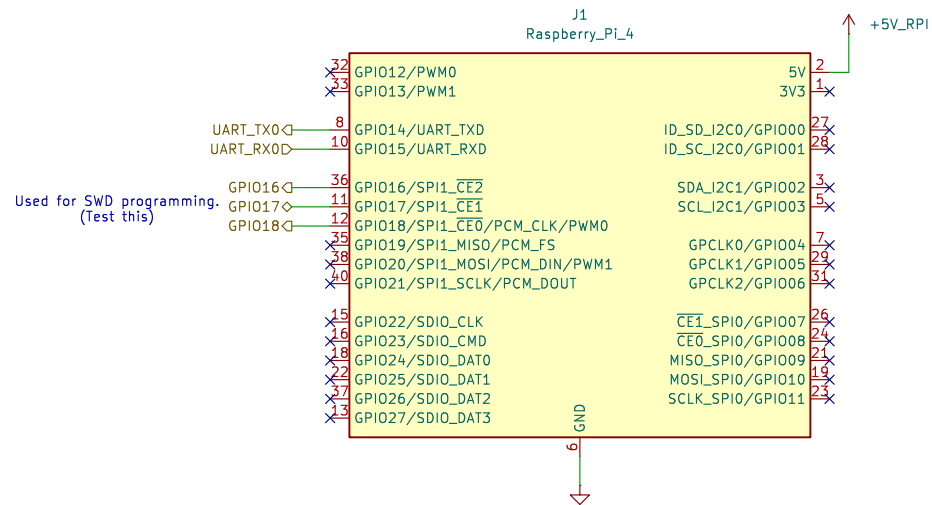

Sheet: /RPI Header/
File: rpi_header.kicad_sch

Title:


Size: A4

Date:



Rev:

KiCad E.D.A. 9.0.3



Id: 3/8

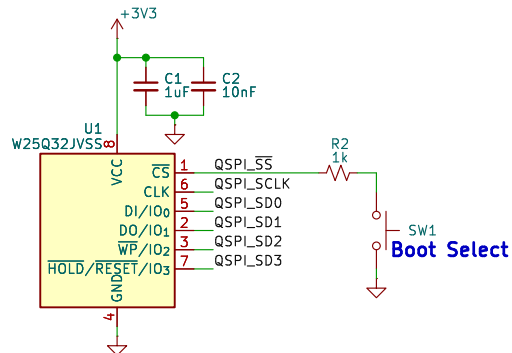

Flash Memory

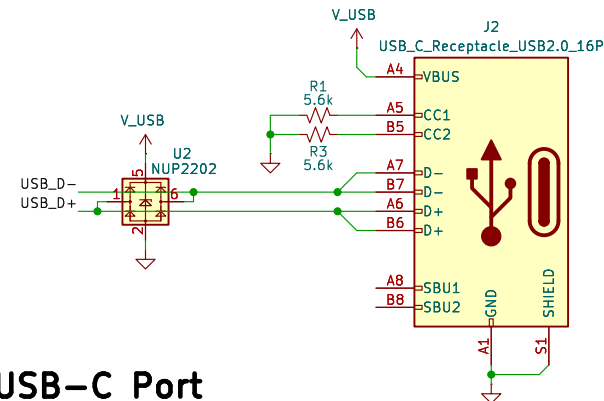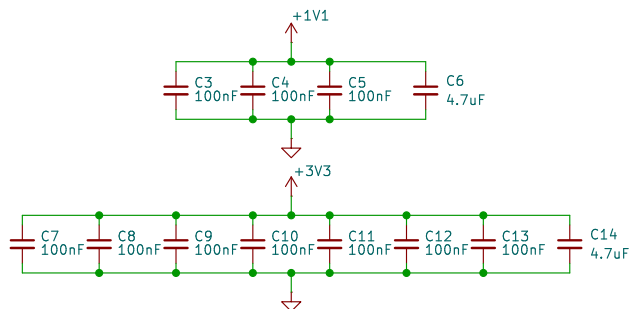

USB-C Port

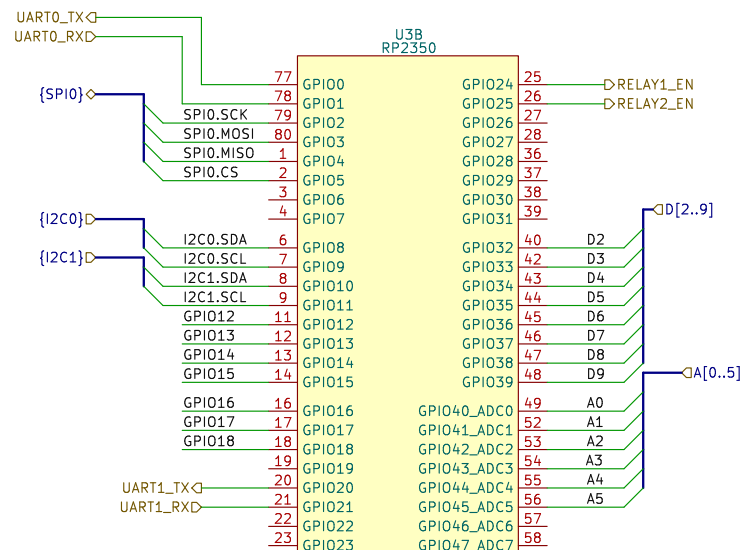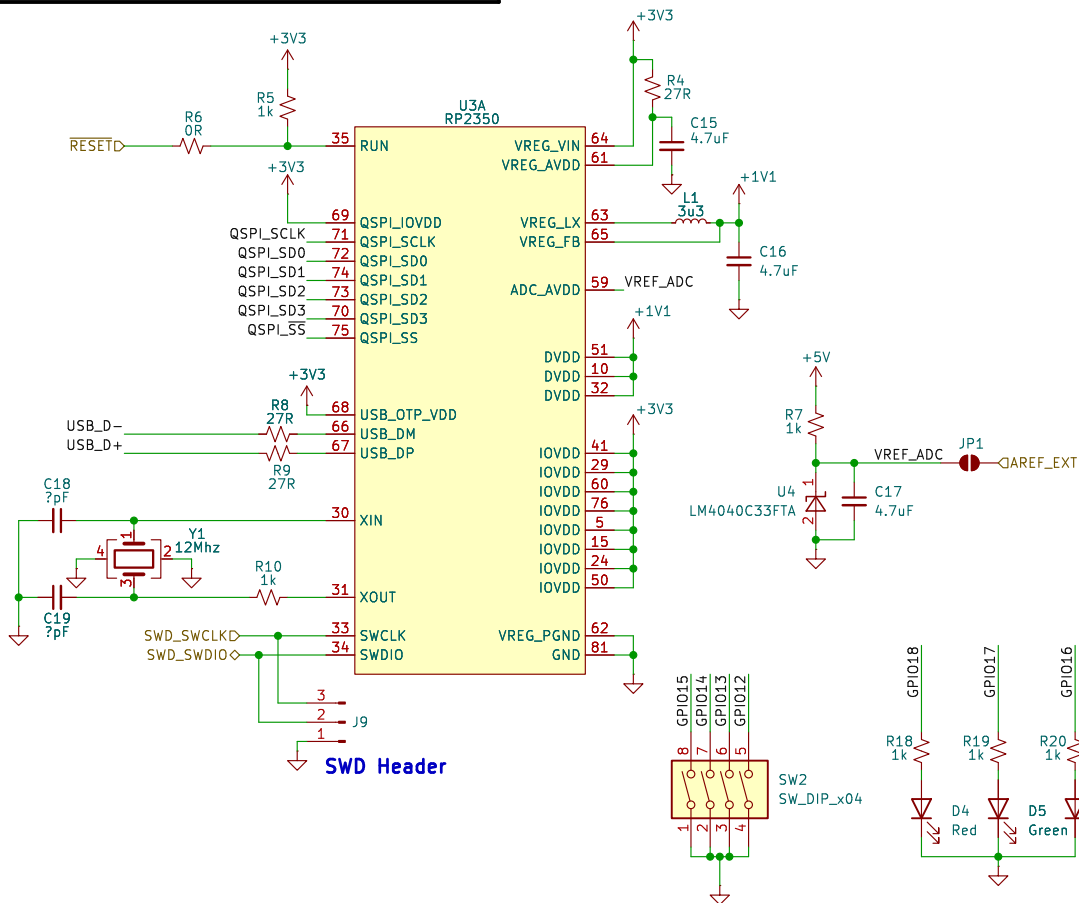

Sheet: /RP2350/
File: rp2350.kicad_sch


Title:

Size: A4
KiCad E.D.A. 9.0.3


Date:

Rev:

Id: 2/8

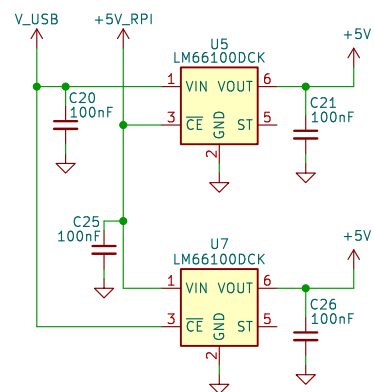

5V "or" circuit

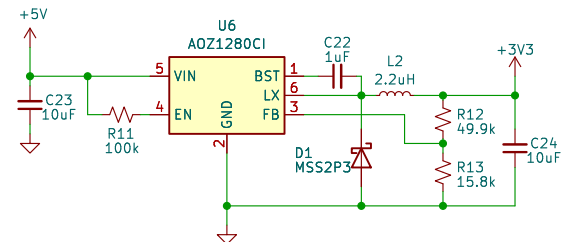

3.3V @ 1.2A

Absolute max power consumption for a Pi5 is 10W. Standard pi supply is 15.3W (which we would specify as a requirement).

From here we have 5.3W, ~1A for any USB-A peripherals and our hardware.

I think it's reasonable for us to assume we have around 300mA to use.

Sheet: /PMIC/
File: pmic.kicad_sch


Title:

Size: A4 Date:

KiCad E.D.A. 9.0.3

Rev:

Id: 4/8

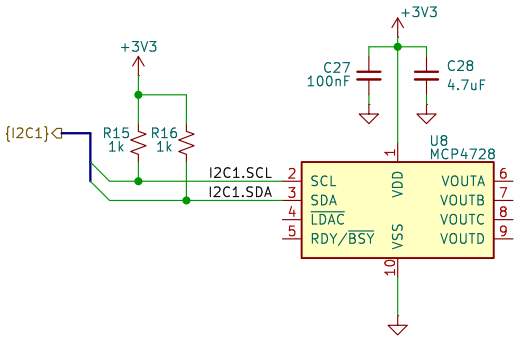

Sheet: /DAC/ File: dac.kicad_sch		
Title:		
Size: A4	Date:	Rev:
KiCad E.D.A. 9.0.3	Id: 6/8	

