



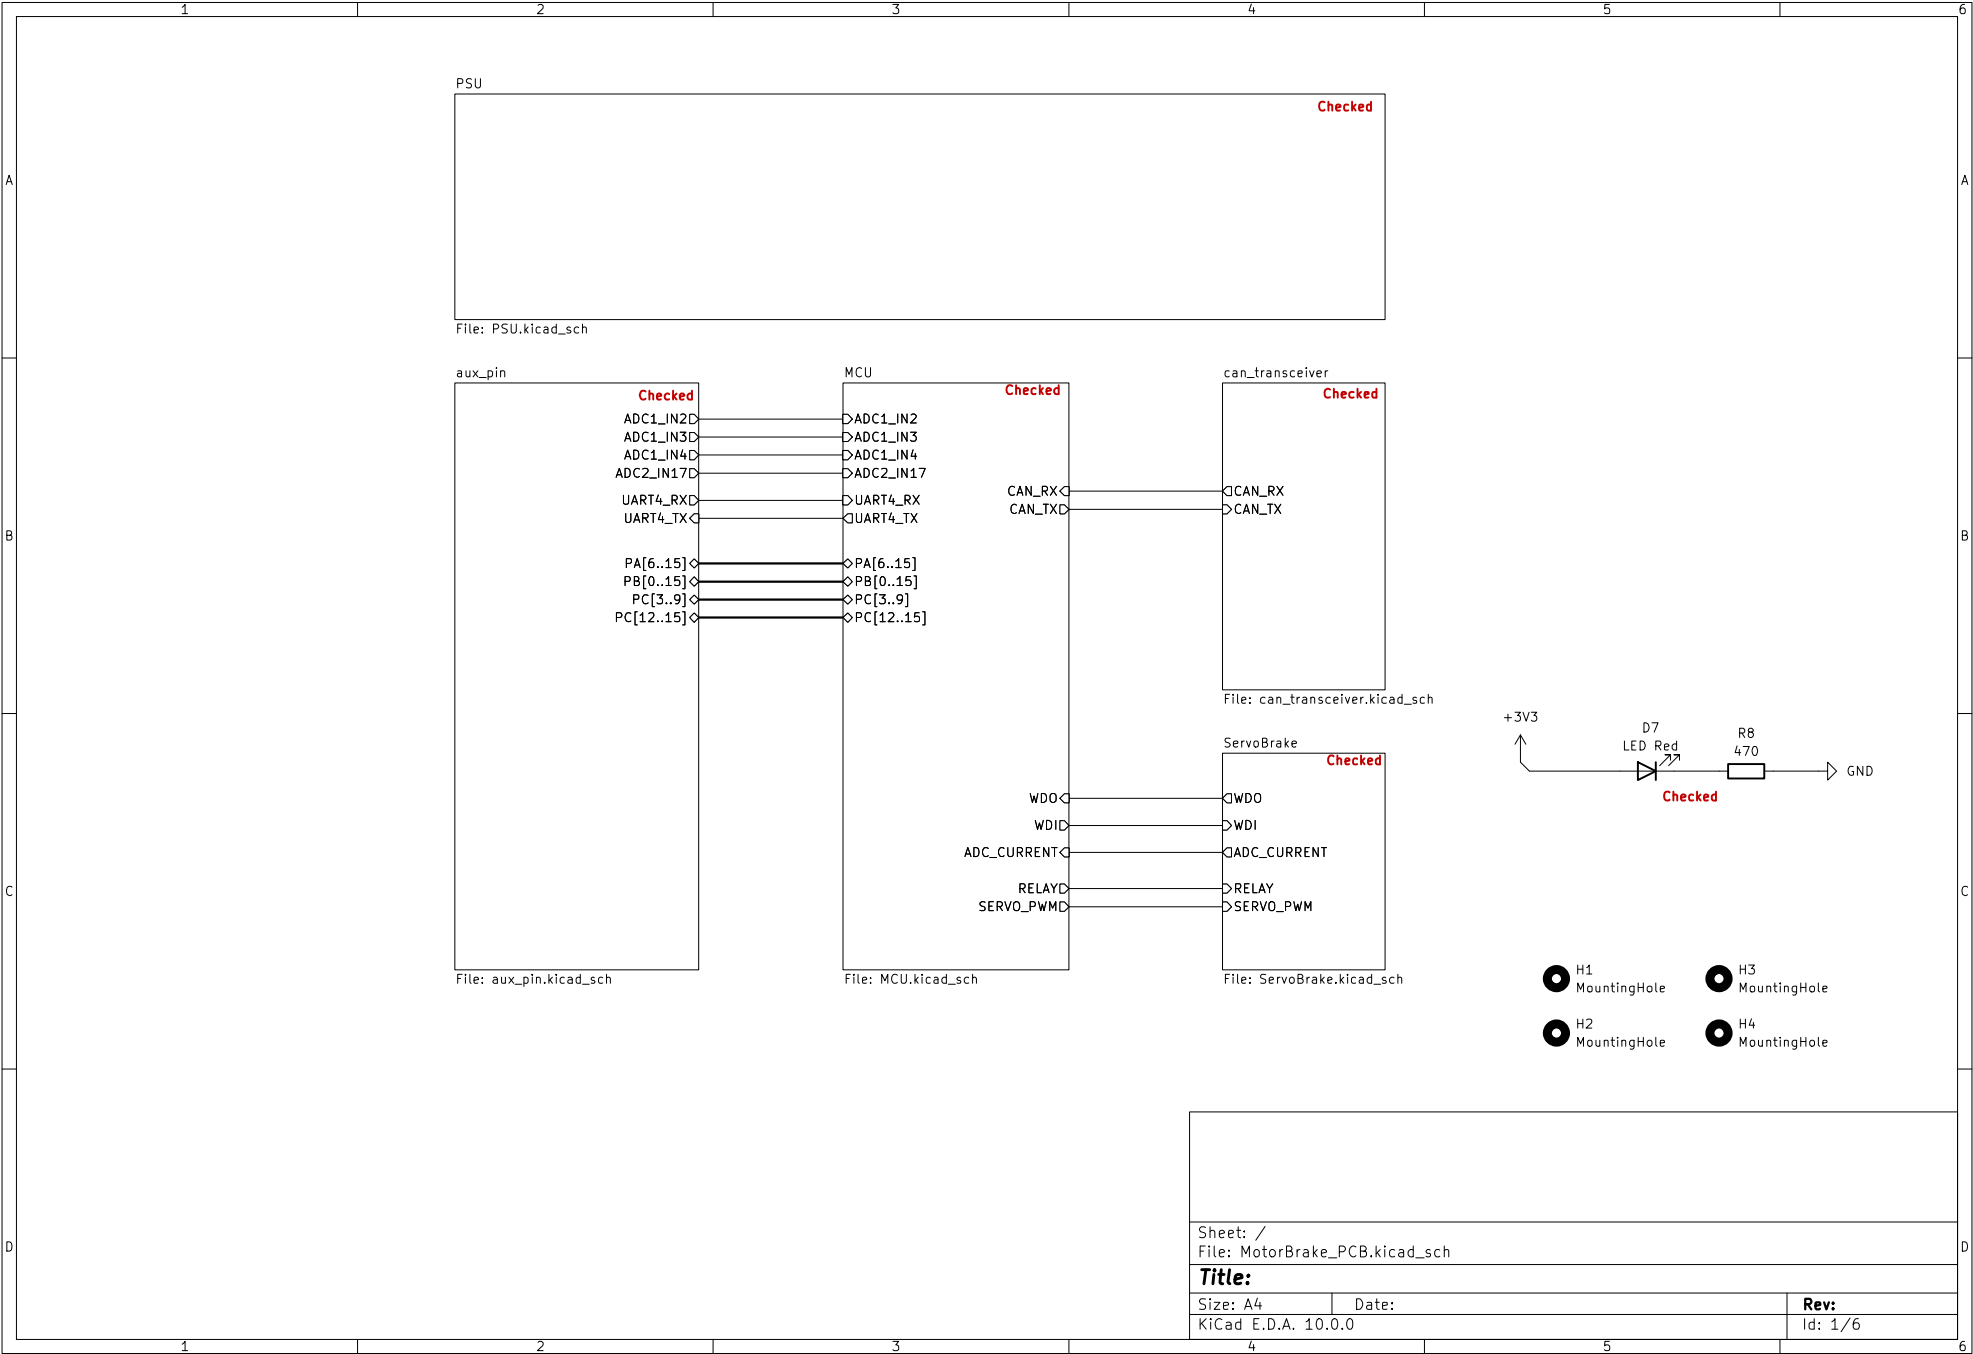

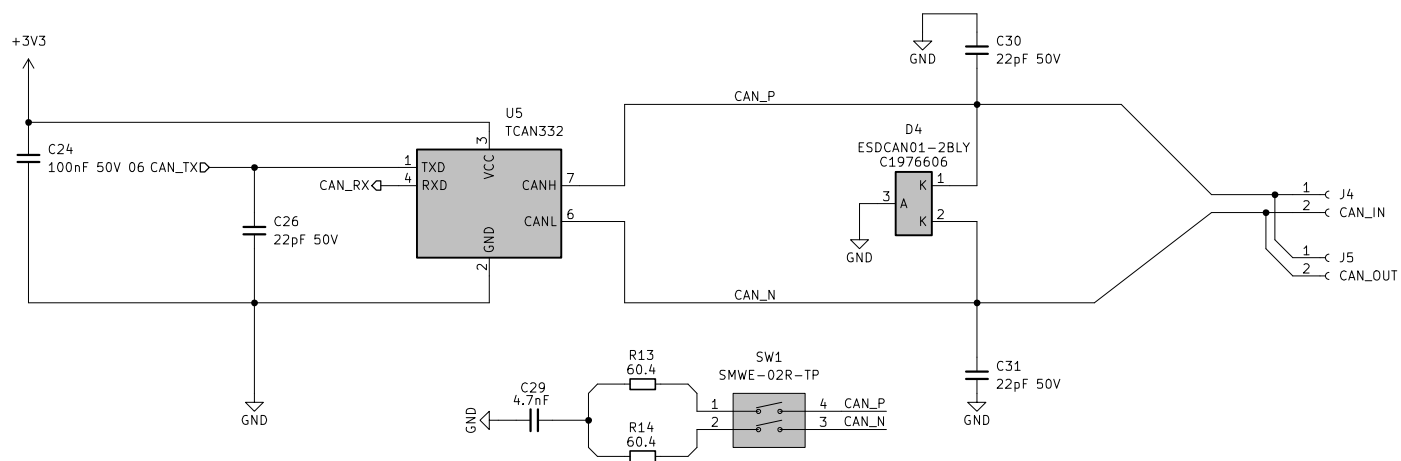

Sheet: /can_transceiver/
File: can_transceiver.kicad_sch


Title:


Size: A4

Date:

KiCad E.D.A. 10.0.0

Rev:
Id: 2/6

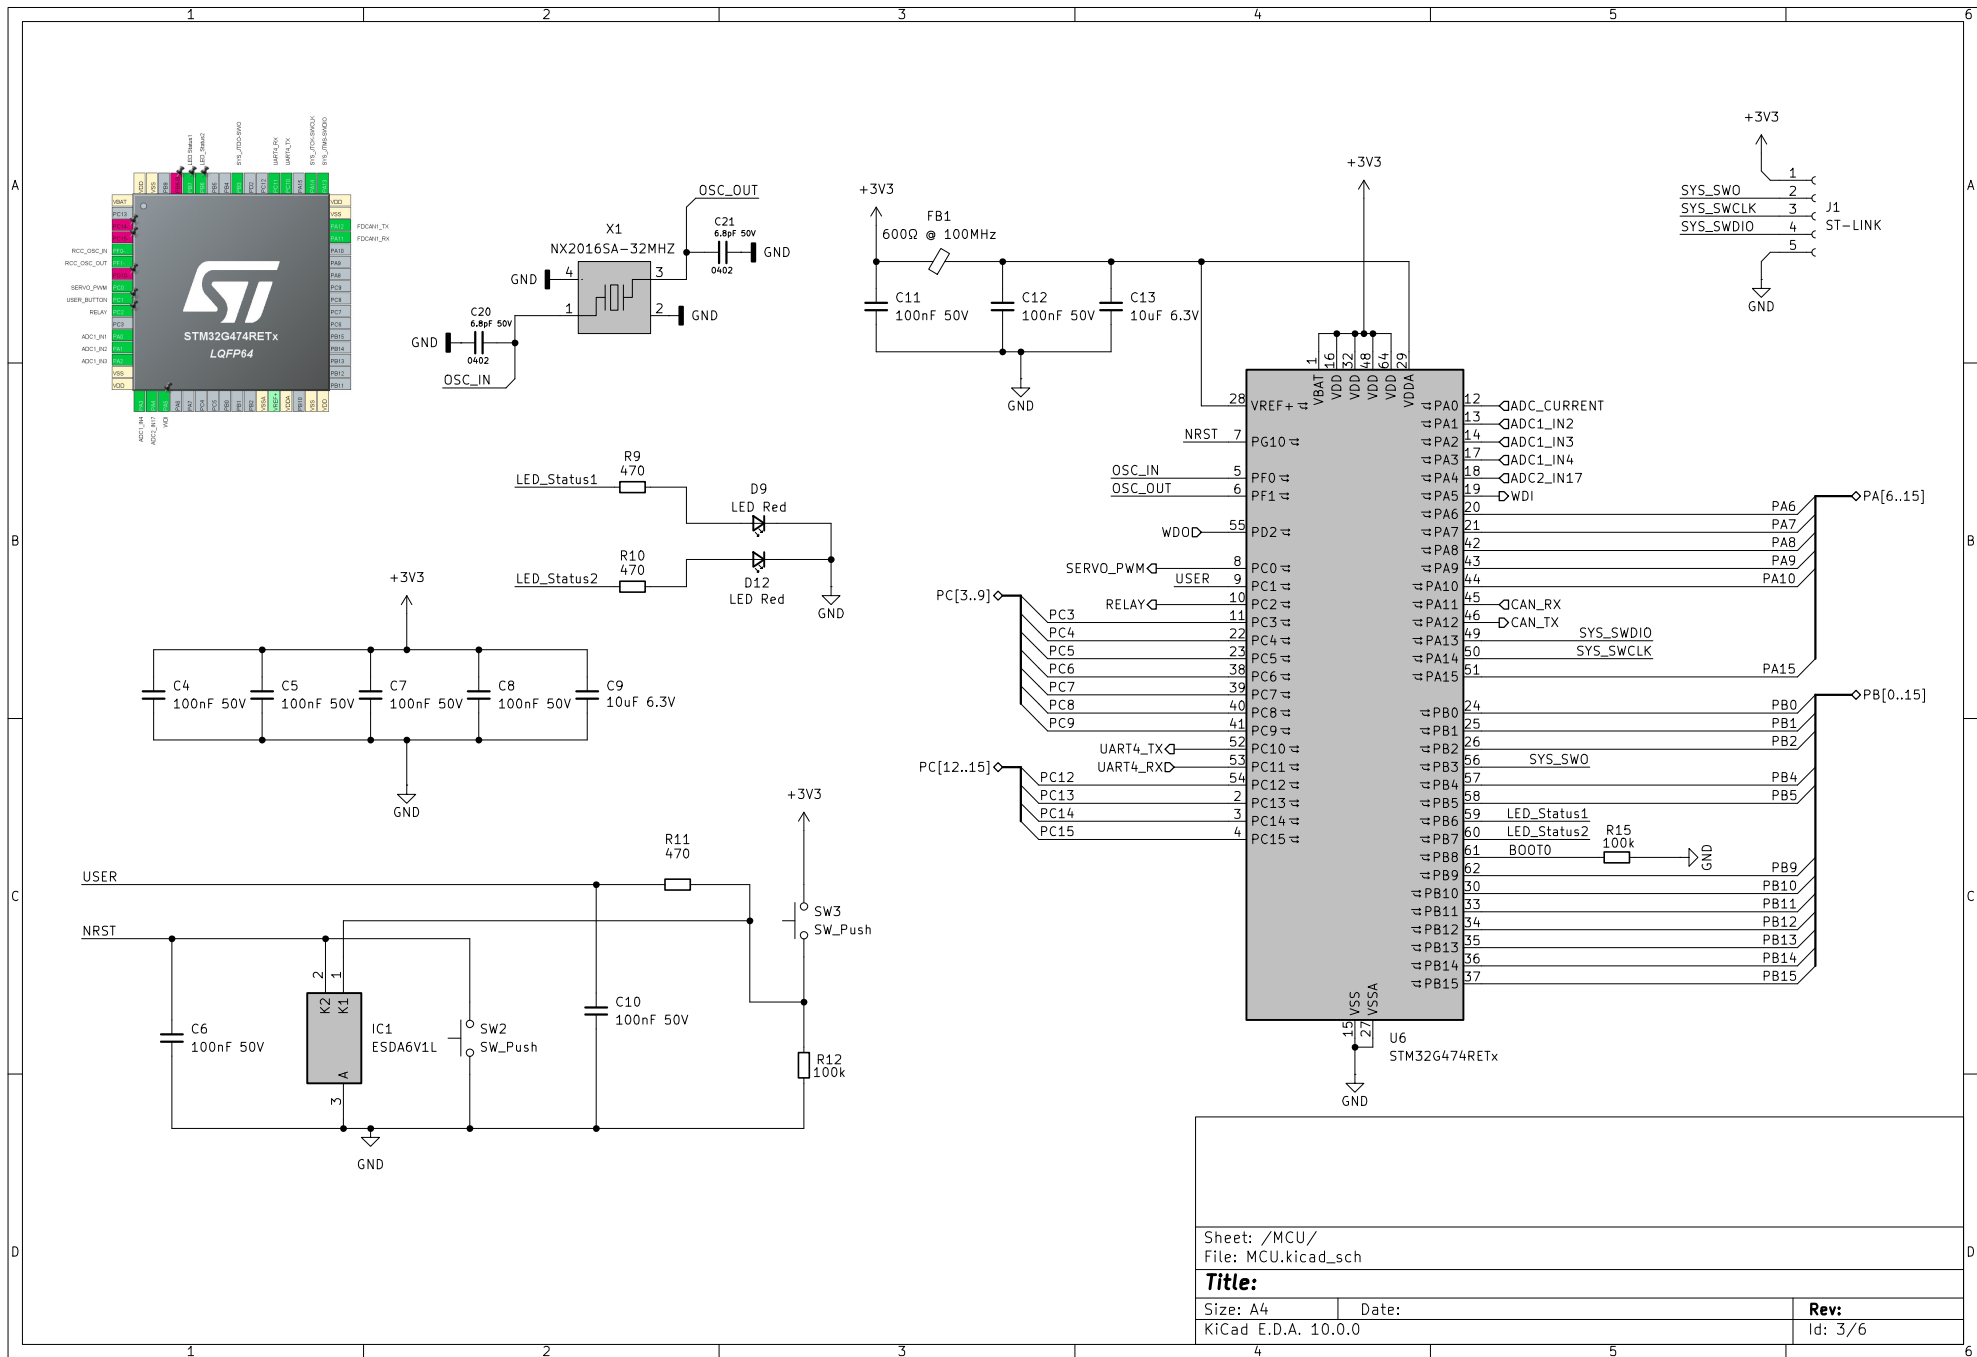

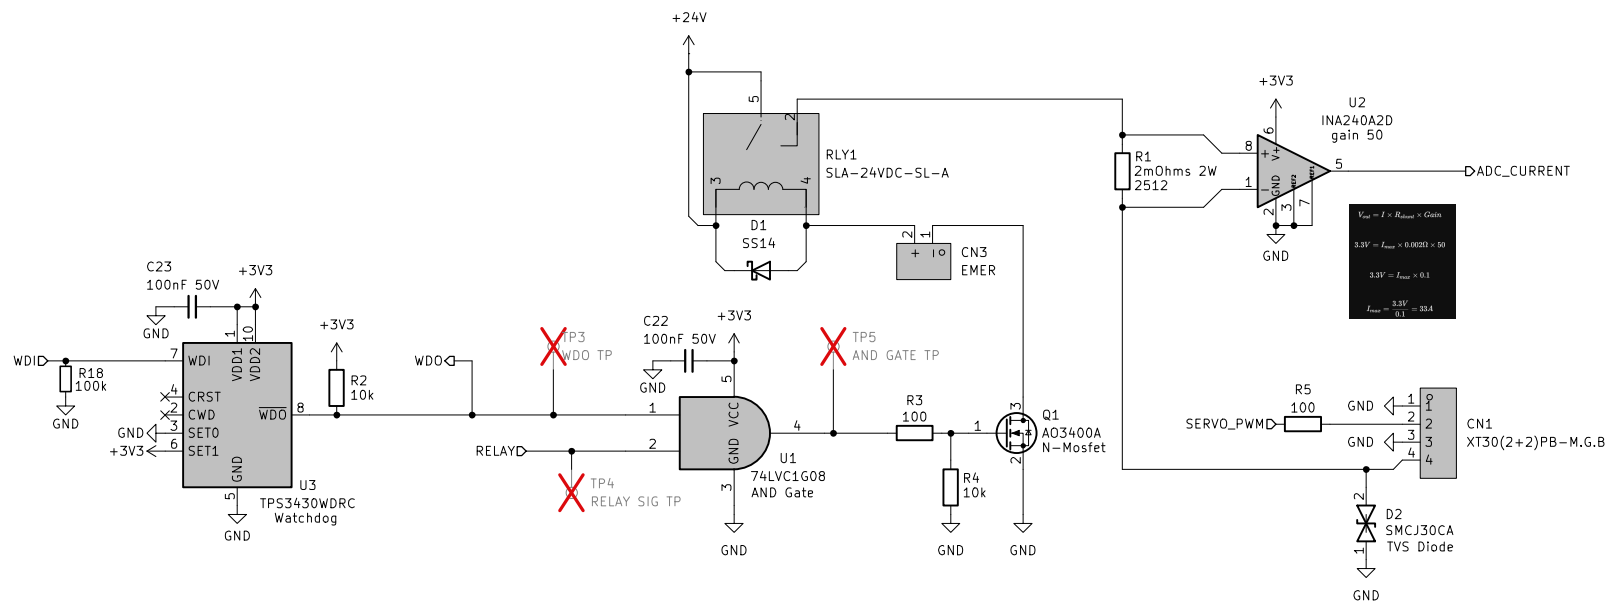

For this setup MCU Have to trigger every 100Hz 10ms

■ 5.3 Factory-Programmed Watchdog Timing

MODE	WDTN	WDTI	WDT	WDT	WDT	WDT	WDT	WDT	WDT	WDT
MC	1	1	1.48	1.85	2.22	25.275	27.0	31.425	35	35
	1	1	1.48	1.85	2.22	25.275	27.0	31.425	35	35
	1	1	1.48	1.85	2.22	25.275	27.0	31.425	35	35
	1	1	1.48	1.85	2.22	25.275	27.0	31.425	35	35
	1	1	1.48	1.85	2.22	25.275	27.0	31.425	35	35
	1	1	1.48	1.85	2.22	25.275	27.0	31.425	35	35
	1	1	1.48	1.85	2.22	25.275	27.0	31.425	35	35
	1	1	1.48	1.85	2.22	25.275	27.0	31.425	35	35
	1	1	1.48	1.85	2.22	25.275	27.0	31.425	35	35
	1	1	1.48	1.85	2.22	25.275	27.0	31.425	35	35

Sheet: /ServoBrake/
File: ServoBrake.kicad_sch


Title:

Size: A4
KiCad E.D.A. 10.0.0

Date:

Rev:

Id: 4/6

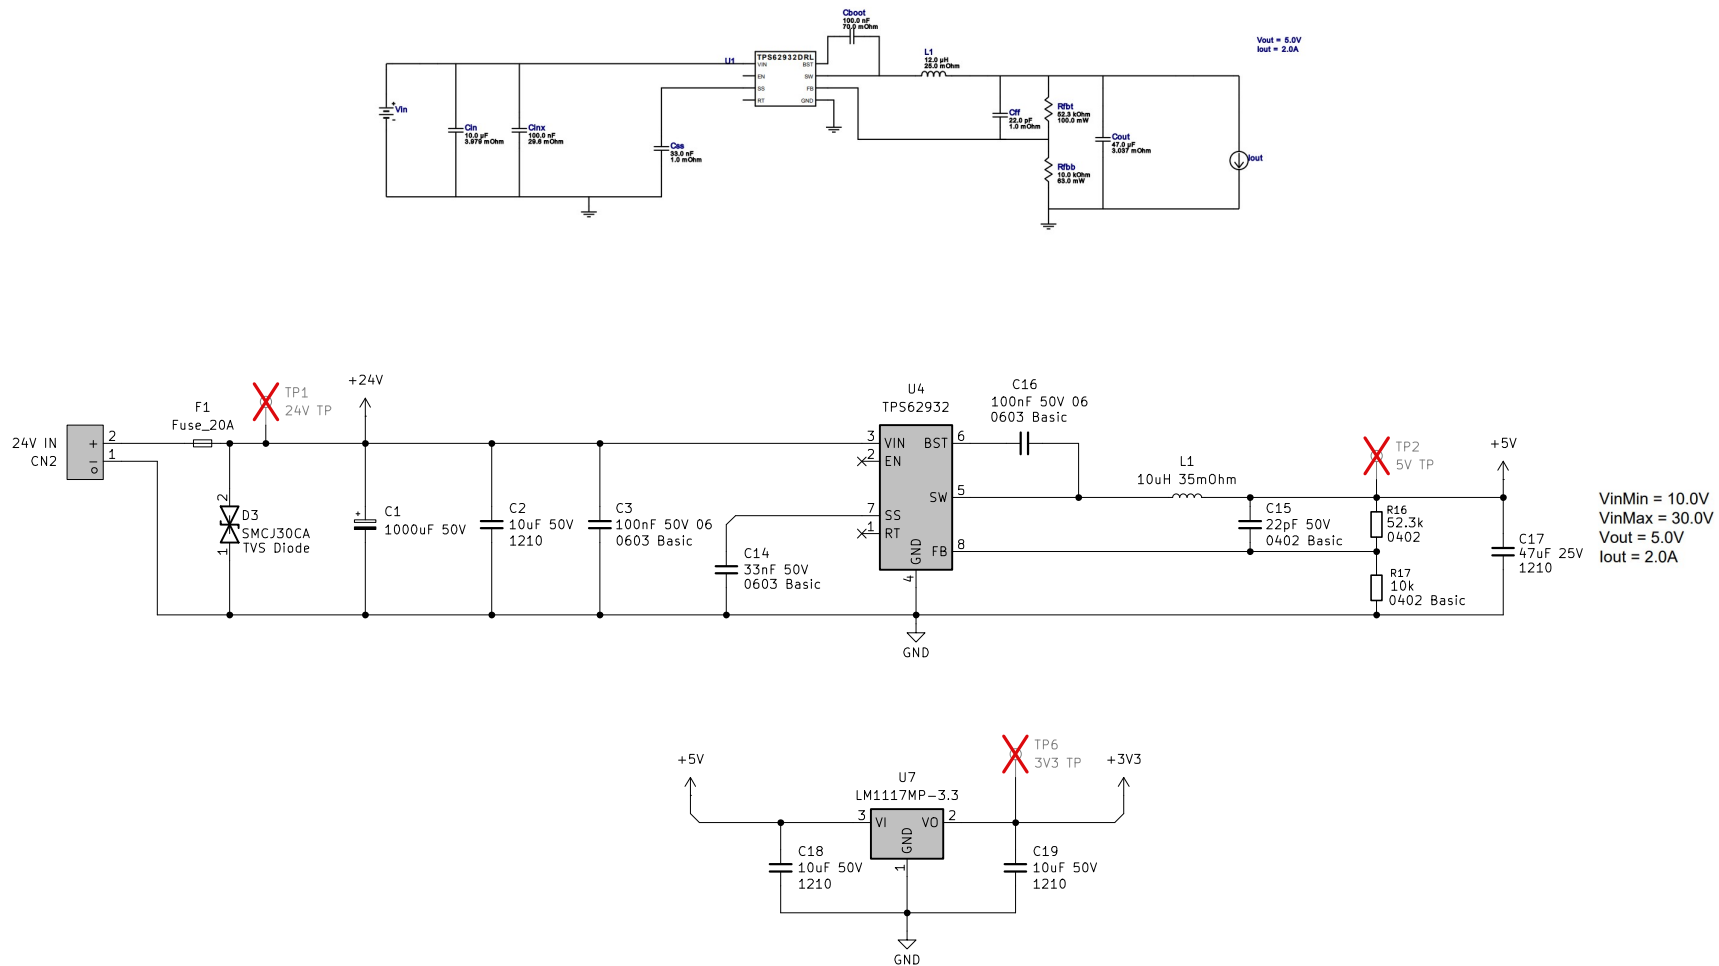


Sheet: /PSU/
File: PSU.kicad_sch

Title:

Size: A4 Date:
KiCad E.D.A. 10.0.0

Rev:
Id: 5/6

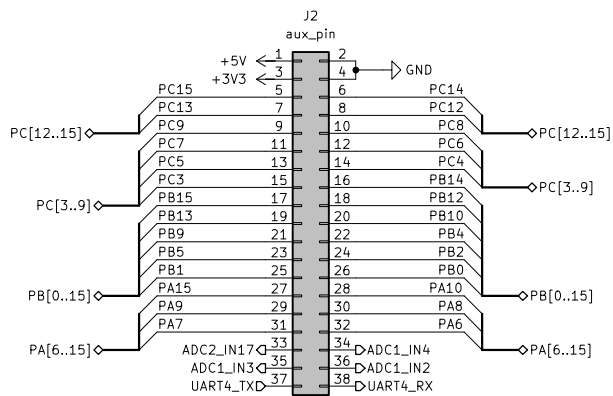

Sheet: /aux_pin/
File: aux_pin.kicad_sch

Title:

Size: A4
KiCad E.D.A. 10.0.0

Date:

Rev:
Id: 6/6