
LOW PITCHED HORN ASSY REPLACEMENT

ennaB na

1. REMOVE LOW PITCHED HORN ASSY

- (a) Disconnect the connector.
- (b) Remove the bolt and the low pitched horn assembly.

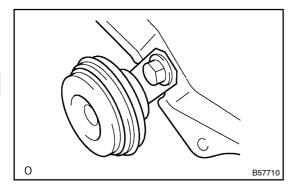

2. INSTALL LOW PITCHED HORN ASSY

(a) Place the stay onto the baffle part in the radiator support upper, and then install the low pitched horn assembly with the bolt.

Torque: 16 - 23 N·m (163 - 235 kgf·cm, 12 - 17 ft·lbf)

(b) Connect the connector.