
2701L-14

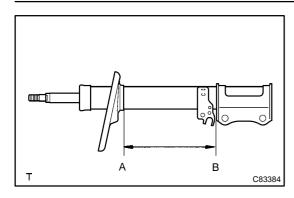

DISPOSAL

- 1. DISPOSE OF SHOCK ABSORBER ASSY REAR LH
- (a) Fully extend the shock absorber rod.
- (b) Using a drill, make a hole in the cylinder as shown in the illustration to discharge the gas inside.

CAUTION:

- When drilling, chips may fly out, work carefully.
- The gas is colorless, odorless and non-poisonous.