
FRONT DOOR BELT MOULDING ASSY LH REPLACEMENT

760CA_04

HINT:

- The installation procedures are the removal procedures in reverse order.
- Use the same procedures for the RH side and LH side.
- 1. REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSY (See page 75-8)
- 2. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page 75-8)
- 3. REMOVE FRONT DOOR INSIDE HANDLE BEZEL PLUG LH (See page 75–8)
- 4. REMOVE FRONT DOOR TRIM BOARD SUB-ASSY LH (See page 75-8)
- 5. REMOVE OUTER REAR VIEW MIRROR ASSY LH (See page 75-8)

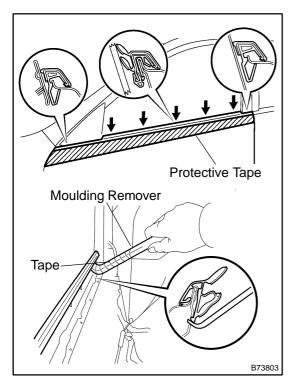

6. REMOVE FRONT DOOR BELT MOULDING ASSY LH

- (a) Put protective tape under the moulding.
- (b) Using a moulding remover, pry out the moulding as shown in the illustration.

HINT:

Tape the remover tip before use.