SOUND QUALITY IS BAD ONLY WHEN PLAYING TAPE

INSPECTION PROCEDURE

1 REPLACE CASSETTE TAPE WITH ANOTHER AND RECHECK

- (a) Replace the cassette tape with another and recheck.
 - (1) Replace the faulty cassette tape with the normal one to see if the same trouble occurs again. **Standard: malfunction disappear.**

OK CASSETTE TAPE FAULTY

NG


2 CHECK FOR ANY FOREIGN OBJECT

- (a) Check for foreign object.
 - (1) Check that no foreign material and troubles are detected in the radio receiver assembly cassette tape player.

NG > REMOVE FOREIGN OBJECT

OK

3 | CLEAN HEAD AND CHECK OPERATION

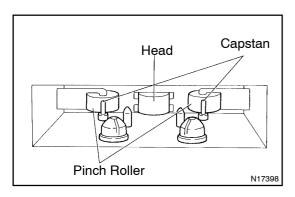

- (a) Head cleaning
 - (1) Raise the cassette door with your finger. Next, using a pencil or similar object, push in the guide.
 - (2) Using a cleaning pen or cotton applicator soaked in cleaner, clean the head surface, pinch rollers and capstans.
 - (3) Check that the same trouble occurs again.

OK > HEAD DIRTY

NG

CHECK AND REPLACE RADIO RECEIVER ASSY