
DTC C1251/51 PUMP MOTOR IS LOCKED IN PUMP MOTOR GROUN	•
---	---

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1251 / 51	Either of the following 1. or 2. is detected: 1. Brake actuator pump motor is not operating normally. 2. Open circuit condition of brake actuator pump motor continues for 2 sec. or more.	ABS pump motor

WIRING DIAGRAM

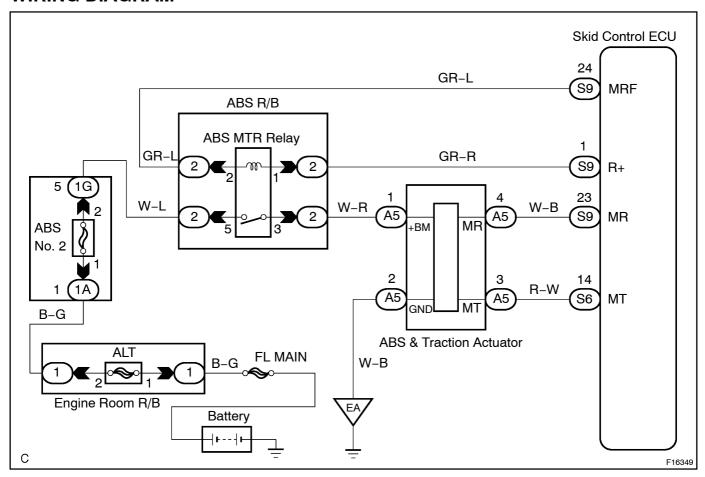

INSPECTION PROCEDURE

HINT:

Start[]he[]nspection[]rom[step[] []n[case[]pf[]using[]]he[]hand-held[]ester[]and[start[]rom[]step[]2[]n[case[]pf[]hot using[]hand-held[]ester.

- 1 PERFORM[ACTIVE]TEST[BY[HAND-HELD]TESTER(ABS[PUMP]MOTOR OPERATION)
- (a) Select[the[i]em[]ABS[MOT[RELAY"[in[the[]ACTIVE[]EST[and[]operate[the[]ABS[]notor[]elay[]on[the[]]and held[]ester.
- $(b) \verb|| Check[]| he \verb|| peration[] sound[] he \verb|| ABS[] pump[] motor[] when \verb|| perating[] it[] with \verb||] he \verb|| hand-held[] tester.$

OK:

The operation sound of the pump motor should be heard.

NG REPLACE ABS & TRACTION ACTUATOR ASSY

OK

2 | RECONFIRM[DTC(See[page[05-511])

A	Normal Code	
В	Malfunction Code	
	B CHECK AND REPLACE SKID CONTROL ECU	

Α

END