
INSPECTION

700BV-01

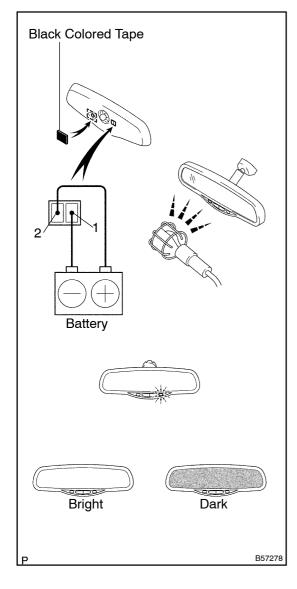

1. INSPECT INNER REAR VIEW MIRROR ASSY

- (a) Inspect the electro chromic inner mirror operation.
 - (1) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2.
 - (2) Attach a black colored tape to the forward sensor to prevent it from sensing.
 - (3) Light up the mirror with an electric light, and check that the mirror surface changes from "bright" to "dark".

If the operation is not as specified, replace the inner mirror.