
STEERING PAD SWITCH

REPLACEMENT

8201Q-01

- 1. DISCONNECT[BATTERY[NEGATIVE[TERMINAL(See[page[60-1)]
- 2. REMOVE STEERING WHEEL COVER LOWER NO.2

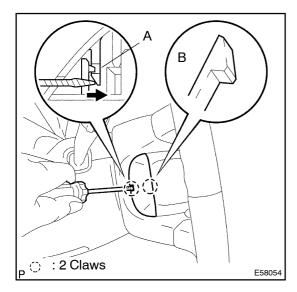


3. REMOVE CONNECTOR COVER

(a) Using a screwdriver, disengage the claw(A). HINT:

Tape the screwdriver tip, before use.

(b) Disengage the claw(B) and remove the connector cover.

4. REMOVE HORN BUTTON ASSY

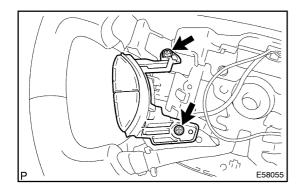

5. REMOVE STEERING PAD SWITCH

- (a) Disconnect the connector.
- (b) Remove the 2 screws and steering pad switch.

- 6. INSTALL HORN BUTTON ASSY
- 7. INSPECT HORN BUTTON ASSY
- 8. INSPECT SRS WARNING LIGHT