
# OUTER REAR VIEW MIRROR SUB-ASSY LH REPLACEMENT

700BE 03


HINT:

On the RH side, use the same procedures as on the LH side.

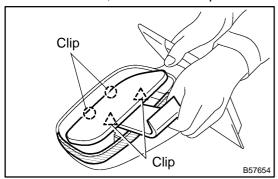


### 1. REMOVE OUTER REAR VIEW MIRROR SUB-ASSY LH(TMC made)

- (a) Tape the lower part of outer mirror body with protection tape.
- (b) Using a roof-moulding remover, disengage the clips placed in the lower part of the mirror.
- (c) Pull out the outer rear view mirror.

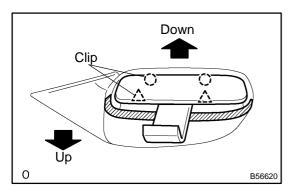

#### 2. REMOVE OUTER REAR VIEW MIRROR SUB-ASSY LH(TMMK made)

- (a) Tape the upper part of outer mirror body with protection tape.
- (b) Using a roof-mouding remover, disengage the clips placed in the upper part of the mirror.
- (c) Pull out the outer rear view mirror.

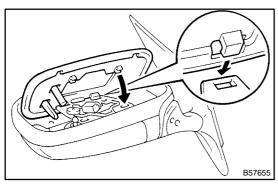

## 3. INSTALL OUTER REAR VIEW MIRROR SUB-ASSY LH(TMC made)

- (a) Insert the claws placed in the upper part of backside of the mirror into the actuator hole.
- (b) Set the mirror in the actuator.
- (c) Insert the lower portion of the mirror to engage the 2 clips securely.

#### 4. INSTALL OUTER REAR VIEW MIRROR SUB-ASSY LH(TMMK made)

- (a) Insert the claws placed in the lower part of backside of the mirror into the actuator hole.
- (b) Set the mirror in the actuator.
- (c) Insert the upper portion of the mirror to engage the 2 clips securely.