
## **Loadsense Wiring Diagram**

## **Arduino Wiring**

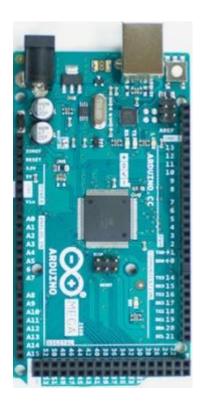

Button set  $\rightarrow$  pin11

Button reset  $\rightarrow$  pin10


Brightness  $\rightarrow$  pin9

<u>Display</u> - <u>Arduino</u> GND(blue) - GND

5V(orange) - 5V

RX(green) - pin8

## Conection to board

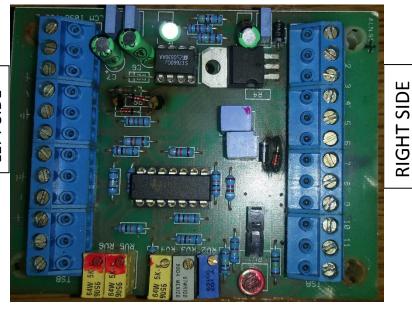

<u>Power</u>

Pin1+Pin3-12V Pin2+Pin4-GND

Arduino - Board

GND(brown) - pin12(right side)

Vin(red) - pin8(right side)

A0(yellow) - pin12(left side)

Loadsense(πύρος)BoardRed-pin8(right)Blue-pin9(right)Yellow-pin10(right)Green-pin11(right)Black-pin12(right)

<u>Display Board</u> <u>Board</u>

Yellow - pin7(left)

Black - pin8(left)

Blue - pin9(left)

Red - pin10(left)

White - pin11(left)

Green - pin12(left)

Μόνο για το ήδη υπάρχον καλώδιο στο σκάφος Βάνα Βιολέττα 4 που έχει γίνει ένωση καλωδίων (extention) για την επιμύκηνση του καλωδίου του πύρου:

<u>Loadsense(πύρος)</u> <u>New Wire</u>

Red - Red

Blue - Blue

Yellow - White!!!!!!!!!

Green - Green

Black - Black+bledaz

Μόνο για το ήδη υπάρχον καλώδιο στο σκάφος Βάνα Βιολέττα 4 που έχει γίνει ένωση του Arduino με την πλακέτα του Loadsense με καλώδιο BNG στο οποίο κάποια καλώδια δεν χρησιμοποιούνται(spare):

<u>Arduino</u> - <u>Conection Cable(BNG)</u>

GND(black) - Black

Vin(white) - Red

A0(white) - White