GUIDE · V1.2

escape/UI

EMULATIONSTATION THEME · TRIMUI BRICK · KNULLI

ESCAPE/UI

22:11 100%

02 / 04

APPS

COLLECTION · 6 ITEMS

Tools, launchers and ports that are not games.

FOLDER /collections/APPS

ESC.02
WIRE CUBE

アプリ

道具



ALL APPS GAMES

MENU · NAVIGATION BAR · SEARCH · RANDOM · SELECT · CHOOSE

GITHUB.COM/OBHATEION/ESCAPE-UI

エスケープ

What it is

escape/UI is a theme for EmulationStation on the TrimUI Brick running Knulli. A black screen, hairlines, dot-matrix type and stickers — Nothing, Apple, Y2K and brutalism in one.

Every collection or console on the home screen gets one of 18 turning wire figures, a big label and stickers. Every game gets its own sticker sheet on a grey pattern, with its picture as a Polaroid. It is all drawn for your collections and games ahead of time — the console only shows finished pictures.

Install

1. Download `escape-ui-theme-vX.Y.zip` from the project's GitHub page (Releases).
2. Copy the `themes` and `roms` folders from the archive to the root of SHARE (`/userdata`) — over the network (`\\KNULLI\share`) or with the card in a computer. The theme must end up exactly at `/userdata/themes/es-theme-escape-ui`.
3. On the Brick run UPDATE GAMELISTS from the menu (or reboot), then start **EscapeUI** from PORTS.
4. Setup screen: `A` — turn the theme on; `X` — the same, plus custom collections straight on the home screen; `B` — leave without changes.

The first run draws the current colour — a few minutes, with a progress bar. Then ES restarts with the theme.

> If PORTS is hidden, add EscapeUI to one of your collections (game list: SELECT → ADD TO COLLECTION) or show PORTS for a moment.


Home screen and lists

A collection card: on the left its number, name, game count and folder; on the right the figure, the big label and stickers (how many depends on the detail level). At the bottom, the strip of neighbouring collections.

In a game list the selected game's sticker sheet sits on the right: a pattern, its picture as a Polaroid (when it has one) or a logo, and stickers by the "cover stickers" level.



HOME SCREEN

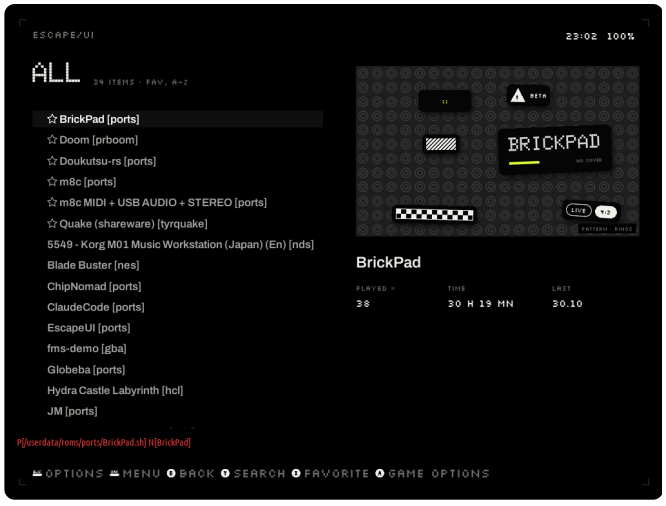


GAME LIST

Theme settings

START → USER INTERFACE SETTINGS → THEME CONFIGURATION. Everything switches instantly.

OPTION	WHAT IT DOES
Detail level	How many stickers on the home screen: 0 — text only, 5 — everything. The first entry, "default (3)", equals 3.
Cover stickers	How many stickers on the game sheets: 0 — pattern only, 5 — as many as fit.
Figure motion	video — the figure turns (glitch entrance); light — a still picture turns slowly and breathes (almost free on battery); still — no motion.
Chromatic aberration	A slight red/cyan split on the theme's pictures (text stays clean).
Low battery pulse	A red pulsing vignette when the battery is low.
Charging screen	See below.
Smooth mode	Full CPU speed on the menus, so animations never stutter. Games keep the system's own setting.
Accent colour	One of 10: white, red, orange, yellow, acid, green, ice, blue, violet, pink.

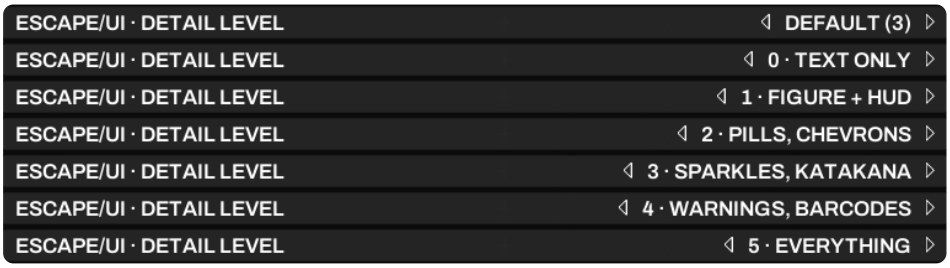

THEME CONFIGURATION

The escape-UI app

PORTS (or your APPS collection) → **EscapeUI**. Everything from ES's menu, plus:


- **Figures** — the figure of each collection (18);
- **Patterns of covers** — the pattern of each game (16);
- **Covers of games** — what is on a sheet: the game's picture, your own, a logo, or nothing;
- **Boot logo** — the figure of the boot and charging screens;
- **Draw all colours** — draw the missing colours; **Reset** — figures and patterns back to default.

D-pad to move, `A` to pick or change, `B` or `START` to save and leave. With the variant library drawn ahead, a new figure or pattern is just a file copy.

Your own cover picture: put `<game name>.png` or `.jpg` into `/userdata/system/configs/escape-ui/covers/` and choose "custom" in Covers of games.

Charging screen

On the charger and untouched for 15 seconds (on the menus, not in a game), the Brick shows the boot screen with a random turning figure, glitch bursts and the charge. Any button brings the menu back — the press does not reach the menu, and the figure on the home screen glitches back in. While charging, 15 more seconds without buttons bring it back with a new figure. It can be turned off in the theme settings.

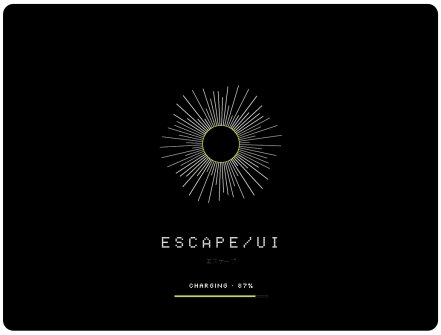

CHARGING SCREEN



A GLITCH BURST



THE WAY BACK: ONLY THE FIGURE GLITCHES

Collections, games and names

- New collections and games are picked up on their own: after a game and after a settings change the generator fills in what is missing in the background. Until then a collection shows a stand-in card with its name.
- No custom collections needed: consoles with games (SYSTEM) and ES's own collections — favourites, last played, all games (AUTO) — get cards too. Unscraped games count as well.
- Names in any script: letters the theme's fonts lack (Cyrillic, Japanese, Korean…) come from Knulli's system fonts and are redrawn as dots for the dot-matrix font. Emoji are left out.
- Games with `: ? * " < > |` in their names get their sheets by rom file path.



18 × 10

Everything ahead on a PC

The Brick can draw everything itself, but a PC is about three times faster and keeps the console idle. You need Python 3.12 with Pillow and numpy, and ffmpeg.

```
# on the Brick (ssh): what to draw
python3 /userdata/themes/es-theme-escape-ui/tool/gen.py --snapshot > snapshot.json
# on the PC, in themes/es-theme-escape-ui/tool
ESCAPE_PC=snapshot.json ESCAPE_GEN=out ESCAPE_FFMPEG=ffmpeg ESCAPE_JPFONT=NotoSansJP-VF.ttf
\
  python gen.py --all-colours --all-levels
ESCAPE_PC=snapshot.json ESCAPE_GEN=out python gen.py --library
```

Copy the folders from `out/` into `/userdata/themes/es-theme-escape-ui/gen/` and restart ES. `--library` draws every variant — each collection with each figure, each game on each pattern, each boot logo — so the Brick never has to draw anything.

Troubleshooting

YOU SEE	DO
A colour is missing from the list	It is not drawn yet: escape-UI → Draw all colours, leave the Brick on the charger, or draw on a PC.
A new collection shows a stand-in card	Its art appears after the next ES start (or open and close escape-UI).
A sheet says "NO SHEET YET"	The generator has not reached that game yet — wait, or open escape-UI.
The menus stutter	A background drawing run is busy; turn on Smooth mode, set Figure motion → light, or draw everything on a PC.
Log	`/userdata/system/configs/escape-ui/gen.log`

Uninstall

THEME SET → another theme. Then delete `/userdata/themes/es-theme-escape-ui`, `/userdata/roms/ports/EscapeUI.sh`, `/userdata/system/configs/escape-ui`, the `escape-ui.sh` files in `/userdata/system/configs/emulationstation/scripts/*/` and the two lines after `# escape/UI` in `/userdata/system/custom.sh`.

FONTS: DOTO, SILKSCREEN, ARCHIVO, MARTIAN MONO — SIL OPEN FONT LICENSE. CODE: MIT.