




OcuTrap R1

Installation & User Manual

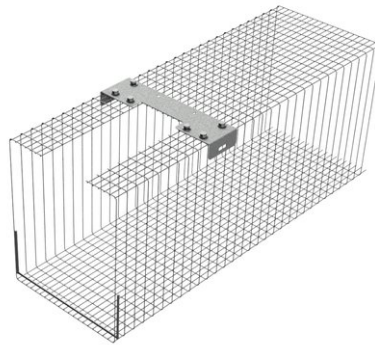

Please read this manual fully before assembling or operating your OcuTrap R1.




Online docs & video
guides
docs.ocutrap.com

Contents

Unboxing and Initial Inspection	3
Hardware Setup	3
Section 1 — Handle Assembly	4
Section 2 — Door Assembly	5
Section 3 — Motor & POD Assembly	7
Section 4 — App Setup	7
Operating the POD	8
Weather	11
Routine Maintenance	11
LED Indicator Reference	12
Battery Safety Precautions	13
Safety Warnings — Moving Parts & Animal Handling	15
Safety Information, Restrictions, and Notices	15
OcuTrap R1 Hardware Warranty	16
FCC Compliance and Laser Safety	18

Unboxing and Initial Inspection

Carefully unpack your OcuTrap R1 and check that all components are included:

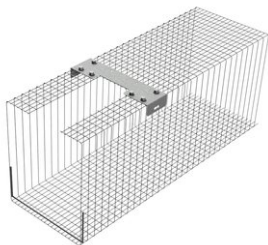

Cage



Parts box

Before you continue

Examine each item for any visible damage. If anything is missing or appears damaged, halt installation and contact OcuTrap Support at support@ocutrap.com with your trap ID.

Hardware Setup

Charge the Battery

Fully charge the blue battery **before assembly** using the charger found in the small white box. The charger light is **red** while charging and **green** when full. A full charge takes 4–5 hours.

If anything appears damaged, contact support@ocutrap.com for assistance.




Assembly is divided into four sections. Carefully follow each step to ensure your OcuTrap functions correctly and efficiently:

1. Handle Assembly
2. Door Assembly
3. Motor & POD Assembly
4. App Setup

Section 1 — Handle Assembly


Step 1: Gather your components

- 4× 3" bolt
- 1× handle guard
- 1× tube
- 4× washer
- 2× upper tube plastic spacer
- 2× lower tube plastic handle spacer
- 2× in-trap bracket with press-fit nut
- 2× top metal bracket
- 1× nut driver

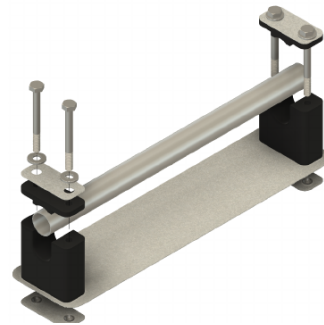

Step 2: Assemble the handle

1. Center the handle guard on the trap.
2. Insert the two top handle assembly pieces into the holes in the handle guard.
3. Slide the tube between the two handle guards and ensure it is centered.
4. Place the bracket (with the press-fit nut) inside the trap and hand-tighten the bolts.
5. Use the nut driver to fully tighten the bolts from the top, ensuring the handle remains secure.

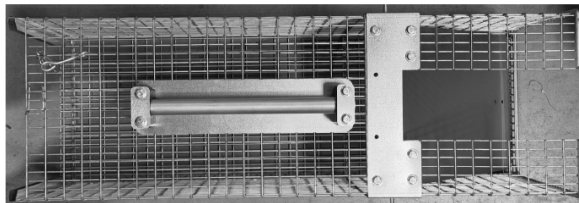

Handle installed (top view)



In-trap view

Section 2 — Door Assembly


Step 1: Gather your components

Door

- 2× brackets (top locking mechanism)
- 2× black spacers
- 2× black capped nuts
- 1× metal door
- 1× 12" rod
- 1× nut driver
- 1× nut assembly tool (*figure right*)

Motor


- 1× motor
- 2× pins
- 2× clevises
- 1× top motor bracket
- 2× washers
- 2× 1" bolt



Step 2: Assemble the door mechanism

Align the metal door inside the trap.

1. Thread the metal rod through the oval slot in the metal bracket attached to the top of the solid metal trap door.
2. On each end of the rod: place the black spacer, secure it with the black capped nut, then use the nut assembly tool and nut driver on each end to tighten the nut until snug.

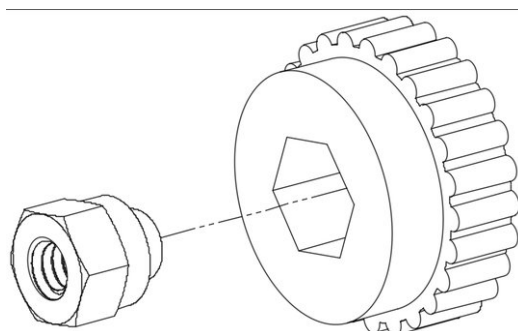


Door rod, spacers, and capped nuts

Step 3: Assemble the motor

1. Install the top bracket with washers and bolts. Tighten with the nut driver.
2. Use the pins and clevises to secure the motor to the door at both the top and bottom attachment points.
3. Feed the cable through the metal handle.
4. Verify that all components are securely fastened.
5. Check that the door moves smoothly and is properly aligned.



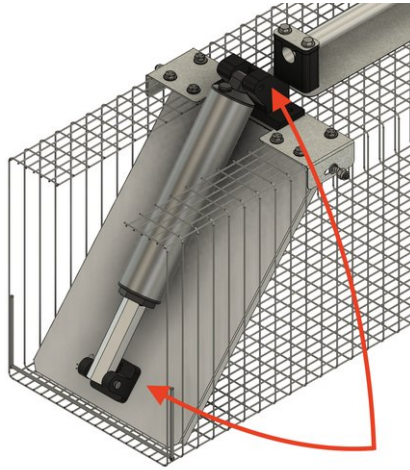

Motor secured to the door with pins and clevises

Section 3 — Motor & POD Assembly

Step 1: Prepare the battery

Ensure the battery is fully charged. Charging can take 4–5 hours.

Step 2: Connect the wire to the POD

1. Slide the POD down the rails on the trap until it is in place.
2. Attach the motor's wire to the POD using the locking screw connector, ensuring a secure connection.
3. Use the top latch to secure the POD in place.

At this point, your hardware setup is complete.

Section 4 — App Setup

Step 1: Create an account

Go to base.ocutrap.com (or scan the QR code on the right) and create an account.



Create an account

Step 2: Download the mobile app



iOS download




Android download

Step 3: Activate the trap through the app

1. Create an account on the app.
2. Locate the POD for the OcuTrap you wish to register, open it, and find the serial number on the top of the device.
3. In the app, go to **Account** (top right of the dashboard), then tap **Add Trap** at the bottom of the page.
4. Enter the serial number when prompted.
5. Follow the in-app prompts to enable your subscription.
6. Once complete, the new trap will appear in your dashboard.



Account page — scroll down

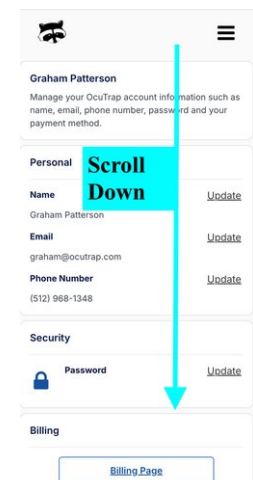

Tap "Add Trap"


Initial hardware checkout

1. **Power on:** connect the fully charged battery.
2. **Connectivity check:** ensure the trap is within network range. Check the indicator light for a stable connection (breathing cyan). It may take up to 10 minutes to connect to cellular networks.
3. **Open the control panel:** open the OcuTrap app.
4. **Engage the trap:** select **Arm** in the app to initiate trap readiness. Ensure cameras, sensors, and mechanisms respond correctly.

Operating the POD

Buttons on the POD

Label	Button
1	Power
2	Mode
3	Reset
4	User
5	LED Indicator
6	Battery Port

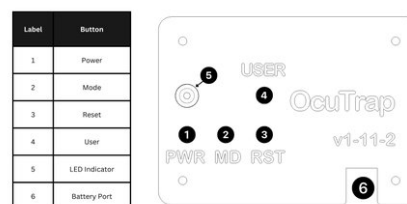

Arming / Unarming

Use the **User Button** and **Power Button** together to toggle between **Armed** and **Unarmed** states.

Action	Steps	Indicator
Arm the device	1. Press the User Button. 2. Immediately press the Power Button. 3. Ensure the door is set to open before arming.	Flashing yellow (arming)
Unarm the device	1. Press the User Button. 2. Immediately press the Power Button again.	Flashing white (unarmed)

Reset

Restarts the device **without changing its configuration**.

Action	Steps	Indicator
Reset the device	1. Press the Reset Button once. 2. The device will reboot and retain its current state.	No LED indicator

Door Functionality

Action	Steps	Indicator	Description
Open door	1. Press the User Button . 2. Release, then press and hold for 5 seconds.	Blue flashes	Door opens
Close door	1. Press the User Button . 2. Release, then press and hold for 5 seconds.	Green flashes	Door closes
Arm / Unarm	Follow the Arming / Unarming steps above.	See above	Toggles Armed / Unarmed

Device Status Indicators

Mode	Color / Pattern	Description
Unarmed & Open	Solid Blue	The device is unarmed , and the door is open .
Unarmed & Closed	Solid Green	The device is unarmed , and the door is closed .
Armed Mode	Solid Yellow	The device is armed .
Armed & Captured	Solid Magenta	The device is armed , and a capture event has occurred.

Shut-down Operation

Steps	Indicator
Power off: hold down the PWR button for 3 seconds	Blinking Red
Shutting down (takes about 10 seconds)	Solid Red and other lights
Fully powered off	No LED

Unarmed Hibernation Control

Each trap's Unarmed Sleep Mode is configured separately. In the app, go to **Settings** → **More Settings** → **Unarmed Sleep Mode** to adjust it.

Setting	Behavior
Yes (default)	The trap hibernates when unarmed.
No	The trap stays fully powered when unarmed.

Note

Disabling hibernation by selecting "No" will lead to higher battery consumption.

Weather

OcuTrap is designed to withstand various outdoor conditions, including rain, wind, and moderate environmental challenges. While the enclosure is weatherproof, internal electronics should never be submerged in water. The trap is built for durability, but users should take precautions during extreme weather to prevent potential damage. For optimal performance, OcuTrap operates best between 0°C (32°F) and 40°C (104°F). Prolonged exposure to temperatures outside this range may affect performance and battery longevity. The lithium-ion battery should be charged at room temperature to maintain efficiency and lifespan.

Extreme heat and cold can reduce performance and battery life, while freezing conditions may cause the door mechanism to become stuck and the motor to not operate properly. To prevent icing, avoid operating the trap in environments where freezing is likely. Although the enclosure is weatherproof, heavy rain or flooding could compromise internal electronics, so relocating or protecting the trap is advised. To maximize battery longevity, follow the recommended temperature guidelines and avoid prolonged exposure to extreme conditions. No additional maintenance is required.

Routine Maintenance

Run this checklist after every capture, and after harsh weather.

1. Cleaning

Item	Action
Camera and sensor lens	Wipe with a soft, lint-free cloth until clear.
Exterior	Wipe with a damp cloth.
Interior parts (door, motor area)	Remove any debris, wipe if needed.

2. Battery

Task	Action
Charge	Fully charge before use, top off as needed.
Terminals	Check for corrosion or wear, wipe dry if dirty.

3. Quick Function Check

System	Action
Door	Test open and close, fix any sticking.
Motor and sensors	Confirm motor runs and sensors respond.

4. Weatherproofing

Area	Action
Seals, enclosures	Check for cracks or looseness.
After bad weather	Look for moisture or debris inside, dry out if needed.

5. Log

Keep a simple note of cleanings, checks, and repairs.

Safety

Power off the trap and unplug the battery before maintenance.

LED Indicator Reference

Status	Color / Pattern	Description
Connected	Solid Cyan	Device is successfully connected to the cloud.
Connecting	Blinking Cyan	Device is establishing cloud connection.
Firmware Update	Blinking Magenta	Device is performing an OTA update.
Internet Search	Blinking Green	Device is searching for internet connection.
SOS Alert	Flashing Red (•• ———)	Device requires immediate attention.
Low Power	Blinking Red	Battery level too low for operation.
Error State	Solid Red	System error detected.
No Power	No Light	Device is either powered off, in ultra-low power mode, in armed low power mode, or requires power source check/reset.

Battery Safety Precautions

The OcuTrap uses sealed lithium-ion batteries. **Dispose of used batteries according to all applicable federal, state, and local regulations.**

General Safety Warnings

- Do not expose the battery to fire, water, or excessive heat.
- Avoid short-circuiting the terminals.
- Use only the provided charger to prevent overcharging or damage.
- Handle the battery carefully to prevent punctures or impacts.
- Keep out of reach of children.

Base Battery

The KBT 12V Rechargeable Li-ion Battery is a versatile power source for 12V devices. Designed for reliability and long-term use, it is equipped with essential safety features and a durable build.

Specifications

- Voltage: 12V
- Battery type: Lithium-ion
- Charging cycles: over 800 cycles

Charging Instructions

1. Use the provided 12V charger for optimal performance.
2. Connect the barrel connector securely to the charger's barrel connector.
3. Charge the battery in a cool, dry place.
4. Avoid leaving the battery connected to the charger once fully charged.

Battery Installation in the POD

1. Open the POD latch.
2. Place the battery in the bracket at the bottom of the POD.
3. Plug the battery into the POD using the yellow connectors. Push straight in until fully seated.
4. Make sure the cables are tucked out of the way of the door closing points, along the edge of the enclosure, so the wires do not get squished.
5. Close the latch fully to maintain waterproofness.

Maintenance & Storage

- Store the battery in a cool, dry place away from direct sunlight or heat sources.
- For long-term storage, keep the battery partially charged (around 40–60%) to preserve its health.
- Clean the terminals periodically to maintain proper conductivity.
- Avoid exposing the battery to moisture or corrosive materials.

Troubleshooting FAQs

Q: What should I do if the battery doesn't charge?

A: Verify the charger is functioning properly and ensure secure connections to the terminals.

Q: Why is the battery overheating?

A: Stop usage immediately and check for device compatibility or possible overcharging.

Q: How can I extend the battery life?

A: Avoid fully depleting the battery before recharging and store it properly when not in use.

Cautions

- Do not attempt to open or modify the battery.
- Avoid charging the battery in extreme temperatures ($<0^{\circ}\text{C}$ or $>40^{\circ}\text{C}$).
- Do not connect the battery to devices exceeding its voltage or capacity limits.
- Dispose of the battery properly according to local regulations when it reaches the end of its lifespan.

Safety Warnings — Moving Parts & Animal Handling

■ Caution: Risk of Finger Injury

The OcuTrap's moving parts, including the motorized door and spring mechanism, can cause serious injury if fingers are placed in or near the trap's assembly while in operation.

- Keep hands and fingers clear of the trap door and motorized components at all times.
- Ensure the trap is powered off before performing maintenance or adjustments.
- Always use the provided assembly tools to adjust or interact with components.
- Do not allow children to operate or handle the trap.

Failure to follow these safety precautions can result in serious injury.

Animal Handling Safety

- **Approach the trap cautiously** when an animal is captured, and wear protective gloves to prevent injury.
- **Avoid direct contact with animals**, especially if aggressive or frightened.

Safety Information, Restrictions, and Notices

Safety and Use Restrictions — DO NOT USE OCUTRAP:

- AS A SUBSTITUTE FOR LIFE SAFETY OR MEDICAL DEVICES.
- FOR ANY TYPE OF MEDICAL MONITORING OR LIFE-SUSTAINING APPLICATION.
- IN ANY WAY THAT VIOLATES FEDERAL, STATE, LOCAL, OR ADMINISTRATIVE LAWS, REGULATIONS, OR ORDINANCES. This includes, but is not limited to, laws governing wildlife and animal welfare, health and safety, data privacy, and security.
- IN A MANNER THAT INVOLVES CRIMINAL OR ILLEGAL ACTIVITIES.

OcuTrap is not responsible for injury during use.

DO NOT ATTACH OCUTRAP TO OR PLACE IT NEAR LIFE SAFETY DEVICES, MEDICAL MONITORING EQUIPMENT, OR OTHER SENSITIVE DEVICES where it could interfere with the operation, safety, or functionality of such equipment.

OcuTrap R1 Hardware Warranty

1. Warranty Coverage

OcuTrap, Inc. ("Company") warrants that the "OcuTrap R1" hardware will be free from defects in materials and workmanship under normal use and conditions for a period of 12 months from the date of original purchase by the end user ("Warranty Period").

2. Warranty Conditions

During the Warranty Period, the Company will repair or replace, at its discretion, any defective components or product covered by this warranty. Replacement parts or products may be new or reconditioned at the Company's discretion and will be warranted for the remainder of the original Warranty Period or 90 days from the date of repair or replacement, whichever is longer.

3. Limitations and Exclusions

This warranty does not cover the following:

- **Improper Installation:** damage caused by incorrect installation not in accordance with the Company's installation guidelines.
- **Misuse or Neglect:** issues arising from misuse, neglect, or improper maintenance.
- **Third-party Modifications:** defects caused by unauthorized modifications, adjustments, or repairs by the user or a third party.
- **Environmental Factors:** damage due to power failures, power surges, extreme weather conditions, or other environmental factors beyond the Company's control.
- **Normal Wear and Tear:** cosmetic damage or normal wear and tear not affecting the functionality of the OcuTrap R1.
- **Non-OcuTrap Parts or Accessories:** damage caused by the use of parts or accessories not authorized by OcuTrap, Inc.

4. Warranty Claims Process

To make a claim under this warranty, the customer must:

1. Contact OcuTrap Support at support@ocutrap.com with proof of purchase.
2. Provide a description of the issue, including any relevant photos or details to help diagnose the problem.
3. Ship the product to an authorized repair facility or return address if requested by the Company, with shipping label provided by OcuTrap.

5. Liability Limitation

The Company's liability under this warranty is limited solely to the repair or replacement of the defective product or parts at its discretion. The Company is not liable for any indirect, incidental, or consequential damages arising from the use of, or inability to use, the OcuTrap R1, including any loss of profits, business interruption, or damage to other property.

6. Governing Law

This warranty is governed by the laws of Texas without regard to its conflict of laws principles. Any disputes arising from this warranty will be subject to the exclusive jurisdiction of the courts located in the state of Texas.

7. Warranty Modifications

OcuTrap, Inc. reserves the right to modify the terms and conditions of this warranty at any time, with any such changes not applying retroactively to products purchased before the modification date.

8. Contact Information

For any questions or concerns regarding this warranty, please contact: **support@ocutrap.com**

FCC Compliance and Laser Safety

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

FCC ID

The FCC Identifier for this device is: **FCC ID: 2AEMI-B404X**

Modifications Warning

Changes or modifications not expressly approved by Particle Industries, Inc. could void the user's authority to operate the equipment.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. To maintain compliance, this device should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Antenna Information

The B404X SoM is designed to be used with external antennas. Ensure that the antennas used are of the same type and have equal or lesser gain than those tested to comply with FCC regulations.

Responsible Party Information

For compliance inquiries, please contact: Particle Industries, Inc., 325 9th St, San Francisco, CA 94103 USA

Additional Resources

For more detailed information, including test reports and certifications, please refer to the official FCC documentation for this device: <https://fccid.io/2AEMI-B404X>

Laser Safety Information

This product contains a laser emitter and corresponding drive circuitry. The laser output is designed to meet Class 1 laser safety limits under all reasonably foreseeable conditions, including single faults, in compliance with **IEC 60825-1:2014**.



Important Safety Instructions

- **Do not increase the laser output power by any means.**
- **Do not use any optics to focus the laser beam.**
- **Caution:** use of controls or adjustments, or performance of procedures other than those specified herein, may result in hazardous radiation exposure.

Compliance Information

This product complies with the following standards:

- **IEC 60825-1:2014**
- **21 CFR 1040.10 and 1040.11**, except for conformance with IEC 60825-1:2014 as described in the Laser Notice Number 56, dated May 8, 2019.
- **EN 60825-1:2014**, including **EN 60825-1:2014/A11:2021**
- **This product is not intended for children.**

OcuTrap relies on a third-party wireless service using radio technology, which is subject to transmission and service area limitations. This may include **interruptions or dropped connections** due to atmospheric, topographical, or environmental factors, cell site availability, cellular network equipment or installation, government regulations, system limitations, maintenance, or other conditions affecting wireless service functionality. Wireless service and features may not be available in all areas.



OcuTrap, Inc.

5900 Balcones Drive, Suite 100
Austin, Texas 78731, USA

OcuTrap.com



docs.ocutrap.com

U.S. Patent No. 12,010,984

support@ocutrap.com

Last updated: June 2026

© OcuTrap, Inc. All Rights Reserved.