



Quick Start Guide

3D Area Calculator for metal buildings · Spray Foam

This calculator measures the real surface of a metal building — walls, roof, gables and floor — from a 3D model, with a corrugation factor for the panel sheeting and deduction of openings (doors and windows). It also saves your clients to the cloud and shares the report via WhatsApp, SMS, email, CSV or NFC tag. Ideal for quoting spray foam insulation jobs.

In this guide you will calculate, step by step, the area of a **40 × 60 ft metal workshop** with 12 ft walls, a gabled roof and corrugated panel (+12 %).

 Open it on any phone or PC

<https://odannesm-prog.github.io/powerfoam-areas/>

Contents

- 1 Enter the client and building data
- 2 Review the 3D model
- 3 Corrugation and openings **UPDATED**
- 4 Select faces and save zones
- 5 Read the results, save and share **UPDATED**
- 6 Your account and cloud clients **NEW**

1 Enter the client and building data

On the **Building** tab:

- Type the **Client** name — the app automatically assigns a **Client ID** (e.g. *PF-260703-JQZL*) to identify the project. The  button clears the current client.
- Type the **Address** or capture it with the  **GPS** button;  opens it directly in Google Maps.
- In the module set **Width, Length and wall Height**, pick the **Roof type** (here *Gabled*) and the **Ridge height** (extra height above the wall; here 4 ft).

The area recalculates on every change — watch the orange badge on the module.

Tip: add more modules with **+ Add** and use **Position X/Z** to form L-, T-shaped or compound buildings. At the top right you can switch between **feet/meters** and **English/Spanish**.

Building Modules

+ Add

CLIENT

John Smith



Client ID : PF-260703-JQZL

ADDRESS

1234 Peachtree St NE, Atlanta, G/





Workshop

7,408 ft² ×

WIDTH (FT)	LENGTH (FT)
40.00	60.00
HEIGHT (FT)	ROOF TYPE
12.00	Gabled
CORRUGATION FACTOR (%)	RIDGE HEIGHT (FT)
0	4.00
OPENINGS (FT ²)	POSITION X (FT)
0.00	0.00
POSITION Z (FT)	
0.00	

Each module is a rectangular volume. Use **X/Z position** to form L, T, or compound floor plans.

2 Review the 3D model

Open the **3D View** (tap the center tab or swipe). **Drag** to rotate and **pinch / scroll** to zoom. Every face shows its surface in ft² and the **Width, Length and Height** dimensions appear below the model.



Tip: use the ⊕ + - buttons to center and zoom, and # to hide or show the area labels.

3 Corrugation and openings

Every module has its own **Corrugation factor (%)** field — type **12** for standard R-panel/PBR or up to **22** for Quonset arches. The extra surface of the corrugated sheet is automatically added to **walls and roof** (not the floor), the model is drawn with ridges, and the labels already show the corrected area.

In **Openings (ft²)** enter the area of doors and windows that will not be sprayed (here 120 ft² for a 10 × 12 door); it is **deducted from the walls** in the results.



Important: smooth sheet (standing seam) = **0 %** — and remember that SPF is not recommended directly on a standing-seam roof.

4 Select faces and save zones

Tap the faces you want to measure — here the two roof slopes — and they highlight in orange. The floating panel adds up the selected area in real time (**2,741 ft²**, already including the +12 % corrugation). Type a name and press **✓ Save** to keep the selection as a **zone** (e.g. "Roof").



Tip: tap a face again to deselect it; ✕ **Clear** removes the whole selection. Saved zones are included in the report and the CSV.


5 Read the results, save and share

The **Results** panel shows one big number: the building's **Total Area** (or the selected area / zones total if something is marked), with its breakdown:

Walls (net, –120 ft² of openings)	2,747 ft²
Roof (+12 % corrugation)	2,741 ft²
Floor	2,400 ft²
Total Area	7,888 ft²

With  **Save** the client's project is uploaded to the cloud. With  **Share** you open the **Save / Share** menu: WhatsApp, Message/SMS, Email, **Download CSV**, Copy text — and on Android, write an **NFC tag** that opens the location straight in Maps.

Tip: every value is rounded to whole ft², ready to paste into your quote.

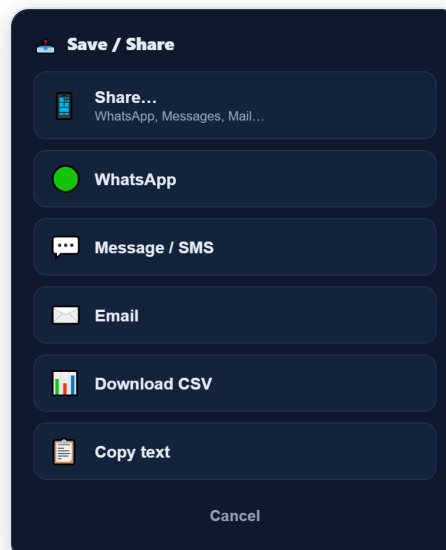


6 Your account and cloud clients

Above the Results panel sits the account bar:

- **Sign in** — create your account with email and password (or recover it with “Forgot your password?”). While signed in, everything you save is tied to your user.
- **Clients** — list of every project saved to the cloud: search by name, address or ID, **load** one with a tap or delete it.
- **+** — start a fresh new client.

This lets you measure on your phone in the field and open the same project later on the office PC.

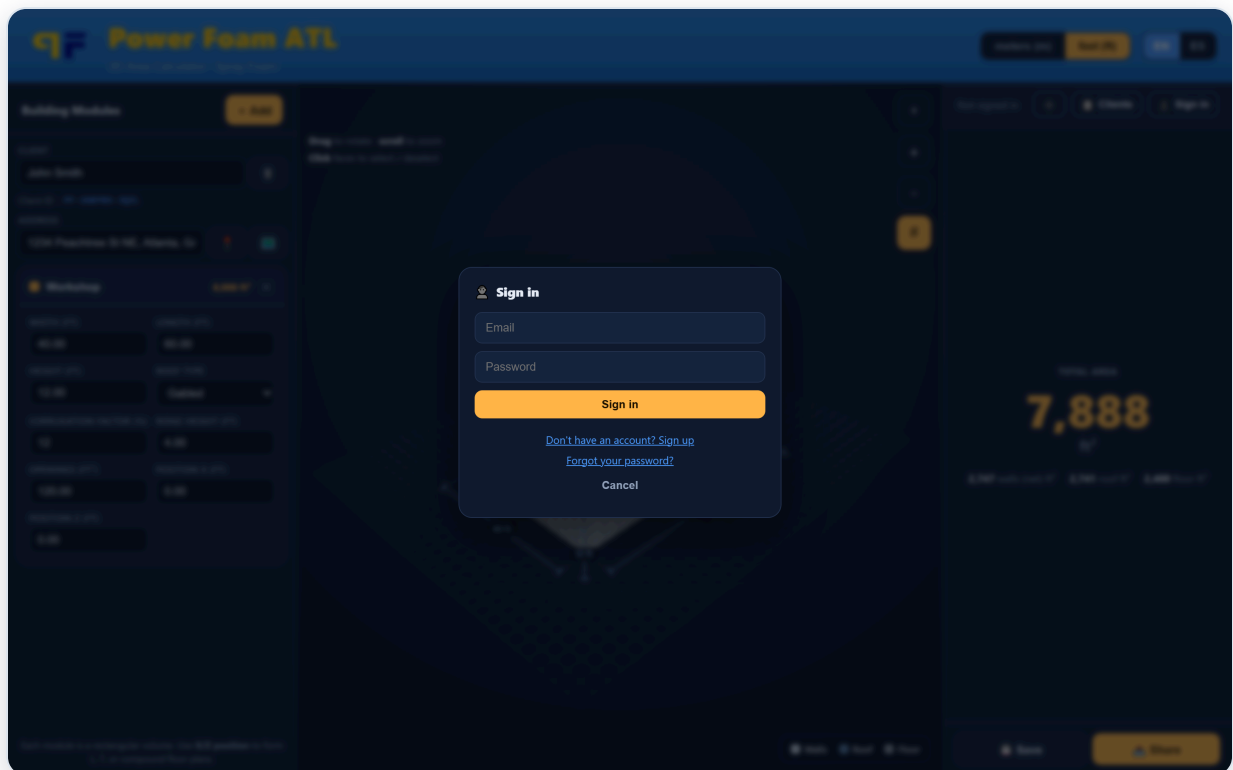

Done! You know the essentials

With these six steps you can measure any metal building, get the exact area for your spray foam quote, save it per client and share it instantly.

8 roof types

Multiple modules (L, T)

Corrugation % per module

Openings deduction

Named zones

GPS + Google Maps

Cloud + client IDs

WhatsApp · SMS · Email

CSV · NFC · Copy

Meters or feet

English / Español

Available roofs: flat · gabled · single slope · hip · gambrel (barn) · monitor (clerestory) · sawtooth · arch / Quonset.



Power Foam ATL · 3D Area Calculator

<https://odannesm-prog.github.io/powerfoam-areas/>