



1. Take down the "vertical shelf holder" use the one which have 2pcs M4 rivet nuts to replace it.

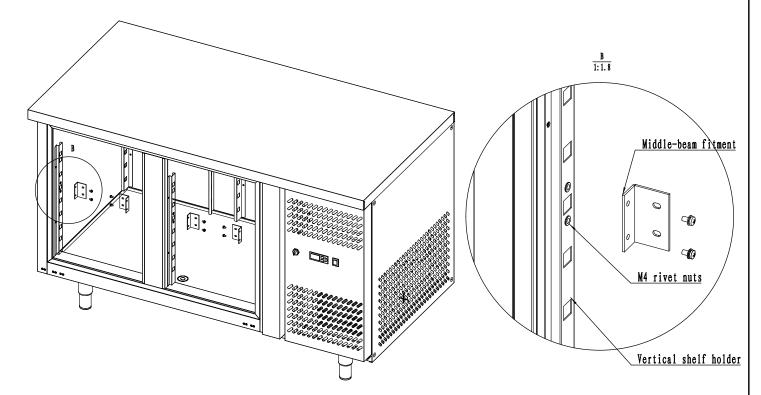



1. Fix the middle-beam fitment on the vertical shelf holder.

Step 5

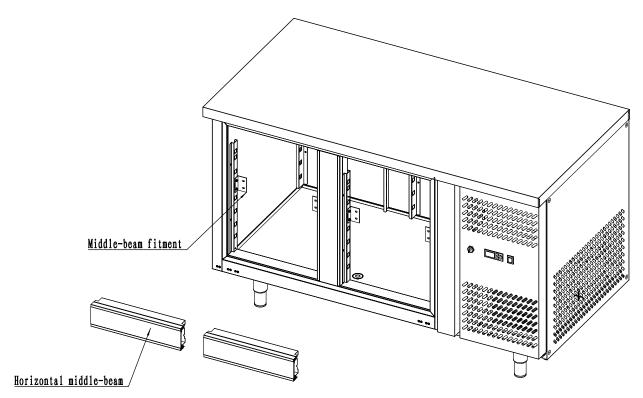

1. Use the T3 self-tapping screw to fix the drawer horizontal middle-beam on the middle-beam fitment.

