

CHANNEL CHECK

CH1, 3, 5 AGREE • CH7 DOESN'T

What it means when the very low frequency swings into OD but the other differentials tell a consistent story.

KEY IDEA

Trust the channels that agree. Very low frequency is for supports, landmarks, and the mix, not for depth.

1 WHY CH7 ACTS DIFFERENTLY

- It reaches well past the tube wall, so it sees supports, deposits, sludge, magnetite, nearby tubes, and loose parts.
- It reacts strongly to magnetic material.
- Its angle-to-depth spread is very compressed, so small disturbances swing the angle a lot.

2 WHAT'S PROBABLY HAPPENING


- CH7 is showing the flaw plus something outside the tube, added together.
- The combined signal lands at a different angle, often rotated toward OD.

3 CHECKS

- Does the mix agree with CH1, 3, and 5?
- Is it at or near a support, AVB, tube sheet, or sludge pile?
- Does CH7 look normal elsewhere in this tube and on the cal standard?
- Does the low-frequency absolute show a deposit or gradual change?
- What does the same spot look like on nearby tubes?

4 HOW TO CALL IT

- Size on the prime frequency your procedure names.
- Use CH7 to explain what's around the flaw, not to decide depth.

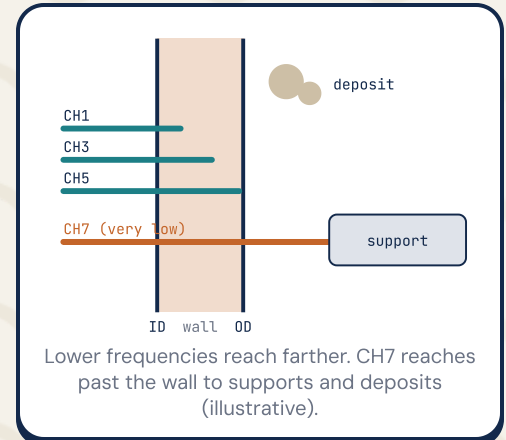

ESCALATE ONLY IF

- › CH7 shows a strong, clean, flaw-shaped signal
- › None of the other channels or the mix see it
- › Nothing outside the tube explains it

QUICK TIPS

Check which channel your procedure uses for sizing.

A setup problem on CH7 shows up on every signal, not just one.

When channels disagree and you can't explain why, flag it.