The Sounding and Wind Map Pages

Profiles, indices, time–height sections, radiosonde checks and wind maps from aircraft data

Otso Laakso (OH2GAX)

Tuusula, Finland · near Helsinki-Vantaa airport (EFHK)

In short. The Sounding page turns the temperatures and winds that MODE-S Wind derives from aircraft transponder replies into the tools a meteorologist uses for upper-air data. Seven buttons choose the view. Area · now, Area · hour and Flight draw one vertical profile on a Skew-T diagram, with an Indices panel of stability indices and characteristic levels and a table of the layer values; the Jokioinen radiosonde and the MEPS model can be drawn beside it, and their indices are computed by the same code for a fair comparison. Time–height puts the hourly profiles side by side, so that fronts, inversions, jet streams, sinking air and the daily cycle are seen as they pass over the receiver — and, derived from the same data, the vertical motion of the air and the spin (vorticity) of the wind field. Sonde check measures how well the aircraft profile agrees with the radiosonde, and how quickly a sounding goes out of date; MEPS check compares it every hour with the MEPS weather model, which can also be drawn on the Skew-T; Mast shows the lowest 300 m measured by the Kivenlahti mast near the airport, against the aircraft, the model and the sonde. The Wind Map page looks at the same data from above: the wind and temperature of one flight level on a map, with isotachs, streamlines, the jet stream, height contours of the pressure surface and comparisons in time and between levels.

This guide explains each view of the Sounding page (Sections 1–9) and the Wind Map page (Section 10), and the physics behind what they show. How to read the Skew-T diagram itself — the lines, the automatic Analysis, the airport low-level profile — is explained in the companion guide *Reading the Atmosphere Profile (Skew-T)*; here it is only summarised. The examples come from 16–19 October 2026: a cold front on 17 October and a strong high-pressure area (QNH 1040 hPa) behind it.

New in version 3.14: the *slope of the pressure surfaces* is taken out of the thickness temperature and of the moisture trial — it was the unexplained drift of both (Sections 5.8 and 5.9). **Version 3.13:** the *top of the surface inversion* is described as it is computed from 10 November 2026 — where the temperature stops rising — and the seven figures that show it are drawn again (Sections 5.11, 5.13 and 9). **Version 3.12:** a *hodograph* beside the level table (Section 3.6); in the time–height section the fields *wind direction*, *wind turning with height*, *Mode S − MEPS*, *data coverage* and *boundary-layer turbulence*, the overlays *isentropes*, *cloud base* and the model *forecast*, the *average day* and three strips under the section (Section 5.13); and the new Calendar view (Section 6). **Version 3.11:** the Mast view — the Kivenlahti mast's 10-minute temperatures and winds of the lowest 300 m with the aircraft, MEPS and the sonde — and the mast in the time–height section and on the Skew-T (Section 9). **Version 3.10:** what GNSS jamming does to the data (Section 11). **Version 3.9:** the *wind shear per flight* field (Section 5.12). **Version 3.8:** the boundary layer *flight by flight* — the headwind of every landing and departure and its change against the flights before it (Section 5.12). **Version 3.7:** the boundary-layer temperature reaches 5 000 ft — above 3 000 ft from the climb-outs (Section 5.11). **Version 3.6:** the *boundary layer* at the airport in the time–height section — two fields for the lowest 5 000 ft (wind and temperature) and an overlay with the low-level jet and the surface inversion (Section 5.11). **Version 3.5:** the MEPS check compares each hour with the model at the aircraft's own positions (Section 8). **Version 3.4:** in Area · now the RH strip shows the last full hour beside the hour in progress (Section 5.9). **Version 3.3:** the MEPS wind barbs on the Skew-T stand beside the aircraft's in the right margin (Section 3.3); the Skew-T and the time–height section are also in the mobile view `/app` (see the *MODE-S Wind on a phone* guide). **Version 3.2:** where the interrogations come from (Section 2). **Version 3.1:** the Skew-T analysis can be computed from the MEPS model or the radiosonde, with their likely cloud layers (Analysis of, Section 3.1). **Version 2.9:** a *MEPS column in the Indices panel* — the model's indices beside the aircraft and the sonde, with clear differences shaded (Section 4.4). **Version 2.8:** the *upper-level temperature correction* — the fleet's warm bias at cruise levels is learnt every hour from the MEPS check and taken off in the Skew-T and the time–height section (Section 8.1); the moisture trial learns its offsets from the MEPS model humidity, and its check through the front of 23–24 October (Section 5.9). **Version 2.7:** the MEPS model on the Wind Map — teal model barbs at the level and the comparison Mode S − MEPS model (Section 10.8). **Version 2.6:** the MEPS profile on the Skew-T uses the model's own levels — 56 levels up to 190 hPa instead of 10 (Section 3.3) — and its relative humidity is drawn in the RH strip next to the aircraft moisture indicator (Section 5.9). **Version 2.4:** the *MEPS* weather model (MET Norway open data) as a profile beside the aircraft on the Skew-T (Section 3.3) and the new MEPS check view, which compares the aircraft with the model every hour and shows how much of the difference to the radiosonde is the distance to Jokioinen (Section 8). **Version 2.3:** the EGM96 geoid is removed from the aircraft GNSS heights (Section 5.8), and the moisture trial got a first check against the soundings and an honest uncertainty (Section 5.9). **Version 2.2:** a first trial of a *moisture indicator* from the aircraft heights in the time–height section and as an RH strip beside the Skew-T (Section 5.9). **Version 2.1:** tropopause and maximum-wind lines, the radiosonde as its own column and saving the picture in the time–height section (Section 5.10); isotherms, a vertical cross-section along a drawn line and all time-slider frames loaded at once on the Wind Map (Sections 10.4 and 10.10); the GNSS height calibration with per-airframe altimeter offsets in the Sonde check (Section 7). **Version 2.0:** the *heights of the pressure surfaces* from the aircraft's GNSS height, with three new fields in the time–height section — height (D-value), height change and a thickness-temperature check (Section 5.8) — and the *Wind Map* page with its jet-stream symbol and geostrophic wind (Section 10). Version 1.1 added vertical motion and vorticity (Sections 5.6 and 5.7).

Contents

1 The page at a glance **4**

2 Where the profile comes from **4**

3 One profile: Area, hour or flight **5**

3.1 The Skew-T diagram in brief 5

3.2 The radiosonde beside the aircraft . . . 5
3.3 The MEPS model beside the aircraft . . . 6
3.4 A single flight . . . 8
3.5 The level table . . . 8
3.6 The hodograph . . . 9

4 The Indices panel **10**
4.1 Surface and parcel . . . 10
4.2 Levels . . . 11
4.3 Lapse rates, thickness and wind . . . 11
4.4 Comparing with MEPS and the sonde . . . 11

5 The time–height section **13**
5.1 How to read the picture . . . 13
5.2 Temperature anomaly: air masses and fronts . . . 13
5.3 Temperature change over 3 hours: advection as it happens . . . 14
5.4 Wind speed: jets and the thermal wind . . . 15
5.5 Lapse rate: stability and inversions . . . 16
5.6 Vertical motion: rising and sinking air . . . 16
5.7 Vorticity: the spin of the wind field . . . 17
5.8 Heights of the pressure surfaces and thickness temperature . . . 19
5.9 Moisture (trial) . . . 22
5.10 Tropopause, maximum wind, sonde columns and saving the picture . . . 26
5.11 The boundary layer: low-level jet and surface inversion . . . 27
5.12 The boundary layer flight by flight . . . 29
5.13 More fields, overlays and strips (version 3.12) . . . 32
5.14 Isotherms and the freezing level . . . 34
5.15 Longer periods . . . 34
5.16 A suggested way to use it . . . 35

6 The Calendar view **35**

7 Sonde check: how good is the aircraft profile? **36**

8 MEPS check: the aircraft against the weather model **38**
8.1 The upper-level temperature correction . . . 39

9 The Mast view: the lowest 300 m **40**
9.1 Tiles and profile . . . 41
9.2 Time series and comparison . . . 41
9.3 The mast in the time–height section and on the Skew-T . . . 42

10 The Wind Map page **44**
10.1 The page at a glance . . . 44
10.2 How the map is made . . . 45
10.3 ΔT: warm and cold air at the level . . . 45
10.4 Isotachs and streamlines . . . 46
10.5 Jet stream . . . 48
10.6 Heights and the geostrophic wind . . . 50
10.7 Radiosonde at the level . . . 51
10.8 The MEPS model at the level . . . 51
10.9 Compare: change in time and the thermal wind . . . 52
10.10 Vertical cross-section along a line . . . 54
10.11 Time slider, animation and settings . . . 55
10.12 A suggested way to use it . . . 55

11 Limitations **55**

12 Quick reference **57**

A Formulas **58**

1 The page at a glance

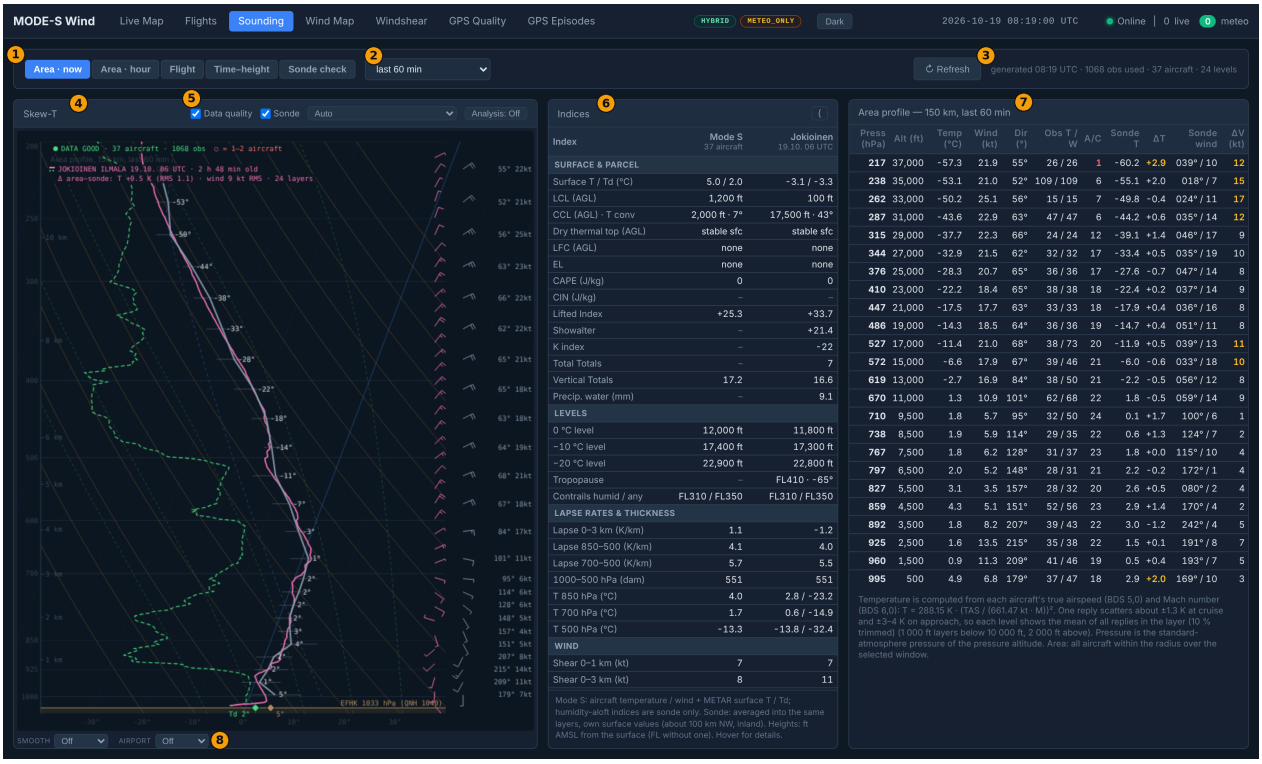

Figure 1. The Sounding page, Area · now, 19 October 2026 07:19–08:19 UTC, with Sonde on. (1) view buttons, (2) the controls of the view (here the time window), (3) refresh and summary: observations, aircraft and layers used, (4) Skew-T diagram: grey Mode S area profile, pink radiosonde, green dashed sonde dewpoint, (5) Data quality, Sonde with the sounding selector, Analysis, (6) Indices panel: Mode S and Jokioinen side by side, (7) level table with the sonde columns, (8) Smooth and Airport. Surface values from the METAR stored for 07:50 UTC (5/2 °C, QNH 1040).

The seven buttons at the top left ((**1**) in Fig. 1) choose what the page shows; the choice is remembered in the browser.

Area · now — the live area profile: all aircraft within 150 km of the receiver over the last 30 or 60 minutes, 2 or 3 hours (default 60 minutes), with the current METAR at the ground.

Area · hour — the *hourly profile archive*: one area profile stored for every completed UTC hour, kept indefinitely, also after the observations themselves have been purged. Pick a date and an hour; the list shows how many observations each hour has. The METAR of that hour (temperature, dewpoint, QNH, lowest cloud) is stored with it (from 11 October 2026).

Flight — the profile of one climbing or descending aircraft, chosen from a list of recent flights with a large enough altitude range (or opened with the Sounding button of the Flights page).

Time–height — the hourly profiles side by side over 24 h to 14 days (Section 5).

Sonde check — the automatic verification against the radiosonde (Section 7).

MEPS check — the aircraft against the MEPS weather model, every hour (Section 8).

Mast — the Kivenlahti mast: the lowest 300 m every 10 minutes, with the aircraft, the model and the sonde beside it (from 1 November 2026, Section 9).

The first three views share the same layout: the Skew-T on the left, the Indices panel in the middle and the level table on the right. On narrow screens the table moves below the diagram, and the ⟨ button hides the Indices panel (a slim Indices tab brings it back).

2 Where the profile comes from

Aircraft as weather sensors. Airliners answer the interrogations of ground stations — in Finland mainly the transmitters of Fintraffic's nationwide wide-area multilateration (WAM) network, and Mode S radars — with *Enhanced Surveillance* reports. Two of them carry the airspeeds and directions of the aircraft: **BDS 5,0** (true track, groundspeed, true airspeed TAS, roll angle) and **BDS 6,0** (magnetic heading, Mach number, indicated airspeed). From each pair MODE-S Wind computes

- the **air temperature**, because the ratio of true airspeed to Mach number is the speed of sound, which depends only on temperature: $T = 288.15\,\left(\mathrm{TAS}/(661.47\,\mathrm{kt}\cdot M)\right)^2$ K;
- the **wind**, as the difference between the ground vector (track, groundspeed) and the air vector (true heading, TAS) — the wind triangle. The heading is corrected for magnetic declination and for each airframe's own heading offset, which the system learns.

A single reply pair scatters by about ± 1.3 K at cruise and 3–4 K at approach speeds, because Mach is sent in steps of 0.004 and TAS in steps of 2 kt. Averaging many replies removes most of this; no per-airframe temperature calibration is needed (the README explains why). What averaging cannot remove is a bias common to the whole fleet: at cruise levels the Mach/TAS temperature reads about 0.7 K warm. Since 24 October 2026 this is corrected above about FL240 with a value learnt from the MEPS weather model (Section 8.1).

Pressure altitude is pressure. The altitude an aircraft reports is its *pressure altitude*: the height at which the measured static pressure would occur in the International Standard Atmosphere (ISA), referenced to 1013.25 hPa. FL300 is therefore always the 301 hPa surface, whatever the weather. The page uses this directly as the vertical coordinate: each layer's pressure is the ISA pressure of its pressure altitude. True heights above the sea differ from pressure altitude with the QNH and with the temperature of the air column; the Indices panel computes true heights from the METAR surface pressure (Section 4).

The area profile. Observations within 150 km of the receiver are grouped into layers 1 000 ft deep up to 10 000 ft and 2 000 ft deep above (to 46 000 ft). For each layer the **temperature** is the 10 % trimmed mean (the warmest and coldest tenth removed) and the **wind** the vector mean. A daytime hour typically has 25–70 different aircraft, about 20 per layer; around midnight UTC only 2–8 aircraft fly in the area. The profile is thus an *area and time average*: 300 km across and 60 minutes long. A radiosonde is the opposite: one point, measured within about an hour, but at full vertical resolution and with humidity.

What is not measured. Aircraft report no humidity. The only moisture value is the METAR dewpoint at the airport, so the Mode S column of the Indices panel cannot give indices that need humidity aloft; the sonde and MEPS columns can.

3 One profile: Area, hour or flight

3.1 The Skew-T diagram in brief

The diagram is the same as the Atmosphere Profile of the Live Map, only larger. Pressure is the vertical axis (logarithmic, 1000 hPa at the bottom), temperature runs along lines tilted 45° to the right. The grey curve is the Mode S temperature with the layer values, the short horizontal bars the 10–90 % range of the replies; wind barbs and their direction and speed are on the right. Faint brown lines are dry adiabats, dashed green lines moist adiabats, the bold blue diagonal is 0 °C and the dashed blue line the ISA. At the bottom the brown ground line is the station pressure from the METAR QNH, with the METAR temperature and dewpoint.

The controls work as on the Live Map and share their settings with it:

- Data quality: a badge with the number of aircraft and observations (`DATA GOOD` ≥ 20 aircraft per hour of window, `FAIR` 8–19, `LOW` < 8), and red rings on layers measured by only one or two aircraft;
- Analysis: Off / Levels / Stability / Turbulence / Advection / Full — tropopause, isotherms, jets, inversions, stability strip, turbulence risk, warm and cold advection, contrail levels, thermal top and surface parcel;
- Smooth: a running mean of 3 or 5 layers on the temperature curve;
- Airport: the low-level profile from the landings and departures at EFHK (200 ft bands) of the shown period — the selected window, that hour, or the flight's time ± 15 minutes;
- Analysis of: Mode S (default), MEPS or Sonde — which profile the analysis describes. The model or the sounding of the shown period is averaged into the aircraft layers (as for the Indices panel) and analysed with its own surface point and humidity — from Stability up with the likely cloud layers (relative humidity ≥ 90 %, over ice below 0 °C) shaded grey; a tag at the top left of the diagram names it (`ANALYSIS · MEPS 24.10. 12 UTC +4 h`). Choosing one ticks that profile on; without it the analysis stays with Mode S and the tag says so. The Skew-T guide shows an example.

3.2 The radiosonde beside the aircraft

The Finnish Meteorological Institute launches a radiosonde at Jokioinen (about 100 km north-west of the receiver, inland) at about 23:30, 05:30 and 11:30 UTC for the 00, 06 and 12 UTC soundings. MODE-S Wind fetches them from FMI open data as they appear — often while the balloon is still climbing — and stores them. With Sonde ticked the sounding is drawn in pink, its dewpoint as a dashed green curve and its winds as pink barbs, and a label gives its age and the mean difference area − sonde.

The Auto setting of the sounding selector chooses: in Area · now the newest sounding; in Area · hour and Flight the newest

one launched by the end of that hour or flight (at most 36 h older), with its age counted to the middle of the hour or flight. Any stored sounding can also be picked by hand, for example the one launched *after* an hour, to see how the atmosphere had changed. Partial soundings show their top (`· to 350 hPa`); FMI's open-data copy of a flight often ends at 250–550 hPa.

The two profiles never agree exactly, and the differences are informative. In calm weather (Fig. 1) they agree within about 1 K and 10 kt through most of the column. When a front lies between Jokioinen and Helsinki they can differ by several degrees (Fig. 2).

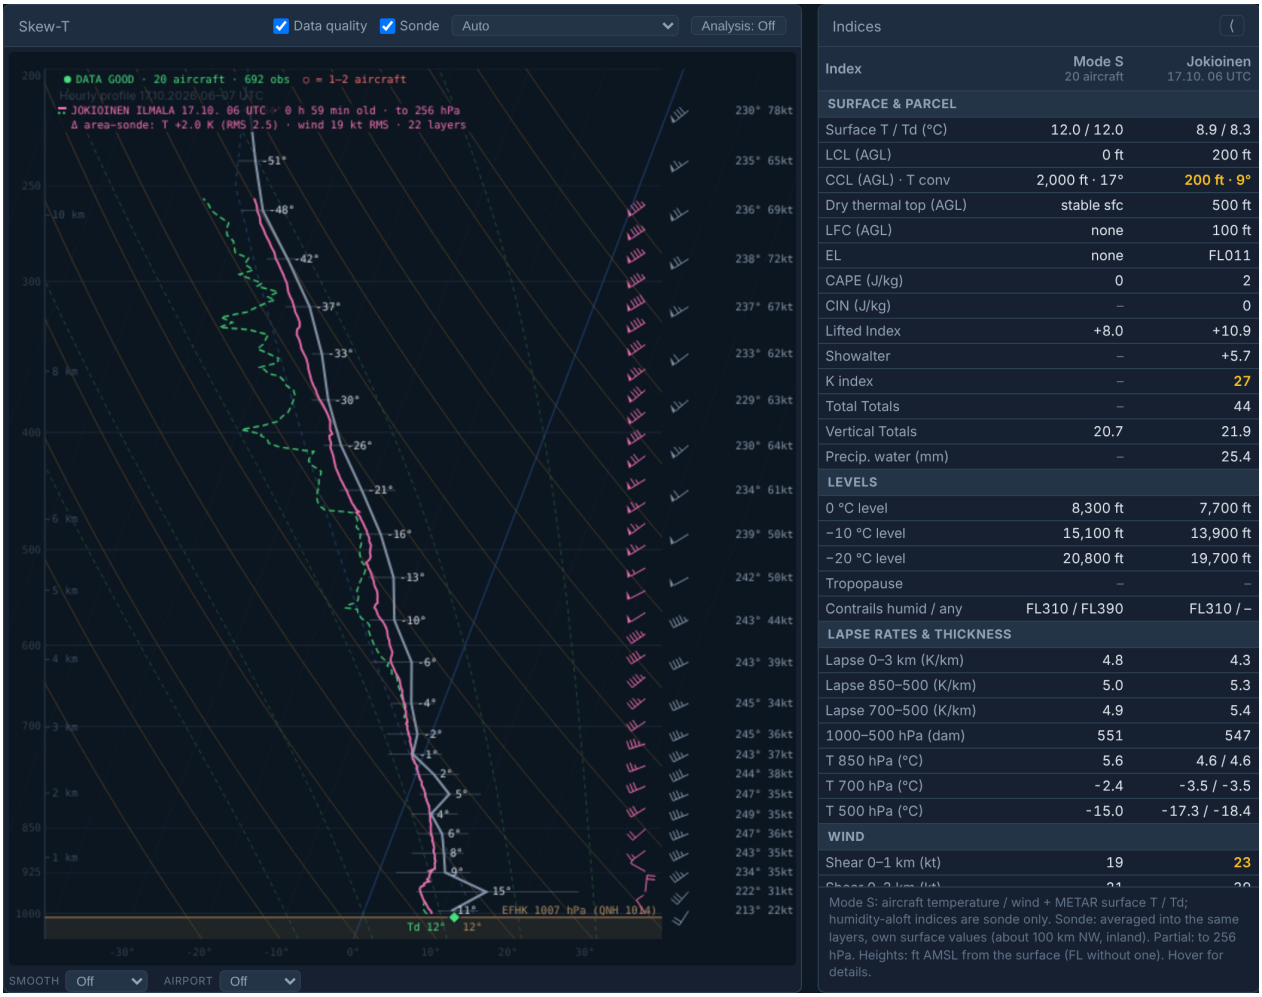

Figure 2. Area · hour 17 October 2026 06–07 UTC with the 06 UTC Jokioinen sounding. Over Helsinki the aircraft still measure the warm, south-westerly air ahead of a cold front: 15 °C and 222°/31 kt at 1 500 ft above a cooler, saturated surface layer (METAR 12/12, BKN006). At Jokioinen, already behind the front, the lowest 2 000 ft are 3–8 K colder with a northerly wind (357–006°), while above about 3 000 ft both show the same south-westerly flow. The whole column is warmer over Helsinki: 1000–500 hPa thickness 551 against 547 dam, about 2 K.

This is a textbook picture of a cold front: the cold air advances as a shallow wedge under the warm air, so at a given moment the front is already past at the ground at Jokioinen but not yet over Helsinki, and aloft both sites are still in the same air. The front reached EFHK at about 08–09 UTC (the wind at 1 000 ft turned from 244° to 353°, the METAR temperature fell from 12 to 9 °C). Section 5 shows how the same front looks in the time–height section.

3.3 The MEPS model beside the aircraft

MEPS (MetCoOp Ensemble Prediction System) is the weather model that FMI runs together with the Norwegian and Swedish weather services, at 2.5 km resolution. MODE-S Wind fetches its main run every 3 hours from MET Norway's open data archive and stores, for every hour, the model *averaged over the same 150 km area* as the aircraft profile (and its column at Jokioinen). With MEPS ticked the model is drawn in teal: temperature as a solid line, dewpoint dashed, winds as teal barbs in the right margin, just left of the aircraft's grey barbs, beside their values (the sonde's pink barbs stand inside the right edge of the plot). The label gives the run and how many hours after its start the shown time is, e.g. `MEPS 22.10.  09 UTC run +2 h`, and the mean difference area − model; hovering adds the model's temperature,

dewpoint, relative humidity and wind at the level (Fig. 3).

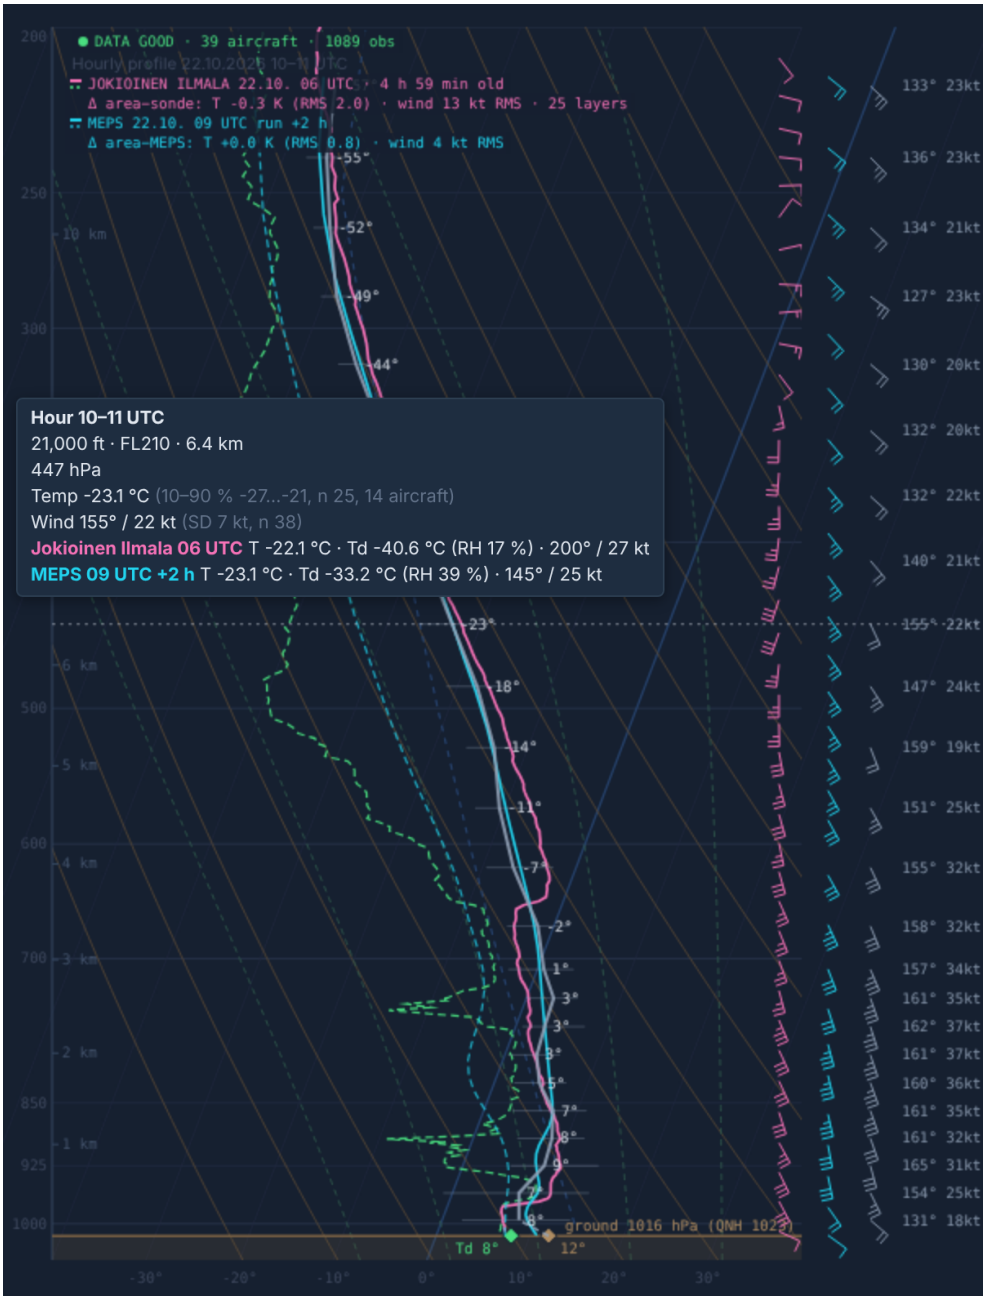

Figure 3. Area · hour 22 October 2026 10–11 UTC with Sonde and MEPS. At 447 hPa the aircraft (grey) measure −23.1 °C and 155°/22 kt, the model over the same area −23.1 °C and 145°/25 kt, the 06 UTC sounding — 5 hours older and 100 km away — −22.1 °C and 200°/27 kt. Over the whole column the area profile is 0.8 K and 4 kt RMS from the model but 2.0 K and 13 kt from the sounding. Teal: the model on its own levels; right of the plot the model's barbs, then the aircraft's with their values.

In Area · now (and on the Live Map) the newest run is already 2–3 hours old when it appears in the archive, so the present hour is a short forecast, +3 to +5 h, and the label says `(forecast)`. In Area · hour and Flight the model is taken at that time, from its own run (+0 to +2 h), and is then as good as the model gets.

The model's levels. The model computes its weather on 65 levels that follow the ground near the surface and become pressure levels high up. MODE-S Wind takes the 56 of them below about 190 hPa (Table 1): the lowest is about 12 m above the ground, and near the ground they are only 25 m apart, so the model line on the Skew-T is a smooth curve with its own surface inversions and the shape of the tropopause, and the teal barbs are as dense as the diagram allows (they are thinned so that they do not overlap). Below about 5 km the model levels are closer together than the aircraft layers (1 000 ft); higher up they are about as far apart. Each level is averaged over the area on the level itself, and its pressure is the area mean.

Height	Pressure	Model levels	Spacing
ground – 1.5 km	1013–850 hPa	24	25–140 m
1.5 – 3 km	850–700 hPa	9	150–230 m
3 – 5.5 km	700–500 hPa	9	240–350 m
5.5 – 9 km	500–300 hPa	9	360–520 m
9 – 12 km	300–190 hPa	5	540–730 m

Table 1. The MEPS model levels used on the Skew-T (standard atmosphere).

The model's *standard pressure levels* — 1000, 925, 850, 800, 700, 500, 400, 300, 250 and 200 hPa — are fetched as well: they carry the heights of the pressure surfaces, and the MEPS check (Section 8) uses them. Until 22 October 2026 the Skew-T showed only these 10 levels, with straight lines between them; it falls back to them (the label then says `10 std levels`) for hours when the model levels could not be fetched. Fetching the model levels takes about four times the data of the standard levels, about 50 MB a day; `MEPS_MODEL_LEVELS = False` in the configuration switches them off.

Humidity aloft. The model's dewpoint is a second source of humidity above the ground besides the radiosonde (the aircraft report none). It is the model's weakest quantity: in the example of Fig. 3 the model gives 39 % at 447 hPa and the five-hour-old sounding 17 %. Against the sondes at their own time the model's relative humidity is typically within about 10 % below 500 hPa.

3.4 A single flight

Flight draws the replies of one aircraft as it climbs out or descends, with its own wind and temperature layers (Fig. 4). It is a single instrument at a single time — the closest thing to a radiosonde the aircraft data offer — but every layer rests on one to six replies of one airframe, so the zigzags of 2–3 K are mostly Mach and TAS steps rather than real structure. Compare it with the area profile of the same hour before reading anything into a single bend. A flight's profile also has gaps where the radar happened not to interrogate the aircraft; the note under the Indices panel lists them, and values above a gap are less certain. A flight has no METAR, so the surface-based indices are left out.

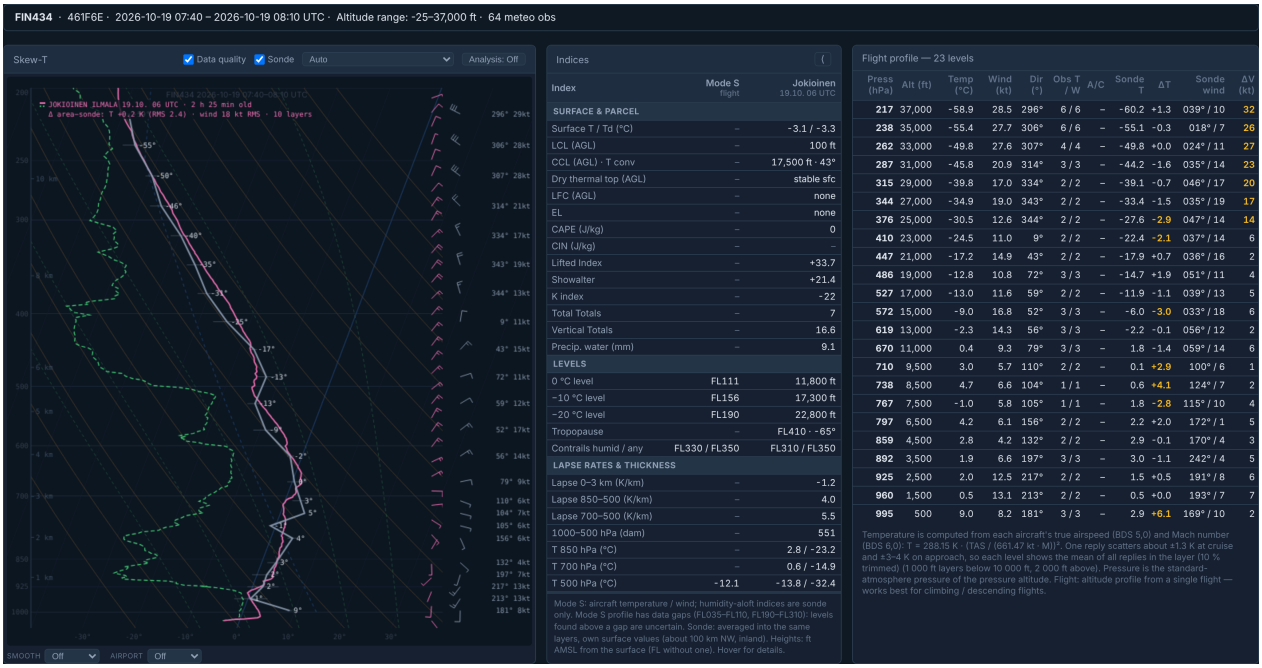

Figure 4. Flight: a departure on 19 October 2026 07:40–08:10 UTC with the 06 UTC sounding. Both show the nearly isothermal layer of 0 to +5 °C between about 2 000 and 11 000 ft; the aircraft's single replies zigzag by 2–4 K around it. Above FL250 the aircraft measured north-westerly 20–28 kt where the sonde, 100 km away and two hours earlier, had north-easterly 7–19 kt: under the high the winds were light and variable, so small differences in place and time matter.

3.5 The level table

The table lists every layer from the top down, as in the diagram: ISA pressure, layer centre (pressure altitude), temperature (hover: 10–90 % range), wind speed (hover: vector standard deviation) and direction, the number of replies for temperature and wind, and the number of different aircraft (A/C, red when only one or two). With Sonde on, four

columns follow: the sonde temperature at the layer's pressure, ΔT (layer − sonde, amber beyond 2 K), the sonde wind and ΔV, the length of the vector difference (amber beyond 10 kt). In Fig. 5 the front is the column of large ΔT and ΔV in the lowest 3 000 ft.

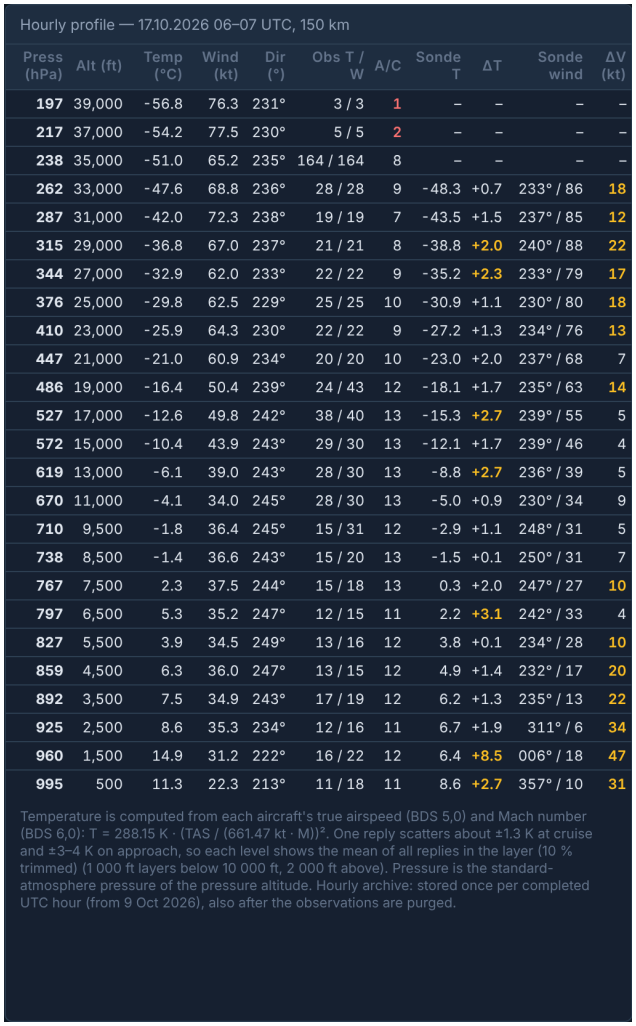

Hourly profile — 17.10.2026 06–07 UTC, 150 km

Press (hPa)	Alt (ft)	Temp (°C)	Wind (kt)	Dir (°)	Obs T / W	A/C	Sonde T	ΔT	Sonde wind	ΔV (kt)
197	39,000	-56.8	76.3	231°	3 / 3	1	–	–	–	–
217	37,000	-54.2	77.5	230°	5 / 5	2	–	–	–	–
238	35,000	-51.0	65.2	235°	164 / 164	8	–	–	–	–
262	33,000	-47.6	68.8	236°	28 / 28	9	-48.3	+0.7	233° / 86	18
287	31,000	-42.0	72.3	238°	19 / 19	7	-43.5	+1.5	237° / 85	12
315	29,000	-36.8	67.0	237°	21 / 21	8	-38.8	+2.0	240° / 88	22
344	27,000	-32.9	62.0	233°	22 / 22	9	-35.2	+2.3	233° / 79	17
376	25,000	-29.8	62.5	229°	25 / 25	10	-30.9	+1.1	230° / 80	18
410	23,000	-25.9	64.3	230°	22 / 22	9	-27.2	+1.3	234° / 76	13
447	21,000	-21.0	60.9	234°	20 / 20	10	-23.0	+2.0	237° / 68	7
486	19,000	-16.4	50.4	239°	24 / 43	12	-18.1	+1.7	235° / 63	14
527	17,000	-12.6	49.8	242°	38 / 40	13	-15.3	+2.7	239° / 55	5
572	15,000	-10.4	43.9	243°	29 / 30	13	-12.1	+1.7	239° / 46	4
619	13,000	-6.1	39.0	243°	28 / 30	13	-8.8	+2.7	236° / 39	5
670	11,000	-4.1	34.0	245°	28 / 30	13	-5.0	+0.9	230° / 34	9
710	9,500	-1.8	36.4	245°	15 / 31	12	-2.9	+1.1	248° / 31	5
738	8,500	-1.4	36.6	243°	15 / 20	13	-1.5	+0.1	250° / 31	7
767	7,500	2.3	37.5	244°	15 / 18	13	0.3	+2.0	247° / 27	10
797	6,500	5.3	35.2	247°	12 / 15	11	2.2	+3.1	242° / 33	4
827	5,500	3.9	34.5	249°	13 / 16	12	3.8	+0.1	234° / 28	10
859	4,500	6.3	36.0	247°	13 / 15	12	4.9	+1.4	232° / 17	20
892	3,500	7.5	34.9	243°	17 / 19	12	6.2	+1.3	235° / 13	22
925	2,500	8.6	35.3	234°	12 / 16	11	6.7	+1.9	311° / 6	34
960	1,500	14.9	31.2	222°	16 / 22	12	6.4	+8.5	006° / 18	47
995	500	11.3	22.3	213°	11 / 18	11	8.6	+2.7	357° / 10	31

Temperature is computed from each aircraft's true airspeed (BDS 5,0) and Mach number (BDS 6,0): $T = 288.15\ \mathrm{K} \cdot (\mathrm{TAS} / (661.47\ \mathrm{kt} \cdot \mathrm{M}))^2$. One reply scatters about ±1.3 K at cruise and ±3–4 K on approach, so each level shows the mean of all replies in the layer (10 % trimmed) (1 000 ft layers below 10 000 ft, 2 000 ft above). Pressure is the standard-atmosphere pressure of the pressure altitude. Hourly archive: stored once per completed UTC hour (from 9 Oct 2026), also after the observations are purged.

Figure 5. Level table of Fig. 2. The lowest layers differ from the sonde by up to +8.5 K and 47 kt (opposite wind directions across the front); higher up the differences are mostly within ±2 K and 5–20 kt. The top three layers are above the end of the sounding.

3.6 The hodograph

Above the level table is a hodograph (Fig. 6). It shows the wind of every layer as *one point*: the tip of the wind vector, with north up and east to the right, so a north-westerly wind lies to the lower right of the centre. The points are joined from the ground upwards and coloured by height, from red at the ground to violet at the top; the rings are the wind speed.

- **The length of the curve** between two heights is the vertical wind shear between them — the vector difference of the two winds. The total from the lowest to the highest point is written under the curve.
- **The turning.** A curve that turns clockwise with height is a wind veering with height: warm air is being brought in. Anticlockwise is backing: cold air.
- **A low-level jet** is a loop that goes out and comes back within the lowest few thousand feet.

A radiosonde gives one point per level. Here each point is the *mean wind of all aircraft in the layer* — within the sounding radius over the hour or the chosen period — or, in Flight, of the one flight. The faint disc around a point is the uncertainty of that mean: the scatter between the layer's winds divided by the square root of the number of aircraft, typically about 1 kt by day. A bend smaller than the discs is noise. Points that rest on fewer than three aircraft are hollow. Hovering a point gives its layer, wind, aircraft and scatter.

Previous hours adds the two hours before, faded, to show how the profile is turning. The selector limits the height range (all levels, below FL200, 10 000 or 5 000 ft); the view is always fitted to the data. With Airport on Overlay or Zoom the airport's low-level profile in 200-ft steps is drawn in amber: the closest thing to a point sounding, but from few flights and therefore more ragged. The limit is the same as for the Skew-T: when a front is crossing the area, the aircraft on its two sides see different winds and the mean blurs them.

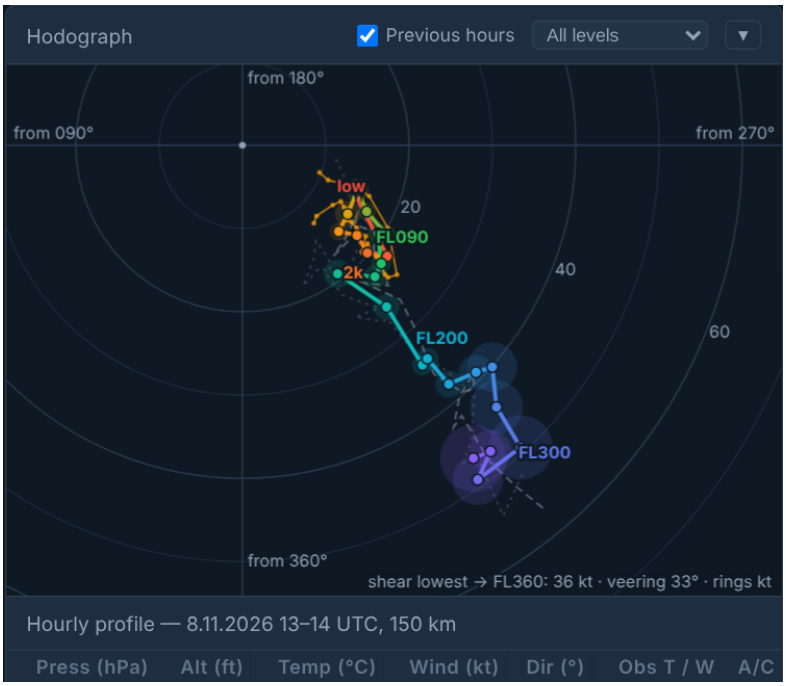

Figure 6. The hodograph of the hourly profile of 8 November 2026, 13–14 UTC: a north-westerly wind that grows from 14 kt in the lowest layer to 49 kt at FL300 and veers by about 30° on the way (from 291° to 320°); the dashed grey curves are the two hours before, the amber curve the airport's low-level profile.

4 The Indices panel

The panel lists stability indices and characteristic levels for the shown profile (Mode S) and, with MEPS and Sonde ticked above the Skew-T, for the MEPS model (MEPS) and the radiosonde (Jokioinen) — any one of them or both. All columns are computed by the same code, and the sounding and the model are first averaged into the same 1 000 / 2 000 ft layers as the aircraft profile, so the comparison shows measurement differences, not differences in resolution. Each column uses its own surface point: the Mode S column the METAR, the sonde column the sonde's surface values and the MEPS column the model's lowest level (Section 4.4). Hover a label for its definition and a value for details (its pressure, all inversions or turbulence layers, the further crossings of an isotherm, or why a value cannot be given). Amber and red mark values that indicate instability or strong gradients.

Heights are computed *hypsometrically* from the surface point: each layer's thickness follows from its mean temperature (Section A). Parcel levels are given in feet above the ground (AGL), isotherms in feet above mean sea level; without a surface point (a flight) only flight levels are given. Temperatures are not interpolated across a data gap of more than one missing 2 000 ft layer, and the note lists such gaps.

4.1 Surface and parcel

These rows lift the surface air — the METAR temperature and dewpoint — and compare it with the profile. They describe convection that starts from the ground.

LCL Lifting condensation level: rising air cools at the dry adiabatic rate (9.8 K/km) until it reaches its dewpoint and condenses. With a well-mixed boundary layer this is the base of cumulus clouds, roughly 400 ft for each degree of spread $T - T_d$. In Fig. 2 the METAR 12/12 gives an LCL at the ground: the air was saturated (low stratus).

CCL and convective temperature The convective condensation level is where the line of constant moisture through the surface dewpoint meets the profile; the convective temperature is the surface temperature that would carry dry thermals up to it. When the surface reaches it (amber), cumulus from surface heating alone can form.

Dry thermal top The surface temperature lifted along the dry adiabat until it meets the profile: the depth of dry thermals and of daytime mixing. `stable sfc` means the air above the ground is warmer than surface air lifted to it — a surface inversion.

LFC, EL, CAPE, CIN Above the LCL the parcel follows a moist adiabat. If it becomes warmer than its surroundings (level of free convection, LFC) it rises freely until it is again as cold as the environment (equilibrium level, EL, roughly the top of convective clouds). CAPE is the energy the parcel gains in between (amber ≥ 100, red $\geq 1\,000$ J/kg); CIN is the energy needed to lift it to the LFC.

Lifted Index, Showalter Environment minus parcel temperature at 500 hPa for a surface parcel (LI) or an 850 hPa

parcel (Showalter, sonde and MEPS only). Negative values mean unstable air (amber ≤ -1, red ≤ -5 for LI).

K index, Total Totals, Vertical Totals Classic air-mass thunderstorm indices from the temperatures and dewpoints at 850, 700 and 500 hPa. Only Vertical Totals, $T_{850} - T_{500}$, needs no humidity and is available from the aircraft; values over about 30 mean steep mid-level lapse rates.

Precipitable water All the water vapour of the column, as millimetres of liquid water (sonde and MEPS only).

Under a high-pressure area, as in Fig. 1, all of these say the same thing: very stable air (Lifted Index $+25$ to $+34$, no LFC, `stable sfc`). The LCL of the Mode S column (1 200 ft) and of the sonde (100 ft) differ because the surface values differ: 5/2 °C at the airport against $-3/-3$ °C at the sonde site, inland after a clear night.

4.2 Levels

0, −10, −20 °C levels The lowest crossing of each isotherm; `(+n)` and the hover list further crossings, which mean a warm or cold layer aloft. The freezing level matters for the type of precipitation and for airframe icing, which is most common in supercooled cloud between 0 and about −15 °C.

Tropopause The WMO definition: the lowest level above 5 km where the lapse rate falls to 2 K/km or less and stays so for at least 2 km. The aircraft data often end at about FL410 and the stored MEPS levels at about 190 hPa (FL390), so a high tropopause is found only by the sonde (FL410 in Fig. 1).

Contrails The lowest level where a jet engine's exhaust forms a contrail if the air is saturated / at any humidity (Schmidt–Appleman criterion). Contrails persist only in air that is supersaturated with respect to ice, which the aircraft cannot measure.

When the 0 °C level is ill-defined. On 18–19 October the air between the ground and about 11 000 ft was nearly isothermal at 0 to +4 °C, the result of sinking air under the high (Section 5.5). In such a layer the first crossing of 0 °C is decided by a few tenths of a degree, and noise of ±1 K can move it by several thousand feet from one hour to the next (the jumping 0 °C line on 19 October in Figs. 9–12). This is a property of the atmosphere, not an error: the hover list of further crossings shows it.

4.3 Lapse rates, thickness and wind

Lapse rates Temperature fall per km between the surface and 3 km, 850–500 and 700–500 hPa. The ISA has 6.5 K/km; values from 7 (amber) towards the dry adiabatic 9.8 K/km (red from 9) mean steep, potentially unstable layers. Small or negative values mean stable air or inversions.

1000–500 hPa thickness The depth of the layer between the two pressure surfaces, in decametres. By the hypsometric equation it depends only on the layer's mean temperature: 1 dam corresponds to about 0.5 K. 551 dam means a layer mean of about −1.5 °C; about 528 dam is a common rule-of-thumb divide between rain and snow. Thickness is an excellent comparison between the aircraft and the sonde, because it averages the whole lower half of the troposphere: on 14–19 October the two agreed to +0.6 dam on average.

T 850 / 700 / 500 hPa Temperatures at the standard pressure levels used on weather maps (sonde and MEPS: and dewpoints).

Bulk shear 0–1, 0–3, 0–6 km The vector difference between the wind at that height above the ground and the lowest layer. Strong 0–6 km shear (≥ 40 kt, amber) organises convection when there is any.

Max wind, low-level jet The strongest wind (a jet stream from 60 kt) and a wind maximum below 5 000 ft that is at least 25 kt and 10 kt stronger than above it.

Lowest inversion, turbulence layers From the automatic analysis: the lowest significant inversion with its temperature rise, and layers with a turbulence risk from strong shear and a small Richardson number.

Advection The strongest warm or cold advection, estimated from the turning of the wind with height (the thermal wind, Section 5.4).

The area profile is a 150 km, 60-minute average, so its shear and maximum wind are usually smaller than in the sonde: on 14–19 October the Mode S 0–6 km shear was on average 8 kt lower.

4.4 Comparing with MEPS and the sonde

Ticking MEPS above the Skew-T adds a MEPS column, ticking Sonde a sonde column; with both, the panel has three columns (Fig. 7). Mode S and MEPS describe the same 150 km area, so their differences come from the measurement and the model; the sonde is one point about 100 km to the north-west.

Indices

Index	Mode S 37 aircraft	MEPS 12 +4 h fcst	Jokioinen 24.10. 12 UTC
SURFACE & PARCEL			
Surface T / Td (°C)	8.0 / 7.0	9.8 / 7.3	9.6 / 8.6
LCL (AGL)	400 ft	1,100 ft	400 ft
CCL (AGL) · T conv	300 ft · 8°	1,600 ft · 11°	400 ft · 9°
Dry thermal top (AGL)	stable sfc	600 ft	800 ft
LFC (AGL)	none	none	400 ft
EL	none	none	FL082
CAPE (J/kg)	0	0	86
CIN (J/kg)	–	–	0
Lifted Index	+7.1	+6.1	+5.8
Showalter	–	+8.1	+9.0
K index	–	4	-12
Total Totals	–	43	42
Vertical Totals	25.2	24.4	21.8
Precip. water (mm)	–	12.8	14.3
LEVELS			
0 °C level	5,700 ft	5,500 ft	4,700 ft
−10 °C level	12,100 ft	11,900 ft	12,900 ft
−20 °C level	16,500 ft	16,800 ft	17,300 ft
Tropopause	FL310 · -50°	FL330 · -52°	FL330 · -53°
Contrails humid / any	FL250 / FL310	FL250 / FL310	FL250 / FL310
LAPSE RATES & THICKNESS			
Lapse 0–3 km (K/km)	4.6	5.6	5.1
Lapse 850–500 (K/km)	6.2	6.0	5.3
Lapse 700–500 (K/km)	7.3	6.5	6.6

Figure 7. The Indices panel with three columns: Area · hour 24 October 2026 15–16 UTC, the MEPS 12 UTC run +4 h (`fcst`) and the 12 UTC Jokioinen sounding. The shaded values differ clearly from Mode S: the MEPS convective condensation level (1 600 against 300 ft, from the model's warmer and drier lowest level, 9.8/7.3 °C against the METAR 8/7 °C) and the sonde's Vertical Totals (21.8 against 25.2). Further down (not shown), the Mode S maximum wind of 73 kt at FL390 is shaded against both: it rests on a single aircraft in the top layer.

The MEPS column. The model's levels are averaged into the aircraft layers like the sonde, and the model's dewpoints give the humidity indices (Showalter, K index, Total Totals, precipitable water) that the aircraft cannot. Its surface point is the model's own lowest level — about 12 m above the model ground, averaged over the area — not the METAR, so the surface-based rows (LCL, CCL, thermal top, CAPE) show the model's view of the boundary layer. The header gives the run and its lead time; a time more than 2 h into the run is a forecast and is marked `fcst` — always in Area · now (+3 to +5 h) and in the latest hours of the archive (hover the header for the run, the area and the number of model points). With only the 10 standard pressure levels stored (before the model levels were collected) the low levels are coarse, and the note says so. The model ends at about 190 hPa, so a tropopause or maximum wind above it is outside the model column.

Shaded values. A MEPS or sonde value that differs clearly from the Mode S value is shaded, and hovering any value shows the difference (`Mode S − MEPS: −1 300 ft`). The limits are set a little above the usual scatter of the two methods, so that a shaded value is worth a look (Table 2). Shading is not an error flag: through a front the model and the sonde may well be right to differ, and the surface rows differ whenever the surface points do. A row shaded against *both* references usually points to the aircraft profile — often a layer that rests on one or two aircraft, which the level table shows.

Rows	Shaded when Mode S differs by more than
LCL, CCL, dry thermal top; LFC; EL	1 000 ft; 1 500 ft; 3 000 ft
0, −10, −20 °C levels; tropopause, contrails	1 000 ft; 2 000 ft (one 2 000 ft layer is not enough)
surface T; T 850 / 700 / 500; Lifted Index, Showalter; Vertical Totals	2 K
CAPE; CIN	200 and 30 %; 50 J/kg and 30 %
K index; Total Totals; precipitable water	5; 4; 3 mm
lapse rates; 1000–500 hPa thickness	1.5 K/km; 3 dam
shear, maximum wind, low-level jet	10 kt

Table 2. Limits for shading a reference value in the Indices panel. Inversions, turbulence layers and advection are not compared.

5 The time–height section

A single sounding is a snapshot. The weather is a film: air masses, fronts, troughs and ridges move over the receiver, and the profile changes from hour to hour. The Time–height view shows this film on one picture. It is built from the hourly profile archive: **one column per UTC hour, one row per altitude layer, time running to the right.** The current hour is added live from the observations (dashed frame).

5.1 How to read the picture

- **Height scale.** The vertical axis is the square root of the pressure altitude, which stretches the lowest levels: the 1 000 ft layers below 5 000 ft keep a readable height, while FL300–FL420 are compressed. The left axis gives feet and flight levels, the right axis the ISA pressure.
- **Colour field** (selector): temperature anomaly, temperature change over 3 h, wind speed, lapse rate, vertical motion, vorticity, height of the pressure surfaces, height change over 6 h or the thickness-temperature check (below).
- **Barbs**: wind barbs on every second column and layer as space allows, with a dark halo so they read on any colour.
- **Isotherms**: the lowest 0 °C crossing of each hour (solid) and the −10 and −20 °C crossings (dashed, dotted), joined from hour to hour.
- **Markers**: pink triangles at the top mark the Jokioinen launches; day separators carry the weekday.
- **Aircraft strip**: below the plot, the number of aircraft in each hour; red bars (< 8 aircraft, LOW) and amber bars (< 20) warn that the column rests on little data — typically 22–02 UTC. Cells with fewer than 3 replies are drawn faint; empty cells (dark) had no data at all.
- **Hover and click**: the tooltip gives the hour, the layer and its pressure, temperature with anomaly and 3-hour change, lapse rate, wind and aircraft counts (Fig. 8). A click opens that hour on the Skew-T (Area · hour), with its indices and the sonde.
- **Length and end**: 24 h, 48 h, 72 h, 7 or 14 days, ending now or at the end of a chosen UTC day.

Time is (almost) space. Weather systems move, mostly with the wind of the middle troposphere. What passes over the receiver during a day was upstream the day before, so a time–height section is close to a vertical cross-section through the weather system along its direction of motion — with one twist: because time runs to the right, the part of the system that arrives *first* (its leading, downstream side) is on the *left*. A system moving at 20 kt covers about 900 km in 24 hours; the 300 km wide averaging area corresponds to several hours (about 8 hours at 20 kt), so sharp features are smoothed over several columns.

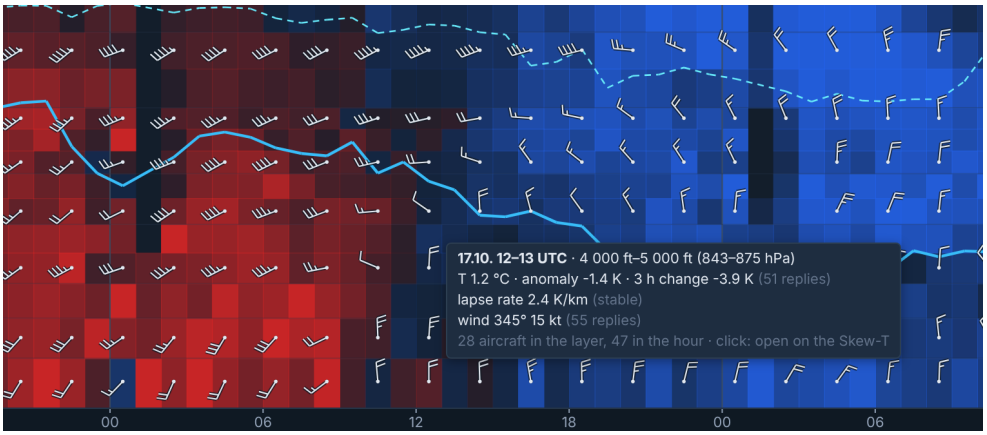

Figure 8. Tooltip on 17 October 12–13 UTC at 4 000–5 000 ft, just behind the cold front: 1.2 °C, 1.4 K colder than the period mean and 3.9 K colder than three hours earlier, stable (2.4 K/km), wind 345°/15 kt, 28 aircraft in the layer.

5.2 Temperature anomaly: air masses and fronts

The **temperature anomaly** is each layer's temperature minus the mean of the same layer over the shown period (blue colder, red warmer, full colour at ±6 K). Subtracting the layer mean removes the normal fall of temperature with height, so what remains are the air masses. Note that the reference is the *shown period*: in a 72-hour view a front is a strong contrast, in a 14-day view the same hours may be only part of a longer warm or cold spell. Change the length to change the reference.

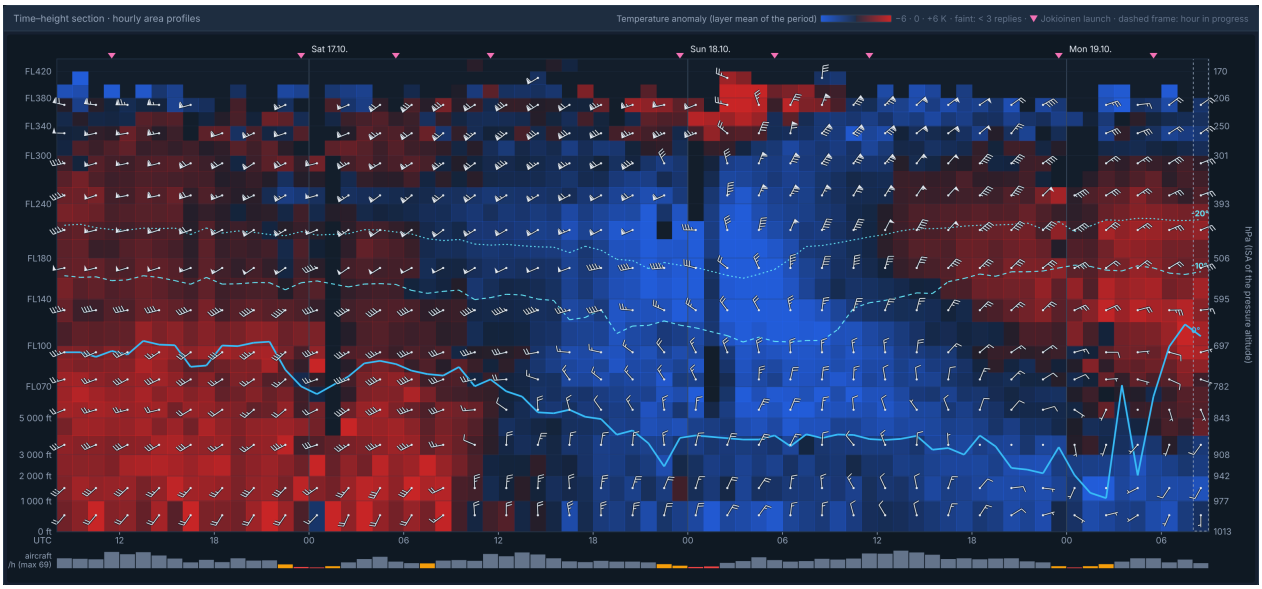

Figure 9. Temperature anomaly, 72 hours to 19 October 2026 08 UTC, with barbs and isotherms. Warm air (red) with south-westerly winds on 16–17 October; the cold front arrives near the ground at about 10 UTC on 17 October and higher up later, so the boundary rises to the right; the 0 °C line falls from about FL100 to 3 500 ft. Early on 18 October a lowered tropopause makes FL340–FL380 warm. From the afternoon of 18 October the middle troposphere warms (sinking air under the high) while the lowest 3 000 ft stay cold.

Reading the cold front of 17 October (Fig. 9). The hourly area means show the cold air arriving at different times at different heights:

- 0–4 000 ft: cooling of 4–6 K between 08 and 12 UTC, and the wind turning from south-west (244°/21 kt at 1 000 ft at 08 UTC) to north (358°/23 kt at 10 UTC);
- 6 000–10 000 ft: cooling mainly between 12 and 18 UTC, the wind turning from south-west to west and north-west between about 14 and 18 UTC;
- FL140–FL240: cooling between 14 and 22 UTC.

The boundary therefore climbs about 20 000 ft in 10–12 hours. This is the wedge of Fig. 2 seen in time: a cold front's cold air is shallow at its leading edge and deepens behind it. If the front moved at about 20 kt, 11 hours correspond to about 400 km, a slope of roughly 1:70 — within the 1:50 to 1:100 typical of cold fronts. A *warm front* would look the other way round: the warm air arrives aloft first and reaches the ground hours later, so its boundary *descends* to the right.

Troughs and the tropopause. Behind the front, early on 18 October, the layers at FL340–FL380 turn red: at FL380 the temperature rose from about −58 to −50 °C. In the cold air behind a trough the tropopause is low, and the air at these levels is now stratospheric — warmer than the tropospheric air that is normally there. A warm patch at the top of the section above cold air below is the signature of a lowered tropopause.

Sinking air under a high. From the afternoon of 18 October the QNH rose from 1031 to 1040 hPa and the middle troposphere warmed strongly: at 10 000 ft from −11 °C (08 UTC on the 18th) to −1 °C (06 UTC on the 19th), at 6 000 ft by 6–7 K, while the lowest 2 000 ft hardly changed. Air sinking in an anticyclone is compressed and warms at the dry adiabatic rate; descent of a few hundred metres to a couple of kilometres a day is typical. The warming reaches down only to the top of the cool, moist boundary layer, so a *subsidence inversion* forms between them (Section 5.5).

The daily cycle. In the lowest 1 000–3 000 ft the anomaly alternates between day and night on clear days: daytime heating mixes up to the dry thermal top, nights cool the lowest layers.

5.3 Temperature change over 3 hours: advection as it happens

The **3-hour change** is each layer's temperature minus that of the same layer three hours earlier (full colour at ±4 K). It does not depend on the period, and it shows *when* things happen. The local change of temperature has three causes:

$$\frac{\partial T}{\partial t} = \underbrace{-\vec{V}\cdot\nabla T}_{\text{advection}} + \underbrace{(\Gamma_d - \Gamma)\,w}_{\text{vertical motion}} + \underbrace{Q}_{\text{heating, cooling}}$$

Advection is warmer or colder air carried in by the wind; *vertical motion* warms sinking air and cools rising air (in proportion to how much less steep the actual lapse rate Γ is than the dry adiabatic Γ_d); *diabatic* heating and cooling are the sun, night-time radiation, condensation and evaporation. Near the ground the daily cycle dominates; above about 5 000 ft advection and vertical motion do.

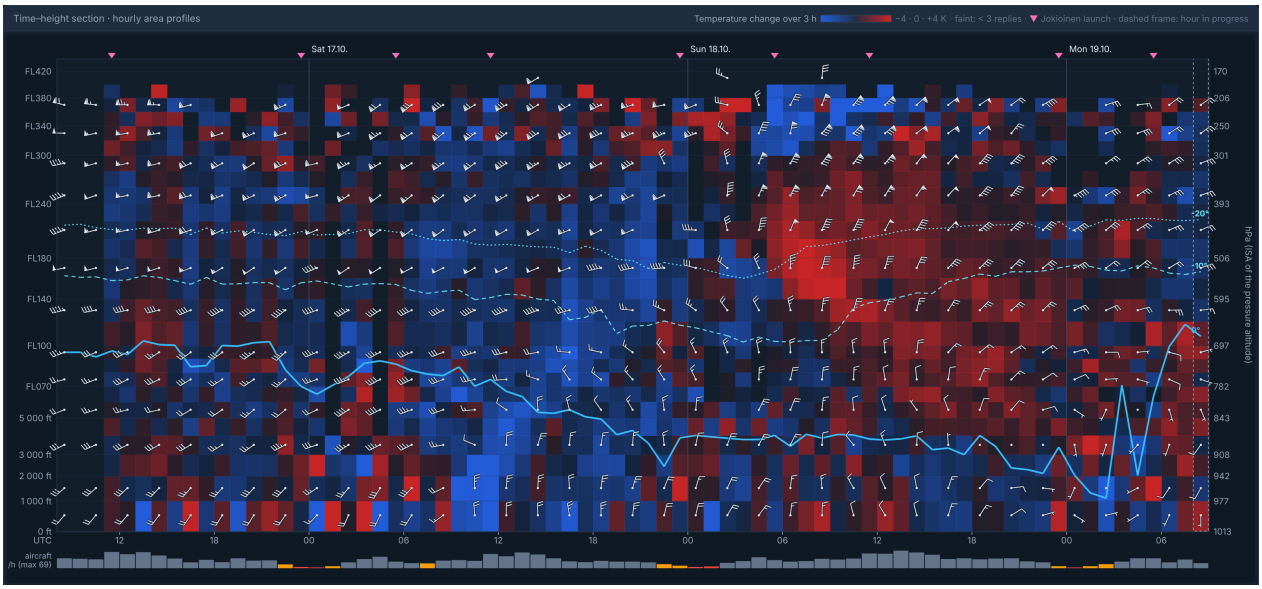

Figure 10. Temperature change over 3 hours, same period. The cold front is a blue band rising from the ground at about 10 UTC on 17 October to FL240 around midnight; the sinking air of 18 October is a broad red area at FL100–FL240 from about 05 to 15 UTC. Near the ground, alternating red and blue cells follow the day and night.

The change field is noisier than the anomaly, because a single hour's layer mean scatters by about 1 K and the change subtracts two of them. Look for coherent areas several hours and layers wide.

5.4 Wind speed: jets and the thermal wind

The **wind speed** field colours each cell in 10 kt steps, from dark blue (calm) through green and yellow to red and purple (130 kt and more). It shows the jet streams — the strongest winds, usually just below the tropopause — their height and their timing, low-level jets near the ground and calm layers.

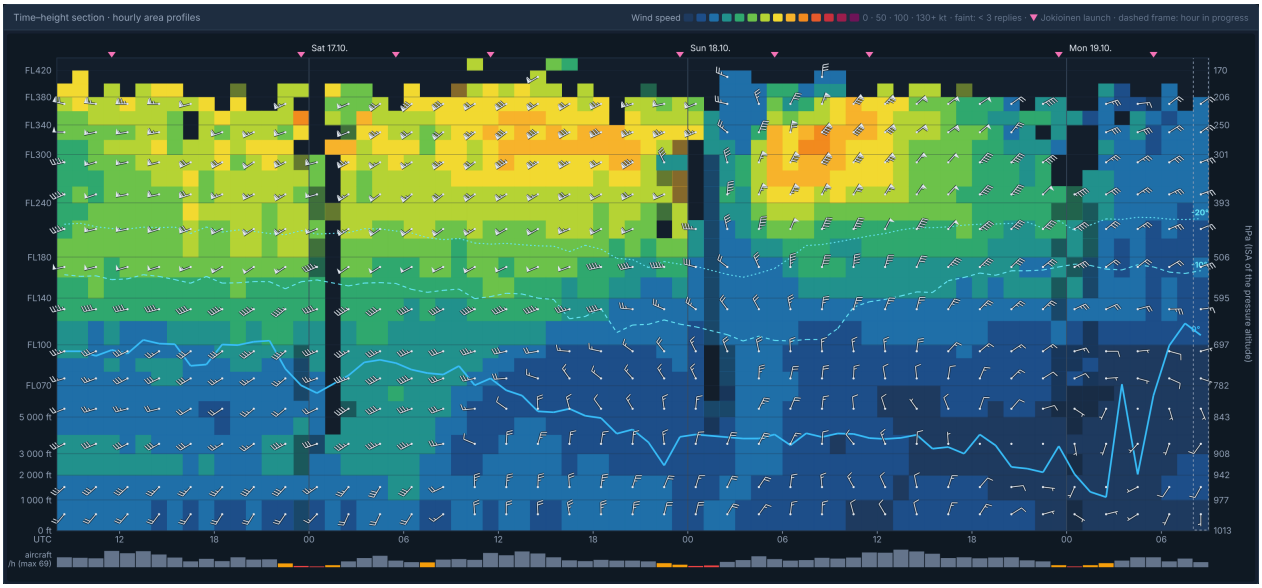

Figure 11. Wind speed, same period. A south-westerly jet of 70–95 kt at FL300–FL340 lies above the warm air and the front on 16–17 October, and a 30–35 kt south-westerly flow at 1 000–4 000 ft ahead of the front. On 18 October a north-easterly jet of up to 95 kt passes at FL300 (07–08 UTC). Under the high the winds become light at all levels.

The thermal wind. The barbs carry more than speed. Because the wind in the free atmosphere is close to geostrophic — it blows along the height contours of the pressure surfaces — its change with height is tied to the horizontal temperature gradient (the *thermal wind*): the vertical wind shear blows along the isotherms of the layer, with cold air to the left. Two practical rules follow:

- the strongest winds lie above the strongest temperature contrasts — the jet of 17 October sits above the front;

- a wind that **veers** (turns clockwise) with height means warm advection; one that **backs** (turns counter-clockwise) means cold advection. At 12 UTC on 17 October the wind backed from 004° at 1 000 ft through 345° at 4 000 ft to 257° at 8 000 ft: cold advection, exactly what the change field shows.

The Skew-T Analysis (level Advection) and the Advection row of the Indices panel turn this rule into numbers in K/h.

5.5 Lapse rate: stability and inversions

The **lapse rate** field shows how fast temperature falls with height at each layer, from the temperatures of the layers below and above, smoothed over ±1 hour (a single hour's layer means scatter by about 1 K, which over 1 000 ft would be 3 K/km of noise). The colours are classes in K/km: violet inversion (< -1), dark blue very stable (-1 to 2), light blue stable (2–5), grey normal (5–7), orange steep (7–9) and red dry-unstable (≥ 9, the dry adiabatic rate is 9.8).

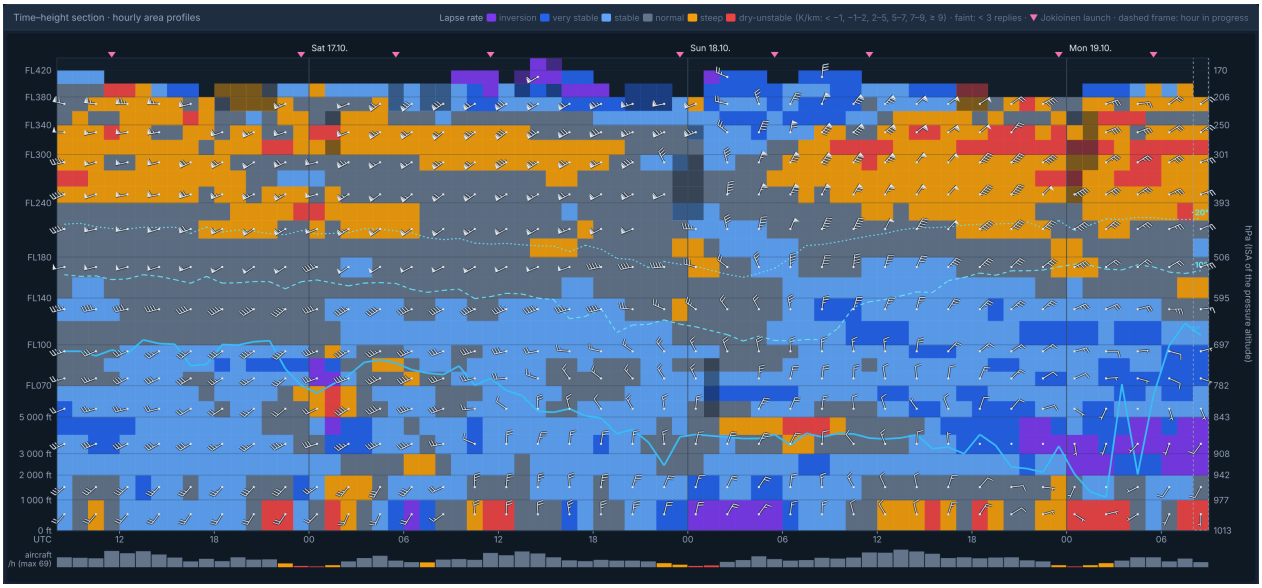

Figure 12. Lapse rate, same period. A night-time surface inversion (violet at 0–1 000 ft) in the early hours of 18 October; steep, near-adiabatic lapse rates near the ground on the sunny afternoon of 18 October; the subsidence inversion forming at 3 000–5 000 ft from the evening of 18 October; steep upper-tropospheric lapse rates below the tropopause and a very stable band at about FL380 (the tropopause). The red cells near the ground around midnight of 19 October rest on 2–8 aircraft (red bars in the strip) and are noise.

Stability decides much of what the weather does:

- **Inversions** stop vertical mixing. Below them haze, fog and low stratus are trapped; a sharp change of wind across the inversion top gives low-level wind shear. Night-time *radiation inversions* form from the ground up on clear, calm nights and are mixed away by the morning sun. *Subsidence inversions* form aloft under a high, as on 18–19 October, and can last for days. *Frontal inversions* separate the cold air under a front from the warm air above (the warm nose at 1 500 ft in Fig. 2).
- **Steep lapse rates** mean that rising air stays warmer than its surroundings: thermals near the ground, convection and showers when the air is moist, turbulence.
- The **tropopause** appears as the change from orange or grey to blue at the top of the section: the stratosphere above is very stable.

5.6 Vertical motion: rising and sinking air

Weather is made by vertical motion: rising air cools, forms cloud and precipitation; sinking air warms and dries, and clears the sky. Large-scale vertical motion is slow — typically 1–5 cm/s, a few hundred metres to a few kilometres a day — and cannot be measured directly by aircraft or radiosondes. It can be inferred from its effect on temperature.

The adiabatic method. Air that rises expands and cools at the dry adiabatic rate Γ_d = 9.8 K/km; the surrounding air cools with height only at the actual lapse rate Γ. A parcel lifted by Δz therefore makes the layer colder by $(\Gamma_d - \Gamma)\,\Delta z$, and sinking air warms it by the same amount. This is the vertical-motion term of the temperature equation of Section 5.3. Leaving out heating and cooling and solving for w:

$$w = \frac{-\vec{V}\cdot\nabla T - \partial T/\partial t}{\Gamma_d - \Gamma}$$

— the part of the local temperature change that the wind does not bring in must be ascent or descent. All three ingredients

are in the hourly archive:

- the **advection** $-\vec{V}\cdot\nabla T$, from the turning of the wind between the layers two below and two above (the thermal wind, Section 5.4);
- the **local change** $\partial T/\partial t$, from the temperatures 3 hours before and after;
- the **lapse rate** Γ, from the layers next to it.

Temperatures and winds are smoothed over ± 1 hour first. The field is drawn between 5 000 ft and FL200 in green (rising) and orange (sinking), full colour at ± 3 cm/s. The tooltip shows the value with its two ingredients in K/h.

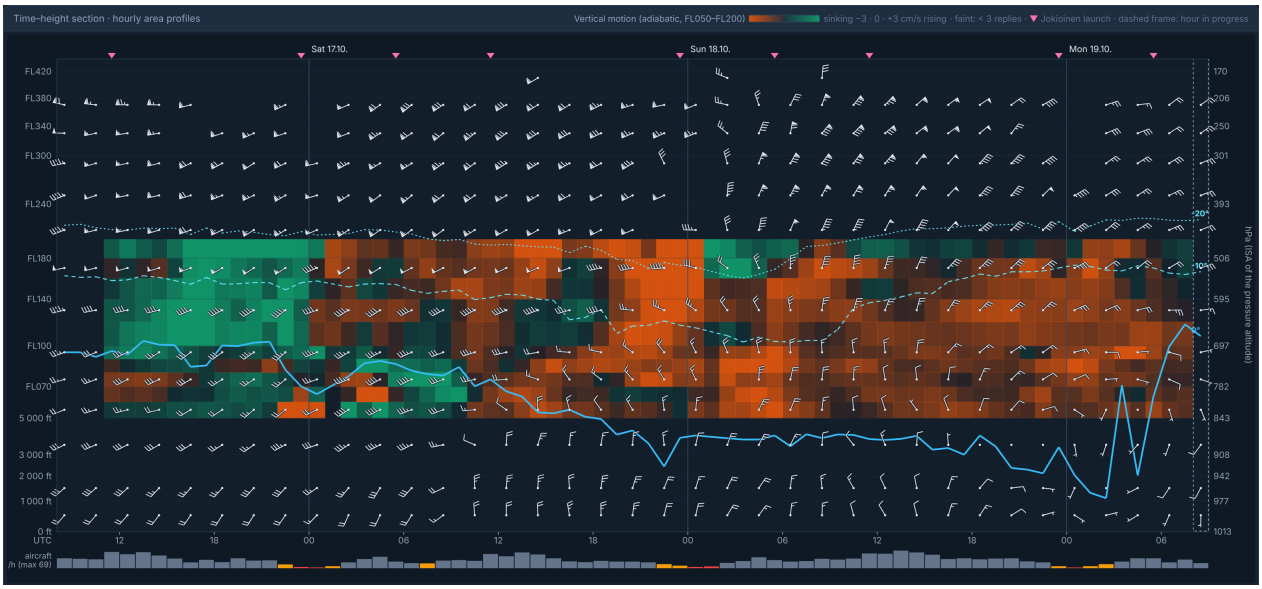

Figure 13. Vertical motion, 72 hours to 19 October 2026 08 UTC. Rising air (green, up to about +5 cm/s) in the warm south-westerly air ahead of the front on 16 October; sinking behind the front from 17 October; a short burst of ascent at FL160–FL200 early on 18 October as the trough aloft passes; steady sinking of about 0.5–3 cm/s under the building high on 18–19 October — the subsidence that warmed the middle troposphere in Fig. 9. The first 3 hours have no value (no earlier data in the shown period); the newest hours are fainter.

How good is it? Tested on 24 September – 20 October 2026 between 5 500 ft and FL190: the values are typically 2–3 cm/s, the normal size of synoptic vertical motion. Computing w separately from two random halves of the aircraft gave the same picture (correlation 0.65–0.83), with a noise of about 0.6–1 cm/s. It agrees with the weather: rising air in 59 % of the hours with broken cloud but only 30 % of the clear ones, and a correlation of -0.47 with the 6-hour change of the QNH — falling pressure, rising air.

Limits. The method assumes no heating or cooling. Below about 5 000 ft the sun and night-time radiation dominate, so nothing is drawn there. In cloud, condensation releases heat and the ascent is underestimated. Above FL200 Γ approaches Γ_d and the wind shear grows, so small errors become large values; nothing is drawn there either, nor where $\Gamma_d - \Gamma < 1.5$ K/km. The newest hours have no "3 hours after" yet; they use the latest available hour instead and are drawn fainter, and the hour in progress has none.

5.7 Vorticity: the spin of the wind field

Relative vorticity $\zeta = \partial v/\partial x - \partial u/\partial y$ measures how much the wind field rotates: positive (anticlockwise in the northern hemisphere) is *cyclonic*, negative *anticyclonic*. It comes from curved flow — troughs and lows are cyclonic, ridges and highs anticyclonic — and from shear across the flow: the cold side of a jet stream is cyclonic, the warm side anticyclonic. The Earth's own spin adds the Coriolis parameter $f = 2\Omega\sin\varphi = 12.7\times10^{-5}\ \mathrm{s}^{-1}$ at 60°N; synoptic relative vorticity is typically a few to $15\times10^{-5}\ \mathrm{s}^{-1}$, and values comparable to f mark a sharp trough.

Vorticity matters because it travels with the air and changes in a predictable way. Where the upper wind carries the cyclonic vorticity of a trough towards the ridge ahead of it (*positive vorticity advection*), the air aloft diverges and the air beneath it rises; behind the trough the opposite happens and the air sinks — which is why cloud and precipitation lie ahead of upper troughs and clearing skies behind them. Shown next to the vertical-motion field, it lets you see both halves of that relation.

How it is computed. Every hour, for each altitude layer, the winds of all aircraft within 200 km of the receiver are averaged per aircraft and fitted with a plane $u, v = a + bx + cy$; the slopes give $\zeta = \partial v/\partial x - \partial u/\partial y$ and its standard error. A layer needs at least 6 aircraft spread across the area in two directions — below about FL130 the aircraft follow

the airport's approach and departure paths and rarely qualify, so the field normally covers about FL130–FL390 (lower in busy hours). Aircraft whose wind departs from the plane by more than 3 times the RMS are left out. The values are stored for every hour (also after the observations are purged), and the hour in progress is computed live. The colours are purple (cyclonic) and gold (anticyclonic), full at $\pm 15 \times 10^{-5}\ \mathrm{s}^{-1}$; cells with an error above 4 or fewer than 10 aircraft are faint.

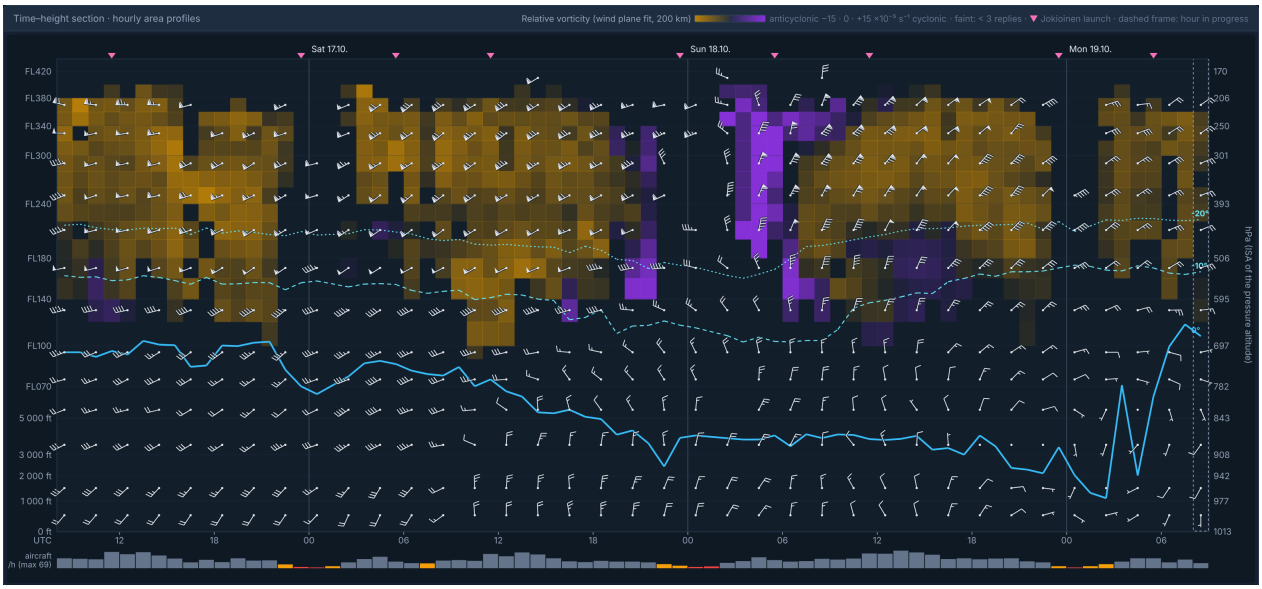

Figure 14. Vorticity, same period. Anticyclonic flow (gold, about −5 to −11) in the ridge ahead of the front and under its south-westerly jet on 16–17 October; two cyclonic columns behind the front — in the evening of 17 October (up to +14 at FL140) and at 03–05 UTC on 18 October (+20 to +40 at FL200–FL340; the largest values rest on only 8–10 night-time aircraft, but at 04 UTC +28 at FL200 came from 28 aircraft), the passage of the upper trough, at the same time as the lowered tropopause of Fig. 9; anticyclonic again under the high.

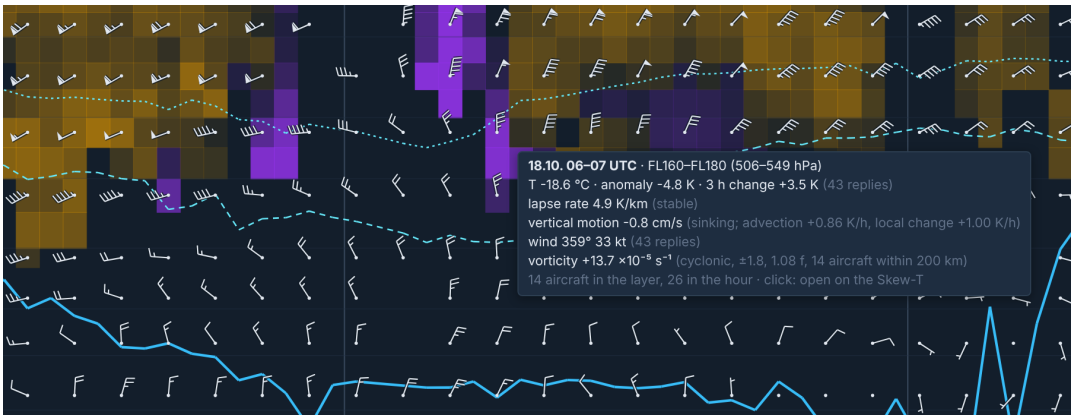

Figure 15. Tooltip at 06–07 UTC on 18 October, FL160–FL180, behind the trough: vorticity $+13.7 \times 10^{-5}\ \mathrm{s}^{-1}$ (± 1.8, about 1.1 f, 14 aircraft); the vertical-motion line shows that the strong warming of +1.0 K/h is almost all warm advection (+0.86 K/h), leaving weak sinking of −0.8 cm/s.

How good is it? Tested on 24 September – 20 October 2026 (200 km, one hour): the vorticity varies with an RMS of 7–10 $\times 10^{-5}\ \mathrm{s}^{-1}$ against an error of about 2.3, and consecutive hours correlate by 0.65–0.83 — a real, slowly changing field. The *divergence* from the same fit (the slope that gives vertical motion by mass balance) is computed and stored but not shown: its hour-to-hour correlation was only 0.1–0.25, i.e. mostly noise.

One caveat. Averaged over the whole period, the vorticity came out anticyclonic at all levels, by about 2–4 units. Part of that may be weather (several highs), but climbing and descending aircraft alone gave clearly different averages, which the atmosphere cannot do — so 2–3 units are probably an effect of how the departure and arrival corridors sample the circle. A common heading error was ruled out against the radiosonde: across 49 000 comparisons the aircraft winds differed from the sonde by only +0.7 kt across the track. Read the field for its changes and its strong cyclonic and anticyclonic areas, and treat values within about ±3 of zero as uncertain.

5.8 Heights of the pressure surfaces and thickness temperature

The GNSS height of a pressure surface. The altitude an aircraft reports is its pressure altitude (Section 2): it tells *which* pressure surface the aircraft is on. Its ADS-B velocity messages, sent about twice a second, also carry the difference between its *GNSS* (satellite) height and that pressure altitude, in 25 ft steps. Pressure altitude plus this difference is the true height of the pressure surface at the aircraft. How far that lies above or below the surface's height in the standard atmosphere is the **D-value** — the quantity of an upper-air height chart: warm air columns and highs lift the pressure surfaces (D positive), cold air and lows lower them. The heights of the surfaces and their slope are what drive the wind: the geostrophic wind blows along the height contours, faster where they are closer together (Section 10.6).

Calibration against the radiosonde. The raw difference is not the D-value yet. The aircraft's GNSS height is measured from the ellipsoid, about 18 m above mean sea level in southern Finland (the geoid), and the aircraft's own pressure measurement has a small error that grows with speed. Against the Jokioinen sondes of 20–21 October 2026 the raw aircraft heights were about 24 m too high near the ground, 0 m at FL250–FL330 and 6 m too low above; each airframe has its own offset of typically ±9 m, of which only about 40 % repeated from one day to the next. The correction is therefore learnt continuously: after every Jokioinen sounding, the aircraft within 150 km that passed a level within one hour of the balloon are compared with the sounding's measured height of that pressure surface, and a correction per 5 000 ft band (plus a small per-airframe offset) is fitted again from the last 30 days. It starts from built-in values and follows the data as they accumulate. The geoid itself is not left to this correction: it is not constant here but falls from about 19 m at Jokioinen and 18 m at Helsinki-Vantaa to 15 m east of Kotka (about 3 m per 100 km east of Helsinki), which would show as a false east–west slope of the pressure surfaces. Since 22 October 2026 the EGM96 geoid height at each aircraft position is subtracted from every value (a small built-in grid of southern Finland), and the band correction holds only the pressure error — about +6 m near the ground falling to about −25 m at FL350. On the data of 20–22 October this moved the geostrophic wind of the Wind Map by about 1 kt and the layer thicknesses by 0.03–0.1 K. Only aircraft with good GNSS (NACp ≥ 8) outside their GPS-degradation episodes are used — jammed aircraft usually stop sending the difference anyway, so the night hours, when jamming is common, have few values.

Height of the pressure surfaces. Each cell shows the D-value of the layer: the median over the airframes of the hour, red where the surface lies higher and blue where it lies lower than in the standard atmosphere, full colour at ±300 m (Fig. 16). The tooltip gives the height of the surface above mean sea level, the D-value, its 6-hour change and the spread between airframes. Under the high of 19–21 October the D-value was about +120 to +200 m near the ground but +230 to +420 m at FL240–FL300: the column was warm, so the upper surfaces were lifted more than the lower ones; all of it fell with time as the high weakened.

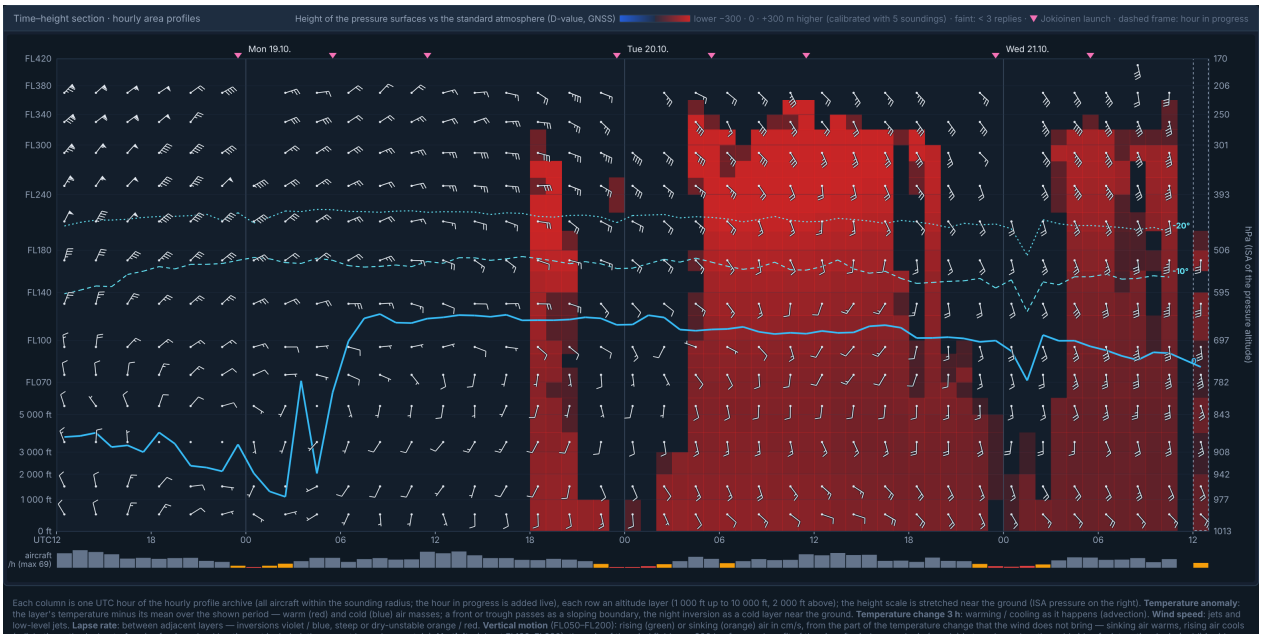

Figure 16. Height of the pressure surfaces, 72 hours to 21 October 2026 12 UTC (the GNSS heights are recorded from 19 October 18 UTC). The whole column lies higher than standard under the high (QNH 1029–1040): D about +120–+200 m near the ground and +230 to +420 m above FL240, lower towards 21 October. The empty night columns are hours with GNSS jamming.

Height change 6 h. The D-value minus that of the same layer six hours earlier (full colour at ±60 m): surfaces falling ahead of a trough or a front (blue), rising behind it and in a building high (red). It is the time–height version of the pressure tendency at the ground, at every level (Fig. 17).

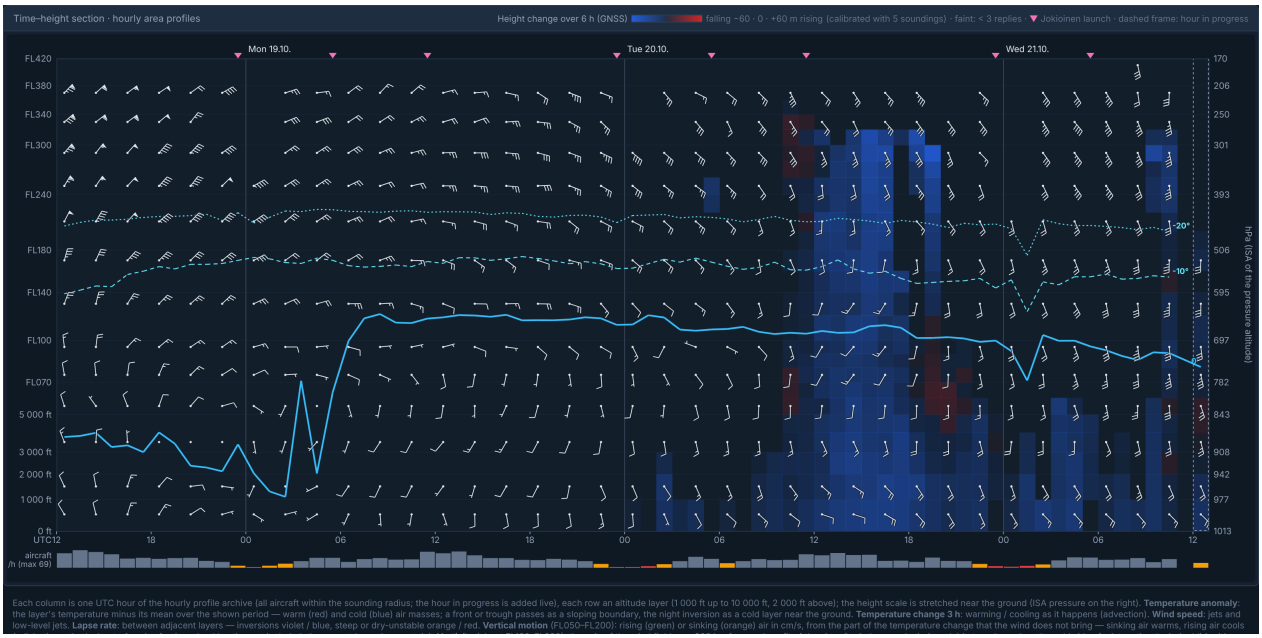

Figure 17. Height change over 6 hours, same period. On 20 October the surfaces fall by 20–40 m per 6 hours at all levels as the high weakens; at the ground the METAR QNH fell from 1037 to 1032 hPa over the same hours, about 40 m.

Thickness temperature check. A climbing or descending aircraft measures the true height of the pressure surface at the bottom and at the top of a layer within minutes. By the hypsometric equation the height difference depends only on the mean (virtual) temperature of the layer:

$$\bar{T}_v = \frac{g_0 \, \Delta H}{R \ln(p_1/p_2)},$$

with ΔH the difference of geopotential heights. This temperature is measured in a completely different way from the Mach/TAS temperature, and the airframe's own offset cancels between the two ends. For each 5 000 ft layer the field shows the thickness temperature of the hour's climbs and descents *minus* the Mach/TAS temperature of the same layers (full colour at ±2 K; Fig. 18). Near 0 means the two methods agree. Moist air near the ground makes the thickness temperature a few tenths of a kelvin warmer (it is a *virtual* temperature). One flight gives the layer mean to about ±0.8 K for 5 000 ft and ±0.5 K for FL100–FL300; the tooltip (Fig. 19) also gives the bulk FL100–FL300 value.

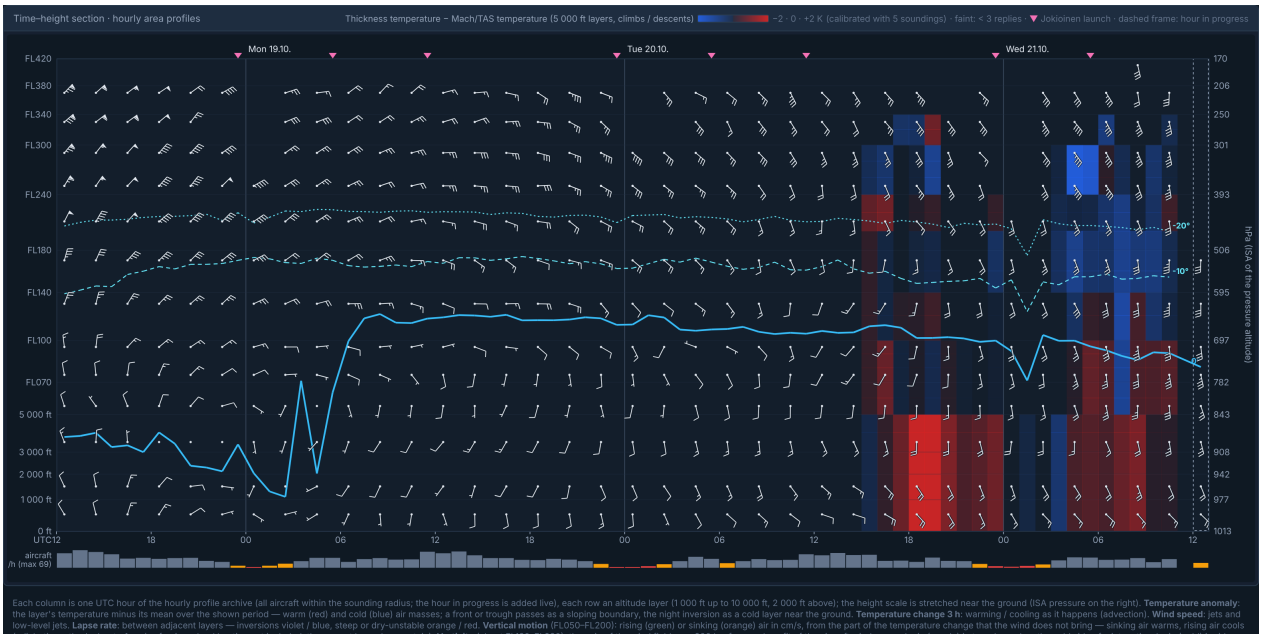

Figure 18. Thickness temperature check, same period (the dense climb and descent data are recorded from 20 October 11 UTC). Most cells are within ±1 K; the warmer cells in the lowest 5 000 ft on the evening of 20 October and the colder ones at FL250–FL300 early on 21 October are among the things the calibration will be checked on as data accumulate.

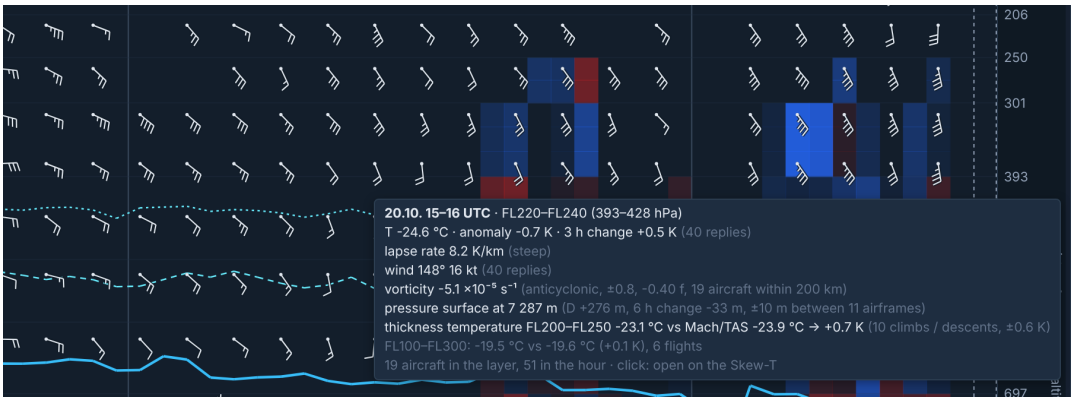

Figure 19. Tooltip at 15–16 UTC on 20 October, FL220–FL240: the pressure surface at 7 287 m (D +276 m, 33 m lower than 6 hours earlier, ±10 m between 11 airframes); the 5 000 ft layer FL200–FL250 from 10 climbs and descents −23.1 °C against −23.9 °C from Mach/TAS; FL100–FL300 −19.5 against −19.6 °C from 6 flights.

The slope of the pressure surfaces (from 12 November 2026). The aircraft does not cross the bottom and the top of a layer at the same place: between the two crossings it flies 14 km (1 000–5 000 ft), 20 km (5 000–10 000 ft) or 25 km (10 000–15 000 ft) in the median, and much further in the layers above. Pressure surfaces are not level — their slope is what drives the wind — so the height measured at the upper crossing minus the height at the lower one is the true thickness *plus* the slope of the surface times the distance flown (Fig. 20). By the geostrophic relation that extra height is

$$\Delta z = \frac{f}{g}\left(v\Delta x - u\Delta y\right),$$

with f the Coriolis parameter, $(\Delta x, \Delta y)$ the way east and north from the lower to the upper crossing and (u, v) the wind of the layer. A wind of 30 kt across a 20 km track gives 4 m, which is 0.7 K in a 5 000 ft layer — more than the whole moisture signal of the next section. And it does not average out: the way from the lower to the upper crossing points *away from the airport* for climbs and descents alike, so most flights of an hour get an error of the same sign, and that sign changes when the flow turns.

This was the unexplained *drift* of the thickness temperature. Against the MEPS model it read 0.5–1.4 K too warm in every layer above 5 000 ft on 3–9 November 2026 and 0.7–1.8 K too cold at 15 000–30 000 ft on 10–12 November, after the flow had turned (grey in Fig. 21). Since 12 November 2026 every climb and descent carries its own Δz, computed from its two crossing positions and **the hour's own area wind** of the layer — the aircraft's winds, no model — and it is subtracted before the thickness temperature is formed. The stored hours were computed again. Tested on 6 083 layer crossings of 3–12 November: the difference between the aircraft and the model follows the predicted Δz with a regression slope of 0.96 / 1.17 / 1.23 and a correlation of 0.24 / 0.57 / 0.68 (1 000–5 000 / 5 000–10 000 / 10 000–15 000 ft). Above 5 000 ft the hourly values now scatter by 0.4–0.8 K around the model instead of 0.7–1.4 K, and the two periods differ by 0.2–0.7 K instead of 1.2–2.8 K (orange in the figure). What remains at 15 000–30 000 ft is a steady −0.3 to −1.2 K, which belongs to the level of the height calibration and to the Mach/TAS temperature's own warm bias at those heights (Section 8.1), not to the weather. Where an hour has no wind for a layer the flight is used uncorrected, as before.

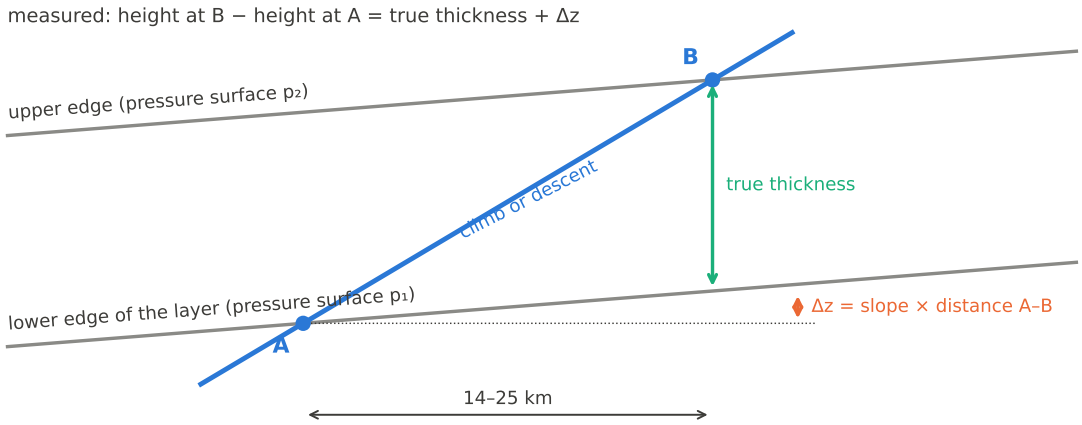

Figure 20. Why the thickness needs the slope (a sketch, not to scale). The aircraft crosses the lower edge of the layer at A and the upper edge at B. The pressure surfaces slope, so the height at B minus the height at A differs from the true thickness by the slope times the distance from A to B.

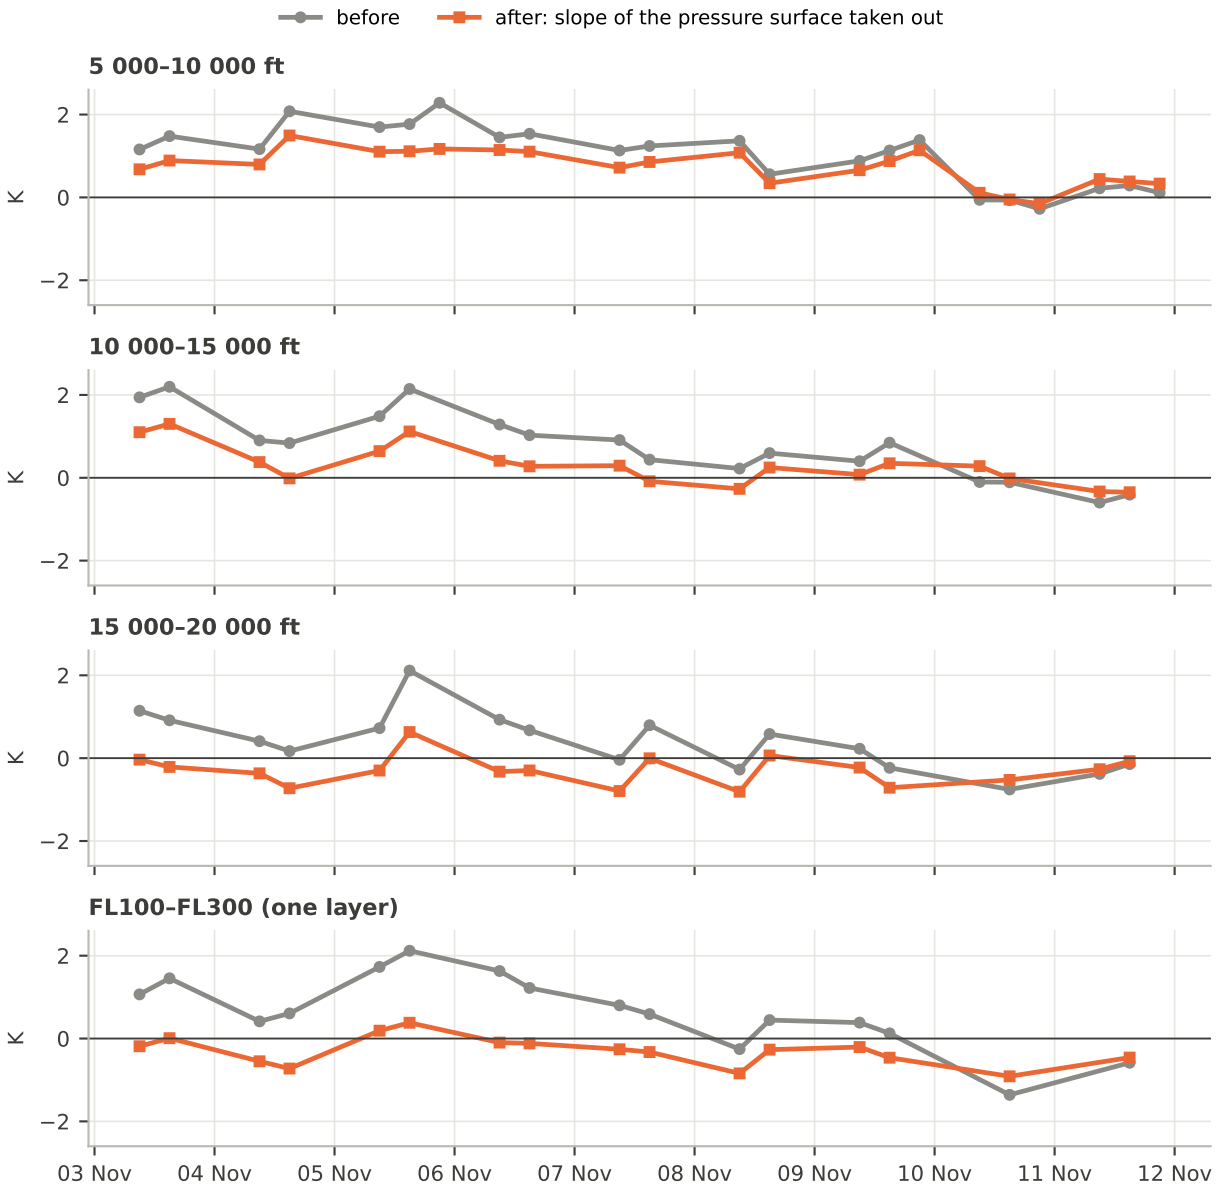

Figure 21. Thickness temperature minus the MEPS model's temperature of the same layer (virtual temperature, same area), 6-hour means, 3–12 November 2026: before (grey) and after (orange) the slope of the pressure surface is taken out. The flow turned on 10 November; before the correction the thickness temperature followed the flow rather than the air.

Status. These fields are new (October 2026) and rest on a few days of data and soundings so far; the calibration improves by itself with every sounding. Read the height change and the large-scale pattern of the D-value with confidence; treat single thickness cells beyond about ±1 K with care.

5.9 Moisture (trial)

A trial — data collection continues. This field was added on 21 October 2026. The checks so far (below) show that it is at most a *tendency*: through the front of 23–24 October it followed the humidity only weakly at 1 000–5 000 ft and not at all above. On 12 November 2026 the cause of its slow drift was found and removed (the slope of the pressure surfaces, below), which took away its bias but not its noise. It keeps running so that it can be judged on more varied weather; for the humidity itself, read the MEPS model line of the RH strip.

Why it is possible at all. Aircraft report no humidity: the Mode S register that can carry it (BDS 4,4) is answered by very few aircraft, and MODE-S Wind has never received it. But moist air is *lighter* than dry air at the same temperature and pressure (a water molecule weighs less than the nitrogen and oxygen it replaces), so a layer of moist air is a little *thicker* than a dry one. The thickness temperature of the previous section is the layer's mean *virtual* temperature T_v — the temperature dry air would need to be as light — while the Mach/TAS temperature is the real temperature T. Their

difference is the moisture of the layer:

$$T_v - T \;\approx\; 0.608\, q\, T,$$

with q the specific humidity (kg of water vapour per kg of air). The same principle was used with ADS-B heights at Amsterdam Schiphol (EGUsphere preprint 2026-717); here the heights come from the calibrated GNSS heights of Section 5.8.

How large the signal is. Very small, and only in the lower troposphere, where the air can hold enough water. From the 34 Jokioinen soundings of 11–21 October 2026:

Layer	$T_v - T$, humid (RH $\geq$ 70 %)	$T_v - T$, dry (RH $<$ 40 %)	difference
1 000–5 000 ft	0.86 K	0.24 K	0.6 K
5 000–10 000 ft	0.64 K	0.20 K	0.45 K
10 000–15 000 ft	0.45 K	0.14 K	0.3 K
above FL150	$<$ 0.3 K	$<$ 0.1 K	too small

In the soundings $T_v - T$ follows the relative humidity closely (correlation 0.84–0.89), so the physics supports an indicator — but only for the three layers in the table. Contrail and ice-supersaturation layers at cruise levels cannot be found this way.

How the data are gathered. Every climb and descent within 150 km of the receiver — in practice the traffic of Helsinki-Vantaa and Tallinn — is stored as a dense height series (Section 5.8). From it, for each of the layers 1 000–5 000, 5 000–10 000 and 10 000–15 000 ft:

1. the GNSS height of the pressure surface at the bottom and at the top of the layer: the rows within ±300 ft of the edge (at least 3, one single crossing, NACp $\geq$ 8, outside GPS-degradation episodes), both edges within 25 minutes; corrected with the height calibration;
2. the thickness temperature T_v of the layer from the height difference (the formula of Section 5.8);
3. the Mach/TAS temperature T of the same layer in the same hour (the area profile, weighted by $\ln p$), and the flight's $T_v - T$;
4. whether the aircraft climbed or descended.

The lowest layer starts at 1 000 ft rather than at 0: the 0 ft pressure altitude lies above the runway only when the QNH is high, so in rainy, low-pressure weather the 0–5 000 ft layer would disappear just when it matters.

How the indicator is calculated.

1. *Averaging.* One flight scatters by about 1 K at 5 000–15 000 ft and by 1.8 K below 5 000 ft — more than the whole signal. Each hour therefore uses all flights of ±1 hour around it (±2 hours below 5 000 ft) and their 10 % trimmed mean (the highest and lowest tenth left out); at least 6 flights are needed (12 below 5 000 ft).
2. *Offsets from the model or the soundings.* The aircraft value has a bias of its own, learnt separately for each layer and for climbs and descents (below 5 000 ft descents read about 0.6 K higher than climbs, probably because the aircraft's pressure (altimeter) error changes as it slows down and sets flaps). Since 24 October 2026 it is learnt from the *MEPS model*: every hour of the last 14 days in which at least 4 aircraft climbed (or descended) through a layer gives a pair — their trimmed mean $T_v - T$ against the model's own $T_v - T$ of the layer over the same area, computed from its temperature and specific humidity on its model levels. That is many more pairs than the 2–3 soundings a day, also at night. With at least 12 such hours the model offset (shrunk towards zero as if 6 hours had shown no difference) is used; otherwise — and when model data are switched off (`MOIST_MEPS_OFFSETS = False`) or not available — the offset comes from the Jokioinen soundings of the last 30 days as before: the flights of ±2 hours around each balloon against the sonde's own $T_v - T$, shrunk as if three soundings had shown no difference. Every flight's value is corrected with the offset of its layer and direction before averaging; the hover says where the offsets came from (`offsets from 48 hours of the MEPS model humidity`).
3. *Index.* The corrected $T_v - T$ is divided by the value saturated air of the same temperature would give, $0.608\, q_{\mathrm{sat}}(T,p)\, T$:

$$\text{index} \;=\; 100 \times \frac{T_v - T - \text{offset}}{0.608\, q_{\mathrm{sat}}\, T}\ \%,$$

   which is roughly the layer's mean relative humidity. At 5 000–10 000 ft, $0.608\, q_{\mathrm{sat}} T$ is about 0.75–1 K in October, so every 0.1 K of error is 10–13 % in the index. The ± of the index combines the scatter of the flights (± their standard deviation over $\sqrt{n}$, typically 0.1–0.2 K by day) with a *systematic* part of 0.3 K that does not average out (see the check below): about ±30–35 % at 1 000–10 000 ft and ±50 % at 10 000–15 000 ft.
4. *Classes.* **dry** (brown, index $<$ 40 %), **moist** (green, 40–70 %), **humid** (blue, $\geq$ 70 %); faint where the uncertainty of the index exceeds ±40 % (in practice most of 10 000–15 000 ft, and the night hours). Values above 100 % or below 0 can occur — they are the noise and remaining offsets of a trial, not supersaturation.

With Sonde on, each sounding gets the same index from its own humidity in its narrow column. For the soundings the index equals the layer's mean relative humidity to within about 1–2 %, so the sonde columns can be read directly as relative humidity.

Example: the dry high gives way to moist air. On 18–20 October 2026 the air under the high was very dry (sonde 20 October 12 UTC: 6 % relative humidity at 5 000–10 000 ft); during 21 October moister air arrived on a southerly flow (00 UTC 39 %, 06 UTC 67 %, 12 UTC 59 %). The aircraft followed the change (Fig. 22): at 5 000–10 000 ft brown (dry) on the afternoon of 20 October, green (moist) in the morning of 21 October, blue (humid) from 10 UTC. But they overdid it: at midday the index was 112–125 % against the sonde's 60 % (Figs. 23 and 24), which is a difference of about 0.6 K in $T_v - T$. Whether that is a bias of the method, a real difference between coastal Helsinki and inland Jokioinen 100 km away, or both, needs many more soundings to tell; the offsets have so far been learnt from a single one. At 10 000–15 000 ft the change was weaker, from dry to moist, again more humid than the sonde at midday (index 55–70 % against 34 %). The lowest layer, 1 000–5 000 ft, was noisy: too humid in the evening of 20 October, too dry in the morning of 21 October.

First check against the soundings (22 October 2026). Four soundings had enough flights around them (21 October 06 and 12 UTC, 22 October 06 and 12 UTC; the 00 UTC ones have almost no night traffic). Over their 12 layers the index differed from the sonde's own index by about 37 % RMS, and the dry / moist / humid class agreed in only 3–4 of 12 — though the sondes were mostly moist (49–80 %), so there was little contrast to find. The aircraft − sonde difference of $T_v - T$ changed by 0.2–0.45 K from one sounding to the next, and the difference between climbs and descents even changed sign, so the learnt offsets could not remove it: with each sounding left out in turn they gave no gain yet. Part of it is the 95 km between Helsinki and Jokioinen — the aircraft layer temperatures themselves differ from the sonde by about 0.7 K per layer. This is why the systematic 0.3 K is part of the ±. Two refinements were tested and *not* adopted: each aircraft's own Mach/TAS temperature instead of the area mean (the scatter grew from 1.4 to 1.8 K below 5 000 ft and from 0.85 to 1.5 K at 5 000–10 000 ft) and a roll filter (the stored data hold no turns to test it on).

Check through the front of 23–24 October 2026. The front brought what the first check lacked: humid air (sonde 1 000–5 000 ft 88–100 %) and drier layers above. Over 65 hours the aircraft index was compared every hour with the MEPS model's mean relative humidity of the layer, and at six soundings with the sonde:

Layer	vs model: bias	RMS	correlation	vs sonde: RMS
1 000–5 000 ft	+16	38	0.42	about 30
5 000–10 000 ft	−21	57	−0.14	about 50
10 000–15 000 ft	+32	77	−0.28	about 60

(index points, i.e. % of relative humidity). The model itself was within 7–10 points of the sondes in all three layers, so it is a good reference. The aircraft followed the humidity weakly in the lowest layer (correlation 0.4–0.5, up from 0.2–0.3 on 22 October when there was hardly any contrast) and not at all above it; the index ranged from −106 to +146 %. Wider windows (±2 or ±3 h) did not help above 5 000 ft. The offsets learnt from the model remove most of the *bias* — tested by leaving out each sounding's own day, the bias against the sondes went from +11 / +1 / +13 to 0 / +2 / −6 points — but no offset can remove the *scatter*: the signal, at most about 0.3 K of $T_v - T$, is smaller than the noise of the GNSS thickness and the Mach/TAS temperature in a few hours of flights. The dataset is still small (one weak front, few soundings), so the trial keeps running and will be judged again after a few more weeks of varied weather.

The drift explained (12 November 2026). In the weeks after the front the aircraft's $T_v - T$ drifted against the model by up to 1.6 K, far more than its signal, and the offsets — learnt over 14 days — followed too slowly: in the rain of 10–12 November the indicator read 0.4–0.65 K too low, an index of −55 / −112 / −244 points against a model near 88 %. The cause was the slope of the pressure surfaces between the two places where a layer's edges are crossed (Section 5.8, Figs. 20 and 21): 0.7–1 K with 30 kt across the track, of one sign for most flights, changing when the flow turns. Since 12 November 2026 it is taken out of every flight with the hour's own wind, the stored hours were computed again and the offsets learnt anew. For 3–12 November, hour by hour against the model:

	index against MEPS, RMS		index bias on 10–12 Nov	
Layer	before	after	before	after
1 000–5 000 ft	64	47	−55	−21
5 000–10 000 ft	119	65	−112	−33
10 000–15 000 ft	229	114	−244	−31

(index points). The hourly $T_v - T$ now differs from the model's with a standard deviation of 0.33–0.35 K (before 0.44–0.61 K). That is the honest state: the bias is gone, but the noise that is left is still three to five times the moisture signal of those days (0.06–0.12 K), and the correlation with the model is +0.17 / +0.22 / +0.03. The indicator remains a trial; the MEPS line in the RH strip is the better guide.

Figure 22. Moisture (trial), 48 hours to 22 October 2026 14 UTC, with the soundings as their own columns (pink frames); nights have too few flights. The aircraft show the moistening of 21 October at 5 000–10 000 ft, but more humid than the sonde at midday; most of 10 000–15 000 ft is faint (uncertain by more than ±40 %).

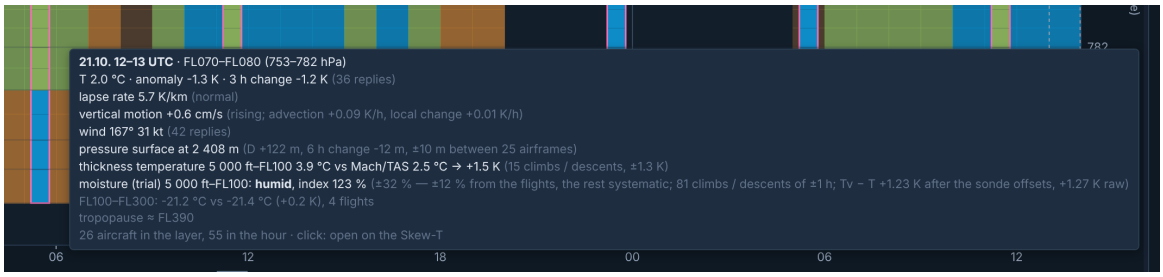

Figure 23. Tooltip at 12–13 UTC on 21 October, FL070–FL080: the 5 000–10 000 ft layer is `humid`, index 123 % ±32 % (±12 % from the 81 climbs and descents of ±1 h, the rest systematic); $T_v - T$ is +1.27 K raw and +1.23 K after the (still small) sonde offsets. The line above it gives the same hour's thickness check from that hour's 15 flights only.

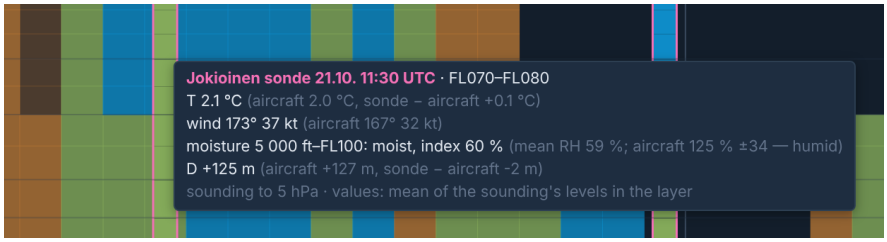

Figure 24. Tooltip on the sonde column of 21 October 11:30 UTC: the sounding's index for 5 000–10 000 ft is 60 % (mean relative humidity 59 %, `moist`), the aircraft's 125 % ±34 % (`humid`).

In the Skew-T: the RH strip. The same indicator can be shown beside the Skew-T diagram, on the Sounding page and in the Live Map's Atmosphere Profile: the RH tick box in the panel title (shared by both pages) adds a narrow strip between the diagram and the wind barbs, scaled 0–100 % with dotted lines at 40 and 70 % (Fig. 25). Each of the three layers is a bar at its index in the class colour, with its ± range; faint when uncertain, a small arrow when above 100 %. With Sonde on, the radiosonde's relative humidity, from its temperature and dewpoint, runs through the strip as a pink line at full vertical detail — so a moist layer or a dry slot in the sounding can be compared directly with the aircraft value of the same layer. With MEPS on, the model's relative humidity over the same area runs through the strip as a teal line — every hour, also between the soundings, on the model's own levels; during a frontal passage it shows whether the aircraft bars follow the moist layers as they arrive. Hovering the strip gives the index, its uncertainty, the number of flights, $T_v - T$ before and after the offsets, the sonde's and the model's mean relative humidity of the layer

and their values at the level. In Area · now (and on the Live Map) each layer is split in two: the upper, filled bar is the hour in progress (the flights of the last 1–2 hours; it changes as new ones come in), the lower, outlined bar the last full hour, steadier because its window of flights is complete on both sides; in Area · hour one bar, the same value as in the time–height section; a single Flight has no value (one climb is far too noisy).

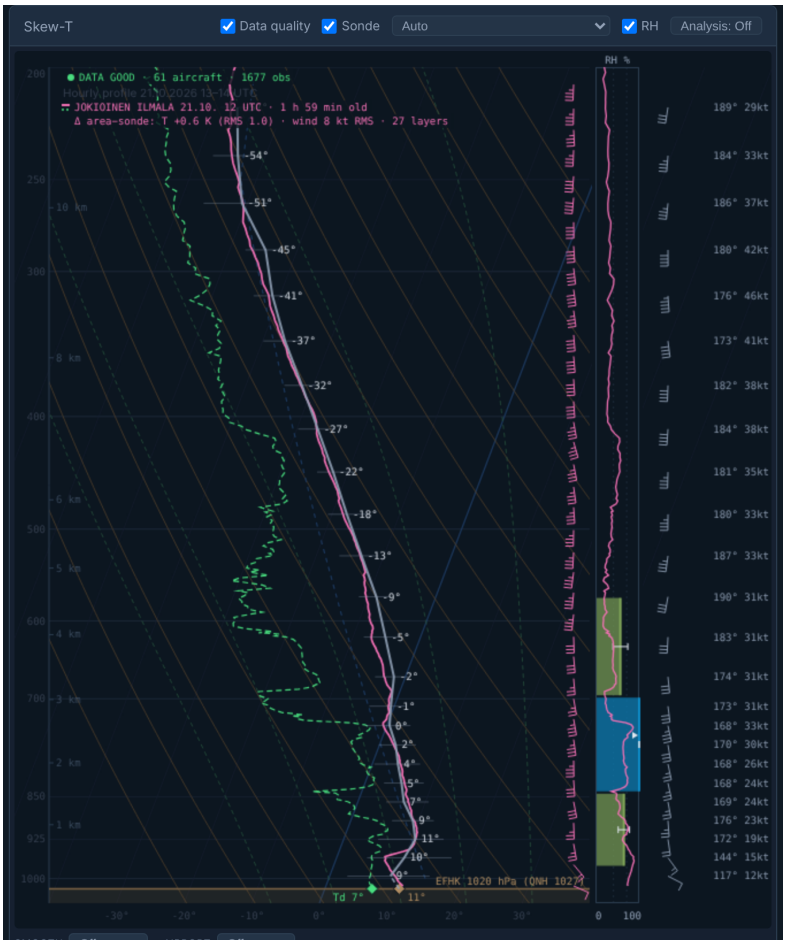

Figure 25. The RH strip on the Sounding page, Area · hour 21 October 2026 13–14 UTC with the 12 UTC Jokioinen sounding. The sonde's relative humidity (pink line) is 50–85 % at 1 000–5 000 ft (layer mean 67 %), 60–80 % at 5 000–9 000 ft, then drops to 20–45 % above about 9 000 ft (720 hPa). The aircraft: 1 000–5 000 ft moist (index 65 %, close to the sonde), 5 000–10 000 ft humid and above the scale (arrow, the overshoot of the example above; sonde 60 %), 10 000–15 000 ft moist (57 %, sonde 33 %).

How to read it, for now.

- Trust the *changes* more than the values: a layer turning from brown to green or blue as a front or a moist flow arrives, or drying out behind it.
- Compare with the sonde columns whenever a sounding is in the picture; the agreement there is the test of the method.
- For the humidity itself, use the MEPS line of the RH strip (and the sonde); treat the aircraft bars as the experiment they are. So far only 1 000–5 000 ft has shown some agreement (Section 5.9, front check); 5 000–10 000 and 10 000–15 000 ft have not yet.
- It covers only where aircraft climb and descend, mostly near Helsinki-Vantaa and Tallinn, and mainly by day. It tells *when* and *at which height* the area is humid — not *where*; it cannot be drawn as a map.

5.10 Tropopause, maximum wind, sonde columns and saving the picture

Three overlays and a button complete the section (Fig. 26):

- Tropopause draws the tropopause of each hour as a magenta dashed line (`TP`): the WMO definition — the lowest level above 5 km where the lapse rate falls to 2 K/km or less and the mean lapse rate to every level within the next 2 km stays so — applied to the ±1 h smoothed layer temperatures. The aircraft data usually end at about FL420, so the line appears only where the tropopause is below that and there are data above it; a high tropopause is not found (the Skew-T Analysis and the sonde reach higher).
- Max wind draws the height of the strongest wind above 10 000 ft in each hour, when it is at least 50 kt (yellow, `Vmax`):

the level of the jet core and how it rises and falls.

- Sonde draws each Jokioinen sounding as its own narrow column at its launch time, framed in pink and coloured by the same field — temperature anomaly, wind speed, lapse rate or height of the pressure surfaces — after averaging the sounding into the same layers. Hovering it gives the sonde's values against the aircraft column of that hour. Where the sonde column has the same colour as its neighbours, the two systems agree.
- PNG saves the picture with a title line as a PNG file.

The column tooltip also gives the tropopause and the strongest wind of the hour.

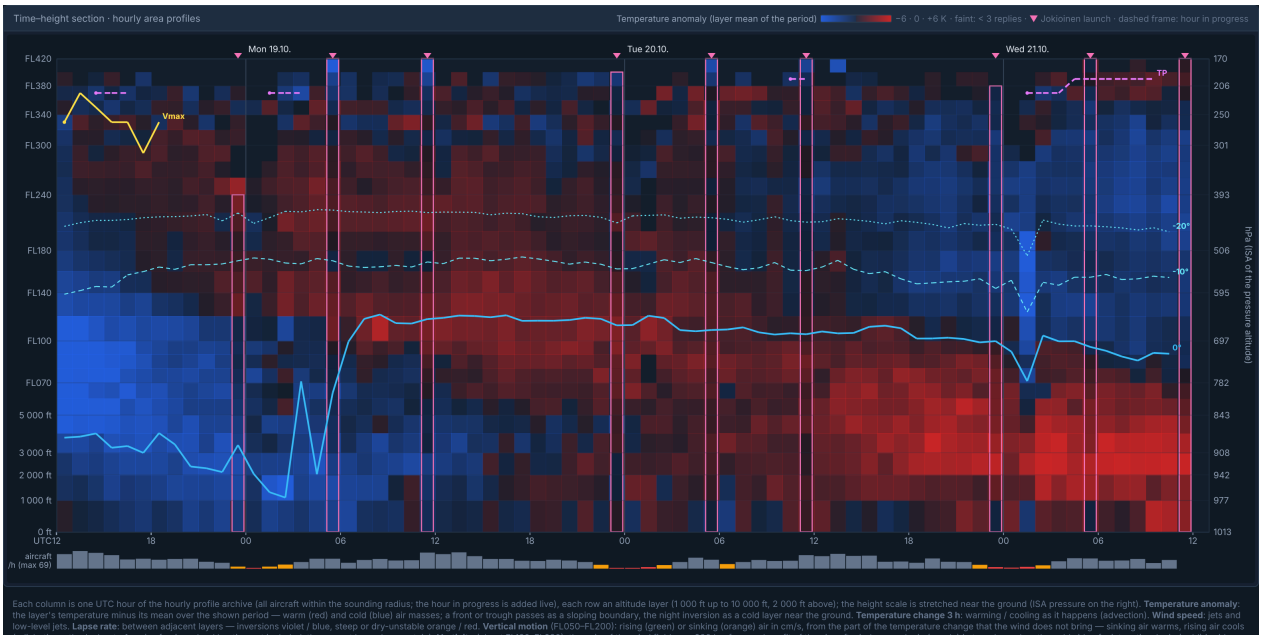

Figure 26. Temperature anomaly, 72 hours to 21 October 2026 12 UTC, with Tropopause, Max wind and Sonde (barbs off). The pink-framed columns are the soundings; their colours mostly match the aircraft columns around them. The tropopause is found at about FL370–FL400 in the hours when the data reach above it; winds of 50 kt or more, at FL300–FL380, occur only in the first hours, as the high builds.

5.11 The boundary layer: low-level jet and surface inversion

The section's layers are 1 000 ft thick and their heights are pressure altitudes — too coarse for the lowest few thousand feet, where a night-time inversion or a low-level jet can be only a few hundred feet deep. Two more fields therefore show the *boundary layer at Helsinki-Vantaa* hour by hour, from the same data as the Windshear page's BL chart (research, from 29 October 2026):

- Boundary layer · wind (0–5 000 ft): the median wind of all aircraft within 25 km of the airport in 250-ft steps, at heights above sea level (the pressure altitude corrected with the METAR QNH), coloured from blue (calm) through green and yellow to red (55 kt); faint where a bin has fewer than 5 observations. The barbs are the same winds every 500 ft.
- Boundary layer · temperature (0–5 000 ft): the temperatures of the landings and departures in 200-ft bands (at least 4 flights, smoothed over ±200 ft) *minus the METAR temperature*: 400–3 000 ft from both, and from 30 October 2026 3 200–5 000 ft from the climb-outs alone (the landings are followed from about 3 000 ft down), so in the quiet night hours the upper part is often empty; until then the temperatures ended at about 3 000 ft, as in Fig. 28 (Fig. 29: to 5 000 ft) — red where the air is warmer than at the ground (an inversion), blue where it is colder (the normal fall of about 2 K per 1 000 ft by day), full colour at ±6 K.

Both use a linear height scale in ft MSL, 0–5 000 ft. On them, and on every other field with the Boundary layer tick box:

- the **low-level jet** is a diamond at its *nose* (the height of the strongest wind) with its speed in knots, joined from hour to hour — the jet core. It is found when the wind at most 2 000 ft above the airport has a maximum that is at least 2.5 m/s and 25 % stronger than the wind within 1 500 ft above it and at least 2 m/s stronger than the wind below it (after Baas et al., 2009);
- the **surface inversion** is a red bar along the bottom of the plot and a red line at its top: the air at 600–1 000 ft at least 0.5 K warmer than the METAR temperature. Its **top** is where the temperature stops rising: the top of the warmest layer (the bands within 0.2 K of the warmest one). This is the rule from 10 November 2026, and the stored hours were computed again with it; until then the top was the highest band still at least half the inversion's strength warmer than the ground, which read far too high — 3 000 ft and more — whenever the air above the inversion cooled only slowly. Against the Kivenlahti mast the old top lay a median 900 ft above the mast's warmest level, the new one

about 300 ft. As an overlay on the other fields, the inversion is also filled light red from the ground to its top.

Hatched hours had no flights near the airport. Hovering a boundary-layer field gives the wind and temperature at that height, the jet (speed, direction, height, how much weaker the wind is above it and the shear below it), the inversion and the METAR; with the overlay, the hover of the lowest layers adds the jet and the inversion. The isotherms, tropopause, maximum wind and sonde columns do not apply to the boundary-layer fields and are greyed out.

What the first month showed (29 September – 29 October 2026): a low-level jet in 10 % of the hours (16 % at night, 4 % at midday), typically at 1 500 ft and 23 kt; a surface inversion in 15 % (23 % at night, 2 % by day), half of them with a METAR wind under 5 kt and none from 10 kt. Under an inversion the turbulence of the approaches (EDR) below 1 000 ft was nil. For a pilot the two matter together: the jet gives wind shear on the way down through its nose, and an inversion below it lets the jet blow over a calm surface layer. Few aircraft fly between 01 and 05 local time, so the peak hours of the night jet are often unseen.

Figure 27. Boundary layer · wind, 72 hours to the end of 19 October 2026, with barbs. In the evening of 17 October, behind the cold front, a north-easterly low-level jet of 30 kt at 1 750 ft sinks to 24 kt at 1 000 ft by 23 UTC; the hover at 18 UTC gives the jet (26 kt from 008° at 1 500 ft, 4.5 m/s weaker within 1 500 ft above) and a weak inversion. Under the high on 18–19 October the wind is light and the inversion (red bar, red line at its top, mostly at 600–1 200 ft) returns every evening.

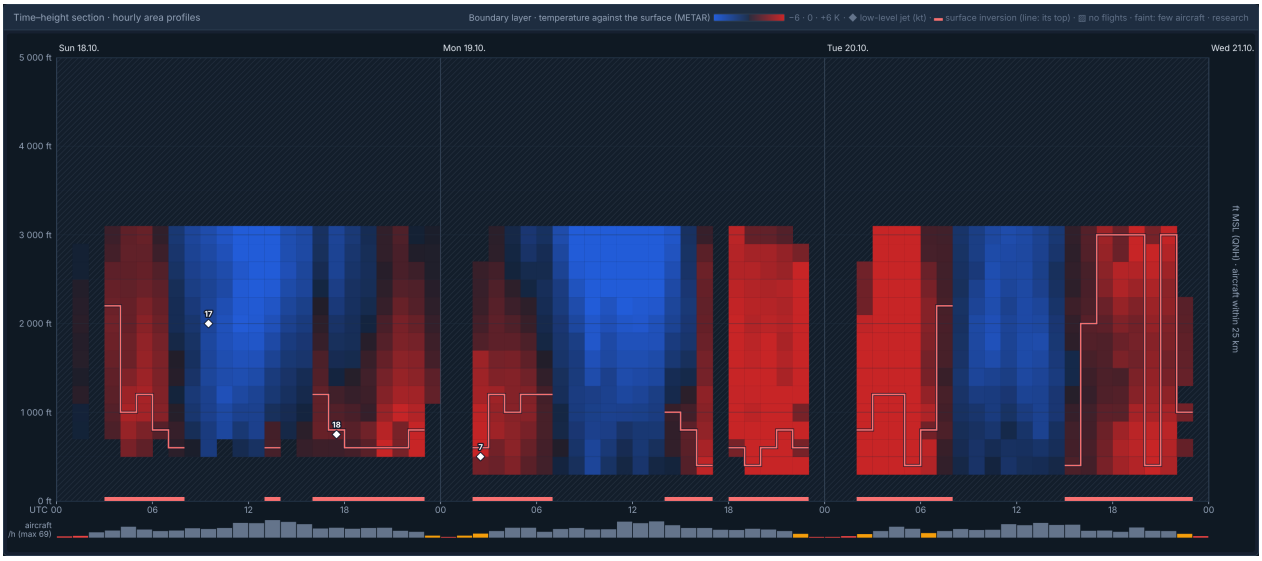

Figure 28. Boundary layer · temperature, 72 hours to the end of 20 October 2026: the air near the ground is colder than above by night (red, up to +8 K on 19–20 October) and warmer by day (blue, the normal fall with height). The red line is the top of the inversion, mostly at 400–1 200 ft; where the whole column is about equally warm, as on the evening of 20 October, it runs up to the top of the data at 3 000 ft (the data ended there until 30 October 2026).

Figure 29. Boundary layer · temperature with barbs, 24 hours to 30 October 2026 09:30 UTC (the station's data, the climb-outs since 29 October back-filled): the hours with enough climb-outs reach 5 000 ft — 18, 19 and 22 UTC and from 04 UTC on; the weak surface inversion of the evening of 29 October (red, top 800–1 000 ft) under it; the quiet night hours are hatched.

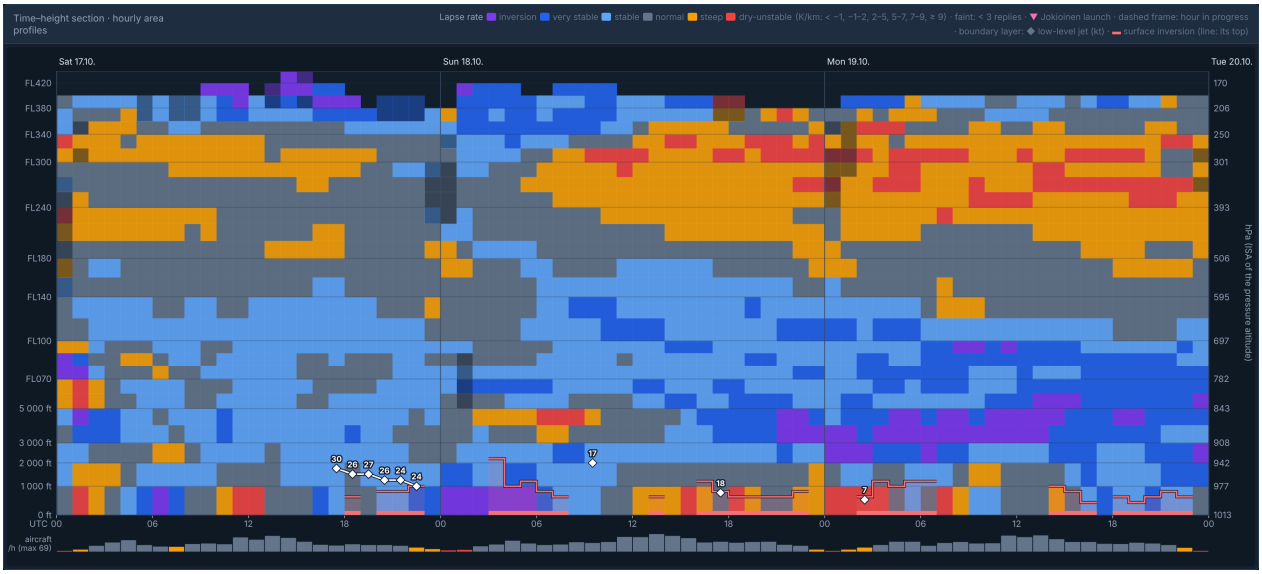

Figure 30. Lapse rate with the Boundary layer overlay, 72 hours to the end of 19 October 2026 (barbs and isotherms off). The jet and the inversions sit in the lowest 3 000 ft — about a quarter of the height on the stretched scale. The section's own lapse rate shows the inversion of the early hours of 18 October in violet at 0–1 000 ft; at night the lowest layer often rests on only a few aircraft, so where the two disagree (red cells around midnight of 19 October) the boundary-layer temperatures, from the landings and departures, are the better guide.

5.12 The boundary layer flight by flight

The hourly boundary-layer fields average every aircraft near the airport over an hour. Since 31 October 2026 the windshear detection takes the headwind of each landing and departure from both airspeed registers against the ground speed the aircraft broadcasts itself by ADS-B (detection v8; see the *Windshear* guide) — more than twice as many values as before, about five per 100 ft on an approach. Each flight's report keeps this headwind as a fine profile, the mean of every 100 ft from 200 to 5 000 ft (the landings are followed from about 3 000 ft down, the climb-outs up to 5 000 ft), and two more fields draw it (research):

- Boundary layer · headwind per flight: each landing and departure is its own column at its time, held until the next flight (at most 20 minutes; hatched where there was none), coloured by its headwind along its runway — the boundary-layer wind colours, violet for a tailwind. The headwind depends on the direction of the flight, so a change of runway

changes the colours too: a coloured line along the top gives the landing runway, with its number where it changes (Fig. 31).

- Boundary layer · headwind change per flight: each flight's headwind minus the median of the flights of the previous 45 minutes *in the same direction* (within 30°, at least three at that height), averaged over ±100 ft — red more headwind, blue less, nearly clear within ±2 kt and full at ±12 kt. It shows what changed between the flights: a front or a gust front arriving, a low-level jet forming or dying, or a single aircraft in a gust (Fig. 32). This is the picture behind the band comparison of the windshear detection.
- Boundary layer · wind shear per flight (from 31 October 2026, version 3.9): how fast each flight's headwind changes with height — the slope of a straight line through its values within ±200 ft, in kt per 100 ft — red where the headwind grows upwards (an aircraft descending through it *loses* headwind), blue where it falls, nearly clear within ±0.7 and full at ±3 kt per 100 ft. Shear layers — the wind's increase through the friction layer near the ground, the top of a low-level jet, a frontal surface — show as bands that move up or down from flight to flight (Fig. 34). A ramp of the windshear detection is a strong change of the headwind *along the path*; this field is its vertical part. The hover gives the shear too.

The selector next to the field chooses All flights, Landings or Departures (the change is always computed against all flights of the same direction). The windshear alerts are outlined in their level's colour over the height of the ramp or band that raised them. Hovering a column gives the flight (callsign, type, landing or departure, runway, time), its headwind at that height, the change against the flights before it and the alert; gaps of up to 300 ft in a profile (a climb-out loses a few replies in each turn) are filled in, faintly. Flights before 24 October 2026 (and any without ADS-B ground speed) have the profile of the BDS 5,0 replies alone (TAS − GS), about one value per 100 ft. The barbs, the low-level jet and the surface inversion are those of the hourly fields.

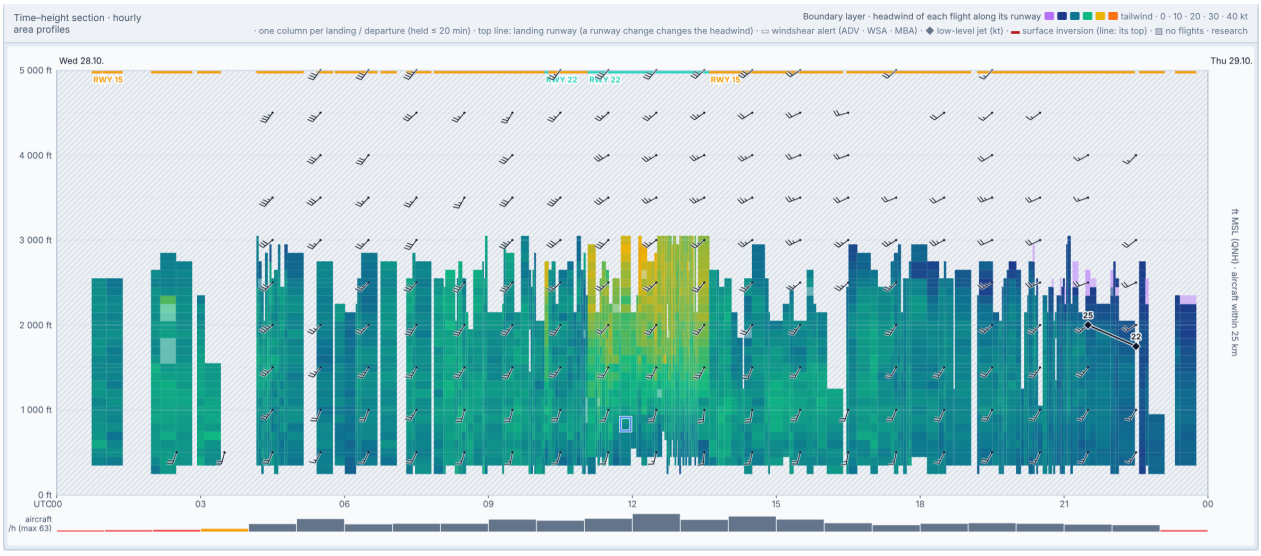

Figure 31. Boundary layer · headwind per flight, landings only, 24 hours of 28 October 2026 with barbs (the station's data of 31 October). Runway 15 most of the day with 10–20 kt of headwind; the landings on runway 22 from about 10:30 to 13:30 UTC read 25–35 kt (yellow) — the runway, not the wind, changed (line along the top). In the evening the headwind along runway 15 falls below 10 kt above 2 000 ft and turns to a light tailwind at 2 500 ft (violet), under a low-level jet of 25 → 22 kt at 2 000 ft. One ramp advisory at 800 ft (outlined).

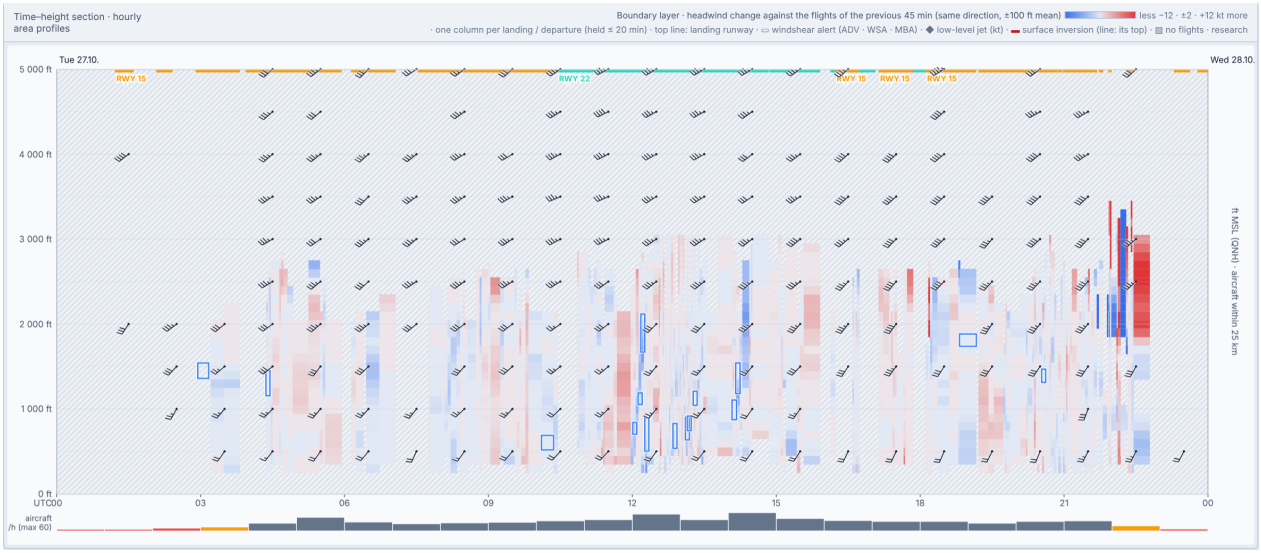

Figure 32. Boundary layer · headwind change per flight, all flights, 24 hours of 27 October 2026 (the gusty south-westerly day; the station's data). Most flights stay within a few knots of the ones before them (pale); in the gusty early afternoon single flights read 5–10 kt more or less, and the ramp advisories of the day (blue outlines) lie among them. The first stored climb-outs, after 22 UTC, reach 3 500 ft, where few flights preceded them.

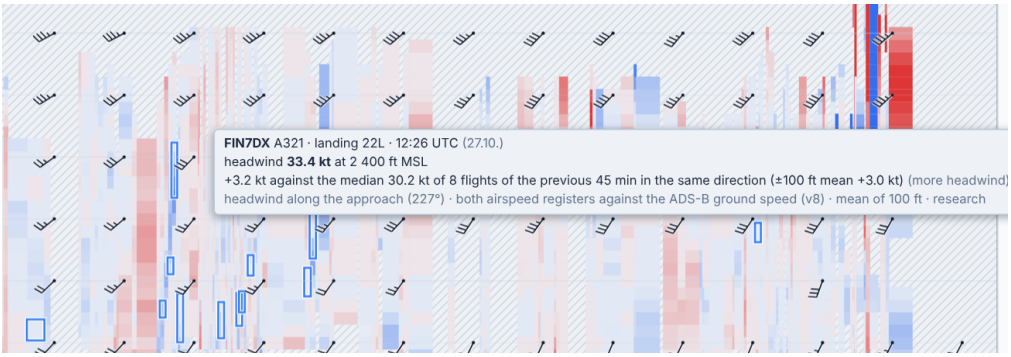

Figure 33. The hover of one landing on 27 October: 33.4 kt of headwind at 2 400 ft, 3 kt more than the median of the eight flights of the previous 45 minutes on the same runway direction, from the detection v8 values.

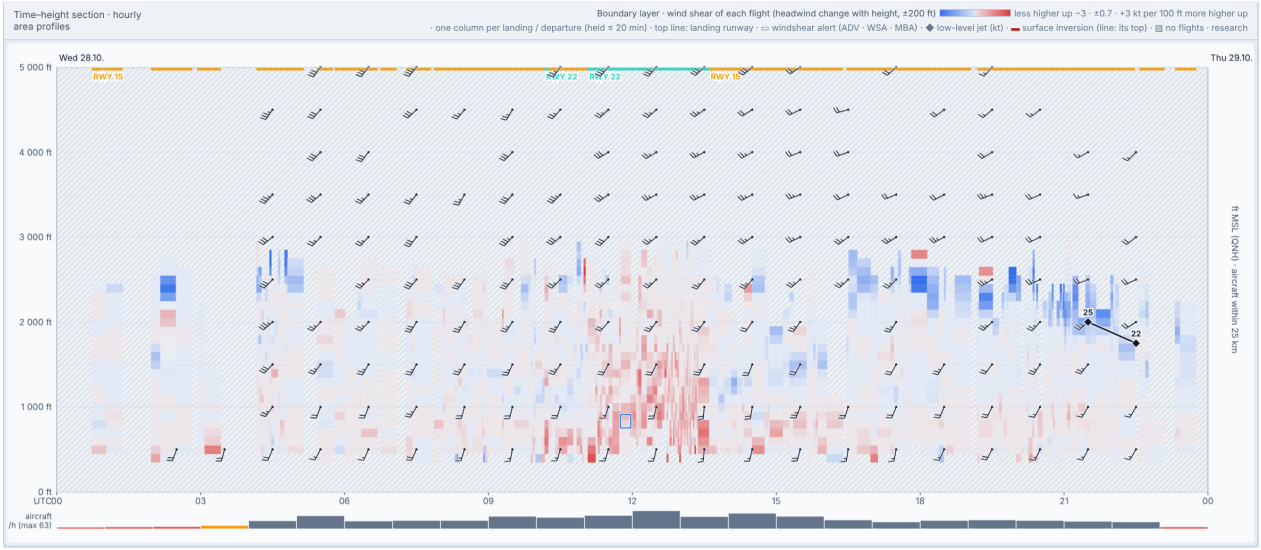

Figure 34. Boundary layer · wind shear per flight, landings only, 24 hours of 28 October 2026 (the station's data; the same day as Fig. 31). Through the day the headwind grows upwards in the lowest 1 000 ft (red: the friction layer), most on runway 22 around midday; in the evening, as the low-level jet forms at about 2 000 ft, the headwind falls off above it (blue at 2 000–2 600 ft from 17 UTC) — the top of the jet.

5.13 More fields, overlays and strips (version 3.12)

Wind direction. The field Wind direction colours each cell by where the wind blows from, on a colour wheel: north red, east yellow-green, south cyan, west violet. A wind shift — a front, a trough line, a sea breeze — is a sharp change of colour that slopes with height when the boundary slopes.

Wind turning with height. The field Wind turning with height (advection) compares the wind two layers below with the wind two layers above (Fig. 35). Veering with height is red and means warm air is arriving, backing is blue and means cold air; the colour is the warming or cooling this would bring, in K per hour, from the thermal wind (the same formula as the vertical-motion field uses, full colour at ±1 K/h). The hover adds the turn in degrees. Below 3 000 ft the cells are faint: there friction turns the wind too, whatever the air masses do.

Isentropes. The tick box Isentropes draws lines of equal potential temperature every 5 K (labelled every 10 K). Potential temperature is the temperature the air would have at 1000 hPa; air that neither gains nor loses heat keeps it and moves *along* these lines. Where the lines are packed, the air is stable — an inversion or a frontal surface — and where they slope through the hours, a front is passing; lines that sink over a day show subsiding air.

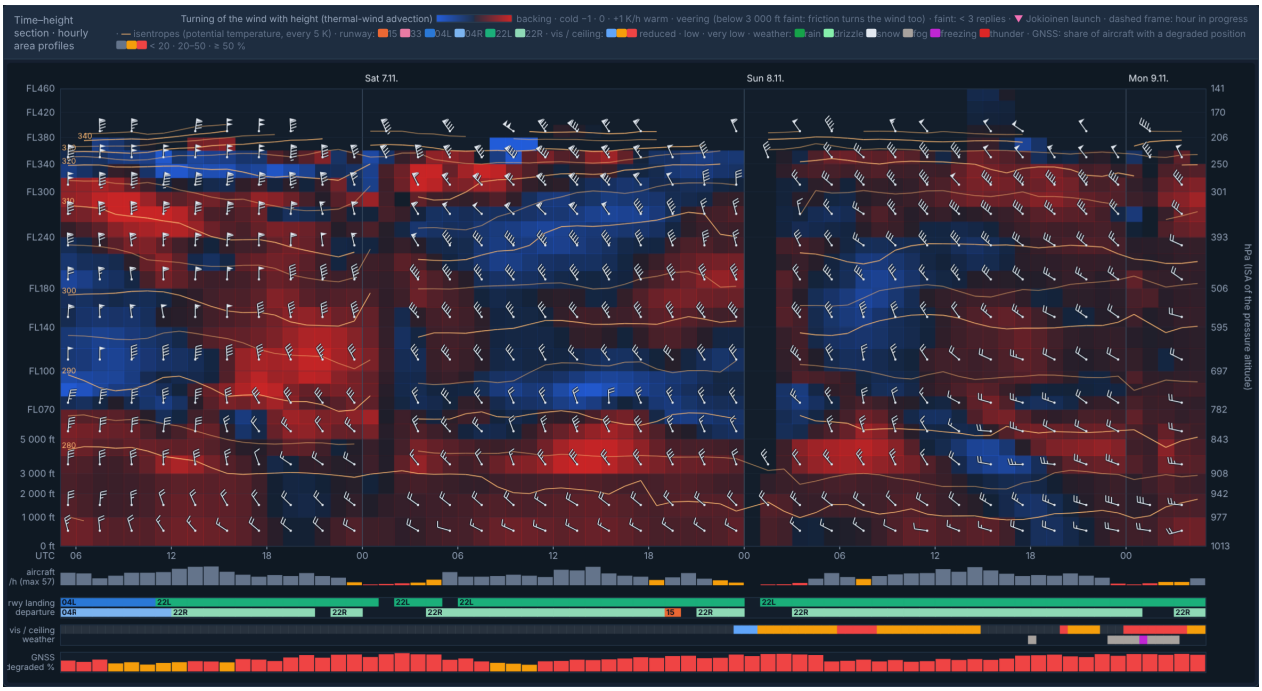

Figure 35. Wind turning with height with isentropes and the three strips, 72 hours to 9 November 2026 05 UTC. Red: veering, warm advection; blue: backing, cold advection. Under the aircraft strip: the runway in use (landings above, departures below), the METAR visibility / ceiling class and present weather, and the share of aircraft with a degraded GNSS position.

Mode S − MEPS and data coverage. Mode S − MEPS · temperature and · wind show the hourly profile minus the MEPS model's mean over the same area, layer by layer: where and when the model was off. The lowest layer on clear nights is the usual place. It is a comparison only — nothing is corrected with it here — and above FL180 the difference is small by construction, because the aircraft temperatures there carry the correction learnt from the same model (Section 8.1). Data coverage shows the number of aircraft behind each cell, to see at a glance how far a pattern can be trusted.

Turbulence in the boundary layer (research). Boundary layer · turbulence (0–5 000 ft) shows the turbulence the landing and departing aircraft met, in 500-ft bands (Fig. 36). The measure is EDR, estimated from the fluctuations of each flight's headwind over pieces of about 2 km; the cell is the median of the hour's pieces, coloured by the ICAO grades (smooth, slight, light from 0.10, moderate from 0.20, severe from 0.45), and the hover adds the strongest piece. Pilot reports and SIGMETs are triangles at the top at their time, coloured by their severity, with a bar over their heights when they reach below 5 000 ft. The values are averages over a piece of flight, not the one-minute peak of the ICAO definition, so they read lower than a pilot's impression.

Cloud base. On the boundary-layer fields the tick box Cloud base draws the airport's METAR cloud: the ceiling (the lowest broken or overcast layer) as a solid line and the lowest cloud, when it is lower, dotted — at heights above sea level like the rest of the picture.

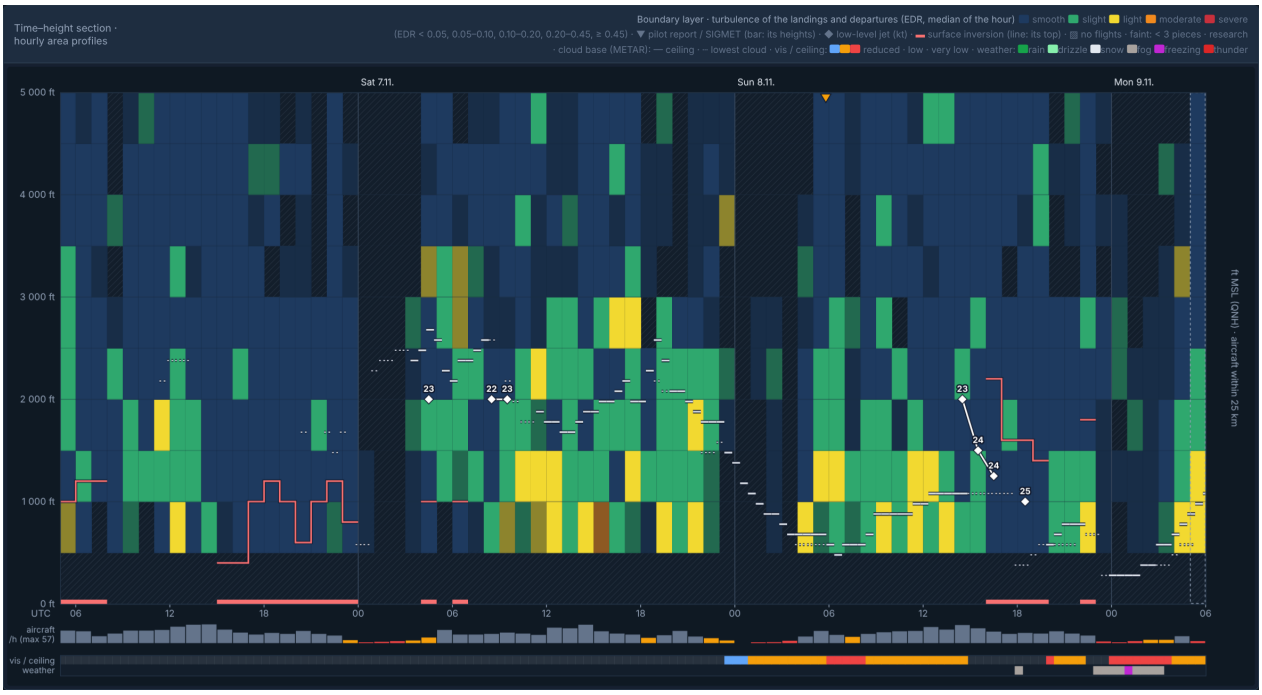

Figure 36. Boundary layer · turbulence with the cloud base and the weather strip, 72 hours to 9 November 2026 05 UTC. Mostly smooth to slight; light turbulence (yellow) in places below 3 000 ft on 7 and 8 November, the days with low cloud (the light lines). The triangle at the top is a pilot report.

The strips. Three tick boxes add strips under the aircraft strip: Runway — the most used landing runway (upper row) and departure runway (lower row) of each hour; Weather — the METAR visibility and ceiling class (blue reduced, amber low, red very low) and the present weather (rain, drizzle, snow, fog, freezing, thunder); GNSS — the share of the hour's aircraft that reported a degraded GNSS position. They tie the air column to what the airport experienced: a runway change with a wind shift, low cloud under an inversion.

The model forecast. With Forecast the MEPS weather model continues the section to the right of the present, hatched and behind a dashed line, in the same field — temperature anomaly, wind speed and direction, lapse rate, isentropes, barbs. It reaches 12 hours ahead for a 24-hour section and up to 48 hours for the longer ones. It is the model's mean over the same area on its ten pressure levels, from the newest run, and it is a *forecast, not a measurement*: nothing in MODE-S Wind is computed from it. Its use is to see what the model expects to follow what the aircraft have just measured — and, hours later, to see how well it did. It is available when the period ends now.

The average day. Average day folds the shown period into the 24 UTC hours of the day: each column is the mean of that hour over all the days (Fig. 37). What repeats every day stays; what came with single weather systems averages out. With 7 or 14 days the daily cycle of the boundary layer appears — the night inversion, the evening low-level jet, the afternoon mixing — and the hover says in how many of the hours a jet or an inversion was found.

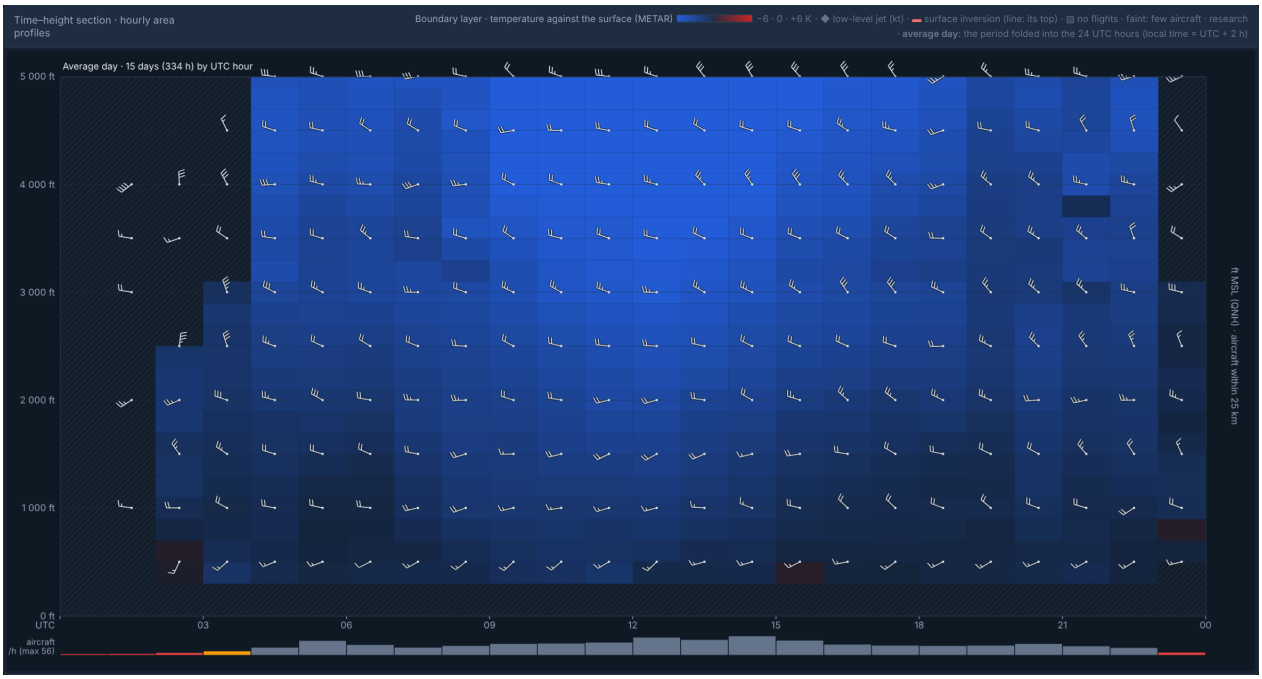

Figure 37. Average day of Boundary layer · temperature, the 14 days to 9 November 2026: the mean temperature against the surface for each UTC hour (local time is 2 hours ahead). The air is colder with height at every hour, least so in the early morning (03–08 UTC), when the lowest 2 000 ft are closest to the surface temperature, and most around midday; the hours 22–02 UTC have few flights.

5.14 Isotherms and the freezing level

The 0, −10 and −20 °C lines are the levels most used in aviation weather: the freezing level for the type of precipitation and for icing, the 0 to −20 °C layer for supercooled water. In Fig. 9 the cold front lowers the 0 °C level from about FL100 to 3 500 ft in 12 hours and the −10 °C level by about 6 000 ft; under the high on 19 October the 0 °C line jumps between 2 000 ft and FL100 because the air is close to 0 °C over the whole lower troposphere.

5.15 Longer periods

The 7- and 14-day views show the weather regimes: a series of warm and cold air masses, the jet stream coming and going, and the gradual change of the season (Fig. 38). Barbs are best switched off at this length. The hourly archive keeps every profile, so the section can be drawn for any past period by choosing its end date; hours stored before 11 October 2026 have no aircraft count (no strip).

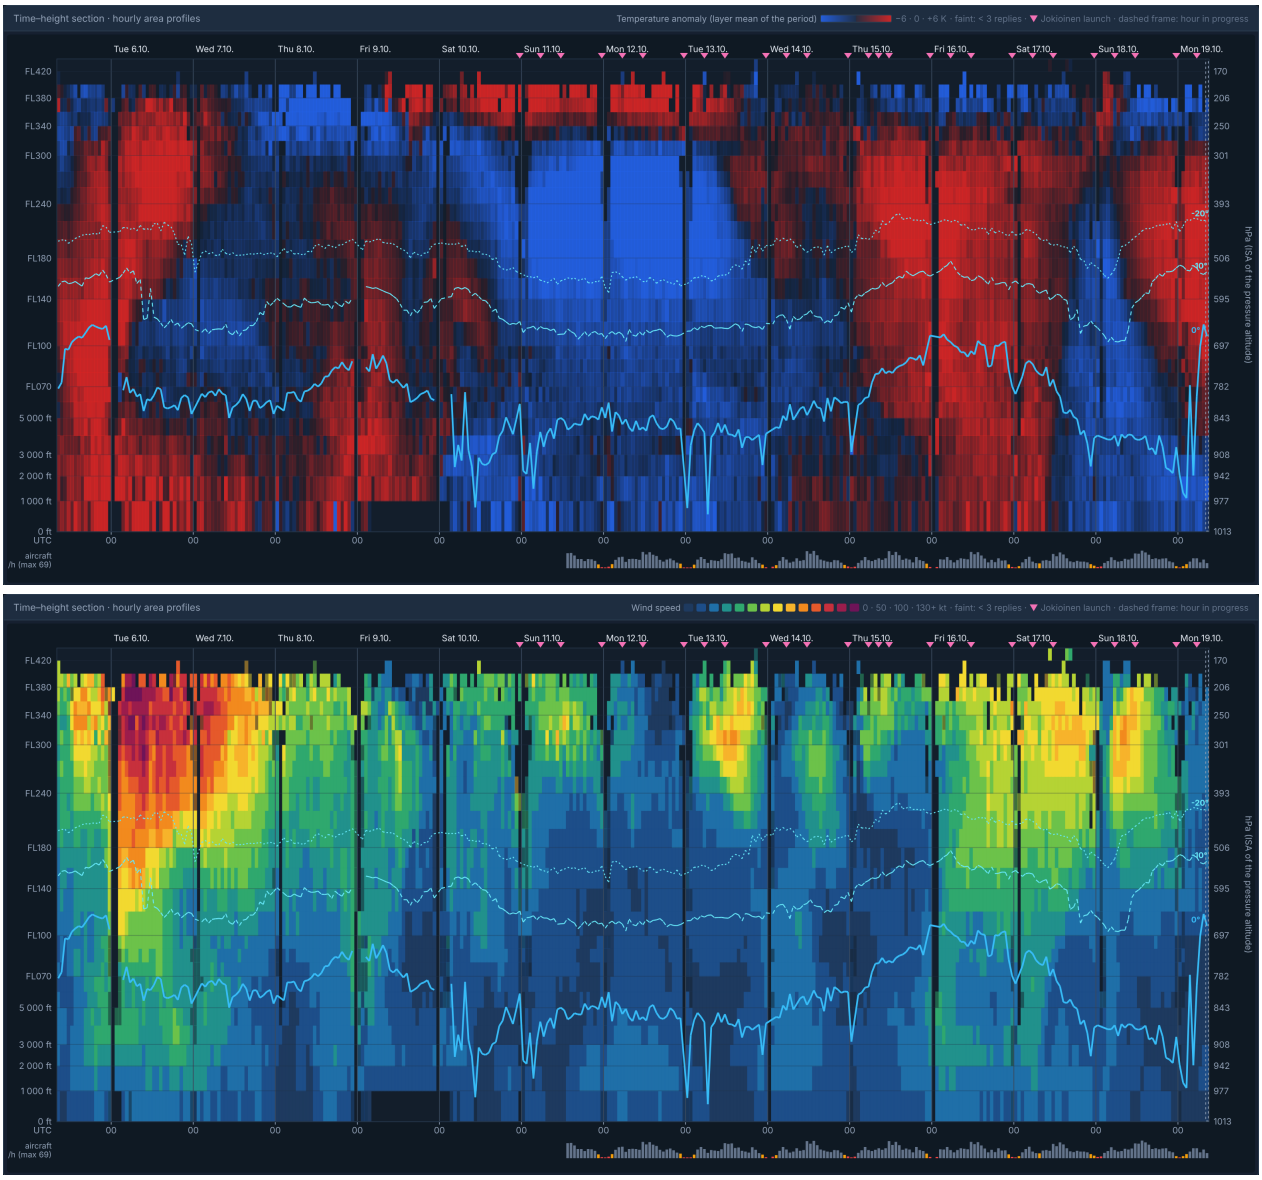

Figure 38. 14 days to 19 October 2026, temperature anomaly (top) and wind speed (bottom), barbs off. A jet of up to 145 kt (FL320, 6 October); a cold spell from 10 to 13 October with the 0 °C level near 3 000–5 000 ft and the tropopause low (warm FL340–FL380); warm air again from 14 to 17 October, the front on 17 October and the high of 18–19 October. The dark vertical lines are night hours without data.

5.16 A suggested way to use it

1. Start with 72 h, Temperature anomaly, barbs and isotherms on: find the air masses and any sloping boundaries.
2. Switch to Temperature change 3 h to time them, and check the barbs for veering or backing with height.
3. Look at Wind speed for the jet and low-level jets, and at Lapse rate for inversions and steep layers; switch to Boundary layer · wind or · temperature (or tick Boundary layer) for the night jet and the surface inversion near the airport, and to · headwind change per flight to see what changed between the landings and departures.
4. Use Vertical motion and Vorticity for the dynamics: rising air ahead of troughs and fronts, sinking air under ridges and highs, and the trough passages themselves; Height change 6 h shows the pressure surfaces falling ahead of them at every level.
5. Click an interesting column to open that hour on the Skew-T, with the Indices panel and the radiosonde.
6. Before trusting a single column, check the aircraft strip and the faint cells.

6 The Calendar view

The time–height section shows days; the Calendar shows weeks (Fig. 39). It has **one row per UTC day**, the newest at the top, and **one column per UTC hour**; each cell is coloured by one quantity of that hour:

- Surface inversion: how much warmer the air at 600–1 000 ft is than at the surface, from the boundary layer at the airport;
- Low-level jet: the speed of a jet found below 5 000 ft;
- Wind at 2 000–3 000 ft: from the hourly area profile;
- Windshear reports: the landings and departures of the hour that got a windshear level;
- Turbulence: the median EDR of the hour's flights (research);
- GNSS-degraded aircraft: the share of aircraft with a degraded position;
- Aircraft in the area profile: how much data the hour had.

A dark cell means there were flights but no inversion, jet or report; an empty cell has no data, which is mostly the night hours without traffic. A line marks the start of each week. The period is 4 or 8 weeks or 120 days. Hovering gives all the values of the hour, and **a click opens that day in the time–height section**, in the field that goes with the quantity.

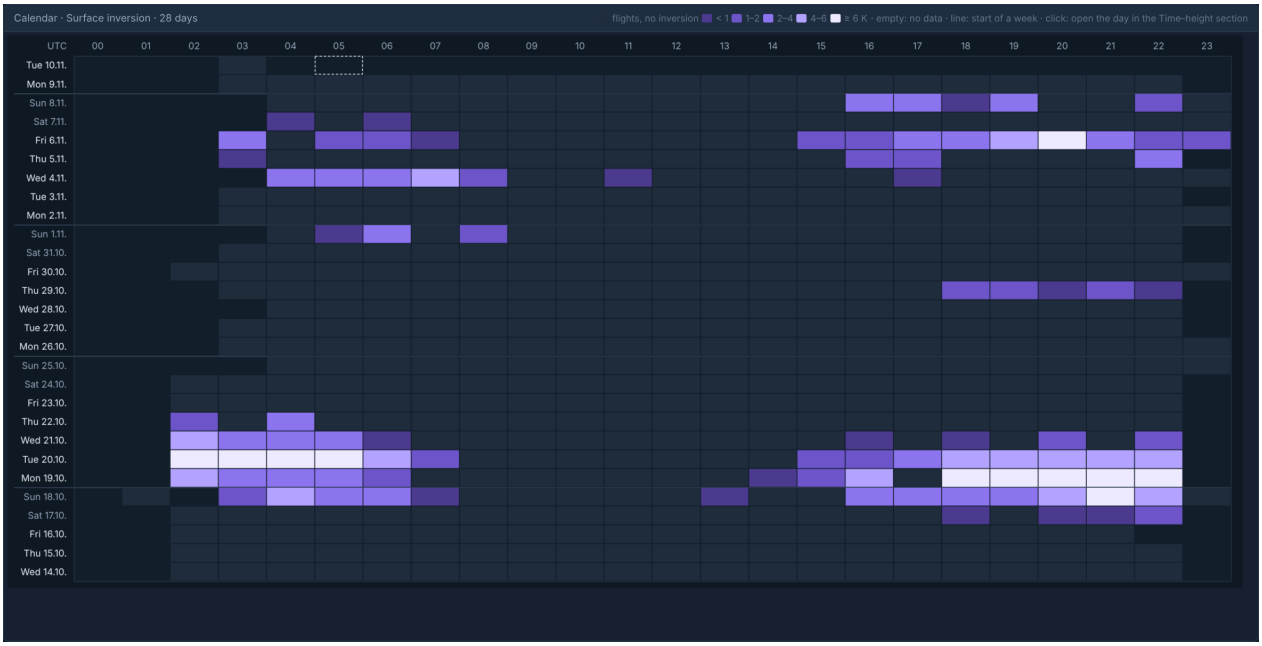

Figure 39. The Calendar, Surface inversion, the four weeks to 10 November 2026. Inversions belong to the evening, night and morning hours and come in spells of a few days — 18–22 October, again on 4–8 November — with few between.

7 Sonde check: how good is the aircraft profile?

The Sonde check view compares the Mode S area profile with every stored Jokioinen sounding, from a table that the hourly jobs fill by themselves. The period buttons choose 7, 30, 90 days or a year (Fig. 40).

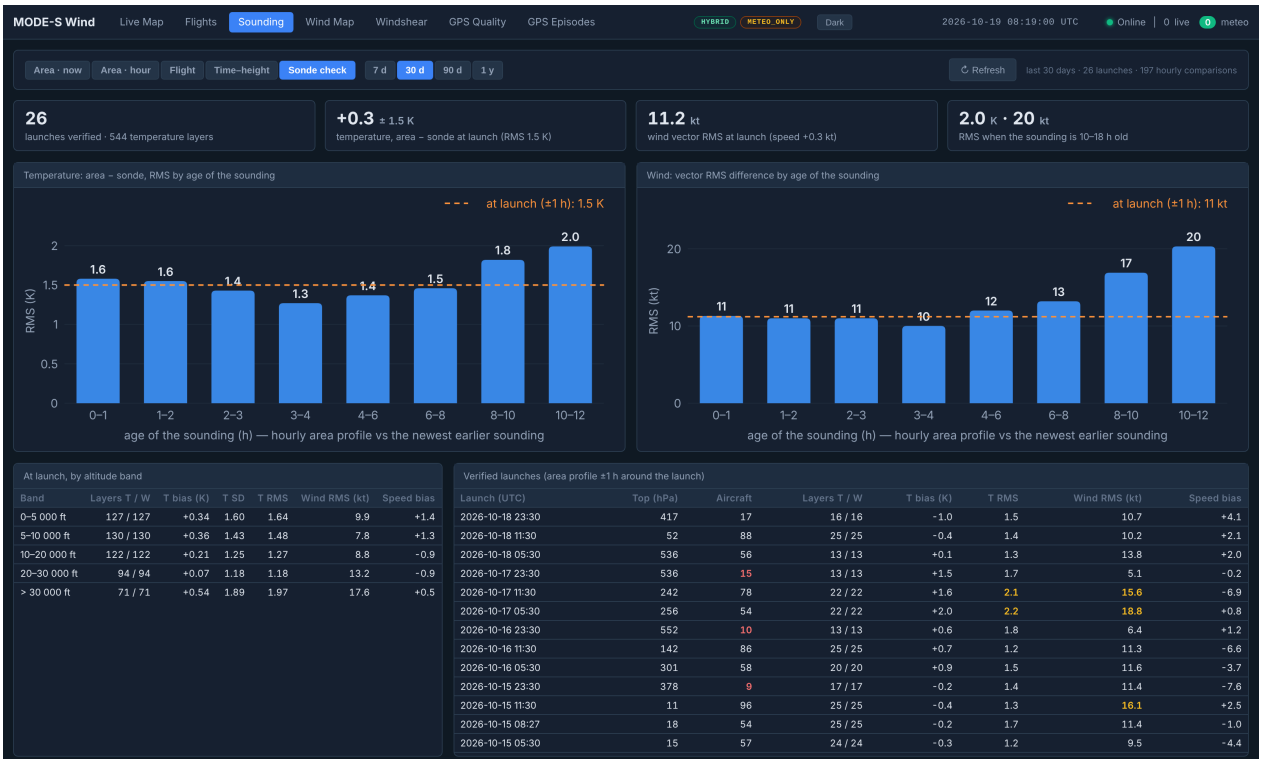

Figure 40. Sonde check, 30 days to 19 October 2026: 26 launches, temperature area − sonde $+0.3 \pm 1.5$ K, wind vector RMS difference 11 kt; the difference by the age of the sounding (bars) and by altitude band; the list of launches.

At launch. Each sounding is compared with the area profile of ± 1 hour around its launch. For temperature the page gives the *bias* (mean difference area − sonde), the *standard deviation* (scatter around the bias) and the *RMS* difference, $\sqrt{\text{bias}^2 + \text{SD}^2}$; for wind the RMS length of the vector difference and the speed bias. The table by altitude band and the list of launches show where and when the two disagree. The table by altitude band compares the *raw* Mach/TAS temperatures; while the upper-level correction is on (Section 8.1) it adds a column corrected with the bias the two upper bands would have with it, and a note below the table gives the correction per level (Fig. 41). Amber values in the list (T RMS > 2 K, wind RMS > 15 kt) and red aircraft counts (< 16, a thin night profile) point to cases worth a look. In October 2026 the two worst launches were 17 October 05:30 and 11:30 UTC, both with the cold front between Jokioinen and Helsinki (Fig. 2) — a difference in the weather, not in the measurement.

Band	Layers T / W	T bias (K)	corrected	T SD	T RMS	Wind RMS (kt)	Speed bias
0–5 000 ft	212 / 212	+0.24		1.48	1.50	8.5	+0.4
5–10 000 ft	215 / 215	+0.17		1.31	1.32	7.0	+1.0
10–20 000 ft	207 / 207	+0.12		1.11	1.11	7.7	-0.1
20–30 000 ft	176 / 176	+0.03	-0.16	1.06	1.06	12.0	+0.3
> 30 000 ft	146 / 146	+0.67	+0.18	1.52	1.66	14.0	+1.3

The values here are the raw Mach/TAS temperatures. The Skew-T and the time–height section correct the fleet's warm bias at the upper levels: 400 hPa -0.08 · 300 hPa -0.58 · 250 hPa -0.57 · 200 hPa -0.39 K (learnt from 103 hours of the MEPS model, last 21 days, updated 2026-10-24 13:30 UTC; nothing below about FL180).

Figure 41. Sonde check by altitude band, 30 days to 24 October 2026 13:30 UTC: the raw bias above 30 000 ft is $+0.67$ K, with the upper-level correction $+0.18$ K; at 20 000–30 000 ft $+0.03$ and -0.16 K. Below the table the correction per level, as applied in the Skew-T and the time–height section.

Why they can never agree perfectly. The two systems measure different things. The radiosonde is a point that drifts with the wind (tens of kilometres by the time it reaches cruise levels), measures every few metres and needs about an hour to reach 10 km. The area profile is a 300 km wide, 60-minute average, 100 km away. Part of the difference is therefore real *representativeness*: inland Jokioinen has colder nights near the ground, fronts and showers pass one site before the other, and jet cores are narrower than 300 km — which is why the wind differences are largest above 30 000 ft. The 30-day temperature bias of about $+0.3$ K is common to the whole fleet; it cannot be found by comparing aircraft with each other, only against an independent reference like this one.

GNSS height calibration. Below the comparison tables the view shows the calibration of the GNSS heights of the pressure surfaces (Section 5.8): the correction per 5 000 ft band with the number of airframe cells behind it and the built-in default; the mean offset *per aircraft type*; and the *per-airframe altimeter offsets* — registration and type, the

soundings the airframe was compared with, its raw mean offset after the band correction and the offset actually used, which is shrunk towards zero until the airframe has been seen at several soundings (only about 40 % of an airframe's offset repeated from one day to the next in October 2026). On 20–21 October the A320s were on average 12 m above the fleet, the ATR 72s 7.5 m below it and the A321s at 0 m. The aircraft are compared with the balloon at its drifted position, followed from the sounding's own winds.

By age of the sounding. Every archived hour is also compared with the newest sounding launched by the middle of that hour. The bar charts give the RMS difference by the age of that sounding: how fast the atmosphere moves away from a sounding. In October 2026 the temperature difference stayed at 1.3–1.6 K for the first 6 hours and grew to 2.0 K at 10–12 hours; the wind difference stayed at 10–12 kt for 6 hours and reached 20 kt at 10–12 hours. The first hours show the floor set by measurement and representativeness; the growth after that is the weather changing. Since soundings are made only every 6 or 12 hours (there is no 18 UTC launch), this is what a live aircraft profile adds: between the launches it follows the atmosphere, while the last sounding grows steadily older.

8 MEPS check: the aircraft against the weather model

The Sonde check has two limits: there are only two or three soundings a day (and around the 00 UTC launch hardly any aircraft fly), and the balloon rises 100 km away. The MEPS check compares the aircraft profile with the MEPS weather model instead (Section 3.3): *every hour*, day and night, over *the same area*. The period buttons choose 3, 7, 14 or 30 days; ≥ 8 aircraft keeps only the hours with enough traffic, so that the comparison is about the measurement rather than about the sampling of a few night-time aircraft (Fig. 42).

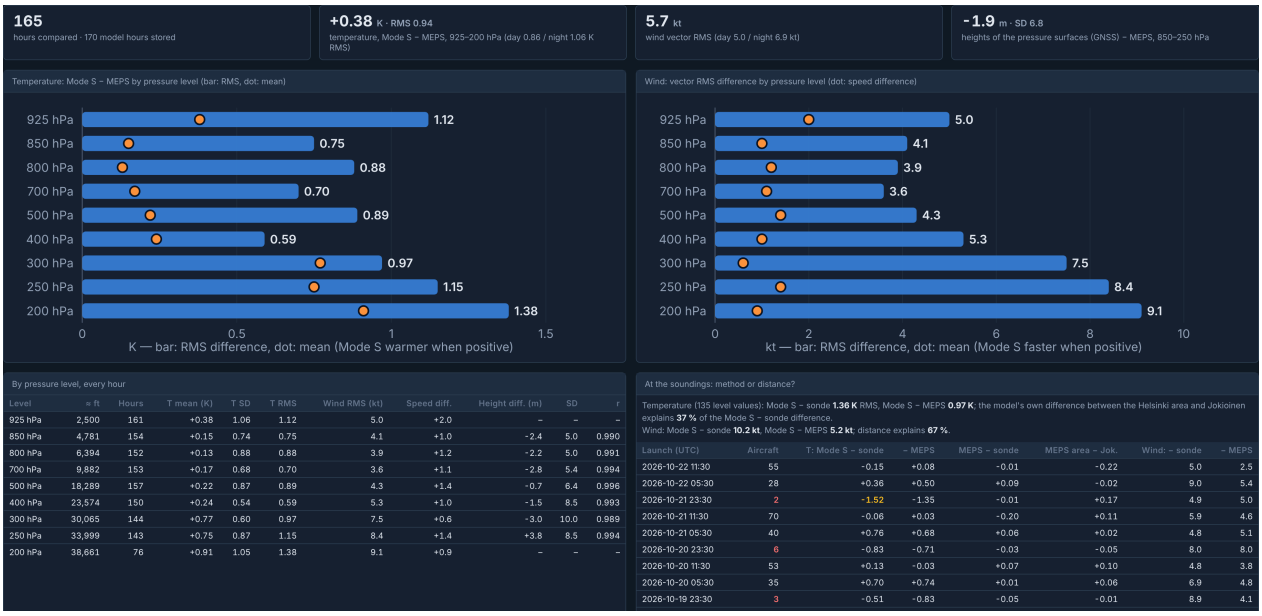

Figure 42. MEPS check, 7 days to 22 October 2026 13 UTC: 165 hours. Temperature Mode S − MEPS +0.4 K (RMS 0.9 K), wind 5.7 kt RMS, heights of the pressure surfaces −1.9 m (SD 6.8 m). Bars: RMS difference by level; dots: mean difference. Right: the comparison at each sounding.

Tiles. The hours compared; temperature Mode S − MEPS over 925–200 hPa (mean and RMS, separately for day 05–19 UTC and night); the wind vector RMS (day / night); and the heights of the pressure surfaces from the aircraft GNSS heights (Section 5.8) minus the model's, 850–250 hPa.

By pressure level. The two bar charts give the RMS difference per model level as a bar and the mean difference as a dot (positive: the aircraft are warmer, or faster). The table adds the number of hours, the standard deviation, the wind speed difference and the heights: mean difference, its standard deviation and the correlation of the hourly heights. In October 2026 the aircraft were within 0.6–0.9 K and 4–5 kt of the model up to 500 hPa, with more scatter at the jet levels (1.0–1.4 K and 7–9 kt at 300–200 hPa). The heights agreed within a few metres with a correlation of 0.99 — the GNSS height calibration works. The aircraft were warmer than the model by 0.1–0.3 K below 400 hPa and 0.7–0.9 K at 300–200 hPa. The model agrees with the radiosondes there within 0.1 K, so this is the *fleet warm bias of the Mach/TAS temperature* — the same +0.3 K that the Sonde check finds, now seen level by level and every hour. From these differences MODE-S Wind learns the upper-level temperature correction; the table's Correction column gives it per level (Section 8.1).

The model at the aircraft positions (from 26 October 2026). The aircraft do not fill the 150 km area evenly. At

FL250–FL400 their mean position over 19–26 October 2026 was 25–40 km south and 45–60 km west of the receiver — the busy routes to the south-west. In a strong height gradient the model's *area mean* is then not what the aircraft flew through: at 300 hPa the model surface at the aircraft positions lay 12 m (7 days) and 26 m (24–26 October, under a 100-kt jet) below its area mean, which was almost the whole difference *Mode S heights below MEPS* that the check had shown. Each hour is therefore compared with the model at the aircraft's own positions: the model fields stored for the Weather page (a 20 km grid, kept 7 days) give the model at the grid points that the observations of that hour and level (±1 000 ft) passed, weighted by their number — separately for the temperatures, the winds and the GNSS heights — and this replaces the area mean. Hours older than 7 days keep the area mean; the first tile says how many hours were matched. Over the 7 days to 26 October this moved the heights at 300 hPa from −16.5 to +1.6 m (SD 15.4 → 9.9 m), at 500 hPa from −11.9 to −2.1 m and at 850 hPa from −8.2 to −6.9 m, and the wind vector RMS at 300 hPa from 9.9 to 4.3 kt (500 hPa: 3.8 → 2.4 kt); the temperatures changed by less than 0.1 K in the mean. So the GNSS heights agree with the model within about 2 m at 250–400 hPa and lie 2–7 m below it lower down.

At the soundings: method or distance? For each Jokioinen sounding the table gives, over 925–200 hPa: the aircraft − sonde (what the Sonde check measures), the aircraft − model over the same area, the model at Jokioinen − sonde, and the model's own difference between the Helsinki area and Jokioinen, *MEPS area − Jok.* If the aircraft − sonde difference follows the model's area − Jokioinen difference, it is the weather between the two places, not a measurement error. Above the table the share of the aircraft − sonde difference that this explains is given: on 15–22 October 2026 37 % for temperature and 67 % for the wind (1.36 K and 10.2 kt against the sonde, 0.97 K and 5.2 kt against the model). The Sonde check therefore overstates the error of the aircraft profile, most of all for the wind. On 17 October with the cold front between the two sites (Fig. 2) the aircraft were 1.8 K warmer than the sonde but only 0.4 K warmer than the model.

The model is not the truth. Against the radiosondes MEPS is within about 0.3–0.5 K and 3–4 kt; at sounding times this is partly by construction, because the model takes the sounding in. It also takes in aircraft reports, so part of the agreement is built in too. The check uses the model's 10 standard pressure levels, where it also has the heights of the pressure surfaces; the aircraft layers are interpolated in log pressure to these levels before they are compared. What the check shows best is the *pattern*: which levels, which hours and which periods disagree, and whether the aircraft and the sonde disagree because of the distance.

How the data are made. A background job looks for new runs every 20 minutes; each 3-hourly run appears in MET Norway's archive (thredds.met.no) about 2–3 hours after its start. Two requests bring the forecast hours +0 to +5 in a 300 × 300 km box every 10 km: temperature, wind, height and humidity on the 10 standard pressure levels (about 1.4 MB) and temperature, humidity and wind on the 56 model levels with the surface pressure, one hour further (about 6 MB; they appear in the archive about an hour after the standard levels). An empty or broken answer is tried again twice. The points within 150 km are averaged, the winds turned from the model grid to true north, and one row of each is stored per hour (about 1 and 3 kB). Only +0 to +2 h of each run are used in the check; the newest run's +3 to +5 h serve the Skew-T as a forecast. At the first start the last 3 days are fetched. The model value of an aircraft hour is the mean of the model at its start and end. If MET Norway cannot be reached, the view says no model data is stored and nothing else is affected.

8.1 The upper-level temperature correction

The MEPS check shows the same warm bias of the aircraft at cruise levels every week: about +0.7 K at 300 and 250 hPa and +0.6 K at 200 hPa — in the month-long study of 22 October, before the front of 23–24 October and during it. The model agrees with the radiosondes there within 0.1 K, and the Sonde check sees the bias too (above 30 000 ft). It is a property of the fleet's Mach/TAS temperature, not of the weather, so it can be corrected. Below 400 hPa the difference stays within ±0.3 K and changes from day to day, so nothing is corrected there.

How it is learnt. Every hour MODE-S Wind takes the MEPS check differences of the last 21 days — hours with at least 8 aircraft, the stored hourly profiles (always the raw values) against the model — and computes the mean difference per level. The correction at 400, 300, 250 and 200 hPa is minus that mean, shrunk towards zero as if 24 hours had shown no difference, and used only when a level has at least 24 hours. Table 3 shows the values of 24 October 2026.

Level	500 hPa FL180	400 hPa FL240	300 hPa FL300	250 hPa FL340	200 hPa FL390
Mode S − MEPS, 21 days	+0.17 K	+0.10 K	+0.72 K	+0.72 K	+0.58 K
hours	103	103	98	94	49
correction applied	—	−0.08 K	−0.58 K	−0.57 K	−0.39 K

Table 3. The upper-level temperature correction of 24 October 2026 13:30 UTC (MEPS data from 19 October; shrunk while the hours are few).

Where it is applied. When the Skew-T (Area · now, Area · hour, Flight, and the Live Map's Atmosphere Profile) and the time–height section are drawn: interpolated in log pressure between the levels, held above 200 hPa and faded out between 400 and 500 hPa (about FL240 to FL180), so nothing changes below FL180. The Skew-T's data badge then ends with `upper T corr.` and its hover read-out gives the correction and the raw value (`corrected −0.5 K for the fleet's warm bias at this level (learnt from the MEPS model); raw Mach/TAS −53.7 °C`); the time–height hover notes it above FL180.

What stays raw. Everything stored — the hourly profiles, the observations — and everything that compares or derives from the temperature: the MEPS check and the Sonde check (which show the correction beside the raw values, Figs. 43 and 41), the Wind Map, the thickness check and the moisture trial. So the correction can always be learnt again and checked against the soundings.

Level	≈ ft	Hours	T mean (K)	T SD	T RMS	Correction	Wind RMS (kt)	Speed diff.	Height diff. (m)	SD	r
925 hPa	2,500	103	+0.36	0.94	1.00		3.7	+0.7	–	–	–
850 hPa	4,781	102	-0.11	0.74	0.74		3.0	+0.7	-4.6	4.7	0.998
800 hPa	6,394	101	-0.18	0.85	0.86		3.9	+1.5	-4.3	5.0	0.997
700 hPa	9,882	101	+0.16	0.53	0.56		3.9	+1.6	-4.8	5.6	0.998
500 hPa	18,289	103	+0.17	0.59	0.61		3.1	+0.8	-3.1	7.2	0.997
400 hPa	23,574	103	+0.10	0.62	0.63	-0.08	5.1	+1.2	-5.1	9.1	0.997
300 hPa	30,065	98	+0.72	0.67	0.98	-0.58	8.6	+1.3	-8.9	11.6	0.996
250 hPa	33,999	94	+0.72	0.77	1.05	-0.57	6.4	+1.6	-4.2	10.8	0.997
200 hPa	38,661	49	+0.58	0.99	1.13	-0.39	6.7	+1.4	–	–	–

Figure 43. MEPS check table, 7 days to 24 October 2026 13:30 UTC, hours with at least 8 aircraft: the aircraft are 0.72 K warmer than the model at 300 and 250 hPa and 0.58 K at 200 hPa; the Correction column gives what the Skew-T and the time–height section take off at each level.

The test. Before it was switched on, the correction was learnt from 19–24 October leaving out each sounding's own day and applied to 27 Jokioinen soundings of 12–24 October: at 200–300 hPa the temperature difference to the sonde fell from 1.27 to 0.96 K RMS (bias from +0.8–0.9 to +0.1–0.3 K); at 400–925 hPa nothing changed.

Without the model. MODE-S Wind measures everything from the aircraft alone; the model only teaches this small calibration. When no new model data arrive, the last learnt values stay in use; with none learnt, or with `TEMP_CORRECTION = False` in the configuration, nothing is corrected and the profiles are the pure aircraft values.

9 The Mast view: the lowest 300 m

The mast. The Finnish Meteorological Institute's 327 m mast at Kivenlahti, Espoo (station *Espoo Latokaski*), stands 24 km south-west of Helsinki-Vantaa on ground 44 m above the sea, near the extended centreline of runways 04L / 04R. Every 10 minutes it measures the temperature and humidity at 2, 26, 49, 92, 141, 217, 265 and 297 m above its ground and the wind — speed, direction and gust — at 26, 92, 217 and 327 m (230, 446, 856 and 1 217 ft MSL). It is the only measured profile of the lowest 300 m near the airport: between the METAR at 2 m and the lowest aircraft heights it shows the night inversions, the low-level jet and the wind shear near the ground that the aircraft meet only on final. MODE-S Wind fetches it from FMI open data every 10 minutes (a step appears about 5 minutes after its time), back-fills up to 7 days after a break, and keeps it for good (about 300 bytes a step); it can be switched off on the Maintenance page. The first stored step is 25 October 2026 20:20 UTC.

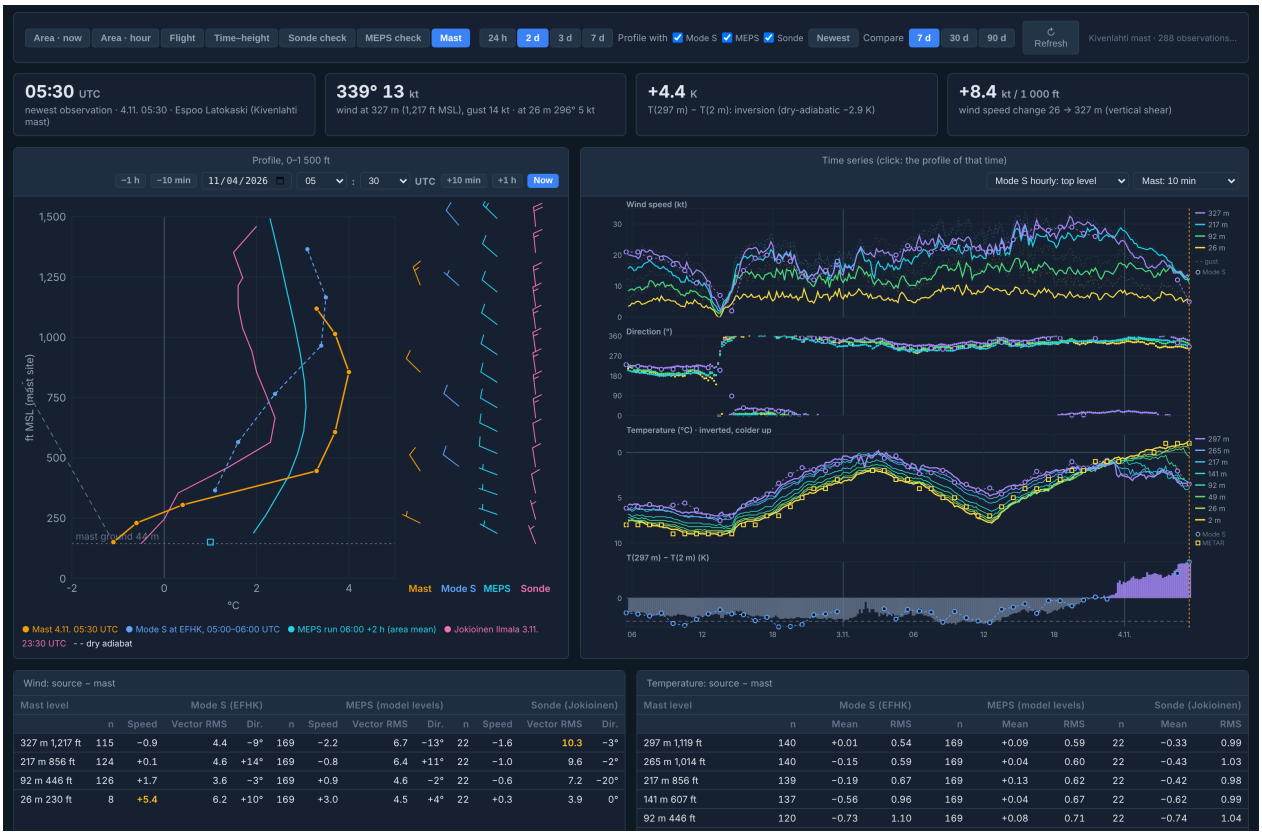

Mast level	Mode S (EFHK) n	Speed	Vector RMS	Dir.	MEPS (model levels) n	Speed	Vector RMS	Dir.	Sonde (Jokioinen) n	Speed	Vector RMS	Dir.
327 m 1,217 ft	115	−0.9	4.4	−9°	169	−2.2	6.7	−13°	22	−1.6	10.3	−3°
217 m 856 ft	124	+0.1	4.6	+14°	169	−0.8	6.4	+11°	22	−1.0	9.6	−2°
92 m 446 ft	126	+1.7	3.6	−3°	169	+0.9	4.6	−2°	22	−0.6	7.2	−20°
26 m 230 ft	8	+5.4	6.2	+10°	169	+3.0	4.5	+4°	22	+0.3	3.9	0°

Mast level	Mode S (EFHK) n	Mean	RMS	MEPS (model levels) n	Mean	RMS	Sonde (Jokioinen) n	Mean	RMS
297 m 1,119 ft	140	+0.01	0.54	169	+0.09	0.59	22	−0.33	0.99
265 m 1,014 ft	140	−0.15	0.59	169	+0.04	0.60	22	−0.43	1.03
217 m 856 ft	139	−0.19	0.67	169	+0.13	0.62	22	−0.42	0.98
141 m 607 ft	137	−0.56	0.96	169	+0.04	0.67	22	−0.62	0.99
92 m 446 ft	120	−0.73	1.10	169	+0.08	0.71	22	−0.74	1.04

Figure 44. The Mast view on 4 November 2026 at 05:30 UTC, the end of a clear night ahead of a front (the station's data). Tiles: 339°/13 kt at 327 m but 296°/5 kt at 26 m, the air at 297 m 4.4 K warmer than at 2 m (an inversion) and a wind increase of 8.4 kt per 1 000 ft. Profile: the mast (amber) from −1.2 °C at 2 m to +3.9 °C at about 850 ft; the airport's aircraft of 05–06 UTC (blue dashed) and the Jokioinen sounding of 23:30 UTC (pink) show the inversion too, the MEPS model (cyan) hardly at all. Time series, 2 days: the wind turning from south to north early on 3 November, the temperatures (colder up) and ΔT 297 m − 2 m turning violet — an inversion — in the evening of 3 November. Below, the comparison of 7 days.

9.1 Tiles and profile

Tiles. The time of the observation shown (the newest, or the one picked); the wind at the top of the mast (327 m) with its gust and at 26 m; the **temperature difference 297 m − 2 m** with the stability it means — inversion (warmer above), stable, well mixed or unstable, against the dry-adiabatic −2.9 K over those 295 m — and the **wind shear** from 26 to 327 m in kt per 1 000 ft.

Profile, 0–1 500 ft MSL. The mast's temperatures as amber points joined by a line (the hover adds the humidity and dewpoint), with the dry adiabat through its 2 m value: a line to the right of the dashed adiabat is stable, warmer aloft an inversion. With the tick boxes under the buttons three more sources are drawn at the same heights above the sea:

- Mode S — the airport's boundary layer of that hour (Section 5.11): the winds in 250-ft bins and the temperatures in 200-ft bands of the landings and departures, with the METAR temperature on the ground (□);
- MEPS — the model's levels over the area around the receiver at that hour, with its 2 m temperature;
- Sonde — the newest Jokioinen sounding within 12 hours (100 km north-west, inland).

Their winds stand beside the plot as barb columns, one per source, at their heights. **Any time:** the date and the hour and minute (in the mast's 10-minute steps) in the profile's title, and the steps −1 h, −10 min, +10 min, +1 h, load the observation at or just before that time with the Mode S hour, the model and the sounding of that time; Now returns to the newest. A click on the time series does the same.

9.2 Time series and comparison

Time series (24 h, 2 d, 3 d or 7 d): the wind speed with the gusts and the direction at the four wind levels; the temperatures of all eight levels on an axis that is *inverted — colder up* — so that the levels lie as their heights, 2 m usually at the bottom; and the bars of ΔT 297 m − 2 m: violet above zero (an inversion), orange below the dashed dry-adiabatic line (unstable). The selector Mode S hourly adds the airport's aircraft of each hour at the mast's top heights (hollow circles; all levels at 92–327 m too) and the METAR temperature (□); Mast: 10 min / 1-h mean / off shows the mast as its steps, as a running hour (like for like with the hourly aircraft values) or not at all. The hover gives the values of a step and of the Mode S hour.

Comparison (7, 30 or 90 days): each source against the mast at the same height above the ground, level by level — the number of hours, the mean difference source − mast and the RMS, for the wind also the vector RMS and the difference of direction. In the 7 days of Fig. 44 the aircraft temperatures were within −0.7 to 0 K of the mast at 92–297 m (RMS 0.5–1.1 K), MEPS within +0.04 to +0.13 K and the soundings about −0.3 to −0.7 K (RMS about 1 K). The wind directions differ by about −9° at 327 m and +14° at 217 m for every source alike: an offset of the mast's own vanes, not of the aircraft. The mast is 24 km from the airport, on the coast, so part of every difference is real; the *EFHK Mode S mast wind study* (*User guides*) analyses it in detail.

9.3 The mast in the time–height section and on the Skew-T

Time–height. The tick box Mast adds a strip under the section: the mast's hourly winds at 26, 92, 217 and 327 m as amber barbs, on the stability of its lowest 300 m — violet an inversion (the stronger, the darker), blue stable, none well mixed, orange unstable. Mast in graph draws the mast inside the section: with Boundary layer · temperature a narrow column at the right of each hour with its temperatures against the METAR in the same colours as the cells — so an inversion below the lowest aircraft band shows — with Boundary layer · wind its wind speeds, and with Barbs its winds as amber barbs at their heights on any field; an amber cap marks the mast's top (Fig. 45). The hover gives the hour's winds, gusts and temperatures.

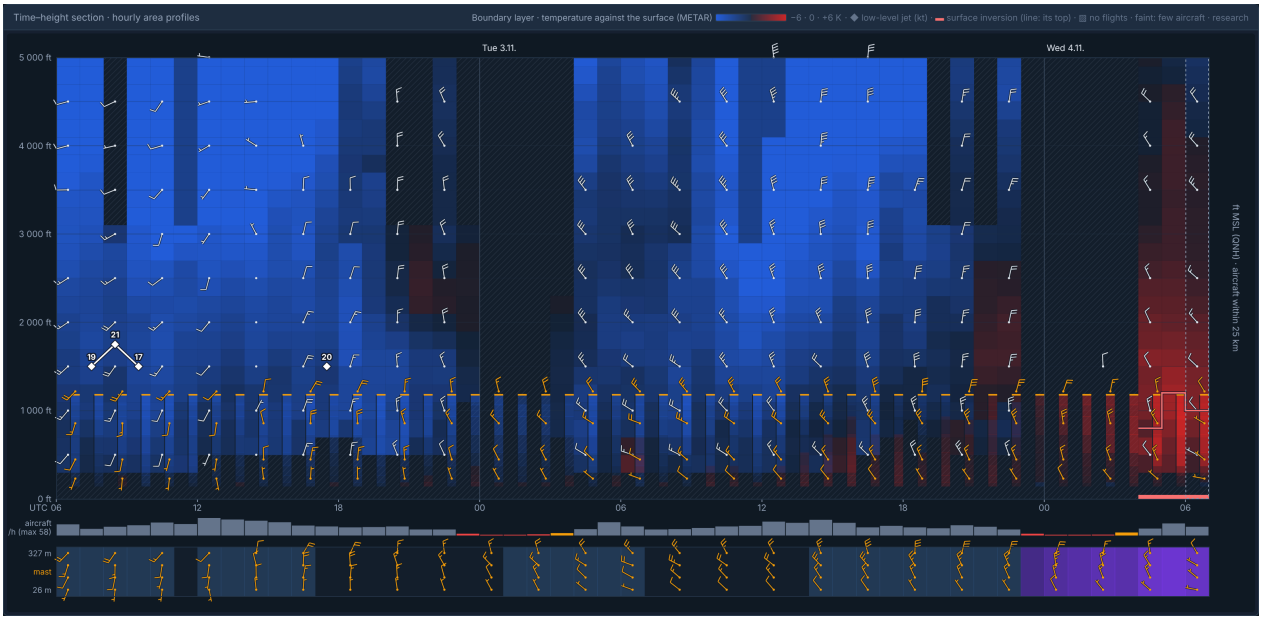

Figure 45. Boundary layer · temperature with Barbs, Mast and Mast in graph, 48 hours to 4 November 2026 07 UTC (the station's data). Daytime on 2 and 3 November is blue (colder above the ground); in the night of 3–4 November the aircraft find a surface inversion with its top at 800–1 200 ft (red, line at its top) from 04 UTC, while the mast's strip turns violet already in the evening of 3 November — the inversion forms at the ground hours before the few night flights can see it. The low-level jet of 2 November (19–21 kt at 1 500–1 900 ft) is marked with its diamonds.

Skew-T. The tick box Mast in the panel title draws the mast's temperatures as an amber line with points and its winds as amber barbs — the newest observation in Area · now, the one at that time in Area · hour and Flight. The mast covers only the lowest 300 m, so it is best seen with Airport: Zoom, which shows the lowest 5 000 ft (Fig. 46).

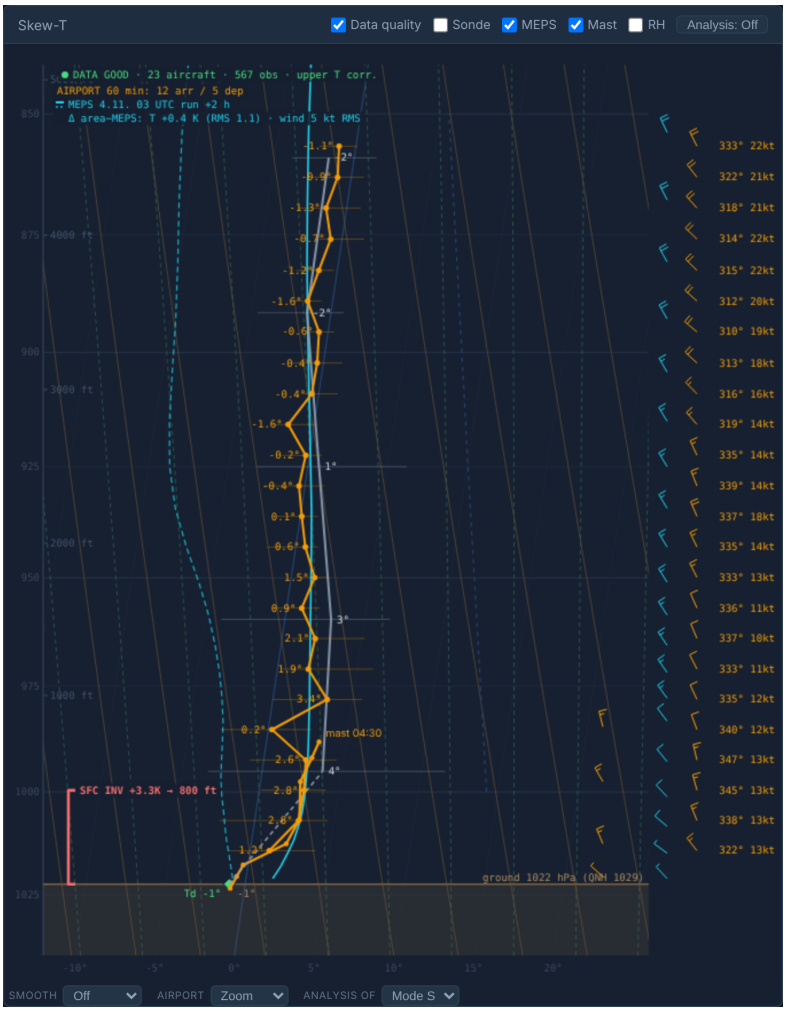

Figure 46. Area · hour 4 November 2026 04–05 UTC with Airport: Zoom, MEPS and Mast. The METAR $-1/-1$ °C; the mast at 04:30 UTC (amber, labelled) climbs from -1 °C to about $+3.5$ °C at 300 m, the airport's flights find the inversion of $+3.3$ K with its top at 800 ft (`SFC INV`), while the model (teal) starts at $+1.7$ °C and misses most of it — the cold, shallow air near the ground that matters for fog, frost and the wind shear of the last approach.

What it adds. The aircraft give the boundary layer only where and when they fly — few between 01 and 05 local time, when the night inversion is strongest — and the model smooths the lowest levels. The mast measures the lowest 300 m all night, every 10 minutes: when an inversion forms, how strong it is, and how the wind turns and strengthens above it.

10 The Wind Map page

The Sounding page shows the atmosphere above one place, changing in time. The Wind Map page shows one level of it over the whole area the receiver covers: the wind and temperature measured by the aircraft at a chosen flight level, averaged into square cells and drawn as wind barbs on a map. Around it are the tools of an upper-air chart: isotachs and streamlines, the jet stream, height contours of the pressure surface with the geostrophic wind, the radiosonde, and comparisons with an earlier period or another level.

10.1 The page at a glance

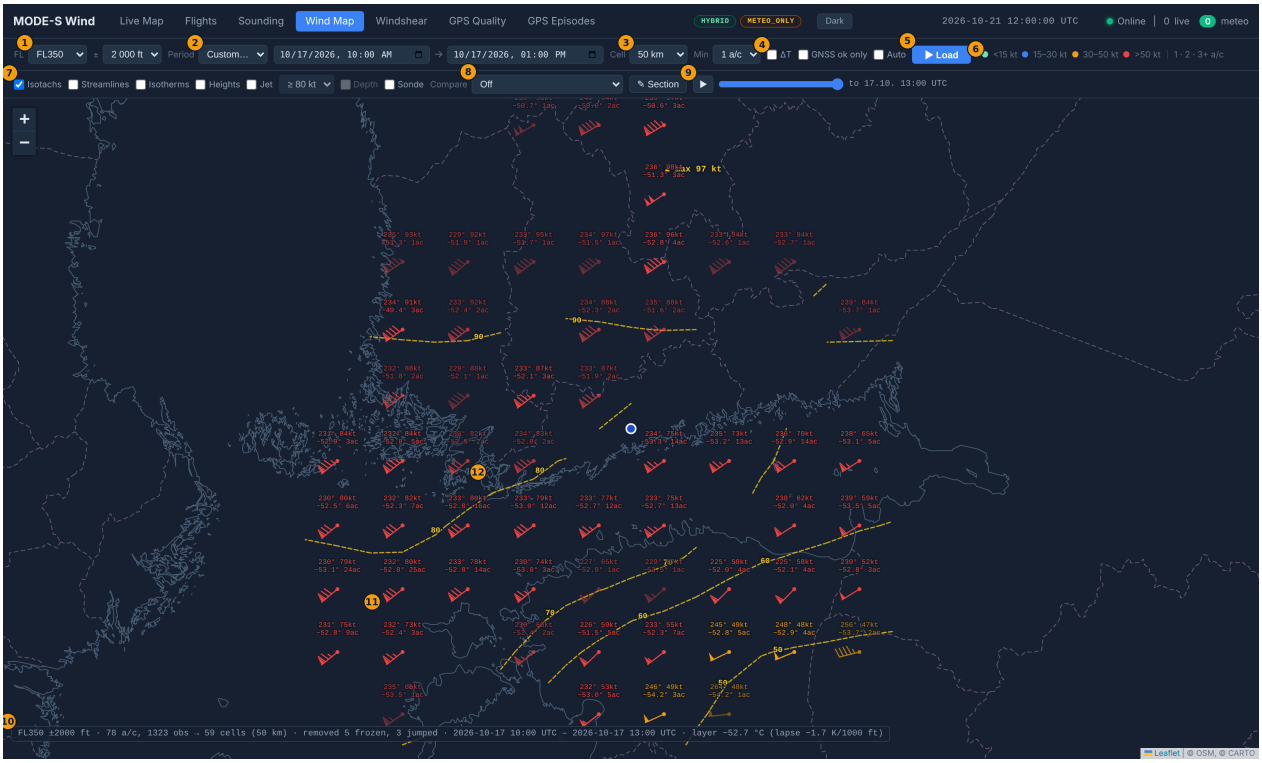

Figure 47. The Wind Map, FL350 ±2 000 ft, 17 October 2026 10–13 UTC, isotachs on: 78 aircraft and 1 323 observations in 59 cells of 50 km (5 frozen and 3 jumped positions removed), layer mean −52.7 °C. A south-westerly flow of 230–236° weakens from 90–97 kt in the north-west to 50 kt in the south-east: the jet stream lies to the north-west. (The map background in the screenshots of this section is the coastline and border outline; the page shows the CARTO map.)

(1) Level FL chooses the level (1 000 ft to FL450) and ± the depth of the band around it (default ±1 000 ft; ±2 000 ft gives more cells).

(2) Period the last 1, 3, 6, 12 or 24 hours, or Custom with a start and end.

(3) Cell and Min the cell size (25, 50 or 100 km) and the minimum number of different aircraft in a cell for it to be shown.

(4) ΔT, GNSS ok only, Auto temperature colouring (Section 10.3); leave out aircraft while their GPS is degraded; reload every 2 minutes.

(5) Load runs the query (also Enter); the page loads at once when opened, with the remembered settings.

(6) Legend barb colour by speed (<15, 15–30, 30–50, >50 kt) and barb opacity by the number of aircraft (1, 2, 3+).

(7) Analysis Isotachs, Streamlines, Isotherms, Heights, Jet with its speed and Depth, Sonde, MEPS (Section 10.8); Section draws a vertical cross-section (Section 10.10).

(8) Compare change since the previous period, the difference to another level (thermal wind), or to the MEPS model.

(9) Time slider moves the period back hour by hour; ▶ animates the last 24 hours.

(10) Status line aircraft and observations used, cells shown, positions removed, period, layer mean temperature and lapse rate; QNH for low levels; the geostrophic wind with Heights.

(11) Cell a barb with a two-line label: direction and speed, temperature at the level and number of aircraft. Click for the popup, hover for a short tooltip.

(12) Isotach dashed yellow lines of equal speed every 10 kt; `max 97 kt` marks the strongest analysed wind.

10.2 How the map is made

Cells and averaging. The observations of the band and period are placed on a grid of square cells on a flat map centred on the receiver — square on the ground, not in degrees (a degree grid would be twice as tall as wide at 60°N). Within a cell each aircraft's observations are averaged first (wind as u, v components, so 350° and 010° give 000°), then the aircraft means are averaged: one aircraft with 30 stored replies counts as much as one with 3. The barb's opacity shows how many different aircraft are behind it — faint for one, medium for two, full for three or more — because a single airframe's heading or temperature error is not averaged out in a faint cell. The popup (Fig. 48) gives the counts and the spread between the aircraft.

Positions. Under GNSS interference an aircraft's position can freeze (the last fix is repeated while it moves on) or jump to a false, spoofed place — in this area often a fixed point east of St Petersburg. The wind itself is not affected, but it would land in the wrong cell, so frozen positions (the same position ≥ 10 s later while moving) and impossible jumps (more than 3 NM plus 800 kt times the elapsed time) are removed. GNSS ok only also leaves out all observations while the aircraft had a GPS degradation episode; it is off by default, because at cruise levels about two thirds of the observations fall inside an episode while most positions still move normally (inertial navigation).

Temperature at the level. A band of ±2 000 ft spans 6 K or more of normal cooling with height, more than the horizontal differences. Each temperature is therefore moved to the band centre with the lapse rate fitted to all temperatures of the band and period (shown in the status line).

Low levels. Transponders send pressure altitude. Below FL050 the band is shifted to the pressure altitude of the chosen height above mean sea level with the QNH of the period — the current METAR for a recent period, otherwise the METAR stored with the hourly profile archive — shown in the status line.

How many cells to expect. With 50 km cells, ±2 000 ft and 3 hours: at FL350 about 50 cells, of which about 25 with three or more aircraft (17 at night); at FL150–FL250 about 9 such cells, mostly within 100 km of Helsinki; at FL050 and below only the 3–4 cells around the airport — for the lowest levels the airport low-level profile of the Skew-T is the better tool. At cruise levels the cells reach about 250–300 km from the receiver.

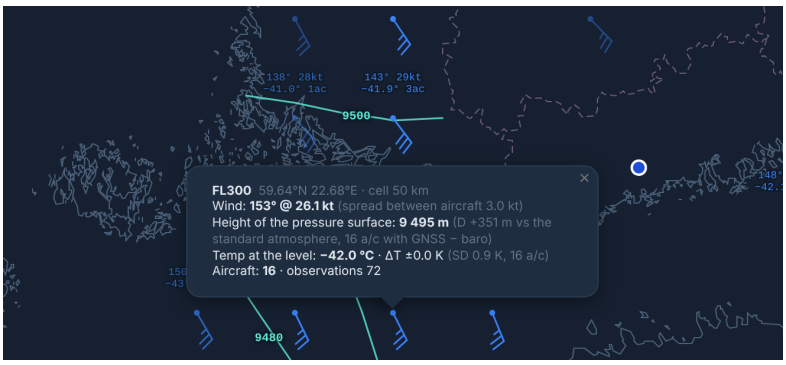

Figure 48. Popup of one cell, FL300, 20 October 2026 09–12 UTC with Heights: wind 153°/26 kt with a spread of 3 kt between 16 aircraft; height of the 301 hPa surface 9 495 m (D +351 m); −42.0 °C.

10.3 ΔT: warm and cold air at the level

With ΔT each cell is tinted by its temperature minus the mean of all cells of the layer (red warmer, blue colder, full at ±3 K). It removes the level's normal temperature and leaves the air masses: warm and cold advection areas, frontal zones, and near the tropopause the stratospheric air on the cold side of the jet.

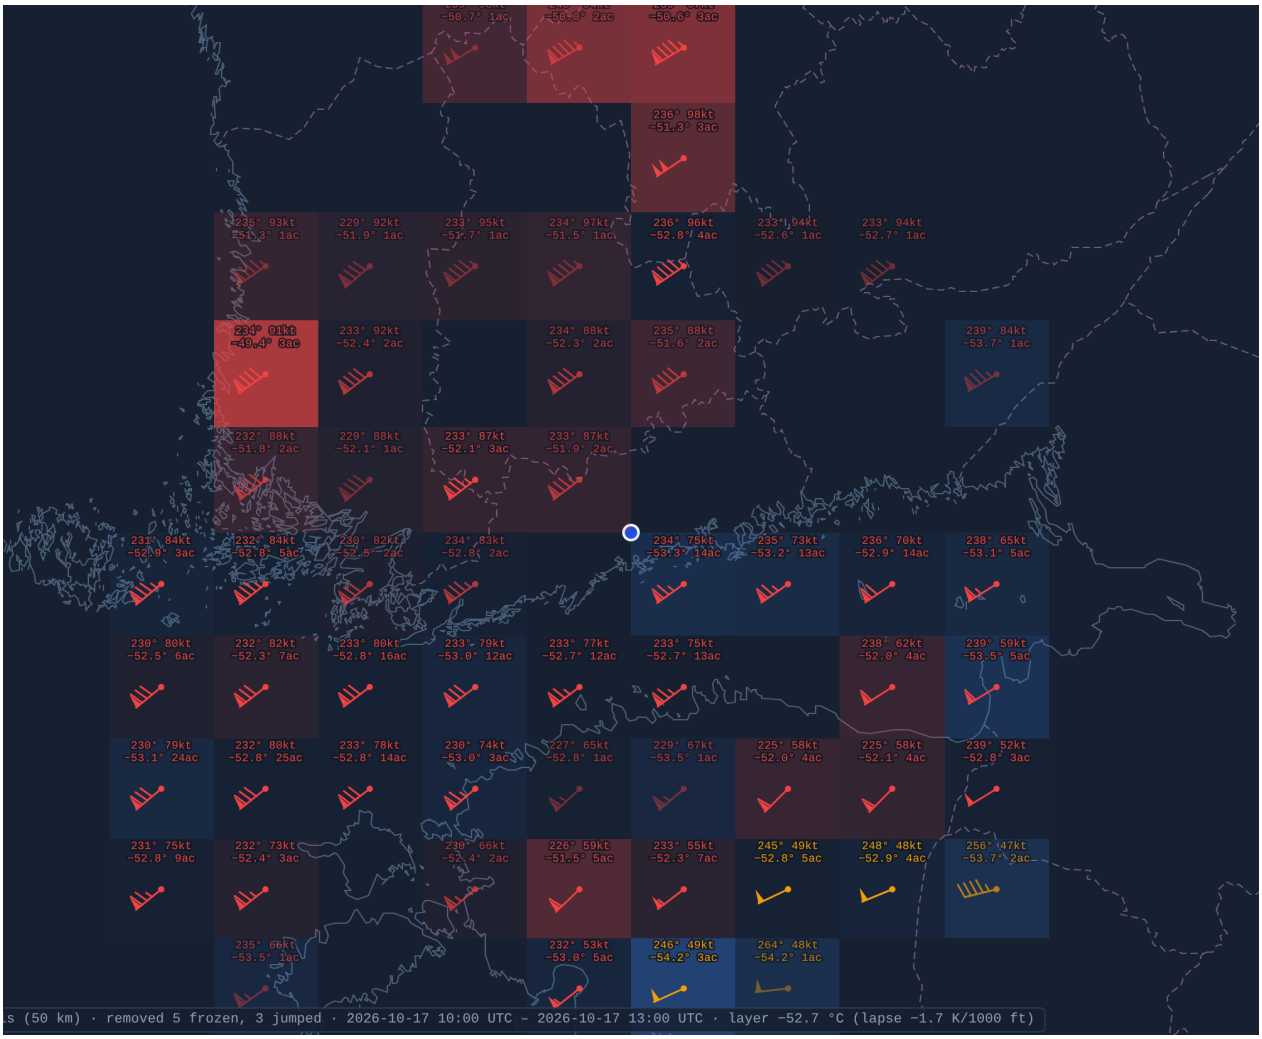

Figure 49. ΔT, same level and period as Fig. 47. At FL350 the cells north-west of Helsinki are 1–3 K warmer (−49 to −52 °C) than those to the south-east (−52 to −54 °C). Near the tropopause this is typical for the cold (poleward) side of a jet: there the tropopause is lower, and FL350 is already in the warmer stratosphere.

10.4 Isotachs and streamlines

For these the cell winds are smoothed onto a grid of points half a cell apart (a Barnes-type average with a Gaussian weight of one cell length, each cell weighted by its number of aircraft, up to 10). A grid point is analysed only when a cell centre lies within $\frac{3}{4}$ of a cell, so the lines are drawn only where there are data, never extrapolated. **Isotachs** are dashed yellow lines every 10 kt (20 kt when the speeds span more than 60 kt); `max` marks the strongest analysed wind, which may lie at the edge of the data. **Streamlines** are traced through the smoothed wind with a small arrow showing the flow. **Isotherms** — dotted red lines of equal temperature at the level, every 1 K (2 K when the range exceeds 8 K) — come from the same smoothed field, with the band's temperatures moved to its centre (Fig. 51). Wind blowing across the isotherms from warm to cold air is warm advection, from cold to warm cold advection. All of them follow the Min filter.

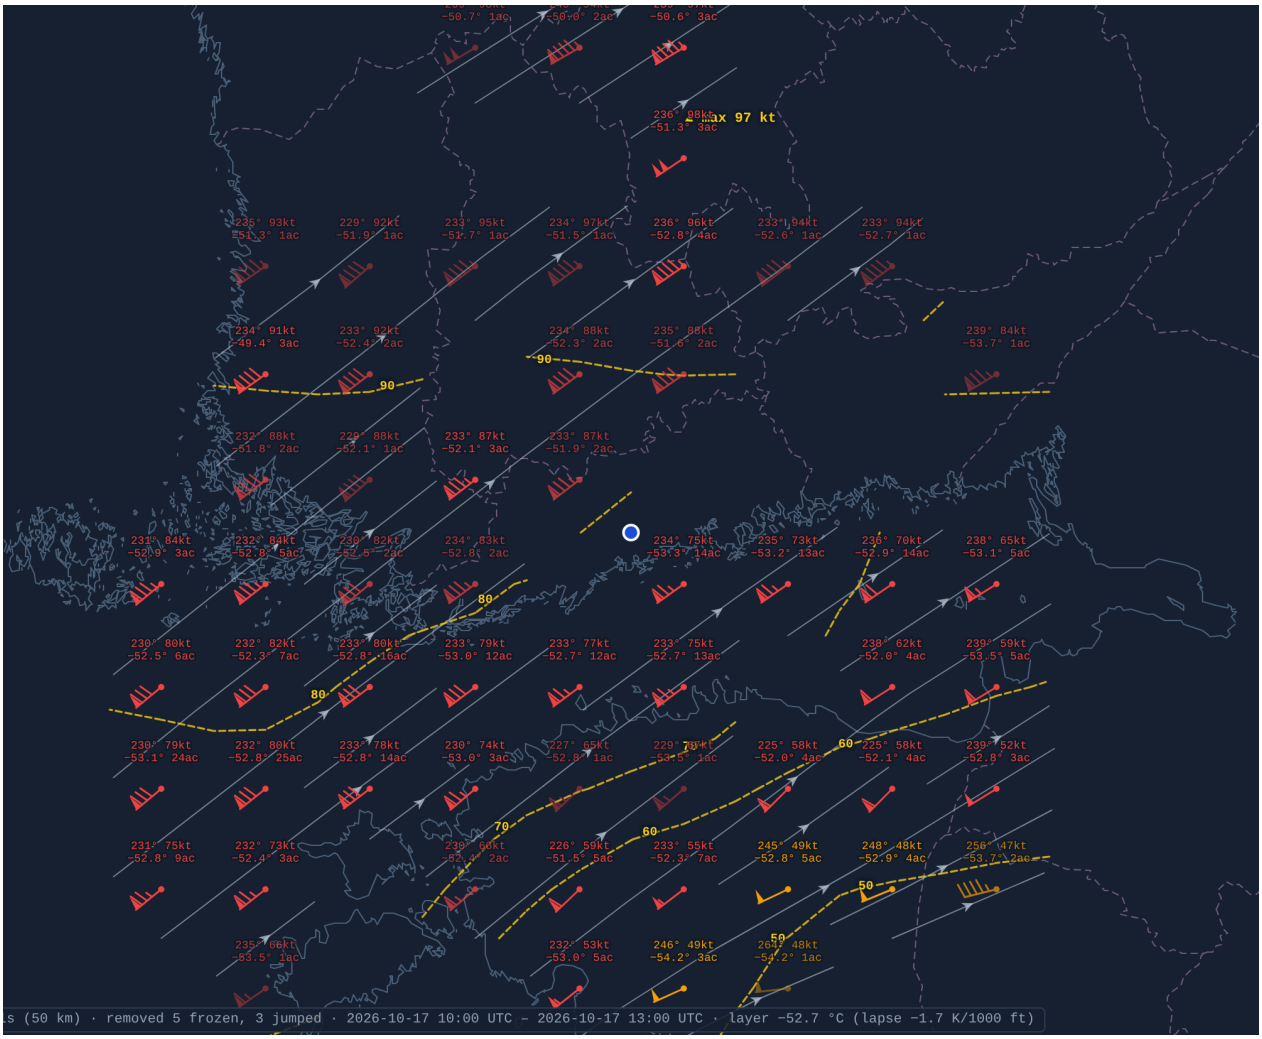

Figure 50. Isotachs and streamlines, FL350, 17 October 2026 10–13 UTC. Straight south-westerly flow; the isotachs run along it, from 90 kt in the north-west to 50 kt in the south-east — the right-hand (warm, south-eastern) flank of a jet whose core lies beyond the north-western edge of the data.

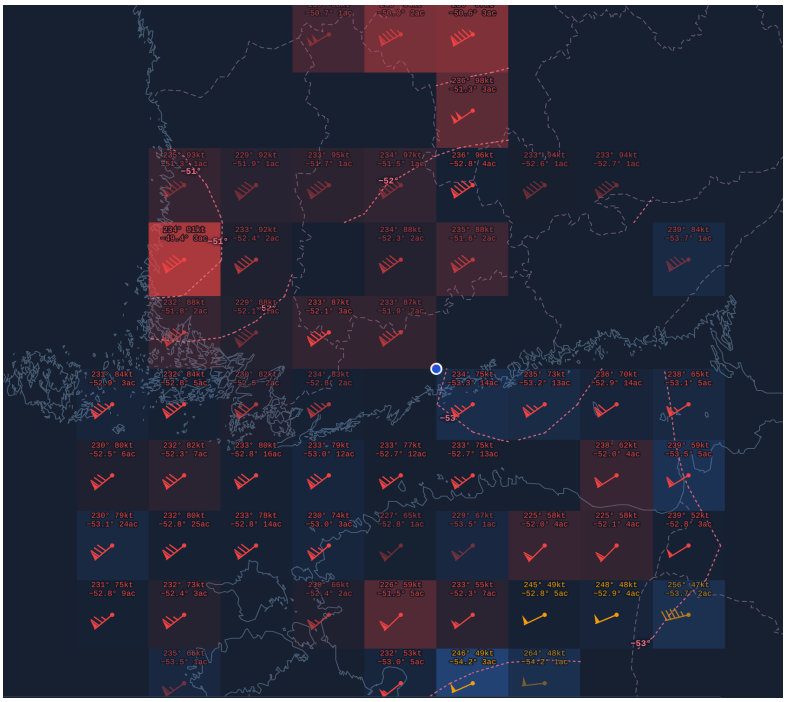

Figure 51. Isotherms with ΔT, FL350, 17 October 2026 10–13 UTC: −51 °C in the north-west, −52 to −53 °C towards the south-east — the same pattern as in Fig. 49.

10.5 Jet stream

With Jet the jet stream is drawn as on aviation significant-weather (SIGWX) charts: a thick line along its **axis** with an **arrowhead** at the downstream end, **barb flags** on the line at the maximum (pennant 50 kt, flag 10 kt, half flag 5 kt) with the level and speed, and double **change bars** across the line where the speed has fallen by 20 kt, 40 kt … from the maximum. The selector next to it chooses the speed that counts as jet: ≥ 80 kt as on aviation charts, or ≥ 60 kt for weaker jets.

How the axis is found. In the smoothed field (as for the isotachs) the mean direction of the points with at least the chosen speed defines the flow. The field is cut into sections across the flow, one cell apart, and in each section the strongest point lies on the axis. The sections with at least the chosen speed around the overall maximum form the jet (one empty section is bridged), and the axis is smoothed over three sections.

Solid or dashed. The line is **solid** where the speed falls off on both sides of the axis inside the data — there the axis is really seen. It is **dashed** where the strongest wind of a section lies at the edge of the data, so the real axis is probably beyond what the receiver sees; the label then adds ↑ `stronger beyond?`. At cruise levels the data reach about 250–300 km from Helsinki and a jet is often wider than that: in the jet of 16–18 October 2026 (85–114 kt) the maximum lay at the edge of the data in almost every 3-hour period. The direction, speed and timing of the jet are then right, but its exact position is not.

Depth. With Depth the levels FL250, FL290, FL330, FL370 and FL410 (±2 000 ft) are loaded as well, and the label adds the levels where the wind at the jet maximum is at least the chosen speed, as on the charts: `330/410` means from about FL330 to FL410. It makes loading slower, so it is a separate option. The hover gives the speed at each level.

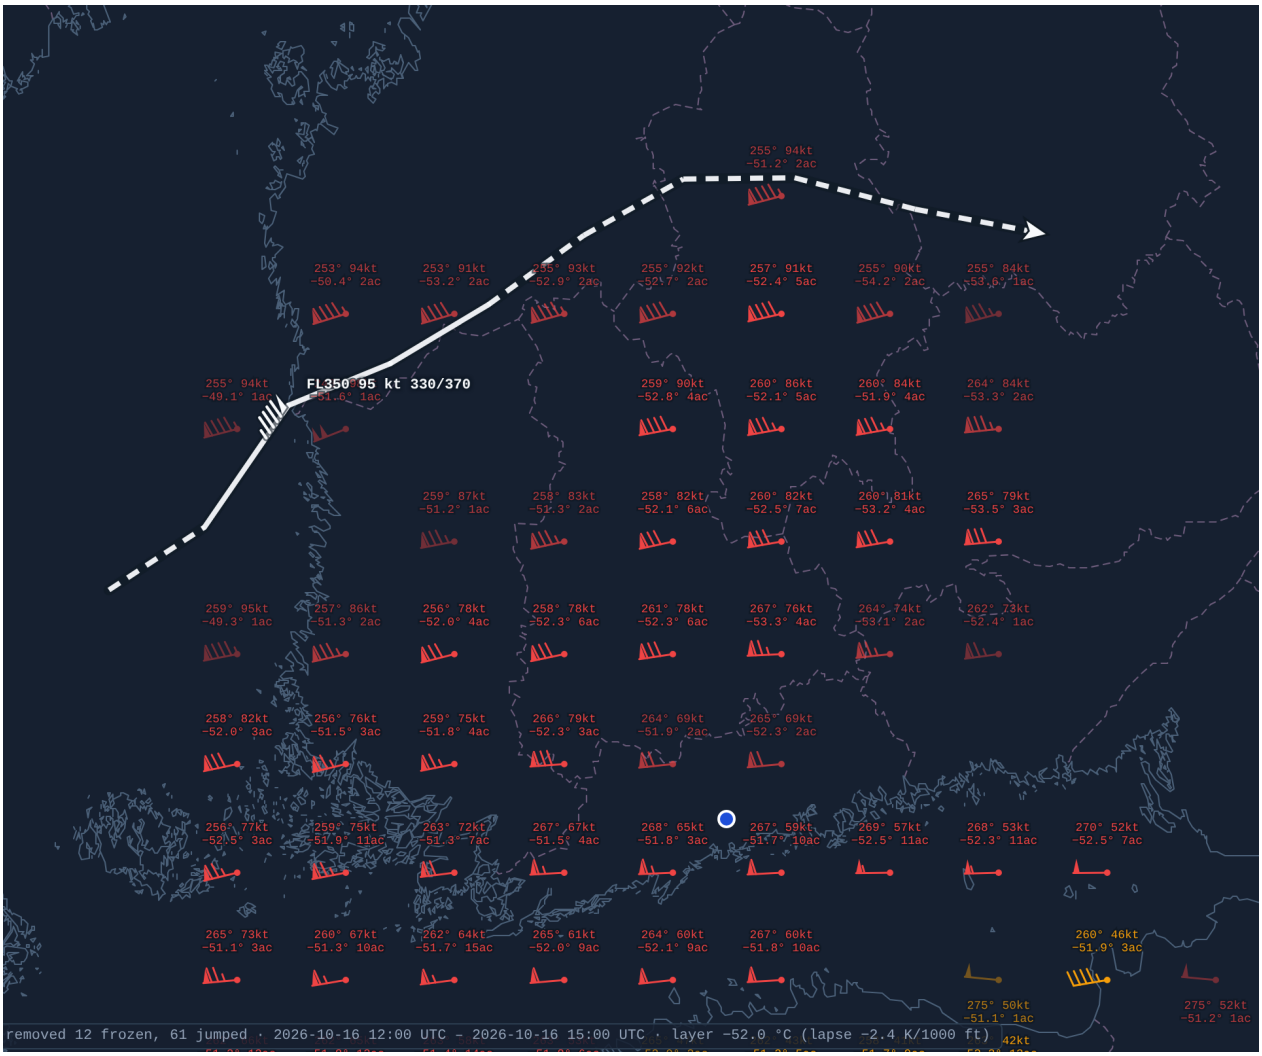

Figure 52. Jet, FL350, 16 October 2026 12–15 UTC, with Depth: a west-south-westerly jet of 95 kt, at least 80 kt from about FL330 to FL370. The axis is solid north-west of the receiver, over the west coast, where the speed falls off on both sides inside the data, and dashed at its ends at the edge of the data. The map has been moved north-west to show the whole jet.

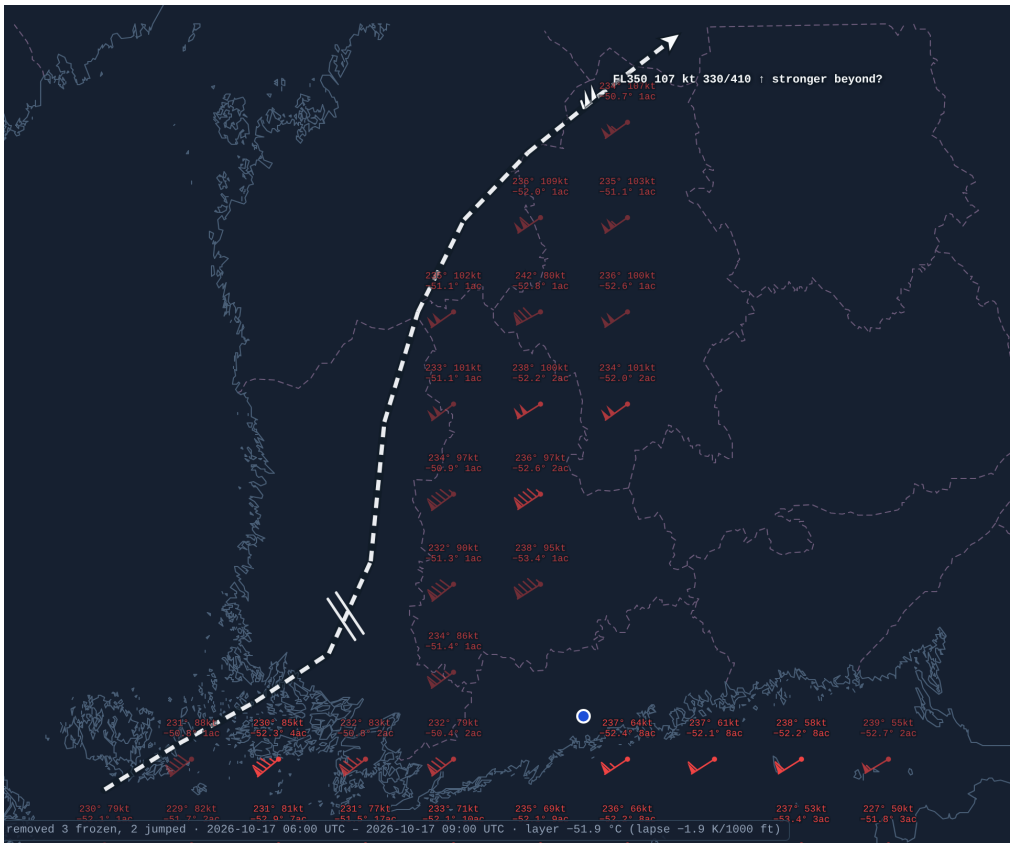

Figure 53. Jet, FL350, 17 October 2026 06–09 UTC: 107 kt with ≥ 80 kt from FL330 to FL410. The strongest winds lie along the north-western edge of the data all the way, so the axis is dashed and labelled ↑ `stronger beyond?` — the core of this jet passed north-west of the receiver's coverage. The double bars mark where the speed along the axis has fallen to 87 kt.

10.6 Heights and the geostrophic wind

With Heights each cell also gets the height of the pressure surface from the aircraft's GNSS height (with the calibration of Section 5.8; NACp ≥ 8, outside GPS degradation episodes, moved to the band centre with the band's temperature), the median of the cell's aircraft. The heights are smoothed like the winds and drawn as teal **height contours** in metres above mean sea level, every 5, 10 or 20 m depending on the range, only near cells with heights. This is the familiar upper-air chart: away from the ground the wind blows along the contours with the lower heights on its left, and faster where they are closer together.

A plane fitted to all aircraft heights of the band (one point per aircraft and cell; outliers beyond 3 times the RMS, at least 20 m, left out; at least 6 points spread over 30 km in both directions) gives the slope of the pressure surface and from it the **geostrophic wind** of the area,

$$\vec{V}_g = \frac{g}{f}\,\hat{k} \times \nabla z,$$

drawn as a dashed teal arrow `Vg` at the centre of the points, next to the mean measured wind of the same aircraft (`V`, grey). A slope of 10 m per 100 km gives about 15 kt. The tooltip and the status line give both winds, the slope, the *ageostrophic* difference and the residual of the fit. The real wind differs from the geostrophic one where the flow curves — in a high it is somewhat stronger, in a low weaker — and where it accelerates into or out of a jet stream; ageostrophic winds of 5–10 kt are normal.

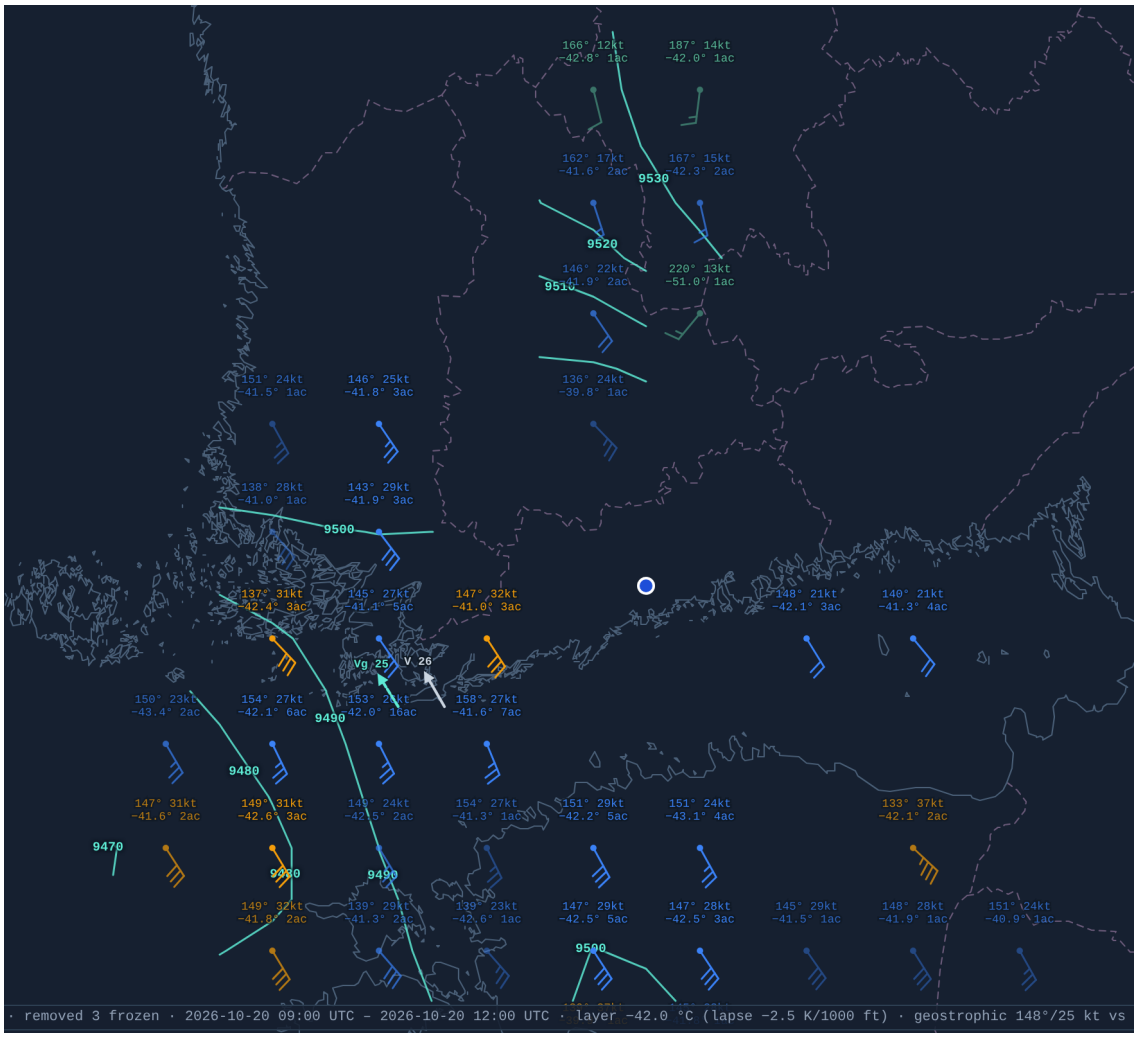

Figure 54. Heights, FL300 ±2 000 ft, 20 October 2026 09–12 UTC, under a weakening high: the 301 hPa surface at 9 470–9 530 m (D about +330 to +390 m), the south-south-easterly wind of 20–30 kt blowing along the contours. Geostrophic wind 148°/25 kt against a measured 150°/26 kt from 79 aircraft positions.

How good is it? In the first test (20–21 October 2026, a weak high) the geostrophic wind at FL250–FL350 agreed with the measured one within about 10–20° and 2–10 kt, and was poorer at FL180 and below, where the traffic is concentrated near Helsinki and the plane cannot be fitted reliably. The heights themselves need the calibration, which improves with every sounding; this part of the page is experimental and will be tuned as data in stronger flow accumulate.

10.7 Radiosonde at the level

With Sonde, the newest Jokioinen sounding launched before the end of the period (at most 24 h old) is drawn at its launch site as a pink barb with a square dot, interpolated to the pressure of the level. The label gives the launch hour, speed and temperature; the popup the values, the age of the sounding and the difference from the nearest Mode S cell. If the sounding (often only its open-data part) stops below the level, a pink ring says so.

10.8 The MEPS model at the level

With MEPS (off by default) the MEPS weather model (Section 3.3) is drawn at the chosen level for the same period, averaged into the same cells as the aircraft. Cells without aircraft get a **teal barb with a square dot** and the label `125° 24kt / −54.3° MEPS`; in cells with aircraft a thin teal barb lies under the aircraft barb, so where the two agree they cover each other, and the cell's popup adds the model's wind and temperature and the difference (Fig. 57). The model therefore also covers the parts of the map that no aircraft reach — where a dashed jet axis says `stronger beyond?`, the teal barbs show where the model has the core. The status line names the model runs and hours used, e.g. `MEPS 09/12 UTC runs (4 h) at 238 hPa`.

How it is made: every 3 hours, besides the profiles, MODE-S Wind fetches the model's temperature, wind and height on its pressure levels 1000 to 150 hPa in a box of ±300 km around the receiver, every 20 km (about 1 MB per run), and keeps the last 7 days (about 50 kB per hour). The flight level is a pressure altitude, so the model is taken at the same

pressure (FL350 = 238 hPa), interpolated in log pressure between its levels — between 700 and 500 hPa (FL100–FL180) that is one step of 4.6 km, so mid-level details are smoothed. Each model hour counts with the part of the period it covers, and the model points in a cell (one to two in a 25 km cell, about six in 50 km, 25 in 100 km) are averaged. Above about FL445 there are no model levels, and before the first fetches or beyond 7 days the status line says no model data is stored.

10.9 Compare: change in time and the thermal wind

Change since previous period loads the previous period of the same length (for 12–15 UTC: 09–12 UTC) and draws in every cell with data in both a purple arrow of the *vector change* of the wind, with its size and the temperature change; the cells are tinted red where the level has warmed and blue where it has cooled (full at ±3 K). A front or a trough passes as a band of cooling with a turn of the wind.

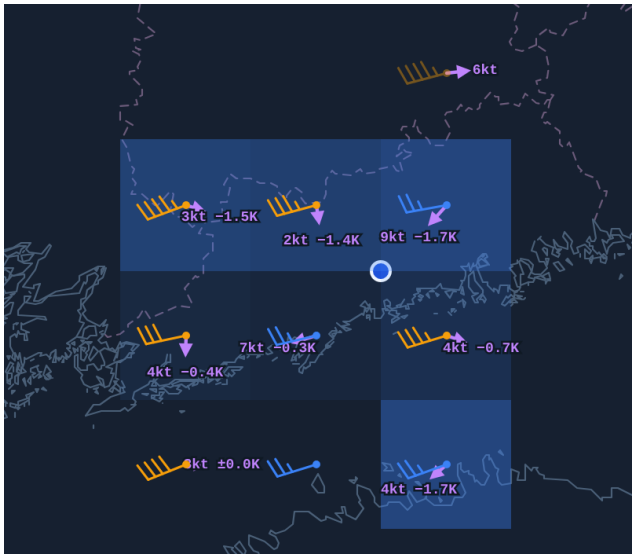

Figure 55. Change since the previous period, FL100, 17 October 2026 12–15 against 09–12 UTC: the cells around Helsinki have cooled by 0.4–1.7 K with small changes of the wind (2–9 kt) — the start of the cooling at this level behind the cold front, which the time–height section shows between 12 and 18 UTC (Section 5.2).

Other level (thermal wind) loads a second level for the same period and draws in each common cell the *thermal wind*, the vector difference of the wind from the lower to the upper level. It blows along the isotherms of the layer between them with the cold air on its left (Section 5.4). The cells are tinted by how the wind turns with height: **veering** (clockwise) is warm advection, red; **backing** is cold advection, blue (full at 30°, shown when both winds are at least 8 kt). The popup adds the turning and the lapse rate between the levels. Mid-level cells lie mostly near Helsinki, so the thermal wind is usually available within about 100 km.

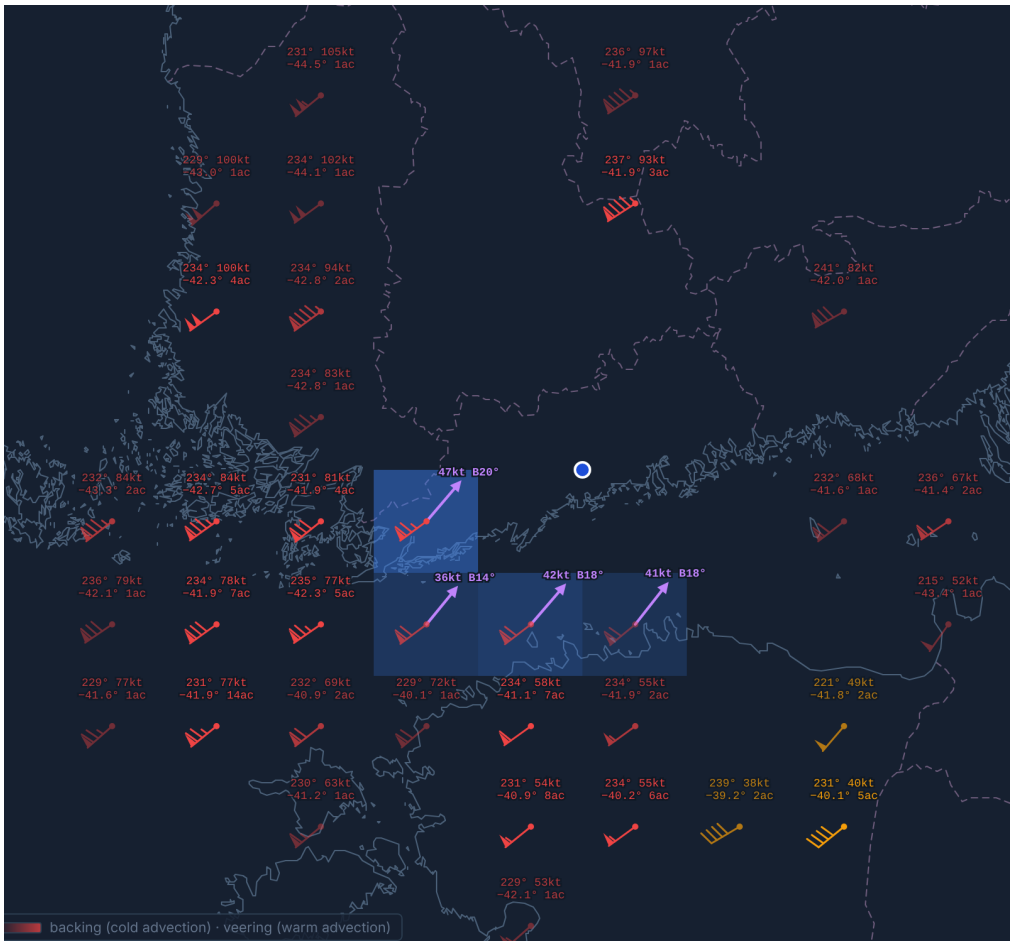

Figure 56. Thermal wind FL100 → FL300, 17 October 2026 10–13 UTC: in the four common cells south-west of Helsinki 36–47 kt towards the north-east, with the wind backing 14–20° with height — cold advection in the layer, the cold front of Section 5.2 approaching.

Mode S − MEPS model compares every cell that has aircraft with the model in the same cell (Section 10.8; it works also with MEPS unticked). The purple arrow is the vector difference aircraft − model with its size and the temperature difference, and the cell is tinted red where the aircraft are warmer than the model and blue where they are colder (full at ±3 K). Over the area the differences are typically 3–7 kt and a few tenths of a kelvin (the MEPS check, Section 8, measures them every hour). A band of large arrows usually marks a front, a trough or a jet that the model has in a slightly different place or at a slightly different time; at the jet levels the aircraft are warmer than the model by about 0.7 K on average, the warm bias of the Mach/TAS temperature.

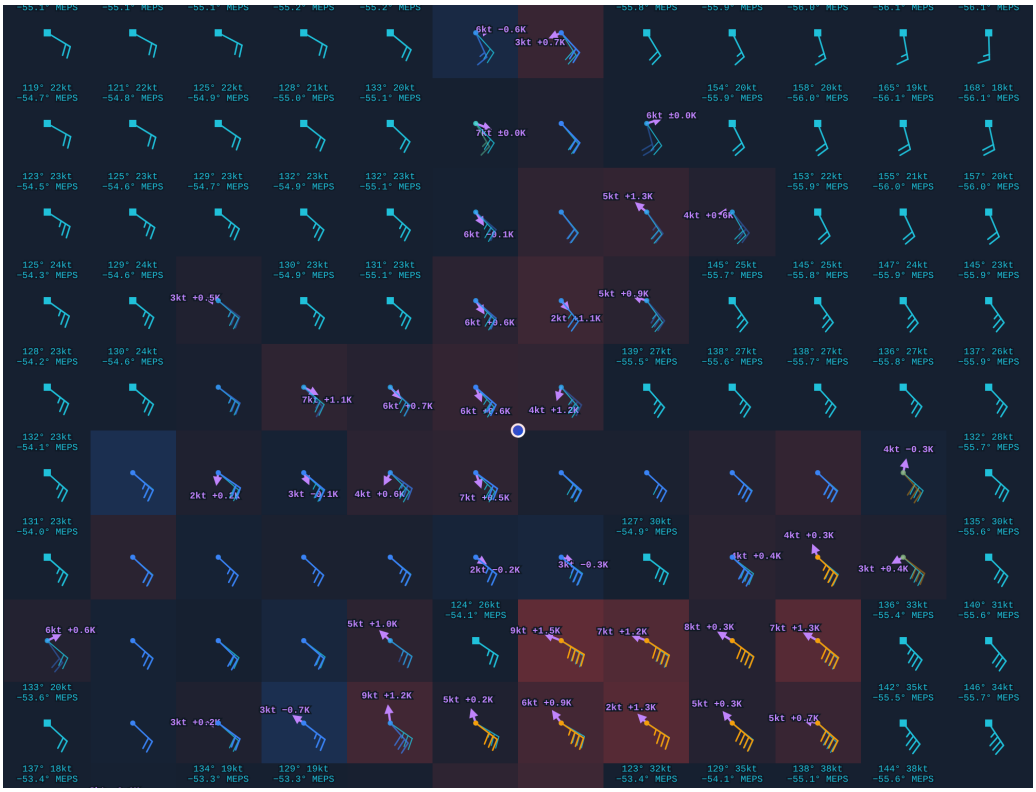

Figure 57. MEPS and Mode S − MEPS model, FL350 ±2 000 ft, 22 October 2026 10:37–13:37 UTC (model runs 09 and 12 UTC): teal model barbs fill the cells without aircraft; in the cells with aircraft the arrows of 2–9 kt show the difference, and the aircraft are 0.3–1.5 K warmer than the model south-east of Helsinki — the fleet's warm bias at this level, as found by the MEPS check.

While a comparison is shown, ΔT is switched off (the tint shows the comparison).

10.10 Vertical cross-section along a line

Section puts the map in drawing mode: click the start point A and the end point B (Esc cancels). A panel at the bottom of the map then shows a vertical cross-section along the line for the map's period (Fig. 58): all observations within one cell size of the line, at all levels, binned every half cell along it and into the time–height layers, each aircraft averaged first, with the same position checks as the map. Distance from A runs across, pressure altitude up (square-root scale, ISA pressure on the right). The colour field can be the **temperature anomaly** (minus the layer's mean along the section, full at ±4 K — fronts slope through it), the **wind speed**, the **wind across the section** (red blowing from the left to the right looking from A to B, blue the other way, full at ±60 kt — a jet crossing the line shows as a core) or the **height of the pressure surface** (D-value). Barbs and the 0, −10 and −20 °C isotherms are drawn as in the time–height section; faint cells rest on one aircraft, and the tooltip gives the values. The section follows the period when the map is reloaded; × closes it. Low levels have data only near the airport, so a long section mostly shows the middle and upper troposphere.

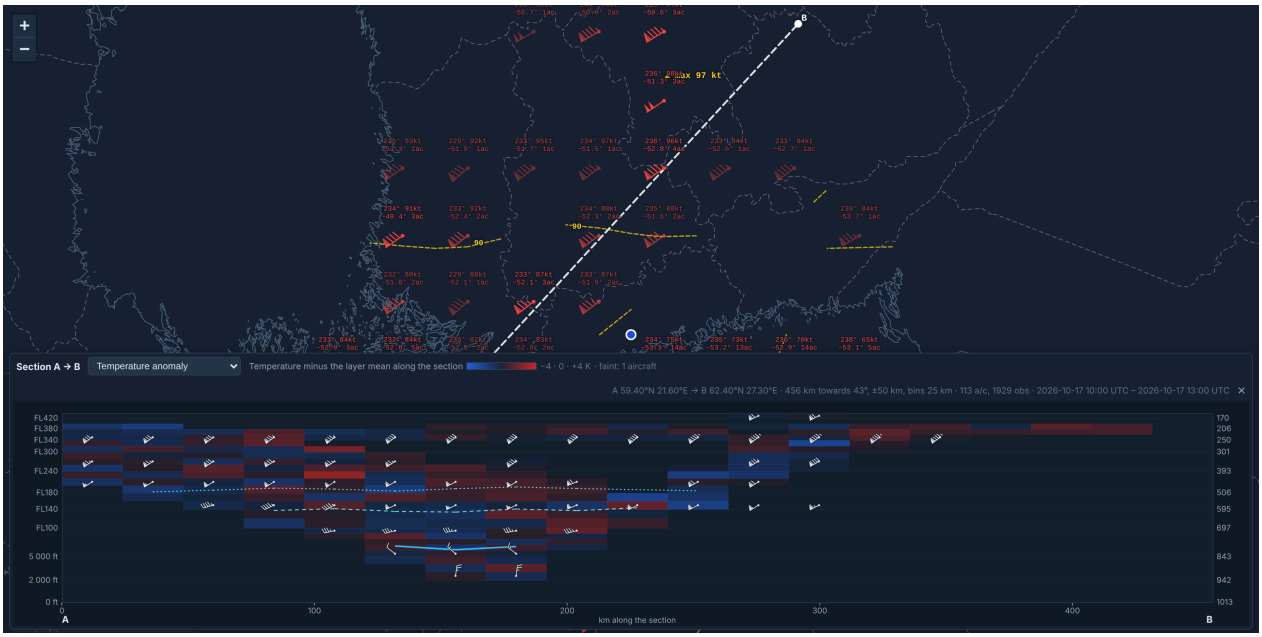

Figure 58. Section from the Turku archipelago (A) to eastern Finland (B), 456 km towards 043°, on the FL350 map of 17 October 2026 10–13 UTC; 113 aircraft within ±50 km. Temperature anomaly with barbs: the strong south-westerly flow at FL300–FL380 along the whole line, the −20 and −10 °C levels near FL190 and FL140, the 0 °C level near 6 000 ft over Helsinki.

10.11 Time slider, animation and settings

The slider moves the period back in whole hours, up to 23 hours before the chosen end; the label shows the new end. ▶ steps through the last 24 hours (about one frame a second, wrapping around) and ■ stops. On the first slider move or ▶ all 24 frames are loaded at once and kept, so the slider and the animation show them without waiting (a thin strip under the slider marks the loaded frames). With a Last … period the earlier positions end on whole hours (−1 = the last full hour). Auto reloads every 2 minutes for the Last … periods when the slider is at the end, and at once when the page becomes visible again. All settings, including a custom period, are remembered in the browser; the map follows the page's Light / Dark theme.

10.12 A suggested way to use it

1. Start at FL300–FL350 with 3 hours, ±2 000 ft and 50 km cells: cruise levels have the most aircraft. Switch on Isotachs and Jet to see where the strongest winds are and whether the jet core is inside the data.
2. Use ΔT for the air masses and Streamlines for troughs and ridges; check the faint cells before reading anything into a single barb.
3. With Heights, compare the measured wind with the geostrophic one and see the slope of the pressure surface.
4. Use Compare to see what has changed in the last hours, and the thermal wind between FL100 and FL300 for warm and cold advection.
5. Run the animation over the last 24 hours to watch a front or a jet pass, and open the same hours in the time–height section of the Sounding page for the vertical view.

11 Limitations

Where aircraft fly. The profile exists only where aircraft fly: cruise levels are well sampled by day, the lowest levels mainly along the EFHK approach and departure paths, and the night hours (about 22–02 UTC) may have only a few aircraft. Watch the data badge, the red rings, the A/C column and the aircraft strip of the time–height section. Data usually end at about FL410, so a high tropopause is missed.

GNSS jamming. In the evening and at night most aircraft near Helsinki fly with jammed GNSS. Their winds and temperatures still count — they come from the aircraft's air data and heading, not from GNSS — but their winds are about 2 kt noisier, and the GNSS-height fields (Section 5.8) leave them out, so those night columns are thin. An arrival whose GNSS is still jammed at touchdown also gets no landing record, so the *flight by flight* fields and the boundary-layer temperature miss it: 5.6 % of the arrivals on 7 October – 1 November 2026, but 11–14 % at 21–02 UTC, mostly arrivals from the jammed directions. If the jamming ends, all of this recovers by itself.

Averaging. The area profile is an average over 150 km and 60 minutes. A front passing through the area is smeared over several hours, thin inversions and a sharp tropopause are smoothed over a 1 000–2 000 ft layer, and jet maxima are

weaker than in a point measurement.

Accuracy. Layer mean temperatures are good to about 1–1.5 K against the sonde (at 200–300 hPa about 1 K with the upper-level correction), the lowest layers less certain because single replies at approach speeds scatter by 3–4 K; winds are good to about 10 kt RMS. Single-flight profiles carry the scatter of one airframe.

No humidity aloft. Aircraft report no humidity, so indices that need dewpoints aloft come only from the sonde and the MEPS model; the moisture trial of Section 5.9 is still an experiment — through the front of 23–24 October it followed the humidity only weakly at 1 000–5 000 ft and not above; the MEPS model's humidity in the RH strip is the better guide. The surface parcel uses the METAR dewpoint and assumes a well-mixed boundary layer; clouds above the ground, icing itself and contrail persistence cannot be derived.

Heights. The vertical scale is pressure altitude (ISA). The Indices panel computes true heights hypsometrically from the METAR surface pressure; plain temperature is used throughout (no virtual-temperature correction), which changes the 1000–500 hPa thickness by well under 1 dam in Finnish autumn air.

Derived fields. Vertical motion and vorticity are derived from averaged temperatures and winds and inherit their errors, multiplied: vertical motion by the division by $\Gamma_d - \Gamma$, vorticity by the slope of a plane fitted to a few dozen aircraft. Both are drawn only where they were tested to work (vertical motion 5 000 ft–FL200, vorticity where enough aircraft are spread over the area), and both are faint where they rest on little data.

GNSS heights. The heights of the pressure surfaces, the thickness temperatures and the geostrophic wind rest on the calibration against the Jokioinen soundings, which corrects the aircraft's ellipsoidal GNSS height and speed-dependent pressure error; it is new and improves with every sounding. The thickness temperature and the moisture trial also take out the slope of the pressure surface along each climb and descent with the hour's own wind (Section 5.8); in a strongly curved or frictional flow the geostrophic relation behind it is only approximate. GNSS jamming removes most aircraft at night, and the geostrophic wind needs aircraft spread over the area (in practice FL250 and above).

Wind Map coverage. The map shows only where aircraft fly within the receiver's range — at cruise levels about 250–300 km, at mid and low levels much less. Jet cores and fronts often lie partly outside; the dashed jet axis and the `max` label at the edge of the data say so. A longer period or a wider band fills more cells but mixes weather that moved meanwhile.

The model. MEPS is a forecast model with its own errors (about 0.3–0.5 K and 3–4 kt against the soundings, humidity aloft weaker), only on 10 standard levels, and it takes in aircraft reports itself; the newest hours on the Live Map are a forecast of a few hours. Use it as a second reference beside the sondes, not as the truth. It is also used to learn two small calibrations — the upper-level temperature correction and the moisture offsets — which fall back to the last learnt values or the soundings without it.

Not an official product. The automatic indices and analysis follow simple, documented rules on averaged data. Use them to understand the atmosphere, not for flight planning; use official forecasts and soundings for that.

12 Quick reference

Item	Meaning
Time–height section	
red / blue (anomaly)	warmer / colder than the layer's mean over the shown period (full at ± 6 K)
red / blue (3-hour change)	warming / cooling over the last 3 hours (full at ± 4 K)
blue → green → yellow → red → purple	wind speed in 10 kt steps (purple ≥ 130 kt)
violet / dark blue / light blue / grey / orange / red	lapse rate < -1 / -1–2 / 2–5 / 5–7 / 7–9 / ≥ 9 K/km
solid / dashed / dotted cyan line	0 / -10 / -20 °C (lowest crossing per hour)
faint cell, dark cell	fewer than 3 replies, no data
colour wheel (wind direction)	where the wind blows from: N red, E yellow-green, S cyan, W violet
red / blue (turning with height)	veering, warm advection / backing, cold advection (full at ± 1 K/h)
thin orange lines	isentropes, potential temperature every 5 K
hatched, right of the dashed line	MEPS model forecast — not a measurement
dark blue / green / yellow / orange / red (turbulence)	EDR < 0.05 smooth / slight / light ≥ 0.10 / moderate ≥ 0.20 / severe ≥ 0.45
triangle at the top (turbulence)	pilot report or SIGMET, coloured by severity
solid / dotted light line (boundary layer)	METAR ceiling / lowest cloud, ft MSL
pink triangle	Jokioinen radiosonde launch
red / amber bar in the strip	fewer than 8 / 20 aircraft in the hour
green / orange (vertical motion)	rising / sinking air (full at ± 3 cm/s, 5 000 ft–FL200)
purple / gold (vorticity)	cyclonic / anticyclonic (full at $\pm 15 \times 10^{-5}$ s^{-1}; faint: error > 4 or < 10 aircraft)
red / blue (height of the pressure surfaces)	higher / lower than in the standard atmosphere (D-value, full at ± 300 m)
red / blue (height change 6 h)	surfaces rising / falling (full at ± 60 m)
red / blue (thickness check)	thickness temperature warmer / colder than Mach/TAS (full at ± 2 K)
brown / green / blue (moisture, trial)	dry / moist / humid: index < 40 / 40–70 / ≥ 70 % (about RH), 1 000–15 000 ft; faint: $\pm$ over 40 %
magenta dashed `TP`; yellow `Vmax`	tropopause; height of the strongest wind (≥ 50 kt)
narrow pink-framed column	a Jokioinen sounding in the same colour field
boundary layer: blue → red; red / blue	wind speed 0–55 kt in 250-ft steps; temperature warmer / colder than the METAR (full at ± 6 K), ft MSL
◊ with kt; red bar and line, light red fill	low-level jet (joined: the jet core); surface inversion and its top (fill: as an overlay)
dashed frame	hour in progress (computed live)
amber barbs; violet / blue / orange strip (Mast)	the Kivenlahti mast's winds; inversion / stable / unstable in its lowest 300 m
Wind Map	
barb colour; opacity	< 15 / 15–30 / 30–50 / > 50 kt; 1 / 2 / 3+ aircraft in the cell
cell label	direction and speed / temperature at the level and aircraft
red / blue tint (ΔT)	warmer / colder than the layer mean (full at ± 3 K)
dashed yellow lines, `max`	isotachs every 10 (20) kt; strongest analysed wind
thin grey lines with arrows	streamlines
dotted red lines	isotherms at the level (1 or 2 K)
section panel colours	temperature anomaly / wind speed / wind across (red left→right) / D-value
thick line with arrowhead, flags	jet axis (≥ 80 or 60 kt), maximum speed; dashed: maximum at the edge of the data
double bars on the jet	speed 20, 40 … kt below the maximum
`330/410`	jet depth: levels with $\geq$ the jet speed at the maximum
teal lines; `Vg`, `V`	height contours (m MSL); geostrophic and measured mean wind
pink barb with square dot; pink ring	Jokioinen sonde at the level; sounding ends below it
purple arrows, red / blue tint (compare)	wind change and warming / cooling; thermal wind and veering / backing
Indices panel (amber / red)	
CAPE	≥ 100 / $\geq 1\,000$ J/kg
Lifted Index; Showalter	≤ -1 / ≤ -5; ≤ 0 / ≤ -3
K index; Total Totals; Vertical Totals	≥ 26 / ≥ 31; ≥ 44 / ≥ 50; ≥ 30
lapse rates	≥ 7 / ≥ 9 K/km
shear 0–1 km; 0–6 km	≥ 20 kt; ≥ 40 kt (amber)
CCL · T conv amber	the surface has reached the convective temperature
violet shading (MEPS / sonde)	clearly different from Mode S (Table 2)
Skew-T comparison profiles	
pink line, green dashed, pink barbs	Jokioinen radiosonde: temperature, dewpoint, winds
teal line, teal dashed, teal barbs	MEPS model over the area: temperature, dewpoint, winds (model levels); `(forecast)`: +3 to +5 h
Level table, Sonde check and MEPS check	
red A/C	layer measured by only 1–2 aircraft
amber ΔT; ΔV	more than 2 K; more than 10 kt from the sonde
amber T RMS; wind RMS; red aircraft	> 2 K; > 15 kt; < 16 aircraft behind a launch comparison
MEPS check bar; dot	RMS difference by level; mean difference (aircraft warmer / faster when positive)
MEPS check Correction	the upper-level temperature correction applied at the level (400–200 hPa)
Skew-T `upper T corr.`	the warm bias above FL180–FL240 is corrected; the hover gives the raw value
MEPS check amber	T RMS > 1.5 K, wind RMS > 12 kt; at the soundings $\lvert\Delta T\rvert \geq 1$ K

A Formulas

- Mach/TAS temperature: $T = 288.15\,(\mathrm{TAS}/(661.47\,M))^2$ K (TAS in kt).
- ISA pressure of pressure altitude h (ft): $p = 1013.25\,(1 - 6.8756\times10^{-6}\,h)^{5.2559}$ hPa below 36 089 ft, $p = 226.32\exp\big(-(h-36089)/20806\big)$ above.
- Hypsometric thickness: $\Delta z = \dfrac{R\bar{T}}{g}\ln\dfrac{p_1}{p_2}$, $R = 287.04$ J/(kg K), $g = 9.80665$ m/s^2. For 1000–500 hPa: $\bar{T} = g\,\Delta z/(R\ln 2)$, so 1 dam ≈ 0.49 K.
- Lapse rate between two levels: $\Gamma = -(T_2 - T_1)/(z_2 - z_1)$; time–height: central difference between the layers below and above, with temperatures smoothed over ±1 h (weights 0.5 / 1 / 0.5 times the number of replies).
- Anomaly: $T'(t,z) = T(t,z) - \overline{T}(z)$, the mean over the shown period weighted by replies; 3-hour change: $T(t,z) - T(t-3\,\mathrm{h},z)$.
- Local temperature change: $\partial T/\partial t = -\vec{V}\cdot\nabla T + (\Gamma_d - \Gamma)\,w + Q$, $\Gamma_d = g/c_p = 9.8$ K/km.
- Geostrophic wind: $\vec{V}_g = \dfrac{g}{f}\,\hat{k}\times\nabla_p z$, $f = 2\Omega\sin\varphi \approx 1.26\times10^{-4}$ s^{-1} at 60°N.
- Thermal wind: $\vec{V}_T = \vec{V}_g(p_2) - \vec{V}_g(p_1) = \dfrac{R}{f}\ln\dfrac{p_1}{p_2}\,\hat{k}\times\nabla\bar{T}$; thermal advection $-\vec{V}\cdot\nabla\bar{T} = -\dfrac{f}{R\ln(p_1/p_2)}\,(u_1v_2 - v_1u_2)$ (positive = warm advection, wind veering with height).
- LCL (Bolton 1980): $T_L = 1\big/\big(1/(T_d - 56) + \ln(T/T_d)/800\big) + 56$ (K), $p_L = p_0\,(T_L/T)^{c_p/R}$.
- CAPE $= R\int_{p_{EL}}^{p_{LFC}}(T_p - T_e)\,d\ln p$; CIN the negative part below the LFC; Lifted Index $= T_e(500) - T_p(500)$; Showalter the same for a parcel from 850 hPa.
- K index $= (T_{850} - T_{500}) + T_{d,850} - (T_{700} - T_{d,700})$; Vertical Totals $= T_{850} - T_{500}$; Total Totals $=$ VT $+ (T_{d,850} - T_{500})$.
- Precipitable water: $W = \dfrac{1}{g}\int_{p_{300}}^{p_s} r\,dp$, r the mixing ratio.
- Vertical motion (adiabatic method): $w = \dfrac{\mathrm{ADV} - \partial T/\partial t}{\Gamma_d - \Gamma}$ with $\mathrm{ADV} = -\dfrac{f}{R\ln(p_1/p_2)}\,(u_1v_2 - v_1u_2)$ between the layers two below (1) and two above (2), $\partial T/\partial t = (T_{+3\,\mathrm{h}} - T_{-3\,\mathrm{h}})/6\,\mathrm{h}$, Γ from the layers next to it; not computed where $\Gamma_d - \Gamma < 1.5$ K/km.
- Vorticity and divergence: least-squares plane $u = a_u + b_u x + c_u y$, $v = a_v + b_v x + c_v y$ through one point per aircraft; $\zeta = b_v - c_u$, $\delta = b_u + c_v$; standard errors from the residual variances and $(X^{\mathsf{T}}X)^{-1}$; 1 kt/km $= 51.4\times10^{-5}$ s^{-1}.
- GNSS height of a pressure surface: $z = 0.3048\,(h_p + \Delta h_{\mathrm{GNSS-baro}}) - N(\varphi,\lambda) - c(h_p) - b_{\mathrm{airframe}}$ (m above mean sea level), h_p the pressure altitude (ft), N the EGM96 geoid height at the aircraft (5′ grid, bilinear); c per 5 000 ft band (linear between band centres) and b fitted against the Jokioinen soundings of the last 30 days. D-value $D = z - 0.3048\,h_p$.
- Thickness temperature: $\bar{T}_v = g_0\,(H_2 - H_1)/(R\ln(p_1/p_2))$ with geopotential heights $H = (g_\varphi/g_0)\,R_E z/(R_E + z)$, $R_E = 6\,371$ km.
- Slope of the pressure surface between the two crossings of a layer (from 12 November 2026): $\Delta z = (f/g_0)\,(v\,\Delta x - u\,\Delta y)$, $f = 2\Omega\sin\varphi$, $(\Delta x, \Delta y)$ east / north from the lower to the upper crossing, (u,v) the mean wind of the layer's 1 000 ft levels in the hour's area profile (at least half of them; else no correction); subtracted from the height of the upper crossing.
- Moisture index (trial): $100\,(T_v - T - b)/(0.608\,q_{\mathrm{sat}}(T,p)\,T)$, $T_v - T \approx 0.608\,q\,T$; b the sonde-learnt offset per layer and climb / descent ($\sum d_i/(n+3)$ over 30 days); q_{sat} from Bolton's $e_s = 6.112\exp(17.67\,t/(t+243.5))$ hPa, $q = 0.622\,e/(p - 0.378\,e)$; its $\pm = 100\sqrt{s^2/n + (0.3\,\mathrm{K})^2}\,/\,(0.608\,q_{\mathrm{sat}}T)$ with s the flights' standard deviation.
- Geostrophic wind of an area: plane $D = a + b\,x + c\,y$ through the aircraft heights; $u_g = -(g/f)\,c$, $v_g = (g/f)\,b$; 10 m per 100 km $\approx$ 15 kt at 60°N.
- Jet axis: in sections across the mean flow of the points with $\geq$ the jet speed (one cell apart), the strongest point of the smoothed field; "edge" when that point lies within $\frac{3}{4}$ grid step of the section's data edge.
- WMO tropopause: the lowest level above 5 km at which the lapse rate falls to ≤ 2 K/km, provided the average lapse rate to every level within the next 2 km does not exceed 2 K/km.
- MEPS check: model value of the aircraft hour $[t, t+1\,\mathrm{h}) = \frac{1}{2}\big(M(t) + M(t+1\,\mathrm{h})\big)$ of the area mean (model points within 150 km); aircraft layers (≥ 3 replies) interpolated linearly in $\ln p$ to the model levels; model height of a pressure surface $z = R_E H/\big((g_\varphi/g_0)R_E - H\big)$ from its geopotential height H, model D-value $z - 0.3048\,h_p(p)$. Share explained by the distance: $1 - \sum\big((A-S) - (M_A - M_J)\big)^2/\sum(A-S)^2$, with A aircraft, S sonde, M_A and M_J the model over the area and at Jokioinen.
- Model winds: MEPS gives the wind along its Lambert grid; true east / north $u = x\cos\alpha + y\sin\alpha$, $v = -x\sin\alpha + y\cos\alpha$, $\alpha = \sin(63.3)\,(\lambda - 15)$; model dewpoint from the specific humidity q: $e = q\,p/(0.622 + 0.378\,q)$.
- Verification: bias $= \overline{\Delta T}$, RMS $= \sqrt{\overline{\Delta T^2}} = \sqrt{\mathrm{bias}^2 + \mathrm{SD}^2}$; wind vector RMS $= \sqrt{\overline{|\vec{V}_a - \vec{V}_s|^2}}$.

Written with the assistance of Claude (Anthropic). Figs. 6, 35–37 and 39: the station's database of 10 November 2026 05:01 UTC, shown as at 9 November 05:10 UTC (Fig. 39: 10 November). Screenshots: MODE-S Wind, dark theme, with the database and the Jokioinen soundings (FMI open data, CC BY 4.0) of 5–21 October 2026 (Figs. 13–15 from the database of 20 October, Figs. 16–19 and Section 10 from the database of 21 October, shown as at 21 October 12 UTC; Figs. 22–24 from the database of 21 October 14:10 UTC; Figs. 3 and 42 from the database of 22 October 13:37 UTC with the MEPS model data of MET Norway (thredds.met.no, CC BY 4.0) fetched by the new code, the model levels of Fig. 3 and the model maps of Fig. 57 fetched on 23 October; Figs. 41 and 43 from the database of 24 October 2026, shown as at 13:30 UTC, with the upper-level correction learnt from the MEPS data stored since 19 October; in Section 10 the map tiles are replaced by the coastline and border outlines of the project's overlays). The surface values in Fig. 1 are those of the METAR stored with the hourly profile of 19 October 07 UTC; the page was shown as at 19 October 2026 08:19 UTC. Figs. 44–46: the station's database of 5 November 2026 09:29 UTC with the Kivenlahti mast (FMI open data, CC BY 4.0), shown as at 4 November 2026 05:30 UTC.