


TRUSSES vs. I-JOISTS

Choosing the Right Floor Framing System for Your Next Project

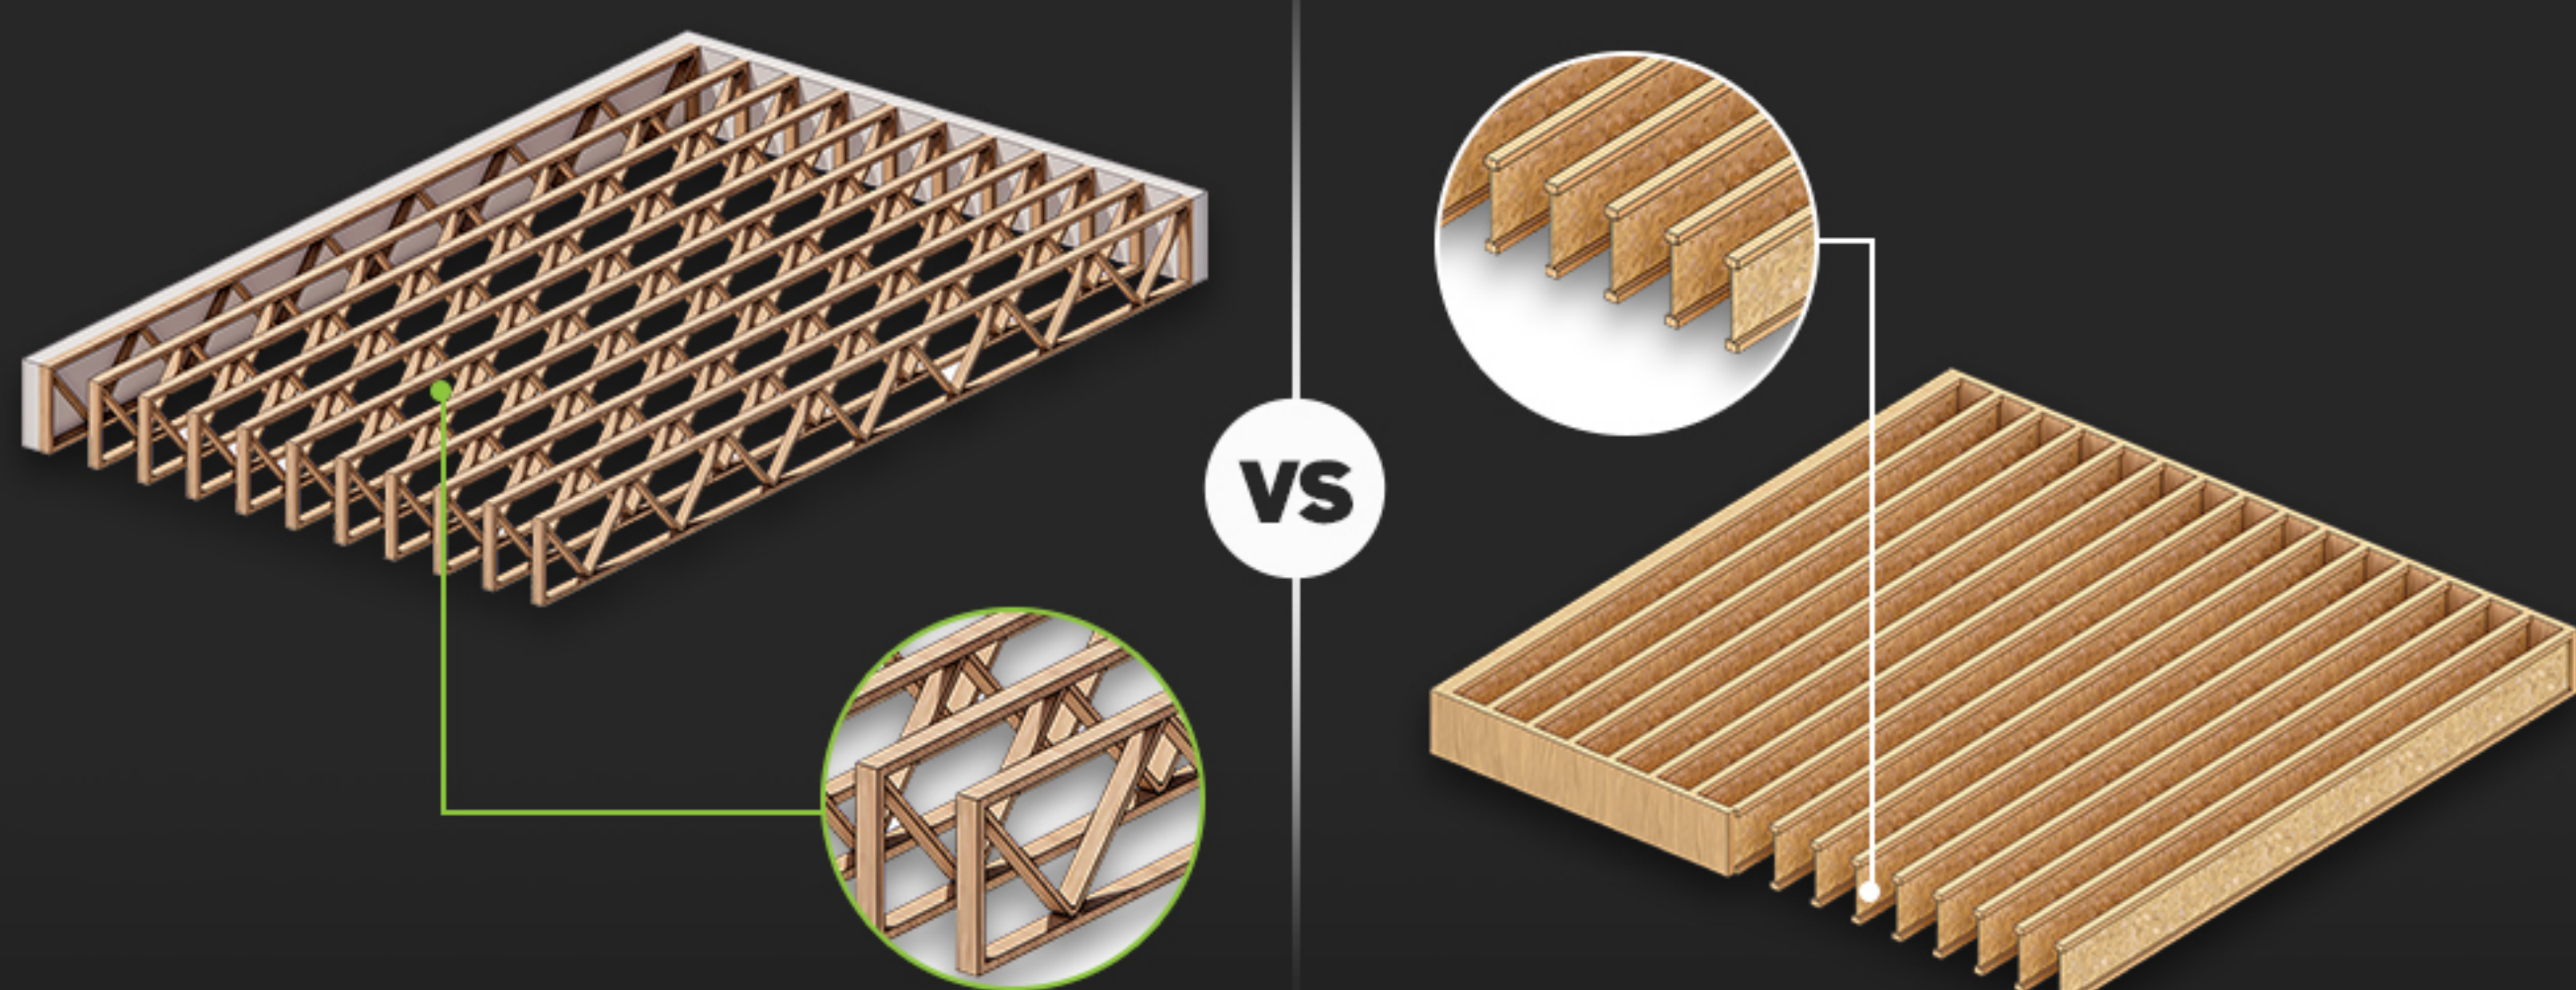

TRUSSES

Prefabricated "open-web" wood frame used for floor support.

- Easy MEP routing through open webs
- Longer spans with fewer supports
- Better sound and insulation performance

Hotels, garden-style MF, long corridors

- Deeper floor system may increase building height
- Heavier - often needs a crane for installation

WHAT IT IS

WHY CHOOSE IT

BEST FOR

WATCH OUT FOR

I-JOISTS


Lightweight engineered wood beam shaped like an "I".

- Easy to lift and install by hand
- Consistent, efficient material performance
- Works well for short to medium spans


Townhomes, small MF, single-family

- Limited MEP openings may force soffits
- May need extra fire protection per code



FLOOR TRUSSES

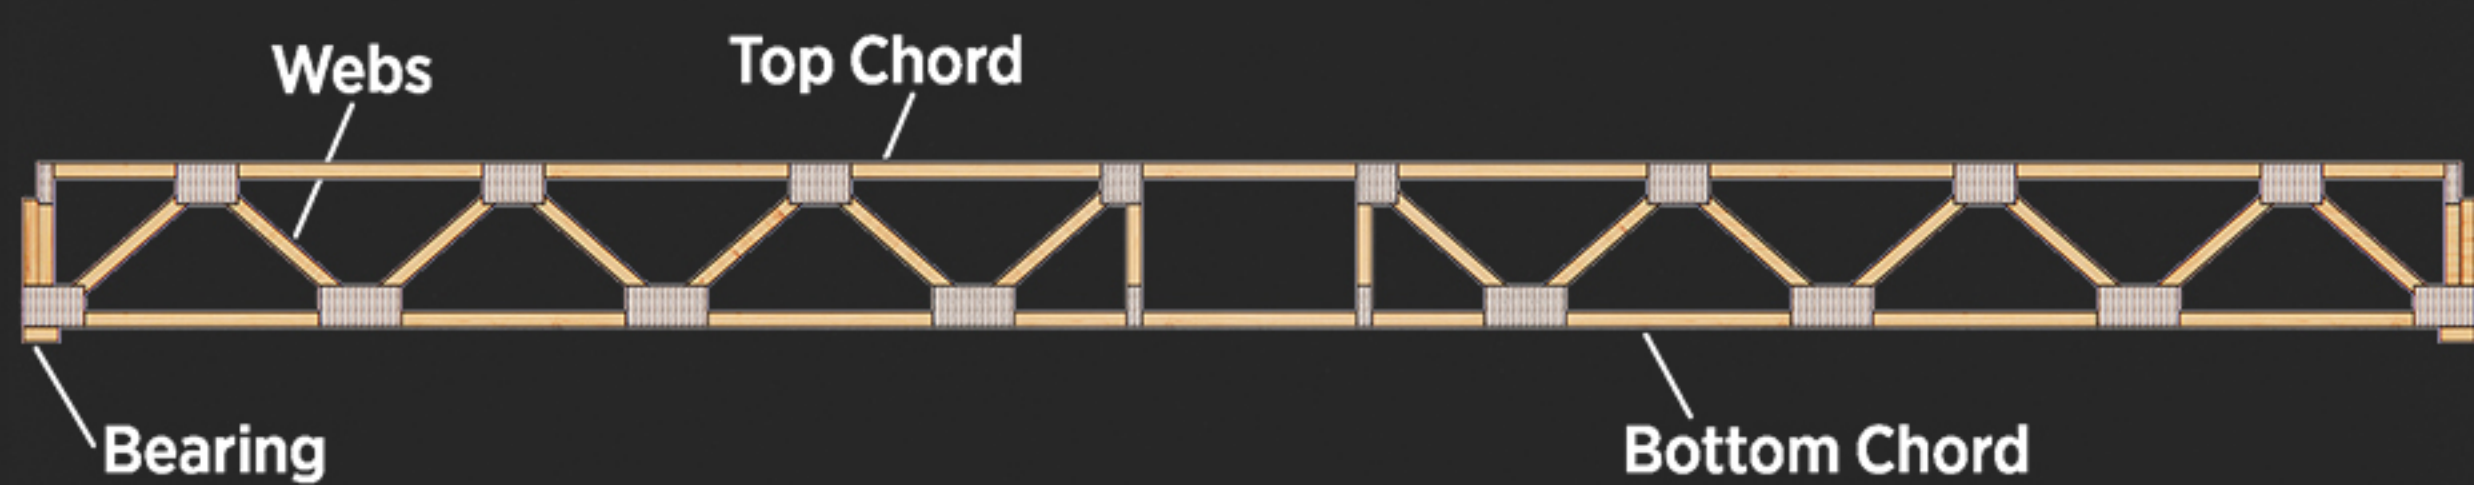

COMMON I-JOIST SIZES

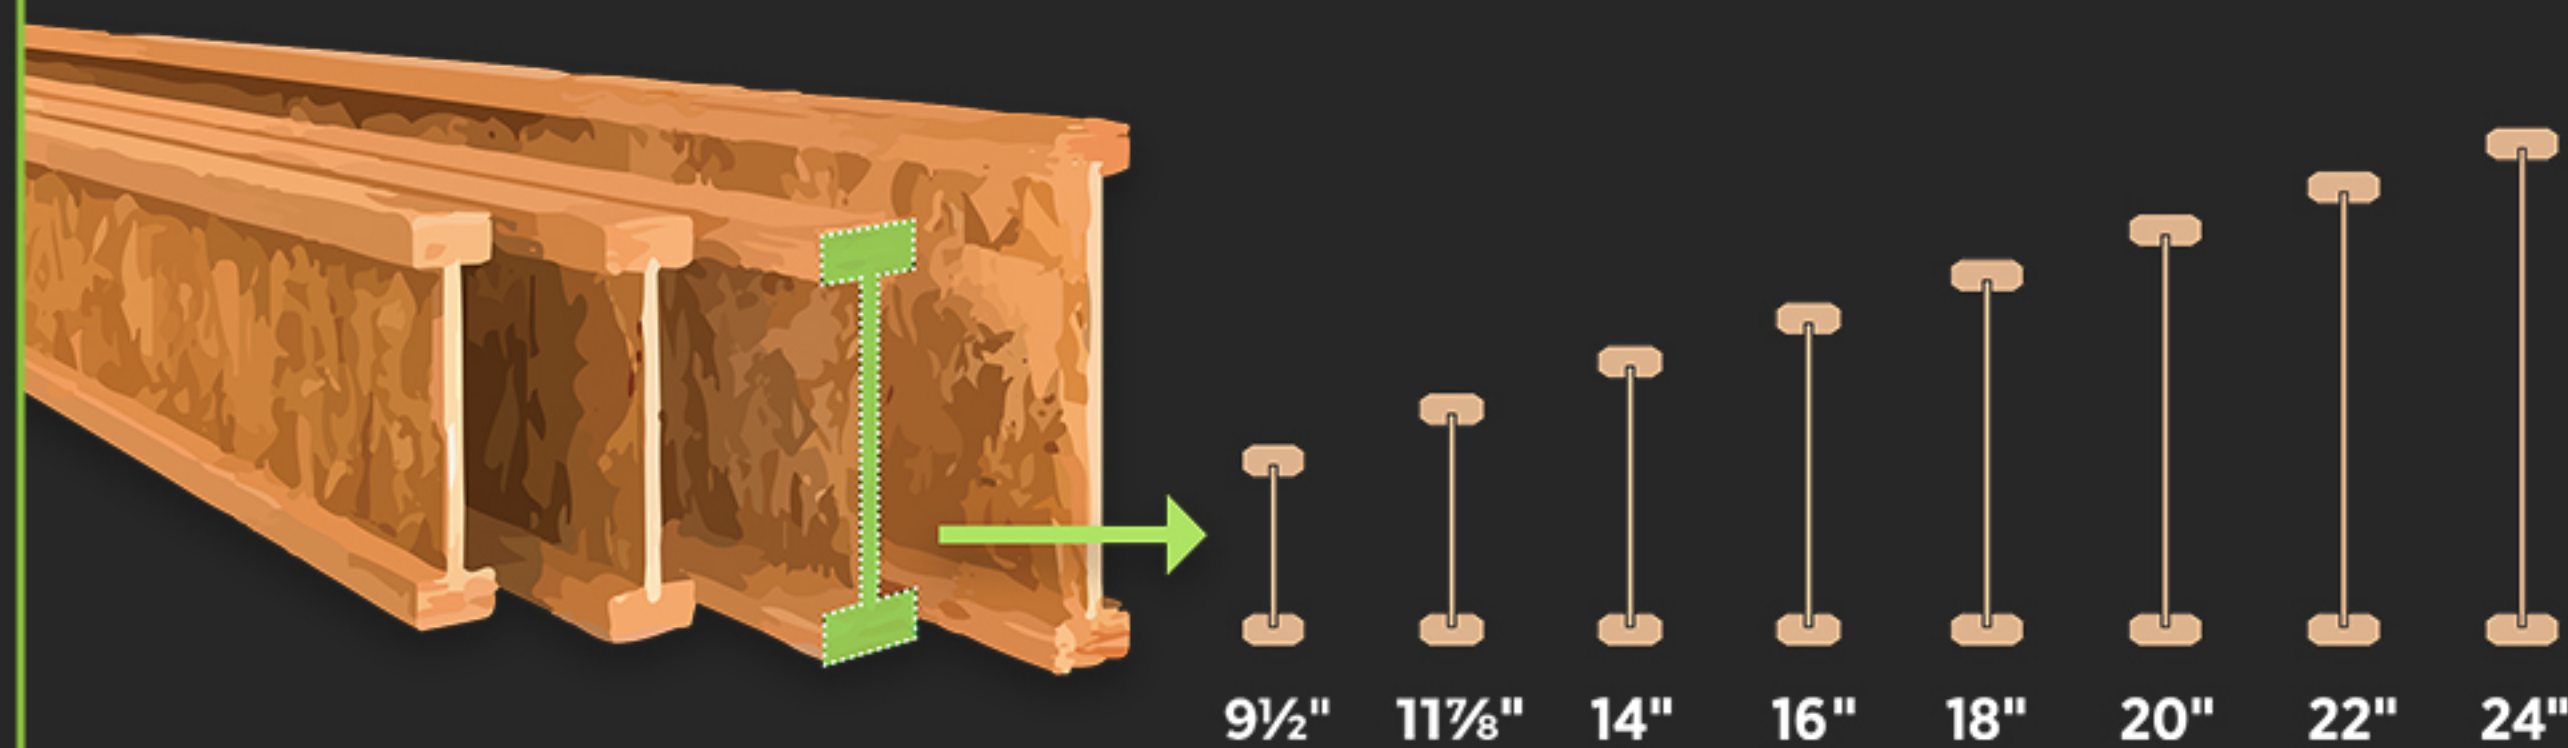

TRUSSES vs. I-JOISTS QUICK COMPARISON

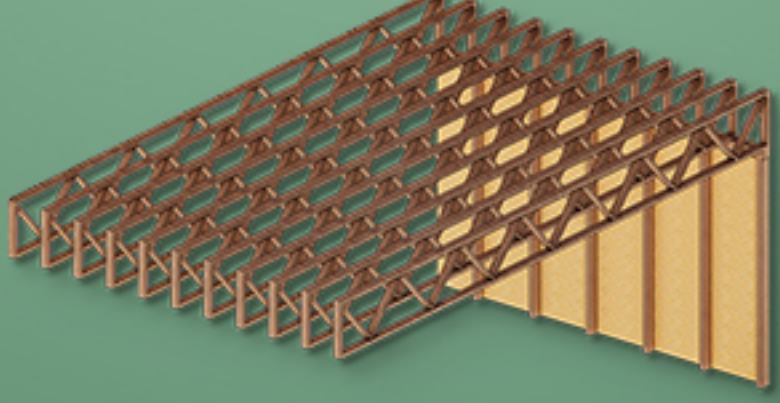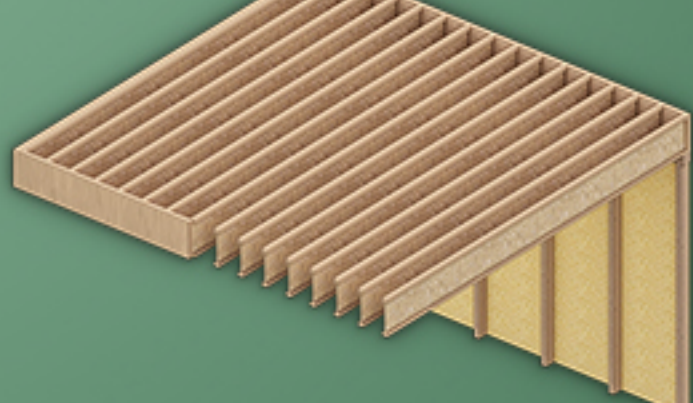Factor	Wood Trusses	I-Joists
 Cost	Usually cheaper overall for bigger projects.	Material cost is a bit higher.
 Labor	Heavier and takes more work to install.	Easier and faster to install.
 MEP (Ducts & Pipes)	Easier to run ducts and pipes through the open web.	Limited openings, harder to route MEP.
 Span Length	Can span longer distances.	Best for shorter spans.
 Insulation	More space for insulation and airflow.	Less space for insulation.
 Fire Rating	Meets code with standard drywall.	May need extra fire protection.
		

www.base-4.com

