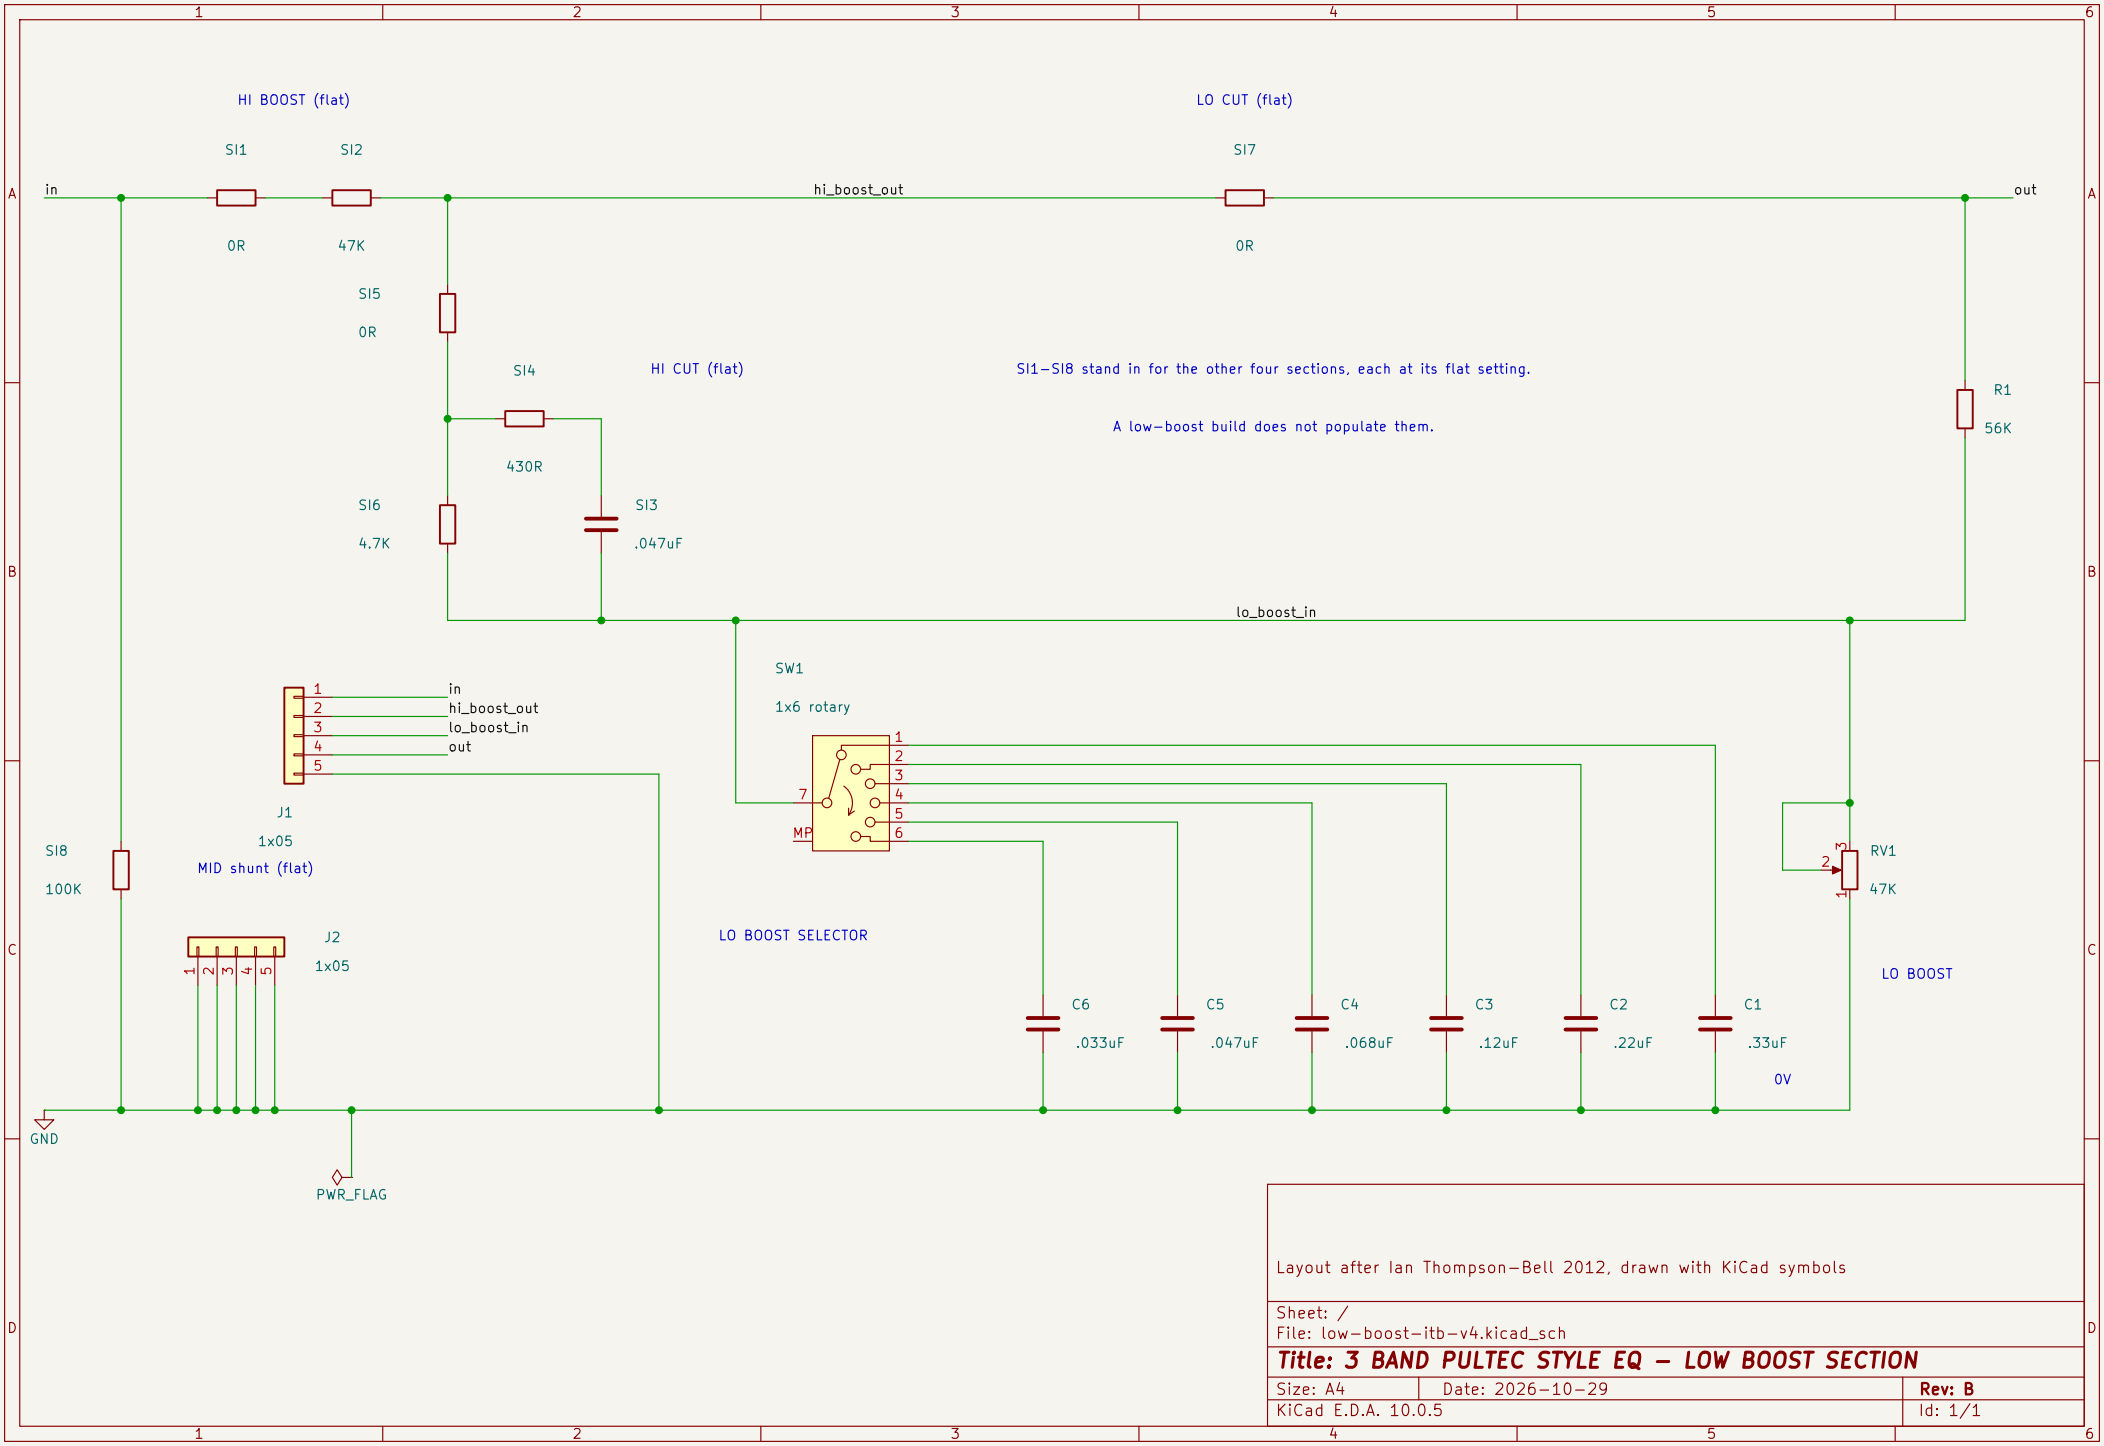

HI BOOST (flat)
LO CUT (flat)
SI1
SI2
SI7
in
hi_boost_out
out
0R
47K
0R
SI5
0R
SI4
HI CUT (flat)
SI1–SI8 stand in for the other four sections, each at its flat setting.
A low-boost build does not populate them.
R1
56K
430R
SI6
4.7K
SI3
.047uF
lo_boost_in
SW1
1x6 rotary
1
in
2
hi_boost_out
3
lo_boost_in
4
out
5
J1
1x05
SI8
100K
MID shunt (flat)
7
MP
RV1
47K
LO BOOST
J2
1x05
LO BOOST SELECTOR
C6
.033uF
C5
.047uF
C4
.068uF
C3
.12uF
C2
.22uF
C1
.33uF
0V
GND
PWR_FLAG
Layout after Ian Thompson-Bell 2012, drawn with KiCad symbols
Sheet: /
File: low-boost-itb-v4.kicad_sch
Title: 3 BAND PULTEC STYLE EQ – LOW BOOST SECTION
Size: A4
Date: 2026-10-29
Rev: B
KiCad E.D.A. 10.0.5
Id: 1/1