

BioKEA tray markers | ArUco DICT_4X4_50 | PRINT AT 100% (no scaling)

Cut on the dashed lines (keep the white border). Tape one marker flat at each corner of the imaging area, at tray-surface height. Measure inner-corner to inner-corner W x H (mm).


A — use these (20 mm)

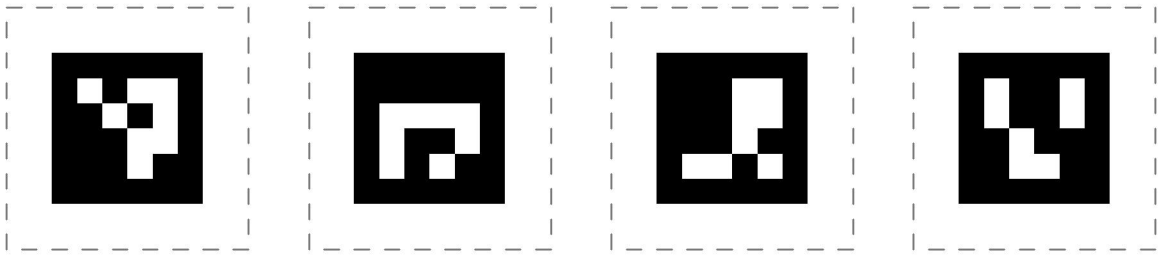

B — spares (20 mm)

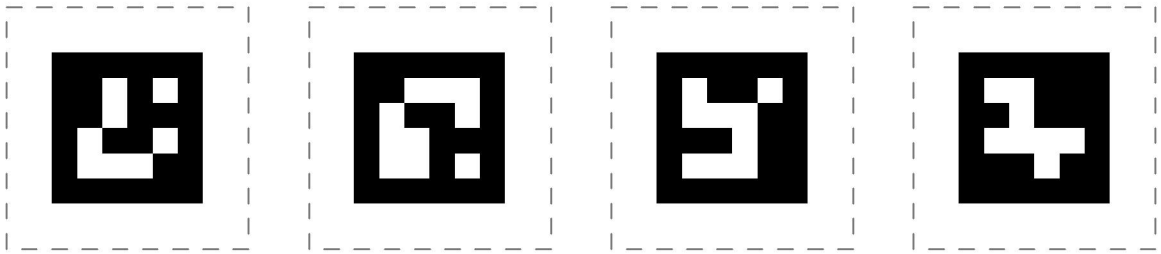

C — small, for tight spaces (12 mm)

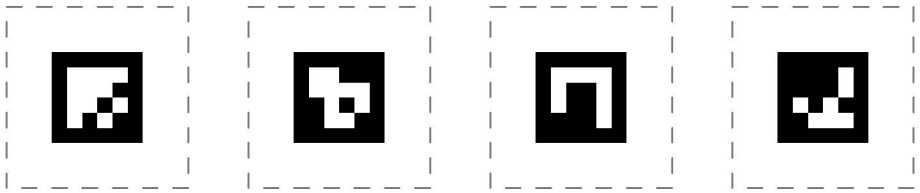



100 mm scale check. If it is off, that is OK: just measure the taped markers.