
## **Part II: Programming**

17. Click **Program Device**. Click **Program** in the dialog box.

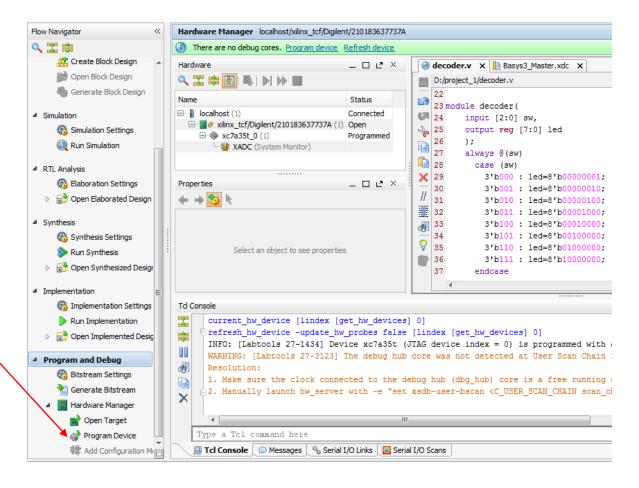

You should now find that your decoder is implemented on the FPGA.

Change the three slider switches (SW2, SW1, SW0) through all eight combinations and verify TA Signature: Land Samuel Control Cont the correct corresponding LED turns on.